




**CSE320: Data Communication** 

# Chapter 5

### **Analog Transmission**

#### Figure 5.1 Digital-to-analog conversion

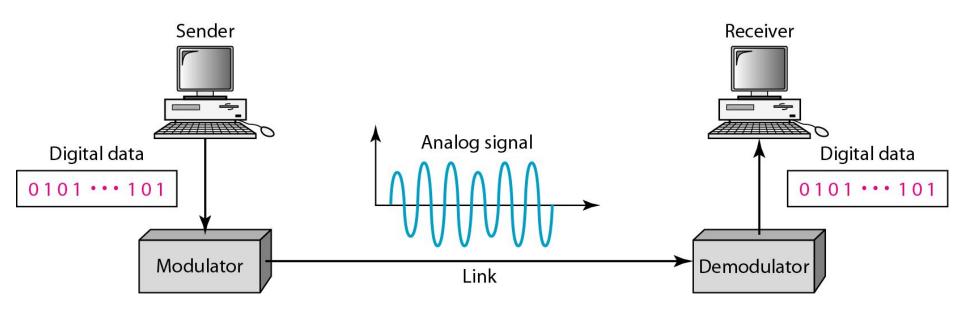

#### 5-1 DIGITAL-TO-ANALOG CONVERSION

Digital-to-analog conversion is the process of changing one of the characteristics of an analog signal based on the information in digital data.


#### Topics discussed in this section:

- Aspects of Digital-to-Analog Conversion
- Amplitude Shift Keying
- Frequency Shift Keying
- Phase Shift Keying
- Quadrature Amplitude Modulation

### Digital to Analog Conversion

- Digital data needs to be carried on an analog signal.
- A carrier signal (frequency f<sub>c</sub>) performs the function of transporting the digital data in an analog waveform.
- The analog carrier signal is manipulated to uniquely identify the digital data being carried.

#### Figure 5.2 Types of digital-to-analog conversion

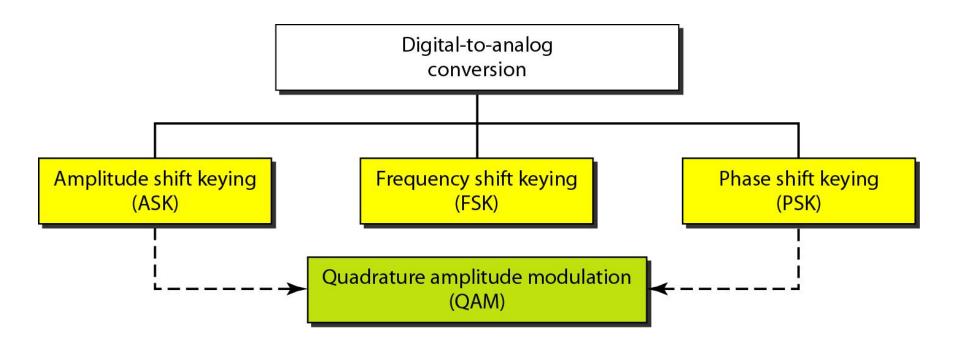


# Amplitude Shift Keying (ASK)

- ASK is implemented by changing the amplitude of a carrier signal to reflect amplitude levels in the digital signal.
- For example: a digital "1" could not affect the signal, whereas a digital "0" would, by making it
  zero.


The line encoding will determine the values of the analog waveform to reflect the digital data being carried.


#### Figure 5.3 Binary amplitude shift keying

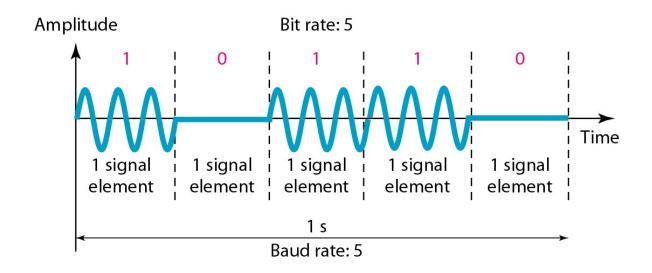

#### Also known as On Off Keying (OOK)


#### Figure 5.4 Implementation of binary ASK

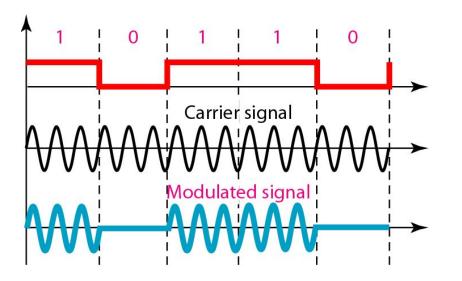

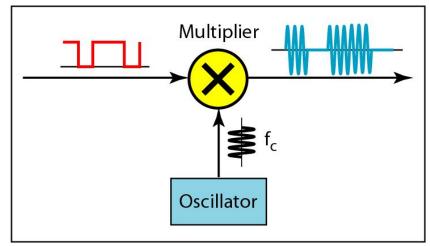

### Multi level ASK


 ASK can use multiple bits per signal element.

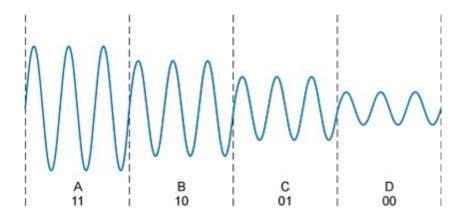

## Frequency Shift Keying

- The digital data stream changes the frequency of the carrier signal, f<sub>c</sub>.
- For example, a "1" could be represented by  $f_1 = f_c + \Delta f$ , and a "0" could be represented by  $f_2 = f_c \Delta f$ .


#### Figure 5.6 Binary frequency shift keying

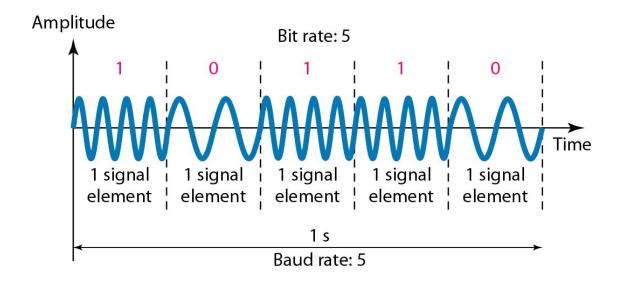

### Coherent and Non Coherent


- In a non-coherent FSK scheme, when we change from one frequency to the other, we do not adhere to the current phase of the signal.
- In coherent FSK, the switch from one frequency signal to the other only occurs at the same phase in the signal.

#### Figure 5.7 Bandwidth of MFSK used in Example 5.6

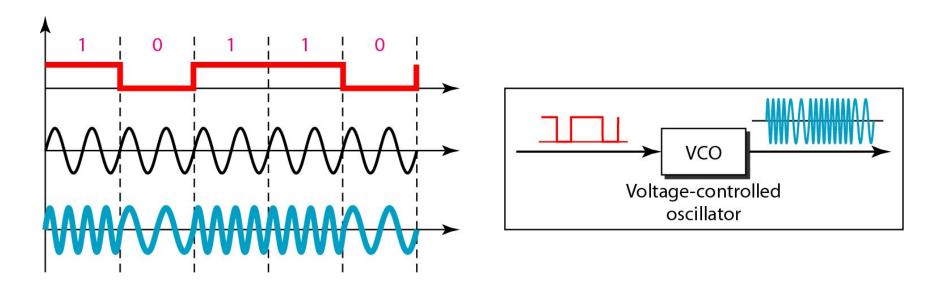

### Multi level FSK

 Like ASK, FSK can use multiple bits per signal element.

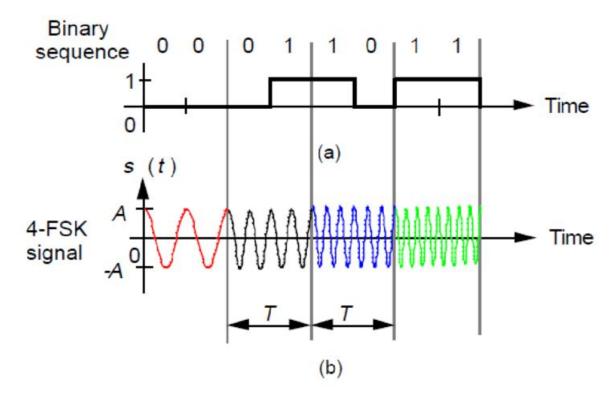


# Phase Shift Keying


 We vary the phase shift of the carrier signal to represent digital data.

 PSK is much more robust than ASK as it is not that vulnerable to noise, which changes amplitude of the signal.


#### Figure 5.9 Phase shift keying

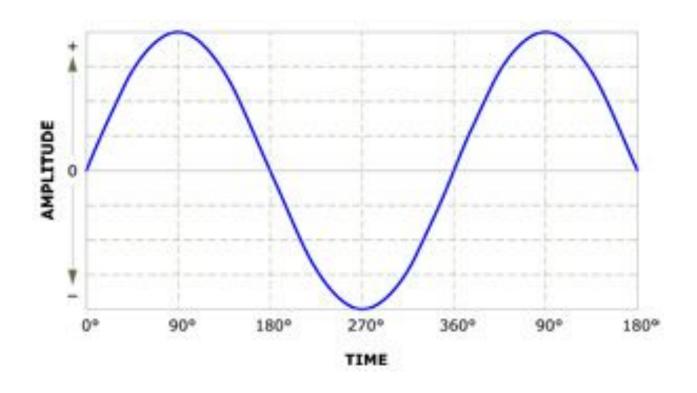


#### Figure 5.9 Binary phase shift keying

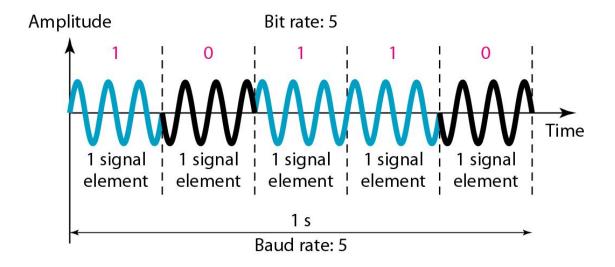

#### Figure 5.10 Implementation of BASK

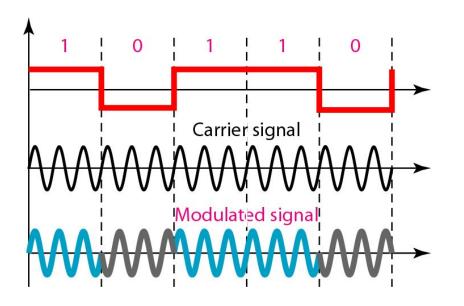


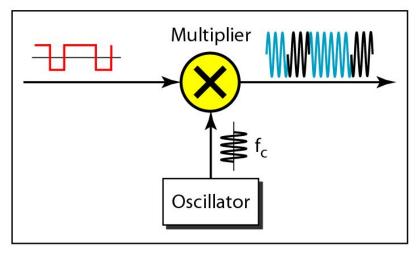

### Quadrature PSK

- To increase the bit rate, we can code 2 or more bits onto one signal element.
- In QPSK, we parallelize the bit stream so that every two incoming bits are split up and PSK a carrier frequency. One carrier frequency is phase shifted 90° from the other - in quadrature.
- The two PSKed signals are then added to produce one of 4 signal elements. L = 4 here.


#### Figure 5.11 QPSK and its implementation

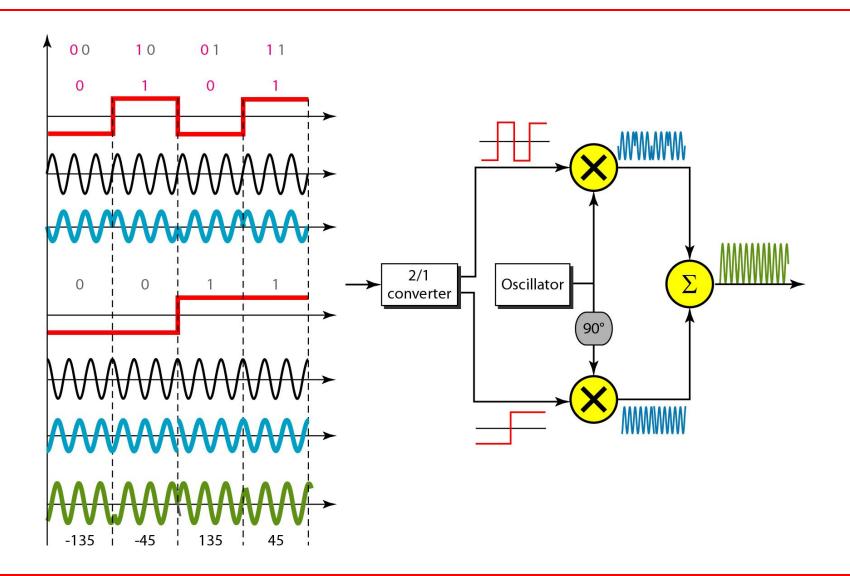

## **Constellation Diagrams**

- A constellation diagram helps us to define the amplitude and phase of a signal when we are using two carriers, one in quadrature of the other.
- The X-axis represents the in-phase carrier and the Y-axis represents quadrature carrier.

#### Figure 5.12 Concept of a constellation diagram

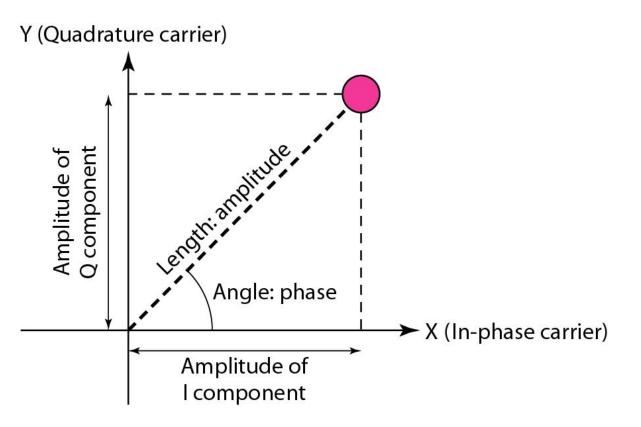





Show the constellation diagrams for an ASK (OOK), BPSK, and QPSK signals.

#### Solution

Figure 5.13 shows the three constellation diagrams.

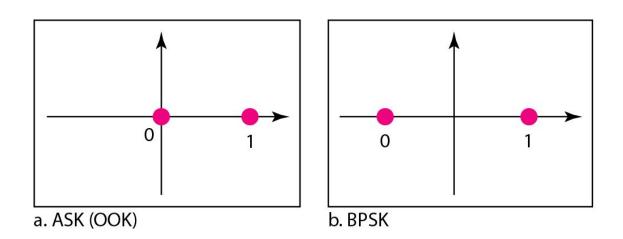

#### Figure 5.11 QPSK and its implementation

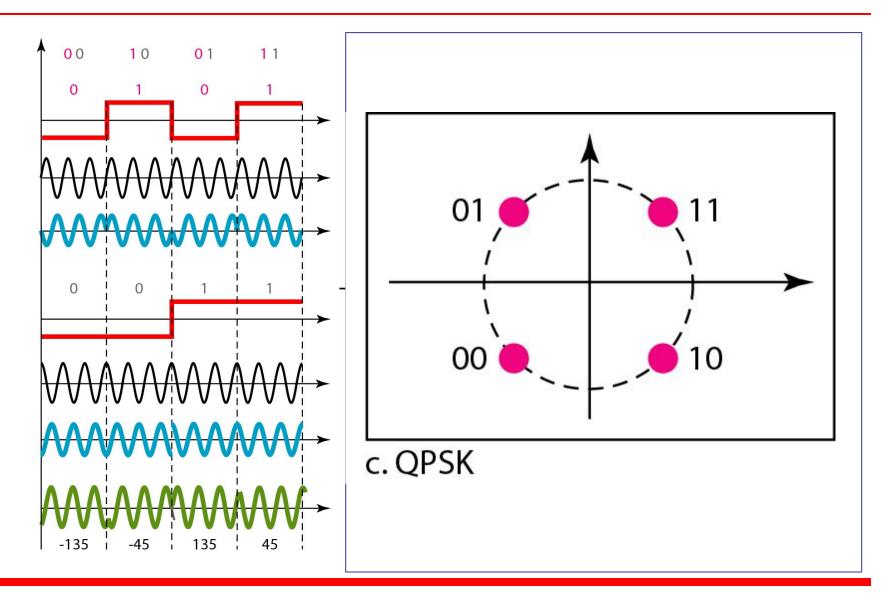

# Quadrature Amplitude Modulation (QAM)

- So far, we have been altering only one of the three characteristics of a sine wave at a time
- what if we alter two?
  - combine ASK and PSK
- Quadrature amplitude modulation is a combination of ASK and PSK
- The advantages of QAM are higher data rates
- However, combining three characteristics becomes complicated.
   So we usually do not use it.

#### Figure 5.14 Constellation diagrams for some QAMs

