
HVAC STUFF · USER GUIDE

Quick FlexConnect

A flex duct between two connectors — in two clicks

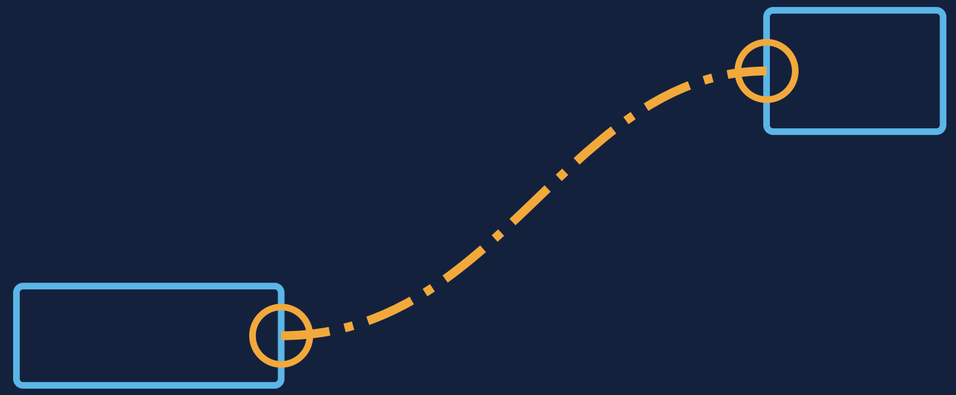

Revit 2023–2027 · Quick FlexConnect · version 1.0

OVERVIEW

What the command can do

Two clicks

Click near the first connector and near the second — the flex duct is done.

Size and type — by themselves

Equal connectors are joined at once. Different ones — the window offers the element size.

Transitions


If a size differs, a transition appears on the rigid duct.

A series until Esc

Connect pair after pair without restarting; every pair can be undone separately.

WHERE TO FIND IT

Ribbon: HVAC Stuff → Ductwork

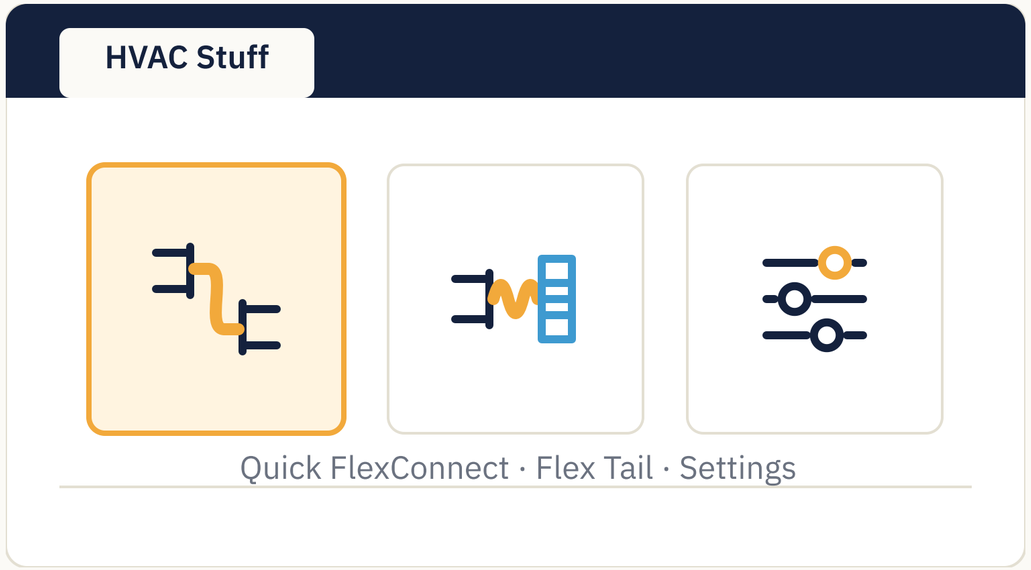

The Quick FlexConnect button is the first on the **Ductwork** panel of the **HVAC Stuff** tab.

Works only in a project, in these views:

- floor, ceiling, or structural plan;
- section;
- 3D view without perspective.

In families, sheets, elevations and perspective views the button is grayed out.

QUICK START

Three steps to a flex duct

1

First element

Point at the connector you need — a light blue mark appears. Click.

2

Second element

Move to the second connector: the outline of the future flex duct follows. Click.

3


Done

Equal sizes — the flex duct is already in the model. Different — confirm the size in the window.

Works with: ducts, accessories, fittings, equipment, air terminals.

PICKING A CONNECTOR

The mark shows what will be taken

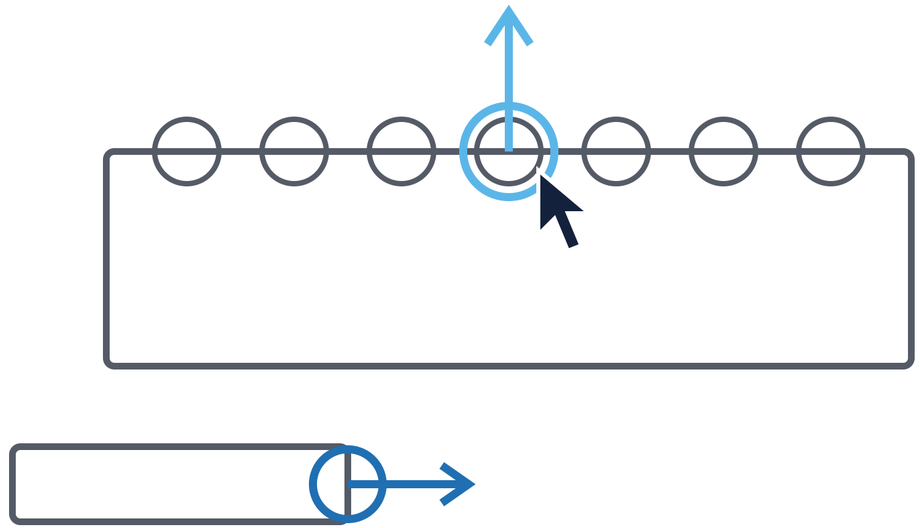

Light blue — under the pointer

The section outline and a direction arrow. The tap nearest to the pointer on the screen lights up.

Blue — already picked

The first connector stays marked while you pick the second.

The click takes exactly the marked connector — even among the eight taps of a plenum box.


OUTLINE OF THE FUTURE FLEX DUCT

Three styles to choose from



Axis only

A dash-dot line from centre to centre. The default.

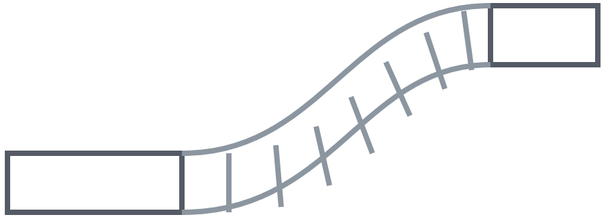

Pattern

Imitates the command’s Flex Pattern.




Band

Real width, axis and ends.

Outline style and color are in **Settings** on the **General** tab. The outline shows no airflow direction.

EQUAL SIZES

The flex duct appears at once

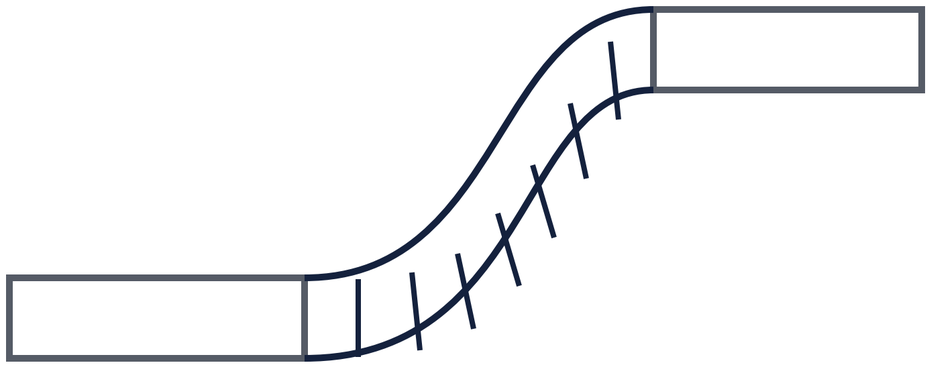

No window opens when the sizes are equal and the flex type is known.


The type comes from:

- the previous pair of the series;
- the only type that fits the shape;
- a sample: a click on a flex duct in the model (if turned on).

The Flex Pattern comes from the command settings.

DIFFERENT SIZES

The New flex duct window

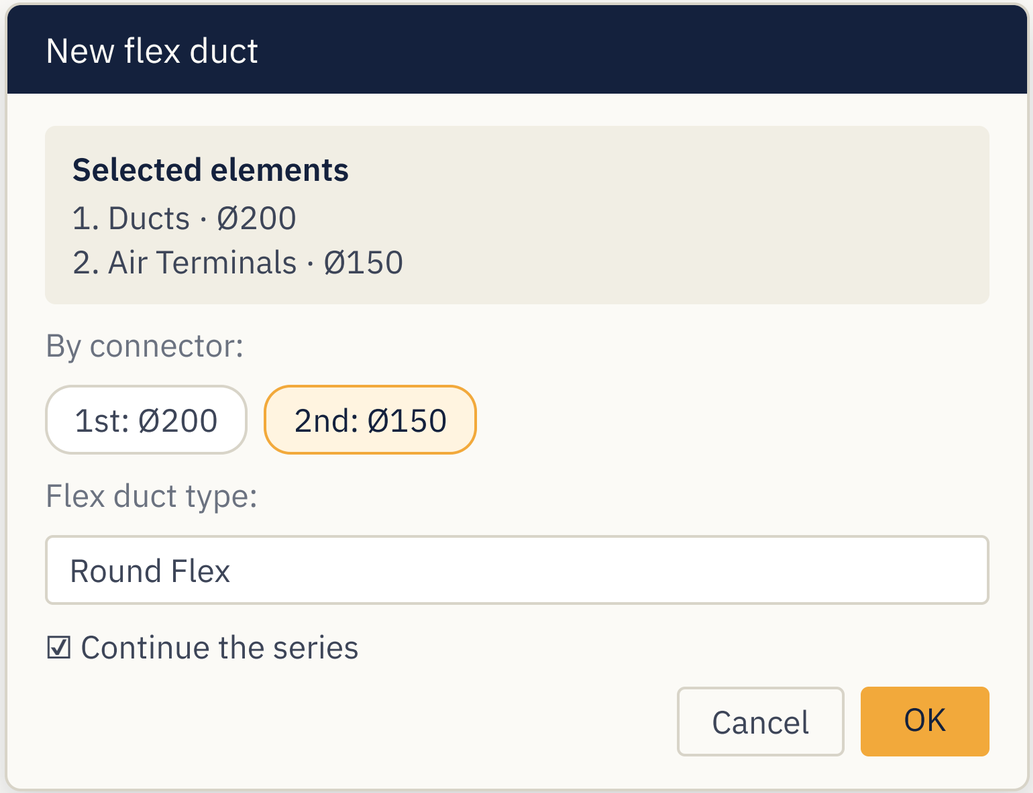


The real flex duct is already in the model — in gray. Any change of size or type rebuilds it at once.

The element size is preselected when the other side is an air terminal or equipment.

OK keeps the flex duct, **Cancel** or Esc removes it and moves on to the next pair.

TRANSITIONS

The transition goes on the rigid duct

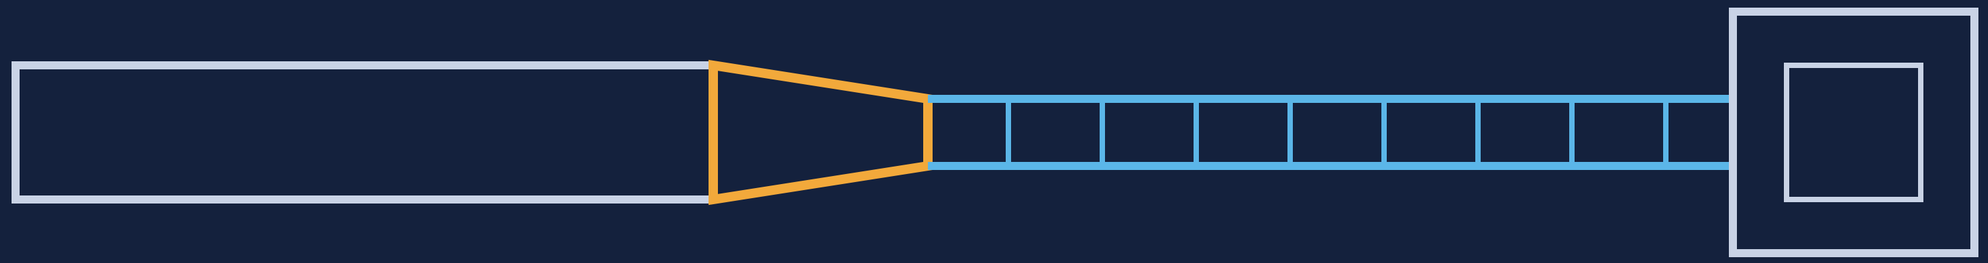

Duct Ø200 | Transition 200 → 150 | Flex Ø150 | Air terminal Ø150

Revit takes the transition from the routing preferences of the rigid duct. Between a flex duct and an air terminal there is nothing to take it from — so the flex duct gets the element size.

SERIES AND UNDO

Pair after pair, no restart

Action	What happens
Continue the series	After a pair the command waits for the next one. A checkbox in the window or in Settings.
Esc	Ends the series. Pairs already built stay.
Shift + click	Hold Shift on the second click — the window opens even for equal sizes.
Ctrl + Z	Removes the last pair: each is a separate step, “Quick FlexConnect: flex duct N”.
Undo ▾	The arrow next to the Revit Undo button removes several pairs or the whole series.


SETTINGS

The Settings button on the panel

Setting	What it changes
Flex Pattern	The Flex Pattern value of new flex ducts (default Flex).
Type from a sample	The type comes from a flex duct you click in the model.
Loop	Connect pairs one after another until Esc.
Preview	The outline under the pointer and the real flex duct in the window. Off — the window without a flex duct in the model.
Color and outline (General)	A color from an 11-swatch palette and the outline style: axis, pattern or band.
Language (General)	English, Українська, Русский — applies at once, ribbon included.

MESSAGES

Everything is explained in one window

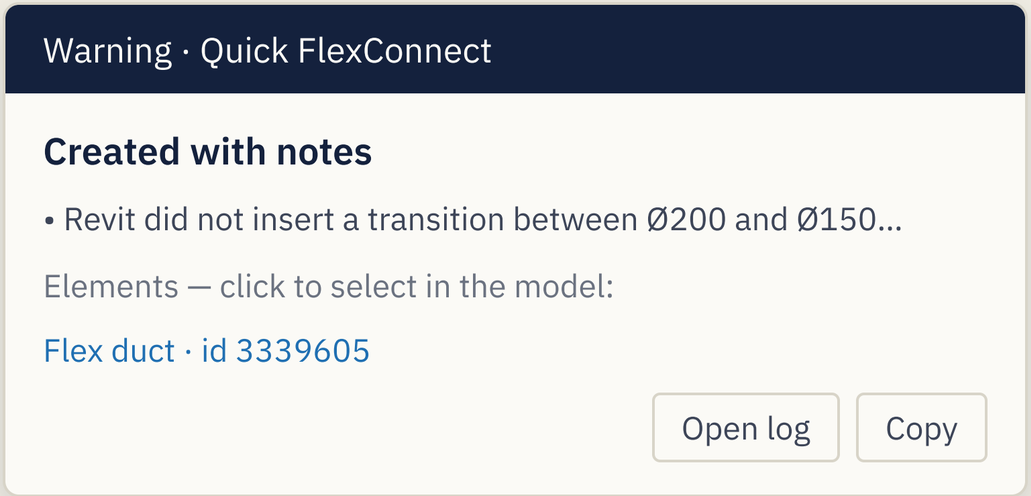

What failed, why, and what to do — no standard Revit dialogs.

An element link selects it in the model.


Copy — the text for the developer. **Open log** — the QuickFlexConnect.log file.

IF SOMETHING GOES WRONG

Frequently asked questions


Situation	What to do
The button is grayed out	Open a plan, a section, or a 3D view without perspective in a project.
The element does not highlight	Only ducts, accessories, fittings, equipment and air terminals work.
“No free connectors”	All connectors are taken — pick another element.
“No flex duct types”	Load a flex duct type of that shape into the project.
No transition	Give the flex duct the size of the air terminal or equipment — the transition goes on the duct.
Revit asks about the add-in	Click Always Load.

Picking two elements and the checks

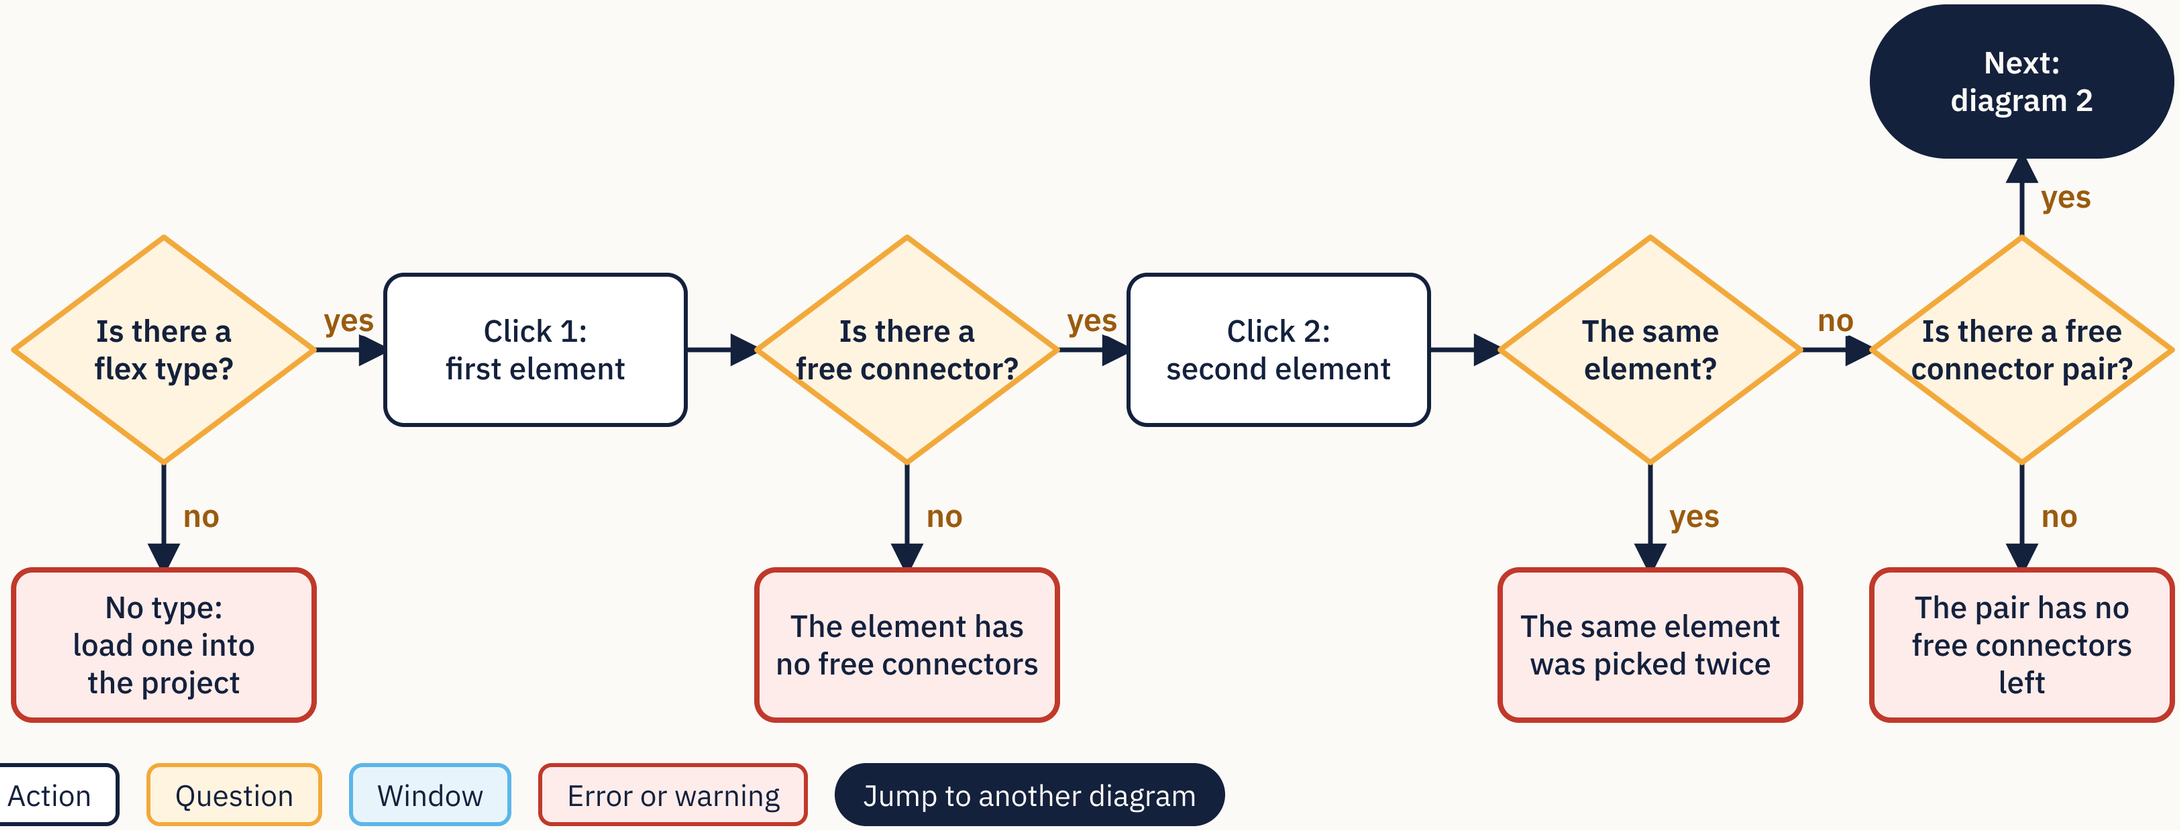

Esc at any pick ends the command; in a series the summary is shown after Esc. After a red message the next pair is picked.

When the size window opens

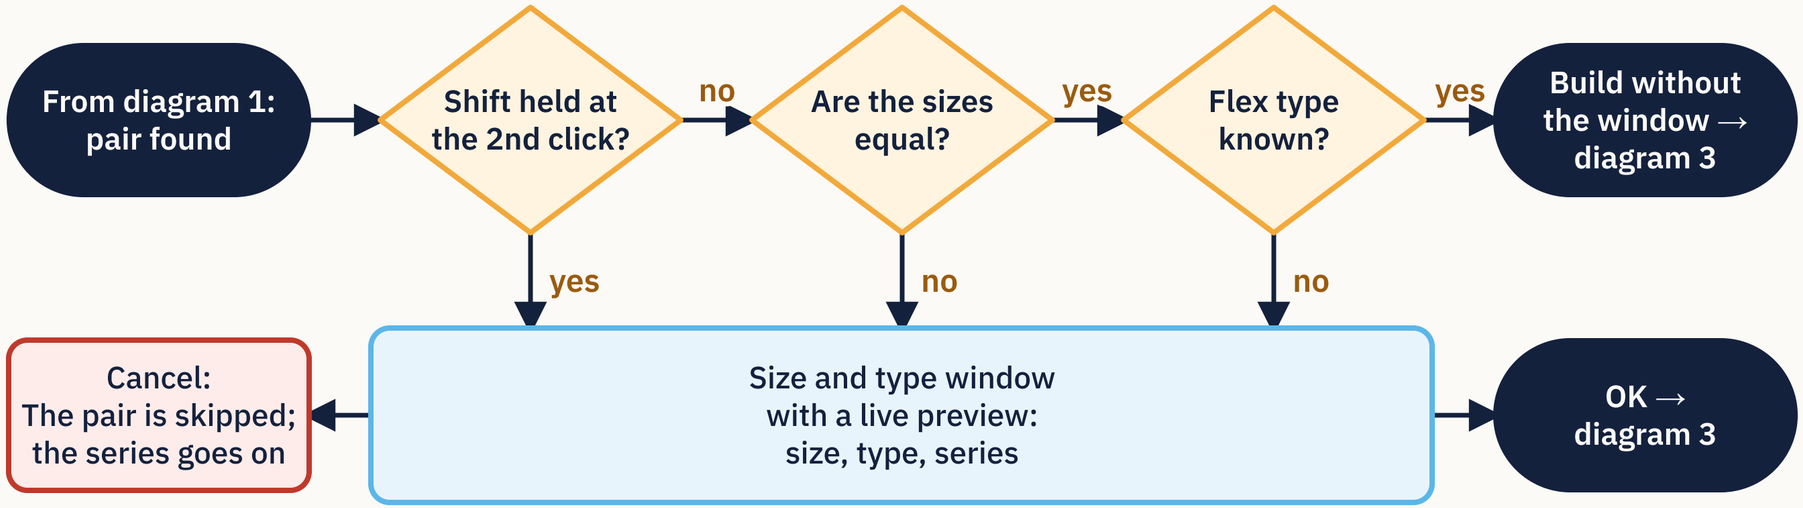


The type is known if chosen earlier in the series, the only fit, or taken from a sample

Action | Question | Window | Error or warning | Jump to another diagram

Equal sizes and a known type — the flex duct is built at once. Different sizes, an unknown type, or Shift — the window.

Building, errors and the series

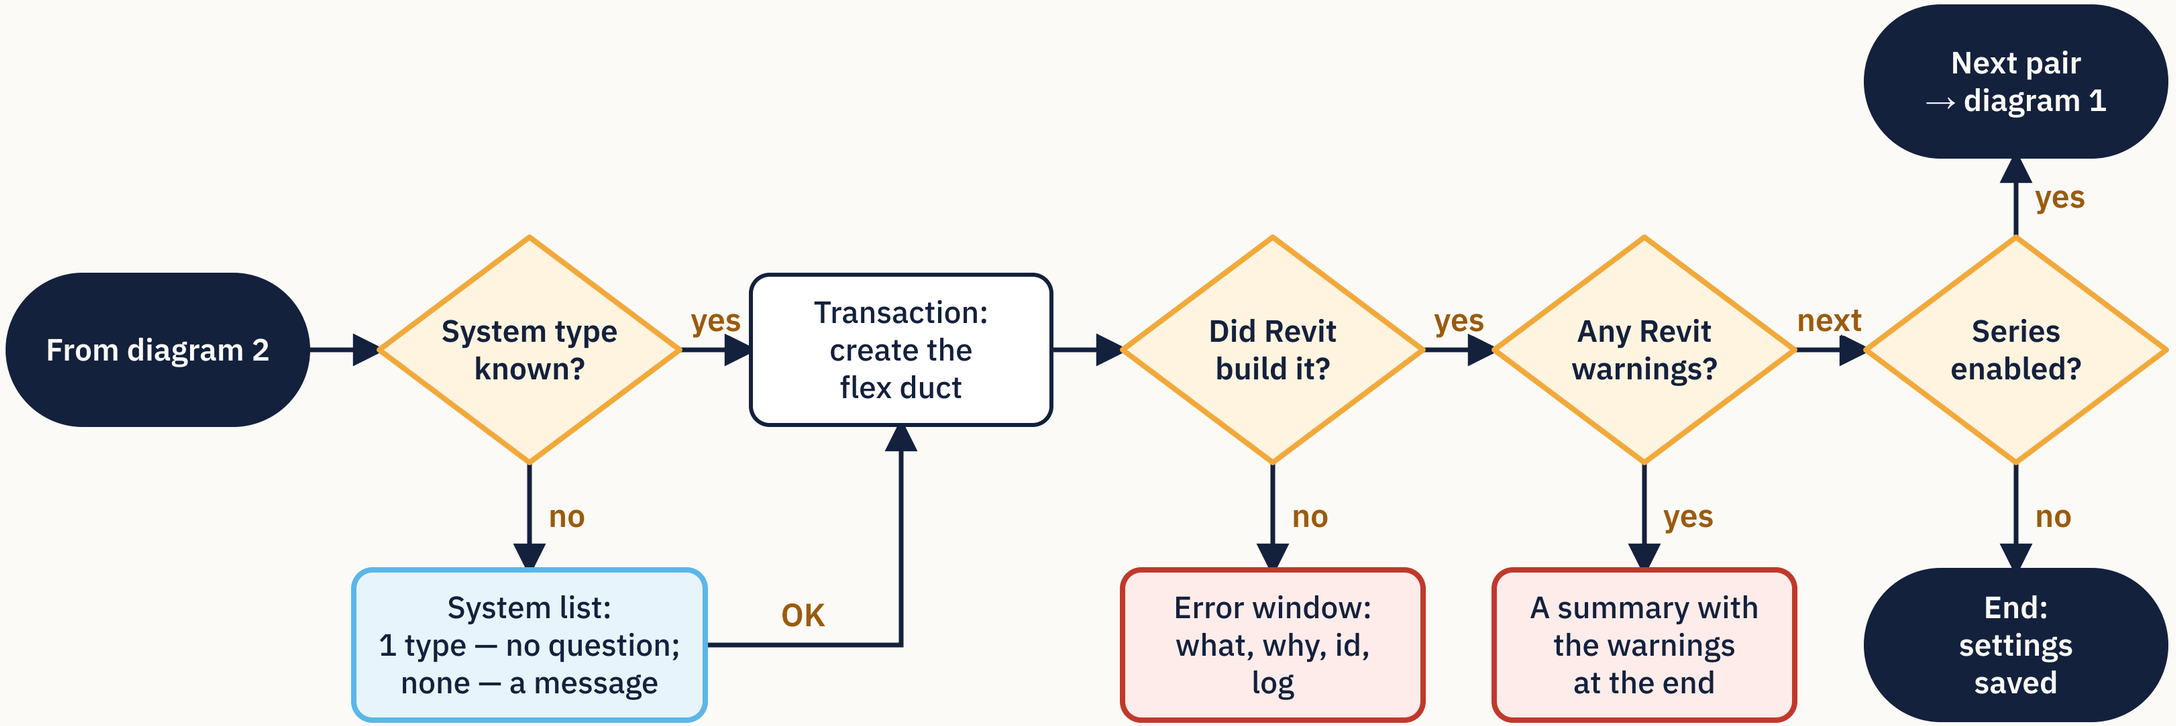

Every pair is a separate Revit undo step. Revit warnings are collected and shown in our window, not in standard dialogs.

HVAC STUFF

Two clicks — and the flex duct is in place

New versions, installers and guides: github.com/iMrVoLaNd/HVAC-Stuff-Releases

Help from Revit: point at the button and press **F1**.

Also in the add-in: Flex Tail — a flex segment at the end of a rigid duct.