




RWY	QFU	THR	bearing strength	Bearings are magnetic distances in metres TWR Elevation in FT AMSL 126.5 Coordinates WGS84
10	104°	N 45°40'15.405" E 009°41'24.888"	PCN 72/F/A/W/T	
28	284°	N 45°39'52.959" E 009°43'25.742"	PCN 10/F/0.75MPa/X/T	
12	120°	N 45°40'40.54" E 009°42'08.01"		
30	300°	N 45°40'29.53" E 009°42'33.75"		



VAR+106° E - 2005.0
Annual rate of change 6' E

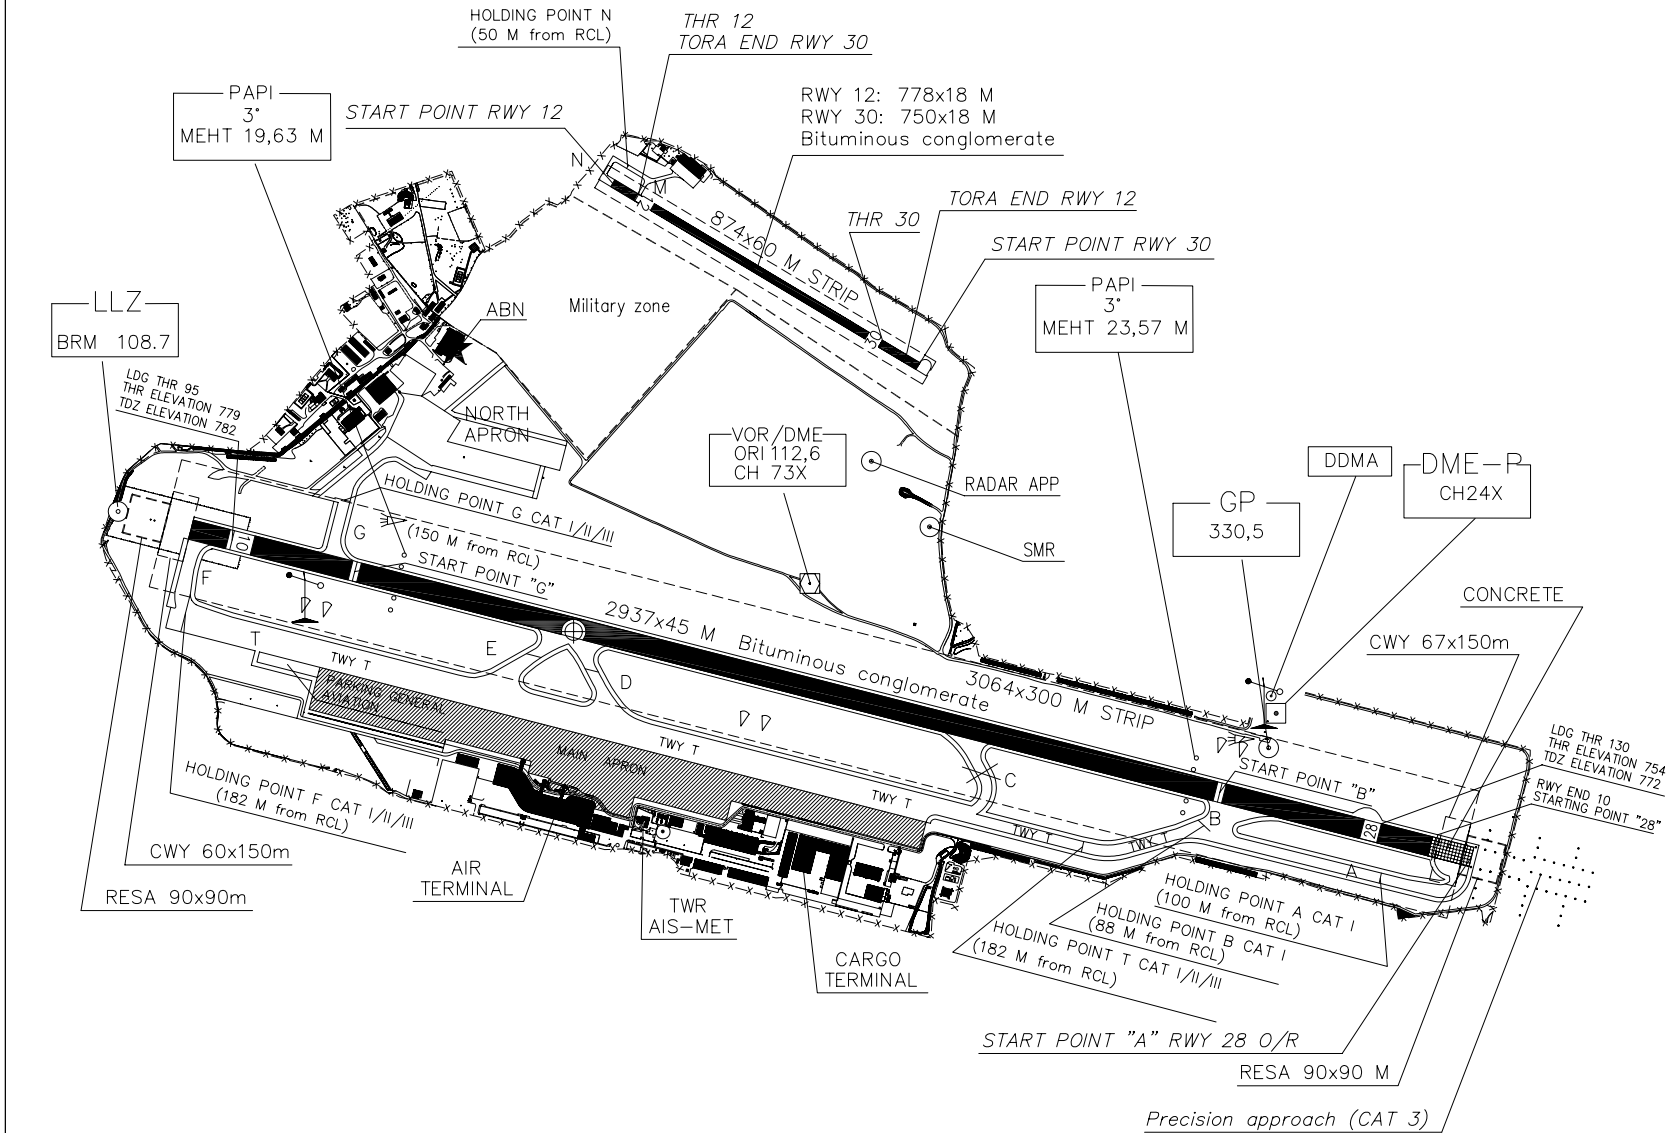


	TWY IDENT	WIDTH	bearing strength
RWY 10/28	T	25	66/F/A/W/T
	A	25	88/F/A/W/T
	B	25	54/F/A/W/T
	D	25	81/F/A/W/T
	E	25	82/F/A/W/T
	F	25	64/F/A/W/T
	G	25	88/F/A/W/T
RWY 12/30	M	7.5	NIL
	N	7.5	NIL




AD ELEV 782	BERGAMO / ORIO AL SERIO	
APRON ELEV 772	L I M E	45°40'08" N 009°42'01" E


MARKING AIDS MANOEUVERING AREA RWY 10/28
COMPLIANT WITH ITALIAN CIVIL AVIATION AUTHORITY (ENAC) AD REGULATION

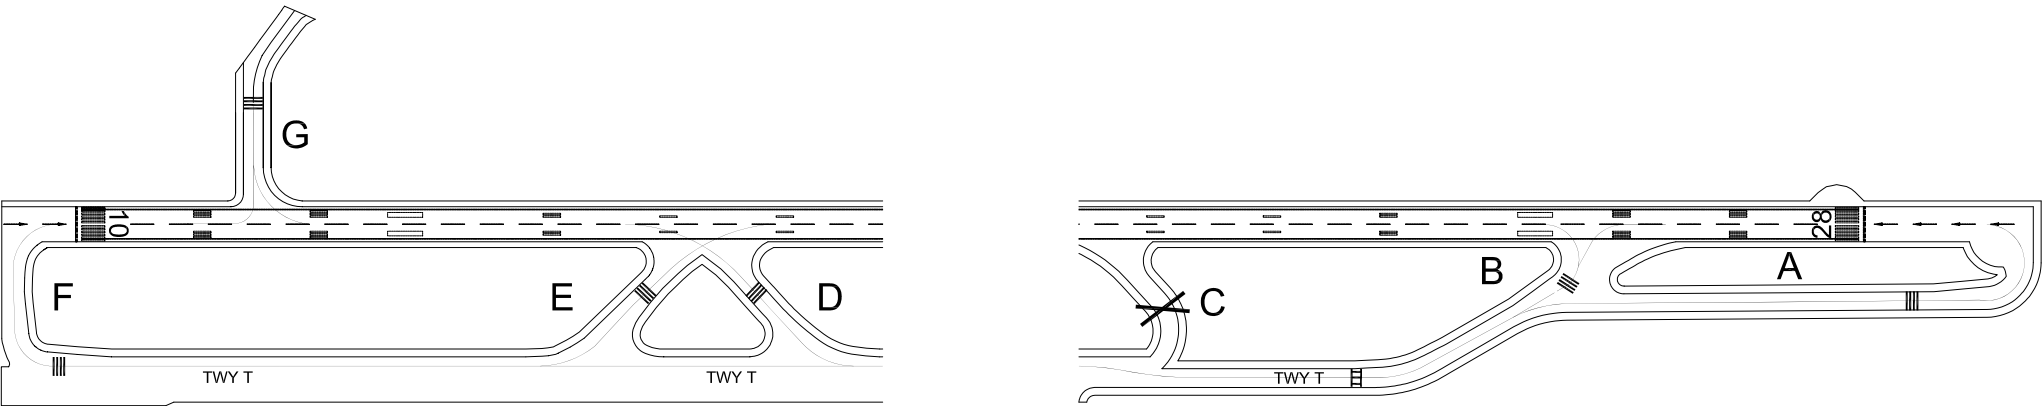

LIGHTING AIDS MANOEUVERING AREA RWY 10/28

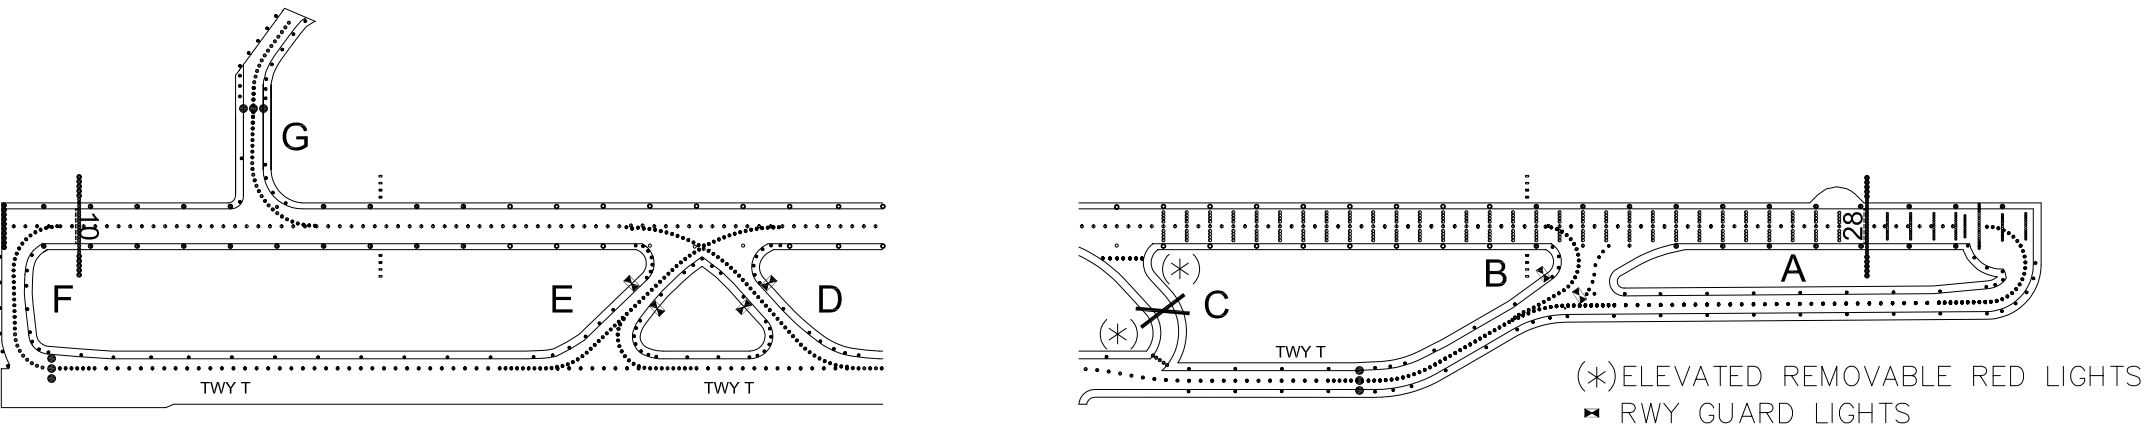

MARKING AIDS MANOEUVERING AREA RWY 12/30

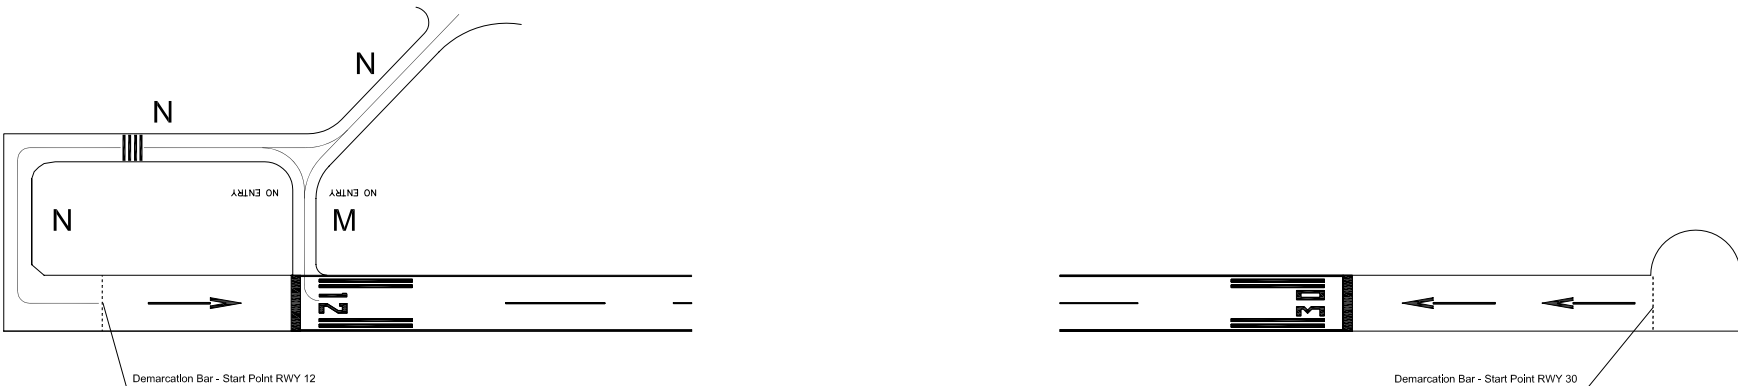


H APRON

TE

OUS CONGLOMERATE

PCN88 R/C/W/T
PCN50 R/C/W/T
PCN120 R/A/X/T
PCN91 F/A/X/T

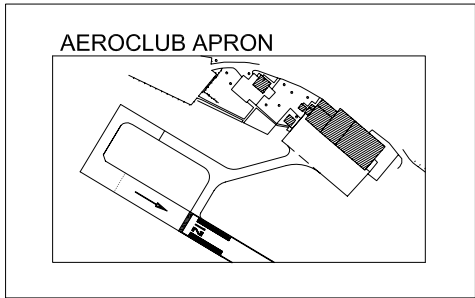

NORTH APRON			MAIN APRON		
POINTS ON PARKING AREA			POINTS ON PARKING AREA		
STANDS	N	E	STANDS	N	E
86	45°40'27.46"	009°41'45.54"	1	45°40'04.36"	009°41'34.28"
87	45°40'28.15"	009°41'51.65"	2	45°40'04.13"	009°41'37.78"
88	45°40'21.45"	009°41'45.05"	3	45°40'03.75"	009°41'34.76"
89	45°40'20.98"	009°41'47.63"	4	45°40'04.00"	009°41'36.24"
90	45°40'20.79"	009°41'50.53"	5	45°40'03.63"	009°41'38.20"
91	45°40'20.40"	009°41'50.75"	6	45°40'02.85"	009°41'38.60"
92	45°40'20.42"	009°41'52.52"	7	45°40'03.27"	009°41'40.15"
93	45°40'19.92"	009°41'53.34"	8	45°40'03.03"	009°41'43.86"
94	45°40'20.05"	009°41'54.49"	9	45°40'02.91"	009°41'42.12"
95	45°40'18.84"	009°41'54.39"	10	45°40'02.23"	009°41'42.53"
96	45°40'19.69"	009°41'56.45"	11	45°40'02.55"	009°41'44.07"

MAIN APRON		
POINTS ON PARKING AREA		
STANDS	N	E
1	45°40'04.36"	009°41'34.28"
2	45°40'04.13"	009°41'37.78"
3	45°40'03.75"	009°41'34.76"
4	45°40'04.00"	009°41'36.24"
5	45°40'03.63"	009°41'38.20"
6	45°40'02.85"	009°41'38.60"
7	45°40'03.27"	009°41'40.15"
8	45°40'03.03"	009°41'43.86"
9	45°40'02.91"	009°41'42.12"
10	45°40'02.23"	009°41'42.53"
11	45°40'02.55"	009°41'44.07"

AD ELEV 782	BERGAMO / ORIO AL SERIO	
APRON ELEV 772	LIME	45°40'08" N 009°42'01" E

STANDS	1-4-5-7-9-11 (BROKEN YELLOW LINE), AVBL UP TO A321/B737-900
STAND	2 (CONTINUOUS YELLOW LINE), ALTERNATIVE OF 3-6, AVBL UP TO AN124 ENTRY & EXIT BY FOLLOW-ME ASSISTANCE
STANDS	3-6-10 (CONTINUOUS YELLOW LINE), ALTERNATIVE OF 1-4-5-7-9-11, AVBL UP TO IL86 / B767-300
STANDS	8 (CONTINUOUS YELLOW LINE), ALTERNATIVE OF 6-10, AVBL UP TO B747-400 ENTRY & EXIT BY FOLLOW-ME ASSISTANCE

STANDS	12-13-15-17-19 (BROKEN YELLOW LINE) AVBL UP TO ATR42
STANDS	14-16 (CONTINUOUS YELLOW LINE) AVBL UP TO MD80/B727-100/B737-500
STANDS	18-21 (CONTINUOUS YELLOW LINE) AVBL UP TO B737/800 with winglets
STANDS	14-16-18-21 ALTERNATIVE OF 12-13-15-17-19

STANDS 22 (CONTINUOUS YELLOW LINE), AVBL UP TO B737-800

STANDS 23 (CONTINUOUS YELLOW LINE), AVBL UP TO B767-300

STANDS 24-26-28-29-31-33-35 (BROKEN YELLOW LINE), AVBL UP TO B737-800

STANDS 25-27-30-32-34 (CONTINUOUS YELLOW LINE), ALTERNATIVE OF 24-26-28-29-31-33-35, AVBL UP TO A300/B767-300

STANDS 37-39-42-44-47 (CONTINUOUS YELLOW LINE), AVBL UP TO B737-800

STANDS 36-38-40-41-43-45-46-48 (BROKEN YELLOW LINE), ALTERNATIVE OF 37-39-42-44-47-49, AVBL UP TO B757

STANDS 49 (CONTINUOUS YELLOW LINE), AVBL UP TO AN12

STANDS 50-51 (CONTINUOUS YELLOW LINE), AVBL UP TO D₀ 328
ENTRY & EXIT BY FOLLOW-ME ASSISTANCE

STANDS 22, 23, 25, 27, 30, 32 AND 34 ARE PROVIDED WITH POINT "Z".
ON PUSH-BACK REQ, PILOTS CAN RECEIVE INSTRUCTIONS EITHER TO STOP
AT ABOVE MENTIONED POINT "Z" OR TO PROCEED STRAIGHT TO TWY T

REMARKS

* 22(1)	MD80-MD90-DC9-BAE146-F28-F100
* 22(2)	A320-A321-B727
* 22(3)	RJ85-B737
* 23(4)	MD80-MD90-DC9-BAE146-F28-F100
* 23(5)	B737-B767
* 23(6)	A320-A321-B727-B757
* 23(7)	A300-A310-RJ85

STAND 86, AVBL UP TO B737, (CONTINUOUS YELLOW LINE)
STAND 87, AVBL UP TO B727, (CONTINUOUS YELLOW LINE)
STAND 88, 89, AVBL UP TO B767-300, (CONTINUOUS YELLOW LINE)
STAND 90, 92, 94 AND 96, AVBL UP TO B737-800, (CONTINUOUS YELLOW LINE)
STAND 91, 93 AND 95, AVBL UP TO B767-300 (BROKEN YELLOW LINE)

- ENTRY/EXIT TO/FM STANDS 2,8,50,51 MUST BE EXECUTED WITH FOLLOW-ME ASSISTANCE
- STAND 52 PUSH BACK AVBL UP TO B737-800 AND ONLY FROM 21.00 TO 05.00 SUMMER TIME (FROM 22.00 TO 06.00 WINTER TIME)
ENTRANCE MUST BE EXECUTED WITH FOLLOW-ME ASSISTANCE
- ENTRY/EXIT TO/FM NORTH APRON MUST BE EXECUTED WITH FOLLOW-ME ASSISTANCE

