

Mobile construction crane MK 63

Instruction manual Crane superstructure

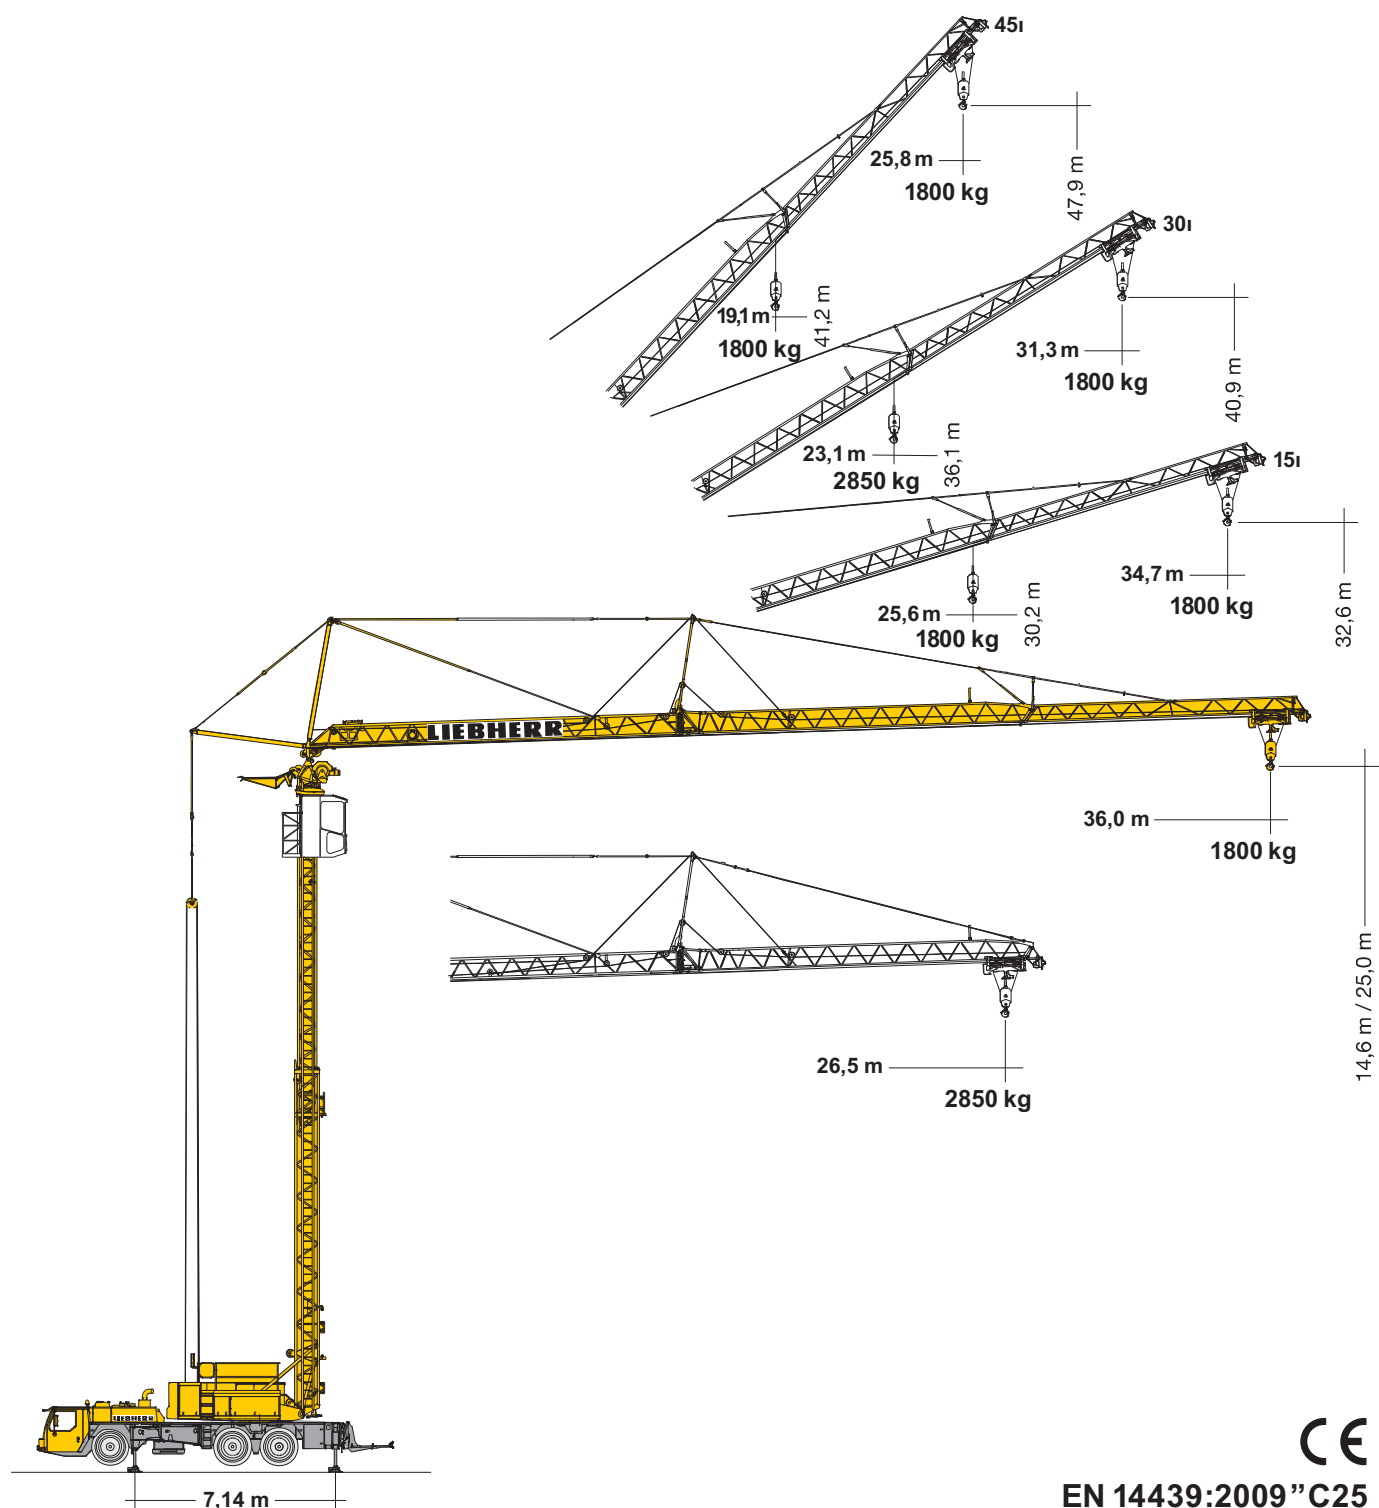


As of: 11.2010

ORIGINAL INSTRUCTION MANUAL

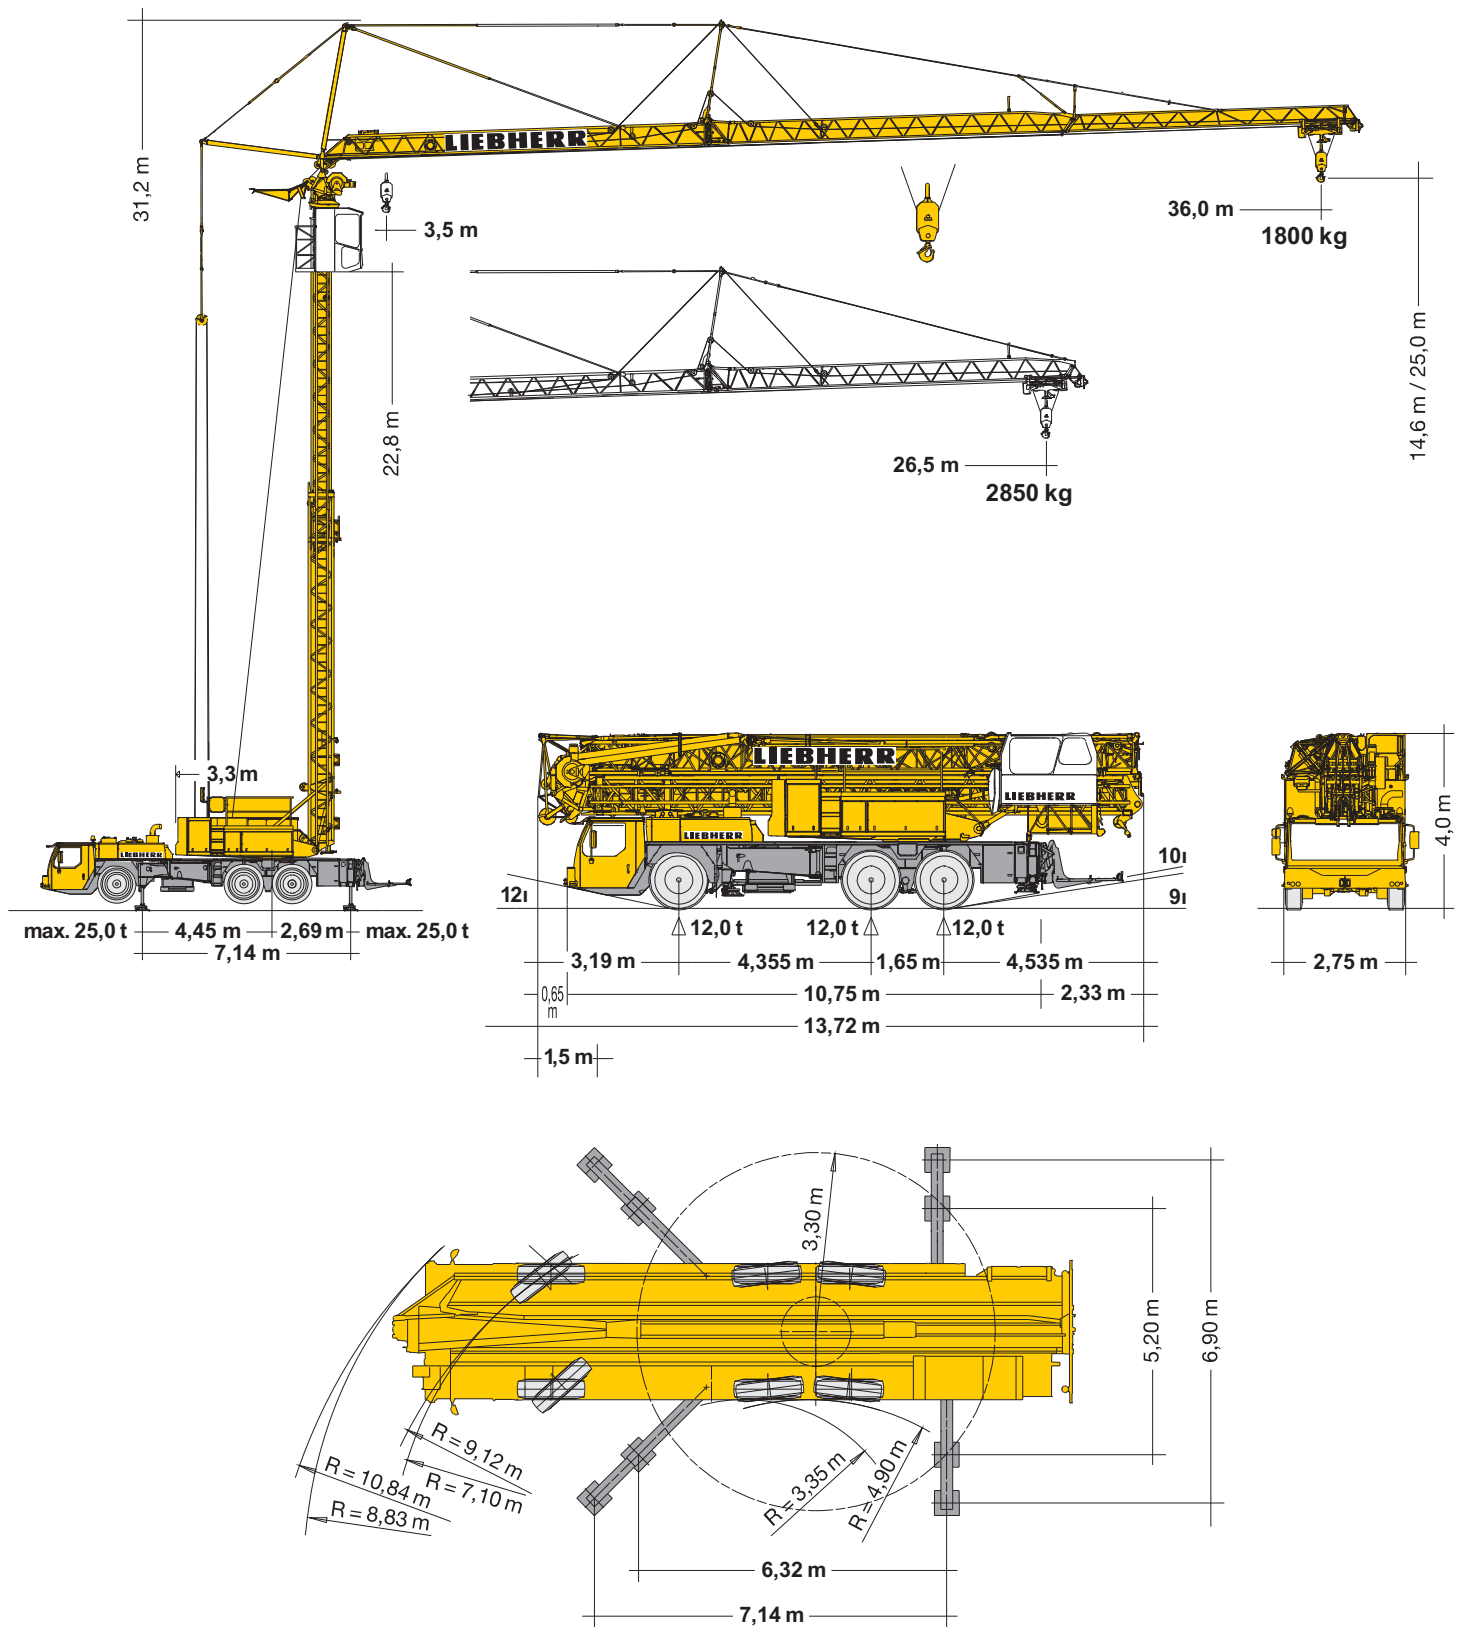
Mobilbaukran MK 63

Mobile construction crane / Grue mobile de construction
Autogrédile / Grădătilă mobilă de construcții
Mobiele torenkraan / Мобильный строительный кран



EN 14439:2009 "C25"

LIEBHERR



Gewicht

Weight / Poids / Peso / Peso / Gewicht / Macca

zulässiges Gesamtgewicht
Permissible total weight / Poids total admissible
Peso totale ammissibile / Peso total admissible
Toegestaan totaalgewicht / Допустимый общий вес

36000 kg

Ausladung und Tragfähigkeit



Radius and capacity / PortSeet charge / Sbraccio e portata
Alcances y cargas / Vlucht en draagkracht / Вылет и грузоподъемность


 7,14 m x 6,90 m	 m / kg	Außer Betrieb keine Demontage notwendig. Crane does not need to be disassembled when it is not in operation. / La grue n'a pas besoin d'être démontée lorsqu'elle est mise au repos. / Non T necessario lo smontaggio quando la gru T fuori servizio. / No es necesario desmontar la grúa en caso de no trabajar con ella. / Indien niet in gebruik, is geen demontage noodzakelijk / Вне работы демонтаж не требуется..																
		m / kg																
 max. 6,5 Bft (14 m/sec.)	m		9,0	10,0	12,0	14,0	16,0	18,0	20,0	22,0	24,0	26,0	26,5	28,0	30,0	32,0	34,0	36,0
 36,0	36,0	3,5–9,0 8000	8000	7200	5980	5090	4430	3910	3490	3140	2860	2610	2560	2410	2220	2070	1930	1800
 26,5	26,5	3,5–10,0 8000	8000	8000	6610	5640	4910	4330	3870	3490	3180	2910	2850					



 7,14 m x 6,90 m	 m / kg	Außer Betrieb keine Demontage notwendig. Crane does not need to be disassembled when it is not in operation. / La grue n'a pas besoin d'être démontée lorsqu'elle est mise au repos. / Non T necessario lo smontaggio quando la gru T fuori servizio. / No es necesario desmontar la grúa en caso de no trabajar con ella. / Indien niet in gebruik, is geen demontage noodzakelijk / Вне работы демонтаж не требуется..																
		m / kg																
 max. 8,0 Bft (20 m/sec.)	m		9,0	10,0	12,0	14,0	16,0	18,0	20,0	22,0	24,0	26,0	26,5	28,0	30,0	32,0	34,0	36,0
 36,0	36,0	3,5–8,3 8000	7360	6590	5450	4630	4010	3530	3140	2830	2570	2340	2290	2150	1990	1840	1710	1600
 26,5	26,5	3,5–9,4 8000	8000	7540	6230	5300	4600	4050	3620	3260	2960	2710	2650					

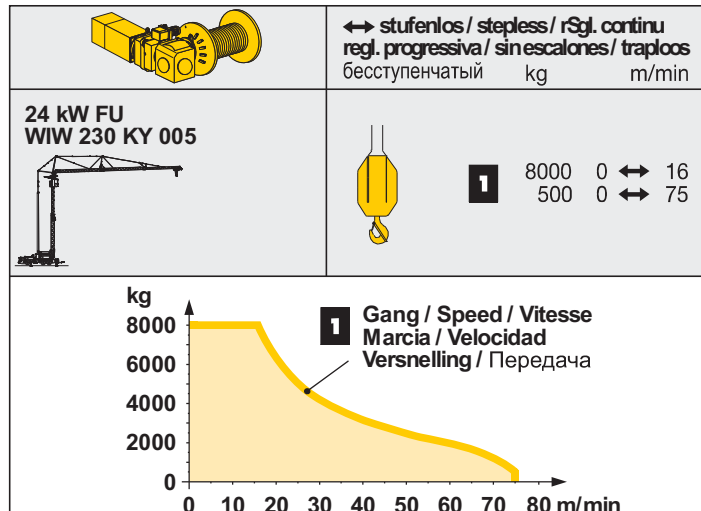
Auslegersteilstellung

Steep angle positions / FITche en position relevSe / Braccio inclinato
Pluma inclinada / Hoofdgiekstand / Положение стрелы под углом

 7,14 m x 6,90 m	 m / kg	m / kg 30°																
			7,0	8,0	9,0	10,0	12,0	14,0	16,0	18,0	20,0	22,0	23,1	24,0	26,0	28,0	30,0	31,3
 36,0	36,0	3,5–8,0 6000	6000	6000	5490	5070	4400	3870	3450	3100	2820	2570	2450	2370	2190	2030	1890	1800
 26,5	26,5	3,5–9,5 6000	6000	6000	6000	5750	5020	4440	3970	3590	3270	2990	2850					

 7,14 m x 6,90 m	 max. 6,5 Bft (14 m/sec.)	15°								45°							
		m	m				kg				m	m				kg	
 36,0	36,0		3,5 " 34,7				1800					3,5 " 25,8				1800	
 26,5	26,5		3,5 " 25,6				1800					3,5 " 19,1				1800	

	0 ↔ 1,1 U/min	5,0 kW FU
	0 ↔ 70,0 m/min	4,0 kW FU
	0" 15l 0" 30l 0" 45l	40 sec. 80 sec. 100 sec.



		1	2	3	4	5	6	7	8	9	10	11	12	R1	R2	
	(km/h)	6,7	8,3	10,8	13,2	16,7	20,5	28,2	34,7	45,0	55,4	69,8	75,0	6,6	8,1	38,5%
	(km/h)	3,9	4,8	6,2	7,7	9,7	11,9	16,3	20,1	26,1	32,1	40,5	49,8	3,8	4,7	> 55,3%

	14.00 R 25	BGL		C.0.08.0063
--	------------	-----	--	-------------

	400 V	Hz	kVA
	111,0 m 5 x 16 mm ²	50	37,0

Aufstellvorgang

Erection procedure / DSroulement de montage / Procedimento di montaggio
Procedimiento de montaje / Opstelling van de mobiele torenkraan / Процесс разворачивания

