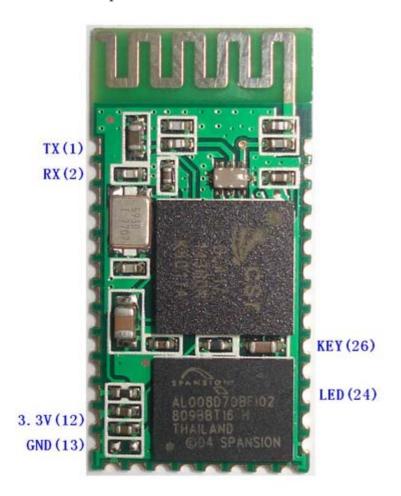


DRAWN BY:	Ling Xin	MODEL: HC-06		
CHECKED BY :	Eric Huang	描述: BC04 外置 8M Flash 带 EDR 模块 HC-06 为民用级,兼容 HC-04 工业级		
APPD. BY:	Simon Mok	REV : 2.0 页:		

Contents

- 1. Product's picture
- 2. Feature
- 3. Pins description
- 4. The parameters and mode of product
- 5. Block diagram
- 6. Debugging device
- 7. Characteristic of test
- 8. Test diagram
- 9. AT command set

1. Product's picture





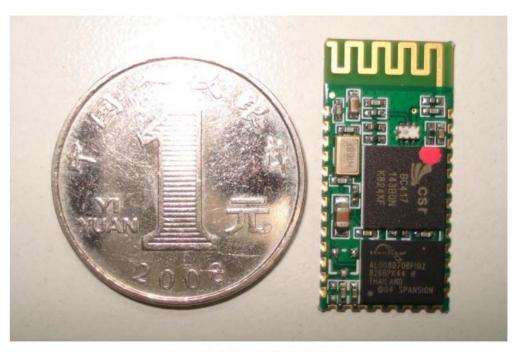


Figure 2. A Bluetooth module size



Figure 3 50 pieces chips in an anti-static blister package.

2. Feature

- Wireless transceiver
 - Sensitivity (Bit error rate) can reach -80dBm.
 - ➤ The change range of output's power: -4 +6dBm.
- Function description (perfect Bluetooth solution)
 - ➤ Has an EDR module; and the change range of modulation depth: 2Mbps 3Mbps.
 - ➤ Has a build-in 2.4GHz antenna; user needn't test antenna.
 - ➤ Has the external 8Mbit FLASH
 - \triangleright Can work at the low voltage (3.1V~4.2V). The current in pairing is in the range of 30~40mA. The current in communication is 8mA.

- > Standard HCI Port (UART or USB)
- ➤ USB Protocol: Full Speed USB1.1, Compliant With 2.0
- This module can be used in the SMD.
- ➤ It's made through RoHS process.
- The board PIN is half hole size.
- ➤ Has a 2.4GHz digital wireless transceiver.
- ➤ Bases at CSR BC04 Bluetooth technology.
- ➤ Has the function of adaptive frequency hopping.
- ightharpoonup Small (27mm \times 13mm \times 2mm)
- > Peripherals circuit is simple.
- ➤ It's at the Bluetooth class 2 power level.
- ➤ Storage temperature range: -40 $^{\circ}$ C 85 $^{\circ}$ C, work temperature range: -25 $^{\circ}$ C +75 $^{\circ}$ C
- Any wave inter Interference: 2.4MHz, the power of emitting: 3 dBm.
- ➤ Bit error rate: 0. Only the signal decays at the transmission link, bit error may be produced. For example, when RS232 or TTL is being processed, some signals may decay.
- Low power consumption
- Has high-performance wireless transceiver system
- Low Cost
- Application fields:
 - ➤ Bluetooth Car Handsfree Device
 - ➤ Bluetooth GPS
 - ➤ Bluetooth PCMCIA, USB Dongle
 - Bluetooth Data Transfer
 - Software
 - > CSR

3. PINs description

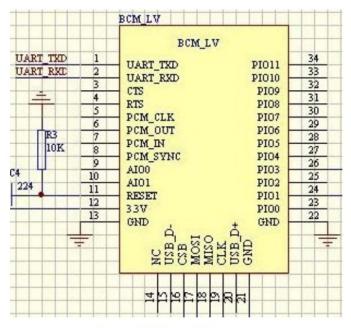


Figure 3 PIN configuration

The PINs at this block diagram is as same as the physical one.

PIN Name	PIN#	Pad type	Description	Note
GND	13 21 22	VSS	Ground pot	
1V8	14	VDD	Integrated 1.8V (+) supply with On-chip linear regulator output within 1.7-1.9V	
VCC	12	3.3V		
AIO0	9	Bi-Directional	Programmable input/output line	
AIO1	10	Bi-Directional	Programmable input/output line	

PIO0	23	Bi-Directional	Programmable input/output line,	
		RX EN	control output for LNA(if fitted)	

REQ
_
_
_
_
_
OUT

		pull-down		
SPI_MISO	18	CMOS input with weak internal pull-down	Serial peripheral interface data Output	
USB	15	Bi-Directional		
USB_+	20	Bi-Directional		
1.8V	14		可以外部供电 1.8V	默认为内部 供电 1.8V
PCM_CLK	5	Bi-Directional		
PCM_OUT	6	CMOS output	40	
PCM_IN	7	CMOS Input		
PCM_SYNC	8	Bi-Directional		

4. The parameters and mode of product

CSR,BC417143B


V 2.0 2006/09/6

蓝牙 RF 模块


- 1. 采用 CSR BC4 +8M FLASH 方案
- 2. 具有 PIO0-PIO11、AIO0、AIO1、 USB、PCM、UART 及 SPI 接口, 模块内置 8MFLASH,功能强大, 用户可定制软件,适用于各种蓝牙 设备,内置 RF 天线,便于调试。


蓝牙协议版本	Bluetooth Specification V2.0 With EDR	
USB 协议	Full/Speed USB VI.i	
USB Protocol	Compliant With USB V2.0	
頻率	2.4Ghz ISM band	
调制方式	GFSK (Gaussian Frequency Shift Keying)	
发射功率	4 ->4 dBm, Class 2	
灵敏度 〈	≈ 80dBm at O.1% BER	
通讯速率	Asynchronous:2Mbps(Max)	
供电电源	3.3V	
工作温度	-20~+55 Centigrade	
封装尺寸	27mmX13mmX2mm	

毕业: mm

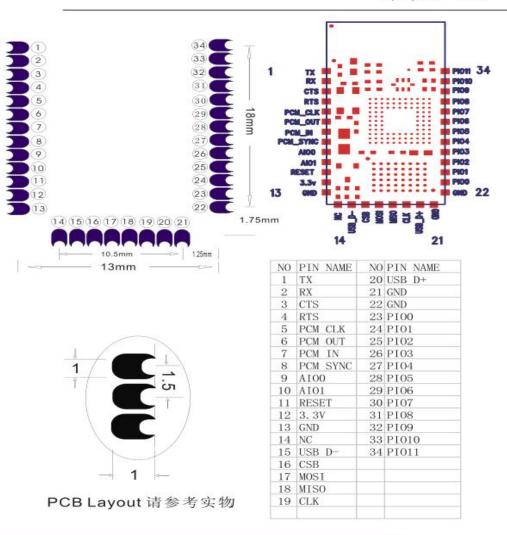

5. Block diagram

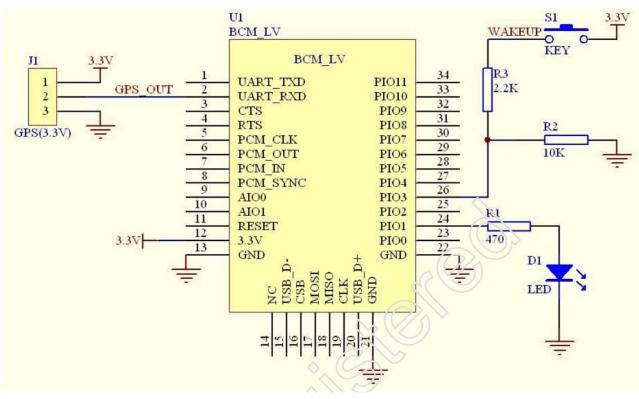

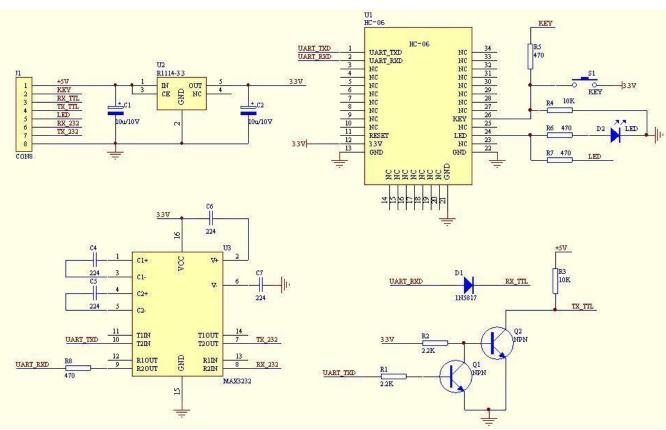

HC-04/06 master device has a function of remembering the last paired slave device. As a master device, it will search the last paired salve device until the connection is built. But if the WAKEUP bottom is pressed, HC-04/06 will lose the memory and research the new slave device.

6. Debugging device

6.1 Device

PC, hardware, 3G, 3G Frequency Counter (SP3386), 3.15V DC power supply, Shielding, Bluetooth Test box.

6.2 Software

7. Characteristic of test

		Test Condition 25 URH 65%			I 65%
		Min	Typ	Max	Unit
1.	Carrier Freq. (ISM Band)	2.4	10000	2.4835	MHz
2.	RF O/P Power	-6	2	4	dBm
3.	Step size of Power control	2		8	dB
4.	Freq. Offset (Typical Carrier freq.)	-75		75	KHz
5.	Carrier Freq. drift (Hopping on, drift rate/50uS)	-20		20	KHz
-	1 slot packet	-25		25	KHz
¥5.	3 slot packet	-40		-40	KHz
6.	Average Freq. Deviations (Hopping off, modulation) 140		175	KHz
10	Freq. Deviation	115			KHz
	Ratio of Freq. Deviation	0.8			
7.	Receive Sensitivity @< 0.1% BER(Bit error rate)-83			dBm

8. Test diagram

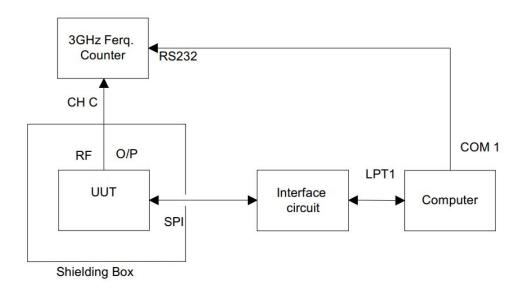


Fig 1. Programming and Freq. Alignment

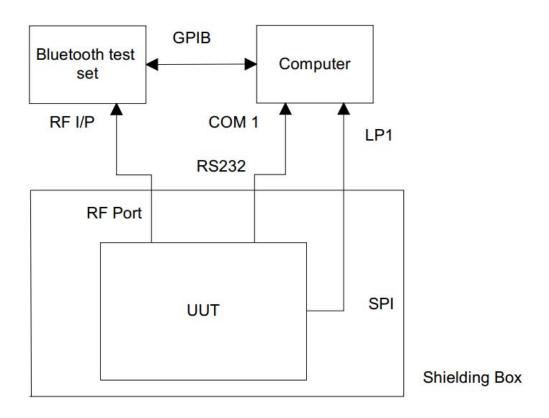


Fig 2 RF parameter Test Procedure

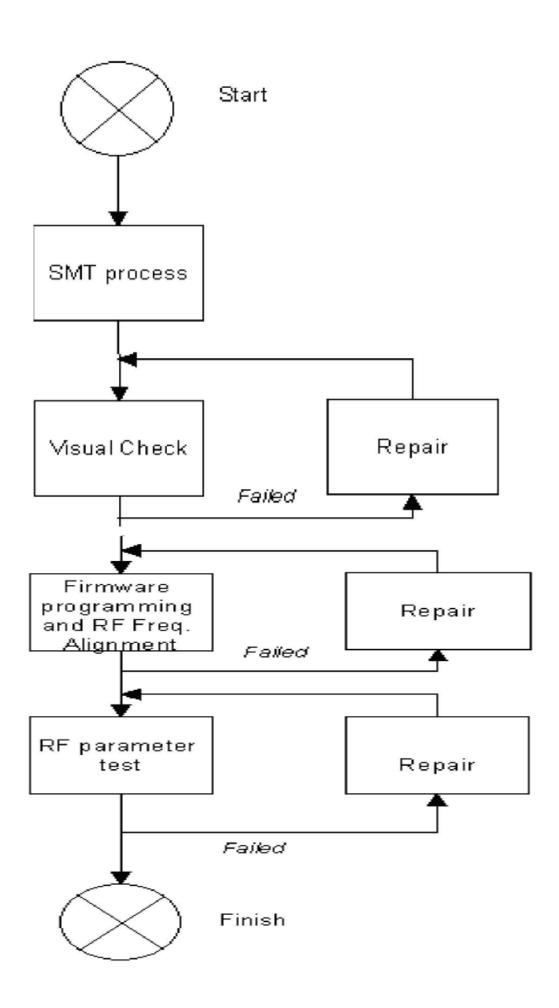


Fig 3 Assemble/Alignment/Testing Flow Chart

9. AT command set

The way to the AT command mode: supply power to the module, it will enter to the AT mode if it needn't pair. The interval of command is about 1 second.

Default parameter: Baud rate:9600N81, ID: linvor, Password:1234

1. Test communication

Send: AT (please send it every second)

Back: OK

2. Reset the Bluetooth serial baud rate

Send: AT+BAUD1 Back: OK1200 Send: AT+BAUD2 Back: OK2400

•••••

1-----1200

2-----2400

3-----4800

4-----9600 (Default)

5----19200

6-----38400

7-----57600

8-----115200

9-----230400

A-----460800

B-----921600

C----1382400

PC can't support the baud rate lager than 115200. The solution is: make the MCU have higher baud rate (lager than 115200) through programming, and reset the baud rate to low level through the AT command.

The baud rate reset by the AT command can be kept for the next time even though the power is cut off.

Reset the Bluetooth name

Send: AT+NAMEname

Back: OKname

Parameter name: Name needed to be set (20 characters limited)

Example:

Send: AT+NAMEbill gates

Back: OKname

Now, the Bluetooth name is reset to be "bill gates"

The parameter can be kept even though the power is cut off. User can see the new Bluetooth name in PDA refresh service. (Note: The name is limited in 20 characters.)

4. change the Bluetooth pair password

Send: AT+PINxxxx Back:OKsetpin

Parameter xxxx: The pair password needed to be set, is a 4-bits number. This command can be used in the master and slave module. At some occasions, the master module may be asked to enter the password when the master module tries to connect the slave module (adapter or cell-phone). Only if the password is entered, the successful connection can be built. At the other occasions, the pair can be finish automatically if the master module can search the proper slave module and the password is correct. Besides the paired slave module, the master can connect the other devices who have slave module, such as Bluetooth digital camera, Bluetooth GPS, Bluetooth serial printer etc.

Example:

Send: AT+PIN8888

Back: OKsetpin

Then the password is changed to be 8888, while the default is 1234.

This parameter can be kept even though the power is cut off.

5. No parity check (The version, higher than V1.5, can use this command)

Send: AT+PN (This is the default value)

Back: OK NONE

6. Set odd parity check (The version, higher than V1.5, can use this command)

Send: AT+PO

Back: OK ODD

7. Set even parity check(The version, higher than V1.5, can use this command)

Send: AT+PE

Back: OK EVEN

8. Get the AT version

Send: AT+VERSION

Back: LinvorV1.n