Robo-Garage parallel lift v2.2: drill template, RIGHT cheek

Seen from the robot bay. Print on A4 at 100 % ("actual size", not "fit to page"): both bars must measure 100 mm.

Cut along both cut lines, tape it on, pre-drill the 4 crosses with 3 mm for 4 × 20 countersunk screws. Page 2 is the left cheek.

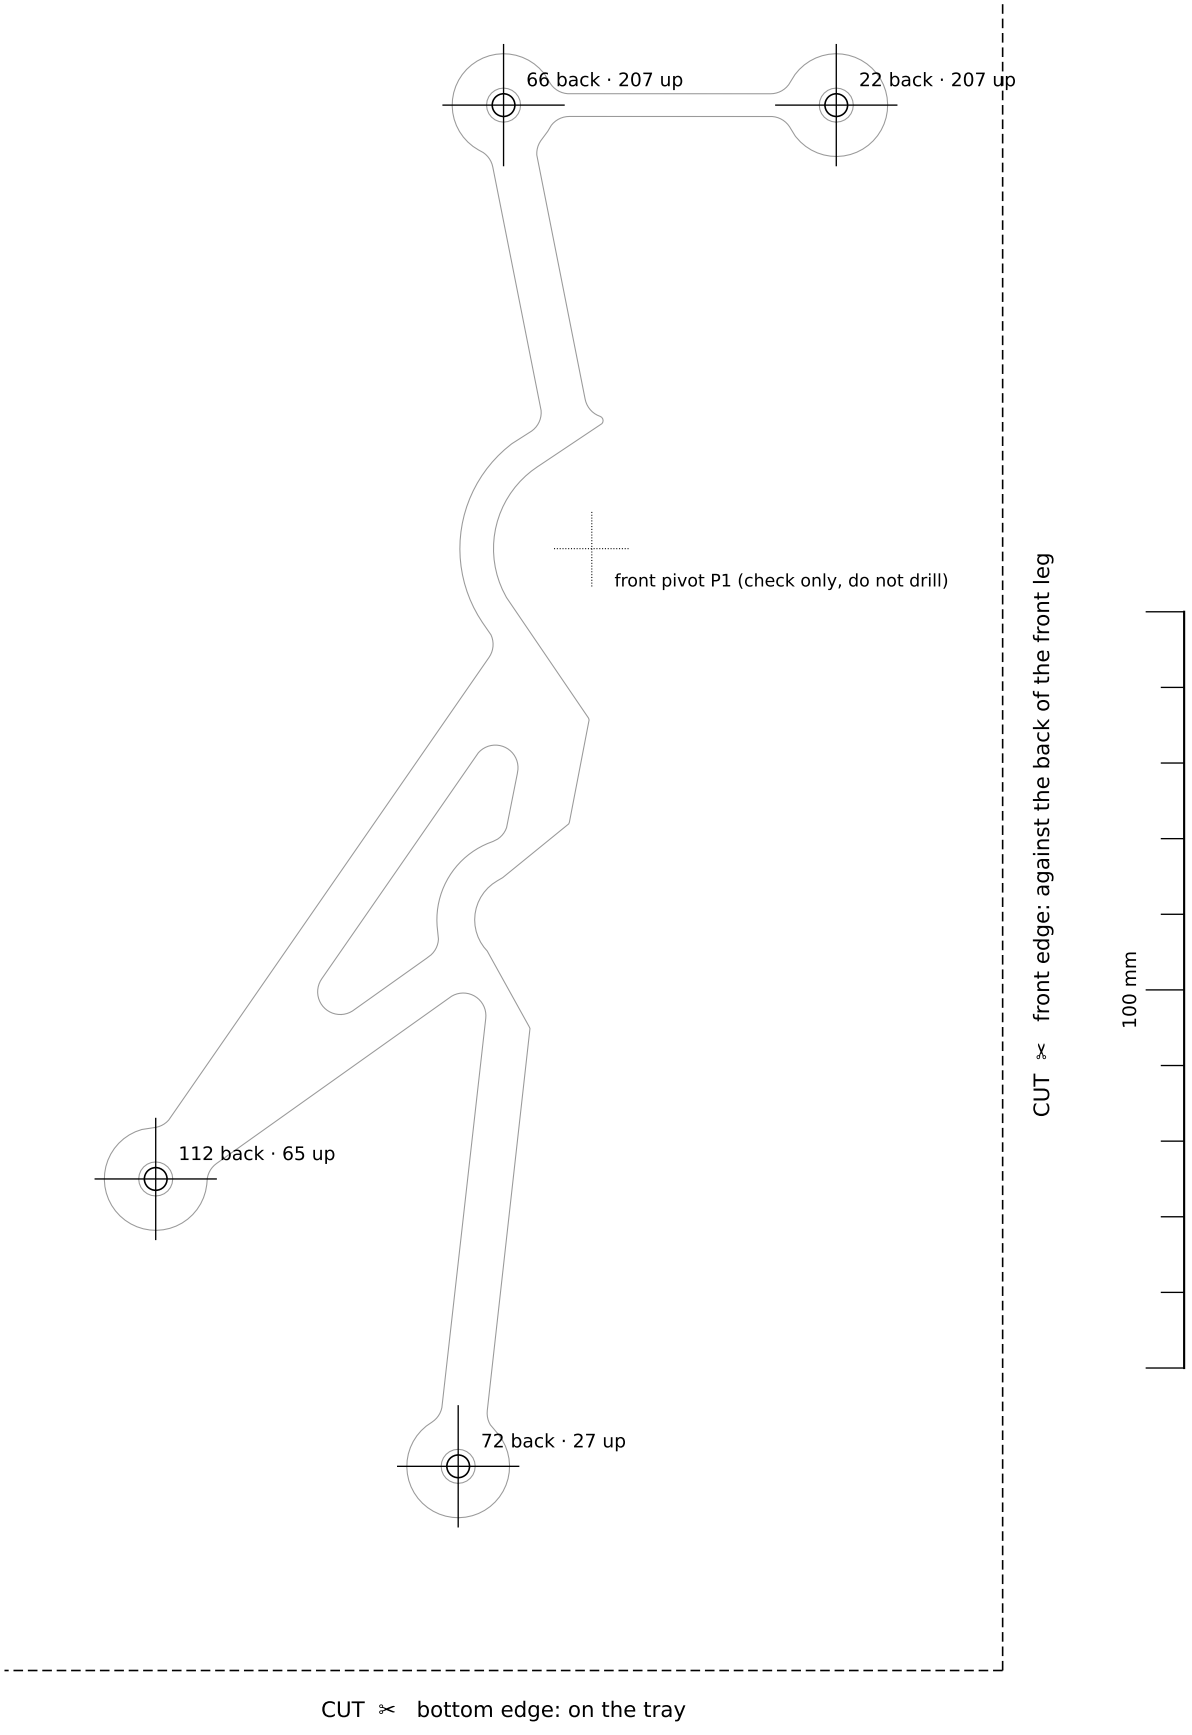

Hole positions from parallel-lift.scad (SCREWS); "back" = mm behind the front edge, "up" = mm above the tray.

Robo-Garage parallel lift v2.2: drill template, LEFT cheek

Seen from the robot bay. Print on A4 at 100 % ("actual size", not "fit to page"): both bars must measure 100 mm.

Cut along both cut lines, tape it on, pre-drill the 4 crosses with 3 mm for 4 × 20 countersunk screws. Page 1 is the right cheek.

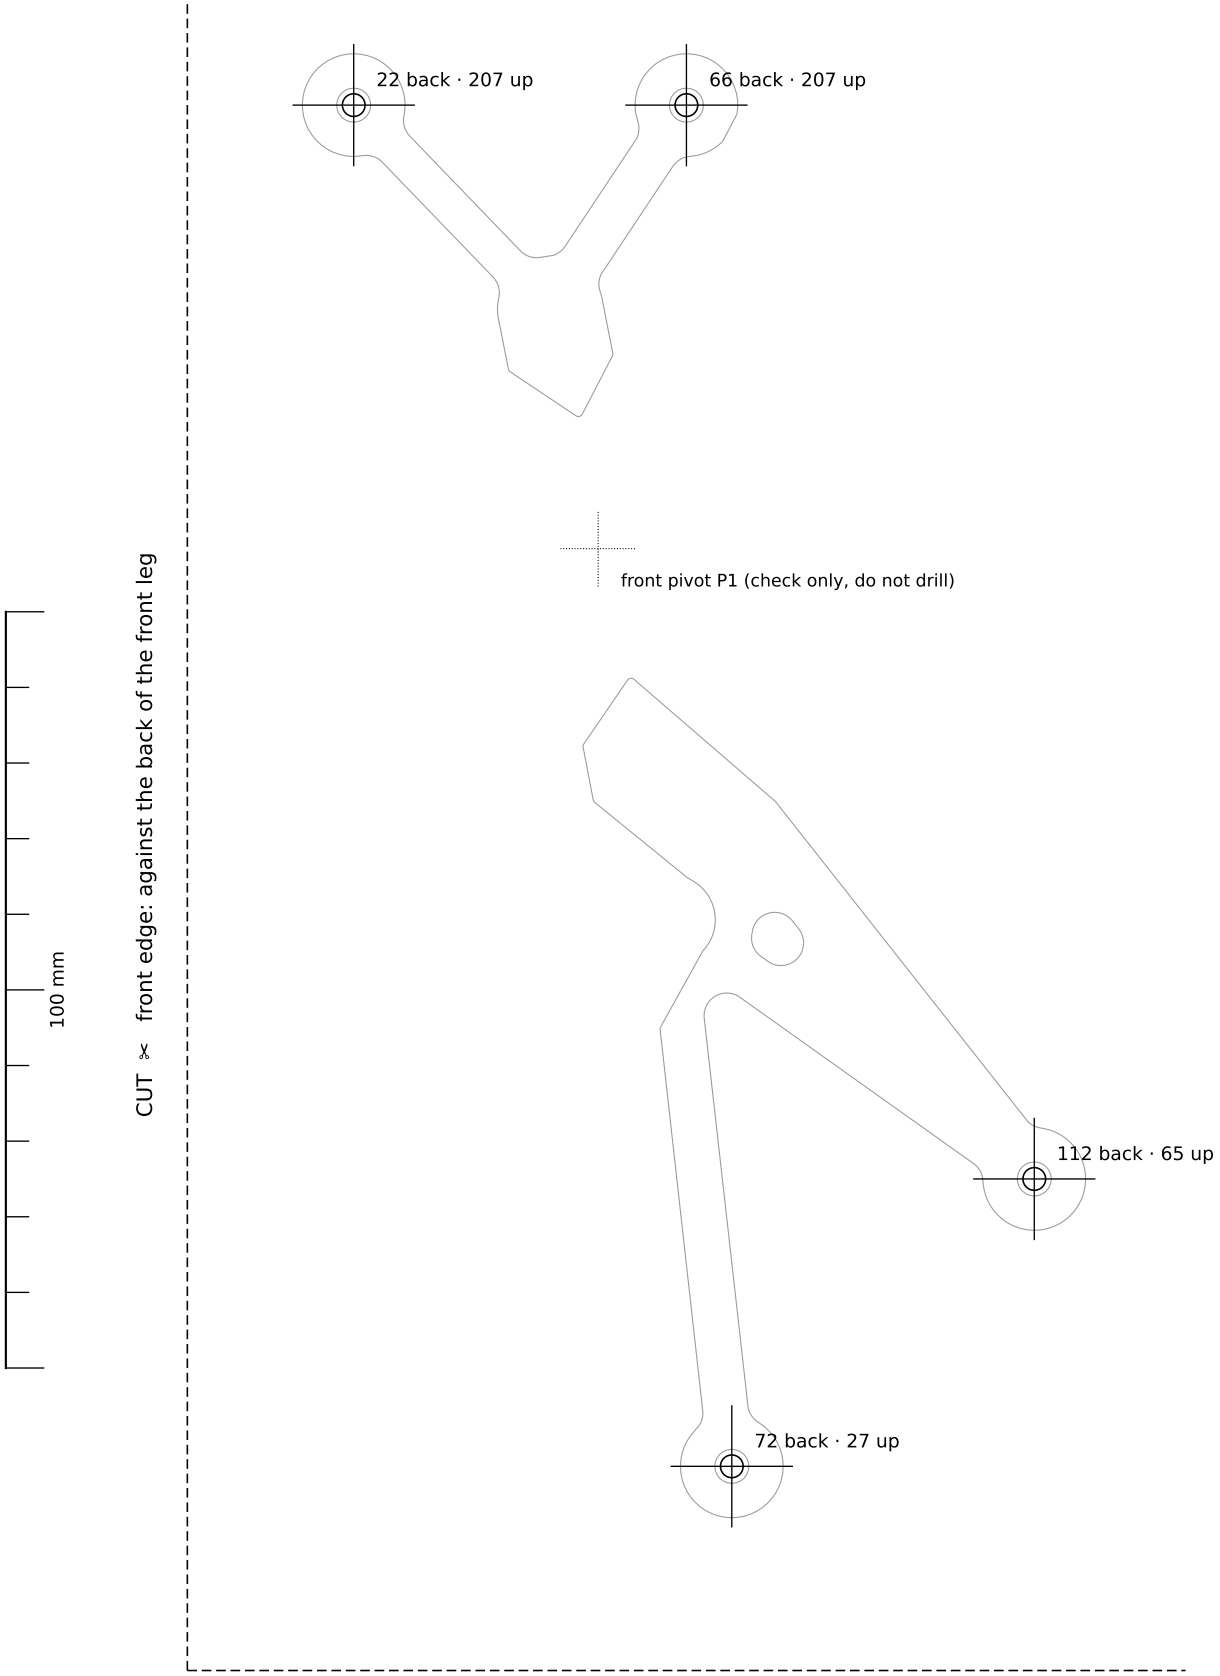

Hole positions from parallel-lift.scad (SCREWS); "back" = mm behind the front edge, "up" = mm above the tray.