




BATHSHEVA LONDON

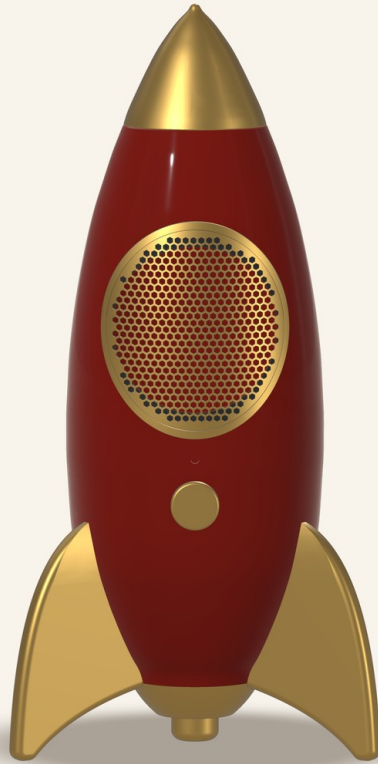

Atelier

Prototype build manual

OXBLOOD · LOOKS-LIKE PROTOTYPE · SEPTEMBER 2026

INVENTORY

Parts and supplies

PART	QTY	FINISH
 body	1	Oxblood gloss, clear coat
 nose_cone	1	Metallic gold
 fin_x3	3	Metallic gold
 grille	1	Metallic gold; recess floor behind it masked and painted matt black
 bezel	1	Metallic gold
 knob	1	Metallic gold; decorative on the prototype, glued on a dowel, doesn't turn
 collar	1	Metallic gold
 foot	1	Metallic gold

SUPPLIES

- Grey filler primer, e.g. Rust-Oleum Automotive Primer (proposed)
- Oxblood/deep red gloss spray to match #8A1C15, e.g. Rust-Oleum Universal Gloss "Berry Red" (proposed -- test against a printed swatch first)
- Metallic gold spray, e.g. Rust-Oleum Universal Metallic "Gold" (proposed)
- Clear lacquer (gloss)
- Matt black acrylic and a small brush, for the grille recess floor
- Wet-and-dry paper, P240 to P1200
- Tamiya masking tape, 10 mm
- Araldite Rapid epoxy, cocktail sticks
- M4 x 12 mm self-tapping screws, 6 (proposed -- for the fins; epoxy alone is the fallback, see Step 06)
- 6 mm wooden dowel, a short length cut to size (proposed -- for the knob shaft)
- Steel shot or fishing weights, about 500 g, for the internal ballast (proposed)
- Respirator, dust mask, nitrile gloves
- Craft knife, blu-tack

Every specific product above is proposed, not confirmed: check it against a printed test piece before committing to a full spray-out.

STEP 06, ASSEMBLY, 1 OF 3

Assembly order



01 Grille

The grille recess floor was painted matt black in Step 04 (see Parts and supplies); check it's fully dry, then glue the grille into the recess.



02 Bezel

Over the grille's edge, into the same recess.



03 Knob

Glue a short length of 6 mm dowel into the body's shaft hole, then glue the knob onto it, centred below the grille. On the prototype it is decorative and doesn't turn.