

Faro Prototype Build Manual

Bathsheva London — Prototype build and finishing guide



BATHSHEVA
LONDON



1. OVERVIEW

This manual takes the printed Faro parts from the box to a finished, glowing prototype ready to photograph. Plan on two weekends: the first for checking, preparing, priming and painting, then a few days for the paint to harden, and the second for clear coat and assembly.

2. PRINTED PARTS

Your print should include the following parts. Finish each part as shown before final assembly.

	base sponged wood effect — burnt umber		gallery gold
	base_plate black		lantern_frame gold
	nameplate gold, black in letters		cap red gloss
	band_cream cream gloss		finial gold
	band_red red gloss		lantern_glass translucent
	tower cream gloss		window_diffuser_1 to 5 translucent
	knob gold		

3. SUPPLIES AT A GLANCE

Gather these supplies before you start.



Faro Prototype Build Manual

Bathsheva London — Prototype build and finishing guide



BATHSHEVA
LONDON

Step 1: Inspect and dry-fit



1

Check the parts

Check every part for cracks, warping, or broken railing posts.



2

Dry-stack the lamp

Dry-stack the lamp: base → cream band → red band → tower → gallery.



3

Test the lantern glass

Test the lantern glass inside the lantern frame.



4

Twist-test the cap

Drop the 4 lugs through the slots, then turn clockwise to the stop.



5

Check the diffusers

Hold each diffuser behind its window. They are numbered and not interchangeable.



6

Fit the base plate

Press the base plate into the rebate under the base.



7

Adjust if needed

If anything is tight, sand the contact surfaces lightly now and test again.



Step 2: Prepare the surfaces

1 Wash



Wash all parts in warm soapy water, rinse, and dry fully.

2 Trim support marks



Remove support nubs carefully with a craft knife.

3 Sand



Sand visible surfaces with 240 grit, then 400 grit.

4 Wipe dust



Wipe away dust with a barely damp cloth.

! Handle with care



gallery and lantern_frame: minimal sanding only.



nameplate: sand the flat face only, not across the letters.



lantern_glass and diffusers: keep clean and unpainted.



Faro Prototype Build Manual

Bathsheva London — Prototype build and finishing guide



BATHSHEVA
LONDON

STEP 3: PRIME

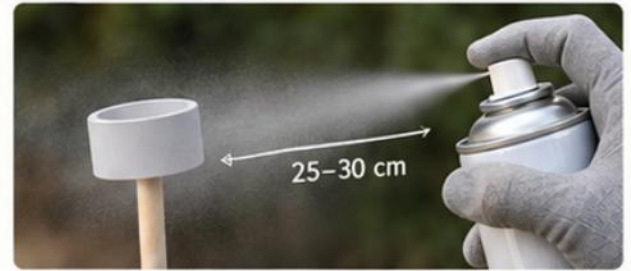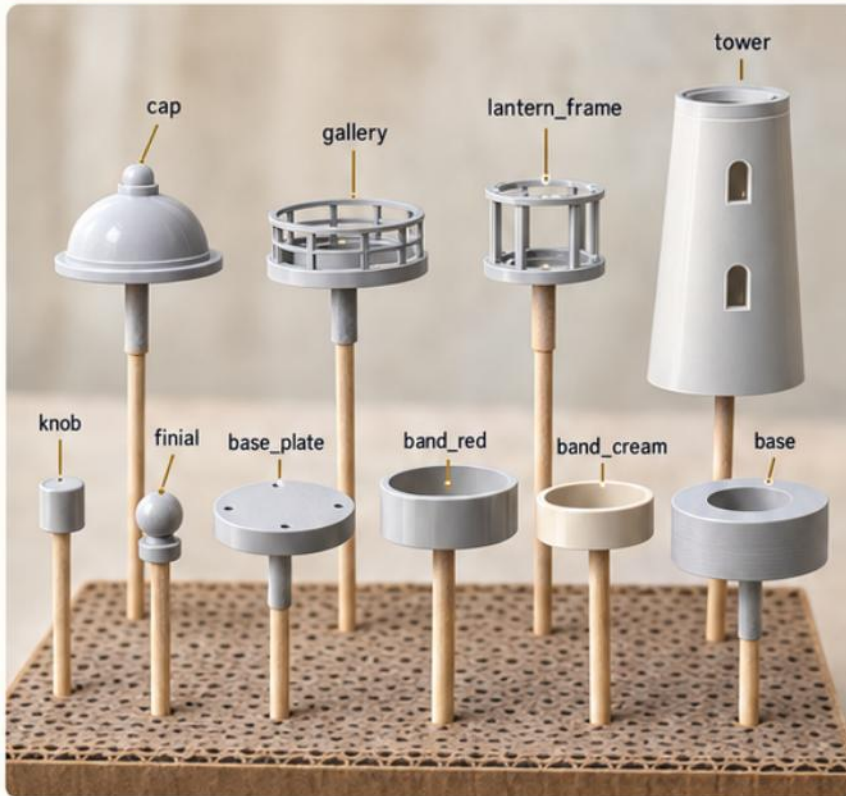

- 1 Spray outdoors or in a very well ventilated area.
- 2 Best conditions: a dry, still day, around 15–25°C.
- 3 Shake the primer for 2–3 minutes.
- 4 Spray light coats from 25–30 cm away.
- 5 Let dry, then sand with 400 grit.
- 6 Repeat prime and sand until the surfaces look smooth and even.
- 7 Prime every part except lantern_glass and the five diffusers.
- 8 On gallery and lantern_frame, use only very light mist coats.

STEP 4: PAINT

Red gloss



Cream gloss



Metallic gold



Burnt umber acrylic (sponged wood effect)



Black acrylic



FINISHING TIPS

- 1 Apply 3–4 light coats, waiting between coats.
- 2 On the tower, spray into the window openings so the edges are covered.
- 3 On gallery and lantern_frame, use short light bursts from several directions.
- 4 If a run or dust speck appears, let it dry, sand lightly with 1200 grit, and spray again.

BASE: WALNUT EFFECT TECHNIQUE



1. Brush on burnt umber acrylic.

2. Drag a barely loaded sponge around the base to create a wood-grain effect.

3. Let dry. Repeat lightly if needed for a richer grain.

NAMEPLATE: FILL LETTERS



1. Brush thinned black acrylic over the lettering.



2. Wipe the raised surface so black remains in the letter recesses.

Faro Prototype Build Manual

Bathsheva London — Prototype build and finishing guide




BATHSHEVA
LONDON

5. CLEAR COAT AND CURING

- 1 Wait at least 24 hours after the last colour coat.
- 2 Spray 2 light coats of clear lacquer on the red and cream parts only: band_red, cap, band_cream, tower.
- 3 Do not clear-coat the gold parts or the wood-effect base.
- 4 Leave everything in a warm, dry, dust-free place for 2–3 days.
- 5 **Optional:** once fully hardened, polish the red and cream parts gently for extra shine.



ASSEMBLY OVERVIEW

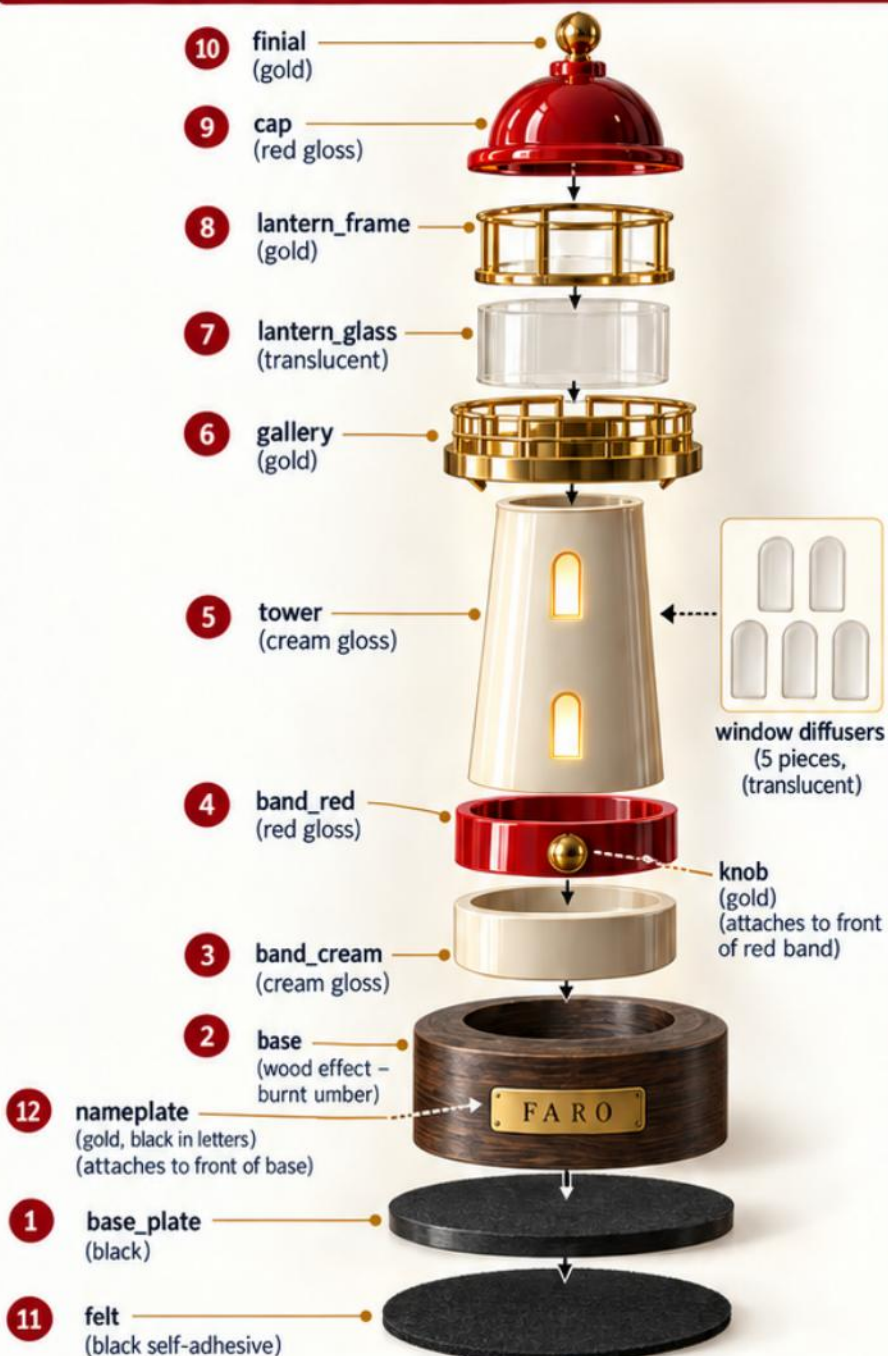

DIFFUSER MAP



- 1 = front, low
- 2 = right side
- 3 = rear
- 4 = left side
- 5 = front, high



Rear view

NOTES



Battery fairy lights feed in from the rear of the base and the battery box stays outside, behind the lamp.



The cap twists on and stays removable; do not glue it.

Faro Prototype Build Manual

Bathsheva London — Prototype build and finishing guide



BATHSHEVA
LONDON

6. ASSEMBLE — PART 1


In this step we assemble the main body of Faro. Follow the steps in order, using a small amount of epoxy for each joint. Keep the front aligned so the nameplate and knob sit together.

MATERIALS



Use Araldite Rapid epoxy; mix small amounts and apply with a cocktail stick.

1 Glue the window diffusers

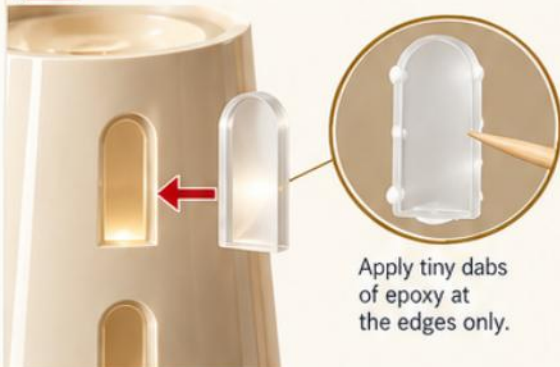

Apply tiny dabs of epoxy at the edges only.

Glue the five diffusers behind their matching tower windows using tiny dabs of epoxy at the edges only. Do not get glue on the visible surface.

2 Glue the nameplate



Glue the nameplate into the front recess of the base.

3 Glue the knob



Glue the knob onto the front of the red band, centred.

4 Feed the fairy lights



Feed the fairy lights in through the rear port of the base and up through the hole in the base top. Leave the battery box outside, behind the lamp.

5 Glue band_cream onto the base



Glue band_cream onto the base.

6 Glue band_red onto band_cream



Glue band_red onto band_cream.

7 Glue the tower onto band_red



Glue the tower onto band_red, keeping the knob and nameplate aligned on the front. Pull the light string upward as you stack the parts.

8 Coil the lights inside the tower



Coil the lights loosely inside the tower so some sit near each window.



Faro Prototype Build Manual

Bathsheva London — Prototype build and finishing guide



BATHSHEVA
LONDON

6. ASSEMBLE - PART 2


Complete the lantern and base. Keep the lantern glass empty for the brighter test light.

1 Glue the gallery



Glue the gallery onto the top of the tower.

2 Place empty glass

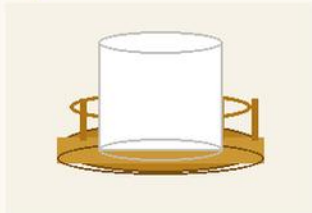

Stand the EMPTY lantern_glass on the gallery platform. Keep all fairy lights in the tower below.

Do not put fairy lights in the lantern.

3 Add lantern frame



Lower the lantern_frame over the empty glass and glue the frame to the gallery.

4 Glue the finial



Glue the finial into the cap.

5 Twist on the cap




6 Add weight



7 Glue base plate



8 Apply felt

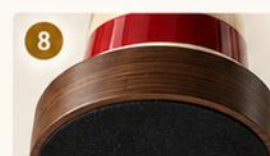

Glue the gallery onto the top of the tower.

on the gallery platform. Keep all fairy lights in the tower below.

the empty glass and glue the frame to the gallery.

Glue the finial into the cap.

Do not put fairy lights in the lantern.

5 Twist on the cap



Drop the lugs through the slots, then turn clockwise to the stop.

DO NOT GLUE. It must stay removable.

6 Add weight



Tape a few coins inside the base for extra weight and stability.

7 Glue base plate



Glue the base_plate into its rebate underneath.

8 Apply felt



Apply the black self-adhesive felt under the base.

FINAL ASSEMBLY CHECK

✓ Lantern glass is empty



Keep the lantern free for the brighter LED test.

✓ Cap twists off easily



You will remove it to insert or recharge the LED puck.

✓ Five windows glow



Fairy lights stay inside the tower, close to the diffusers.

Faro Prototype Build Manual

Bathsheva London — Prototype build and finishing guide



BATHSHEVA
LONDON

7. TEST THE LIGHT AND PHOTOGRAPH

A. CHECK THE WINDOW GLOW



Fairy lights are only for the five tower windows.

They make the windows glow, but they are not a realistic test of the lamp's main brightness. Expect roughly the light output of a couple of candles.



B. TEST REAL LANTERN BRIGHTNESS

The real product's main light would come from an LED module in the lantern. Test that separately:

1 Twist off the cap




Remove the cap so the Ø49 mm lantern opening is accessible.

2 Insert a rechargeable LED puck



Puck: <45 mm across

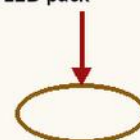

Opening: Ø49 mm

Drop the warm-white puck through the opening and into the empty lantern glass.

3 Alternative: USB LED module



POWER

4 Cap on, room lights off



KEEP THE CAP UNGLUED

The rechargeable puck needs to be removed for charging. The production light will also need access.

C. PHOTOGRAPH

Shoot one set in soft daylight

KEEP THE CAP UNGLUED

The rechargeable puck needs to be removed for charging. The production light will also need access.

C. PHOTOGRAPH

Shoot one set in soft daylight with the lamp off, and one set at dusk with the real lantern test light on.



Front



Side



Three-quarter




Lantern close-up

Hide the battery box, power bank and cables out of shot.

Remove the cap so the Ø49 mm lantern opening is accessible.

3 Alternative: USB LED module

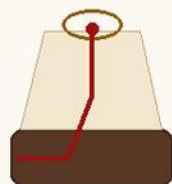

Feed a USB LED module cable through the rear USB-C port, up the tower, and to a power bank.

POWER

Puck: <45 mm across

Opening: Ø49 mm

Drop the warm-white puck through the opening and into the empty lantern glass.

4 Cap on, room lights off



Twist the cap back on, switch off the room lights, and judge the result.

WHAT GOOD LOOKS LIKE

○ Does it softly light the nearby wall and surface like a mood lamp should?

○ Is the frosted lantern glass bright without glaring?

Record brightness, warmth, glare, diffusion and how far the light reaches. These observations are useful input for the lighting ODM when specifying the production LED module.

QUICK TROUBLESHOOTING

- **Lantern too dim**
Try a brighter warm-white puck/module.
- **Lantern glaring**
Add diffusion or reduce brightness.
- **One window dark**
Move the fairy-light coil closer inside the tower.
- **Cap sticks**
Sand the lugs or slot edges lightly.