

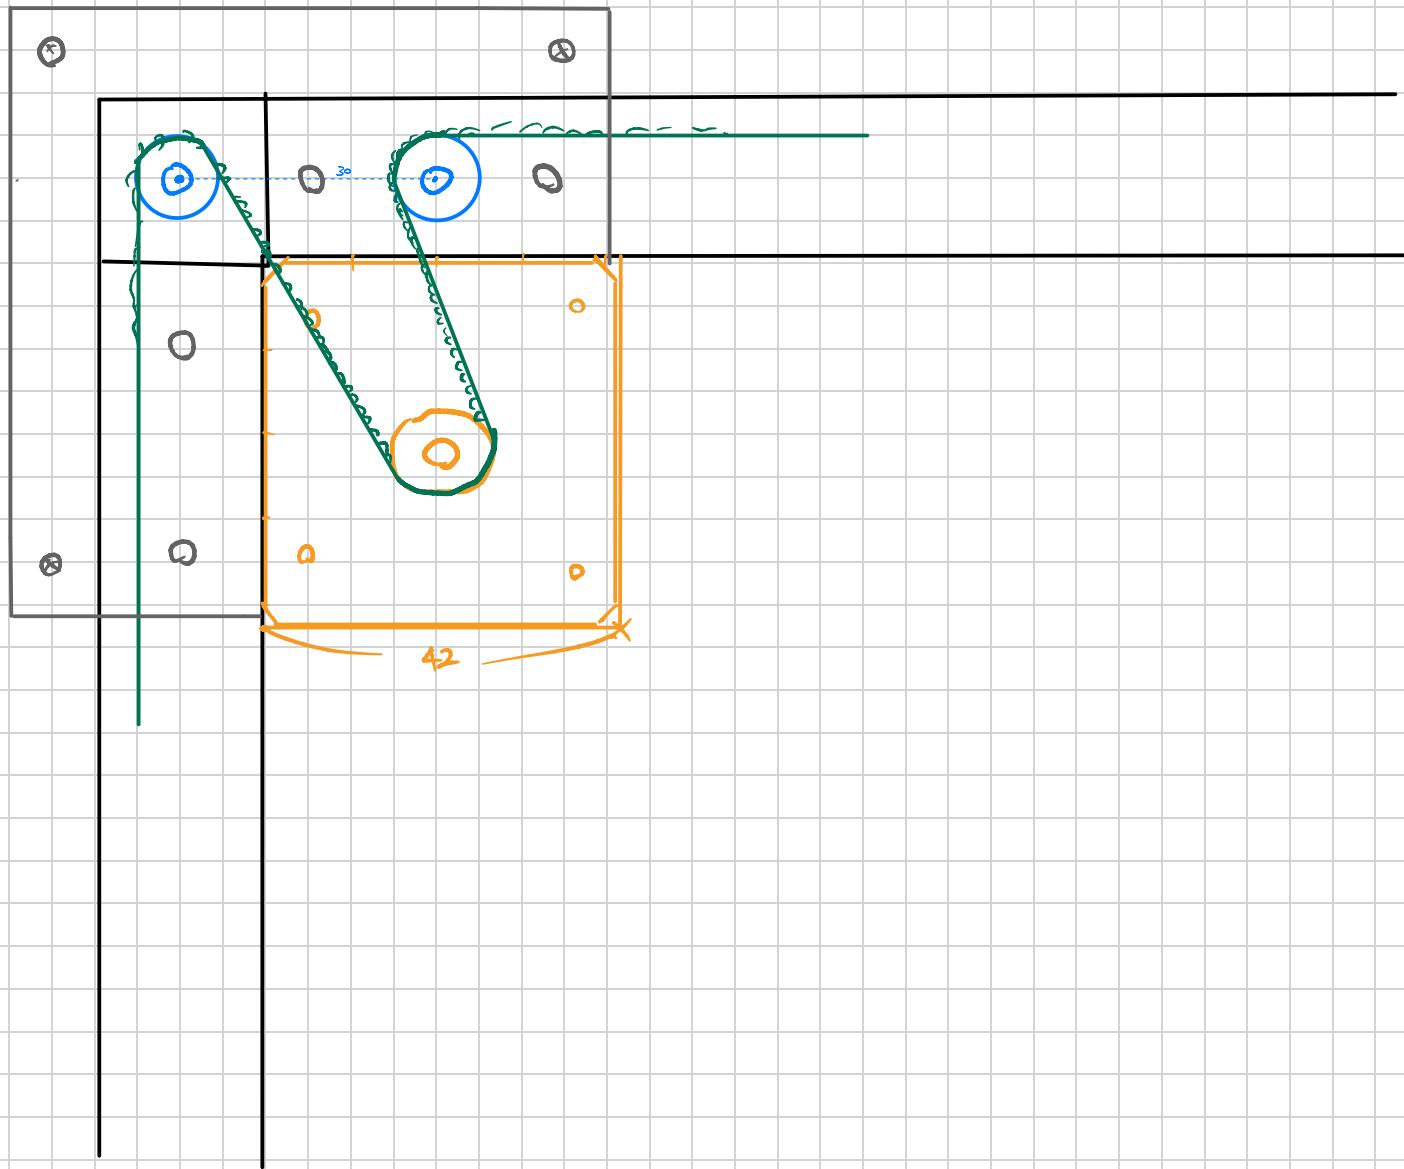
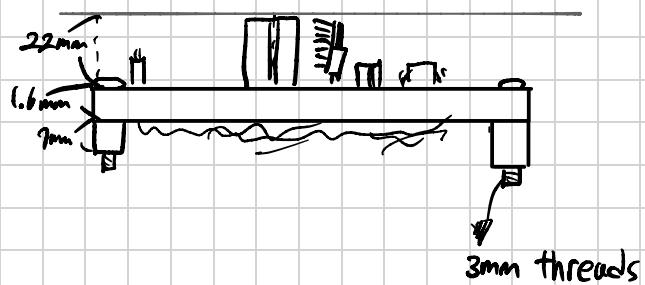


motor mount and belt-pulley system

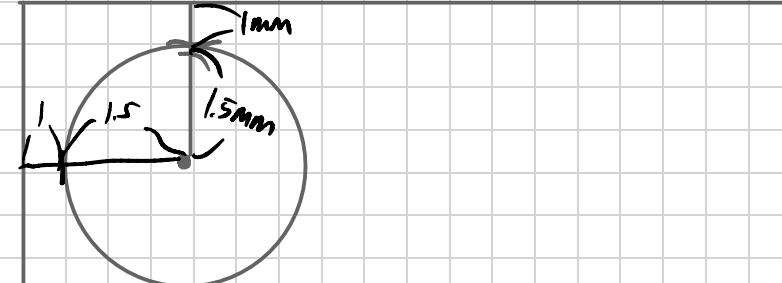


<Electronics>

DIY extension board

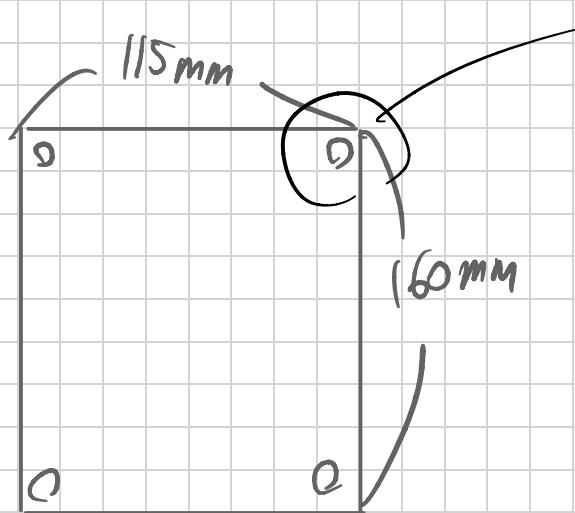


* electronics bay 에는 전자계통 쿨링을 위한 fan 필요!

FRONT

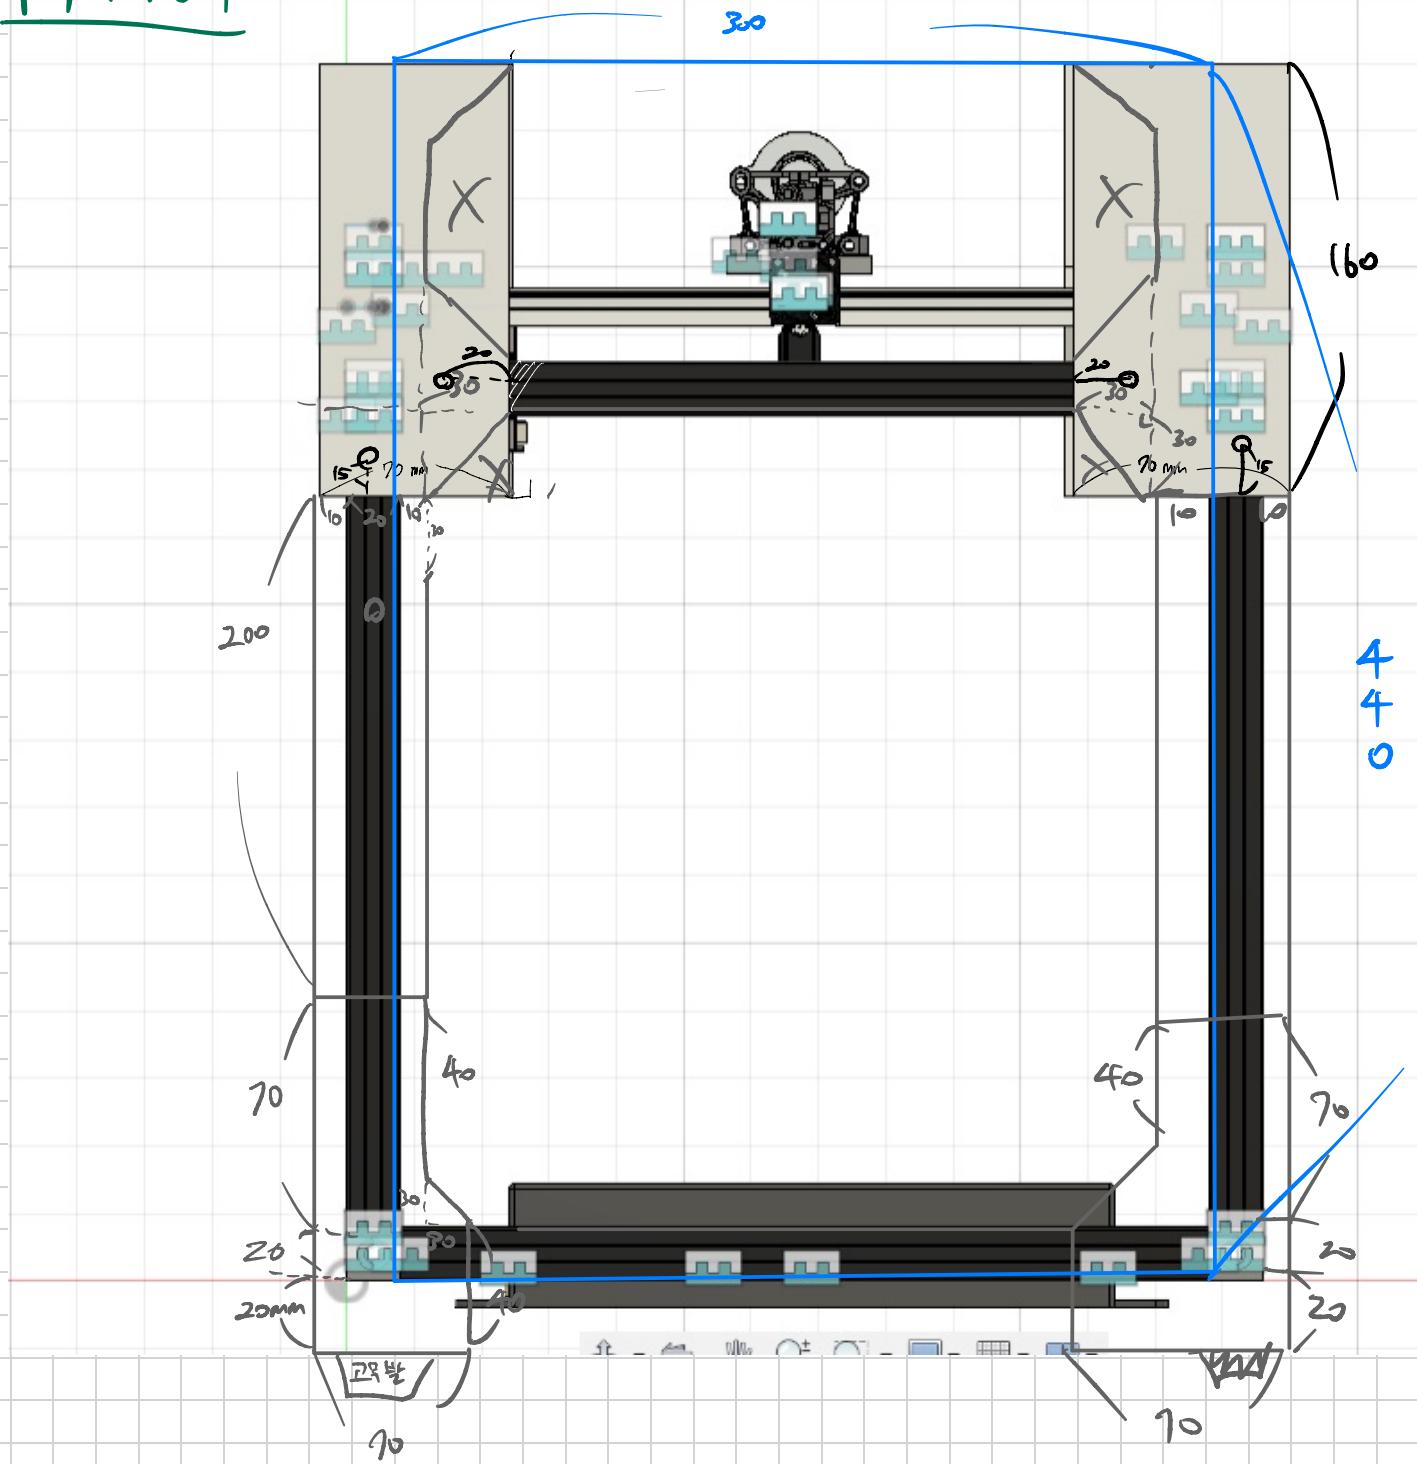


RIGHT

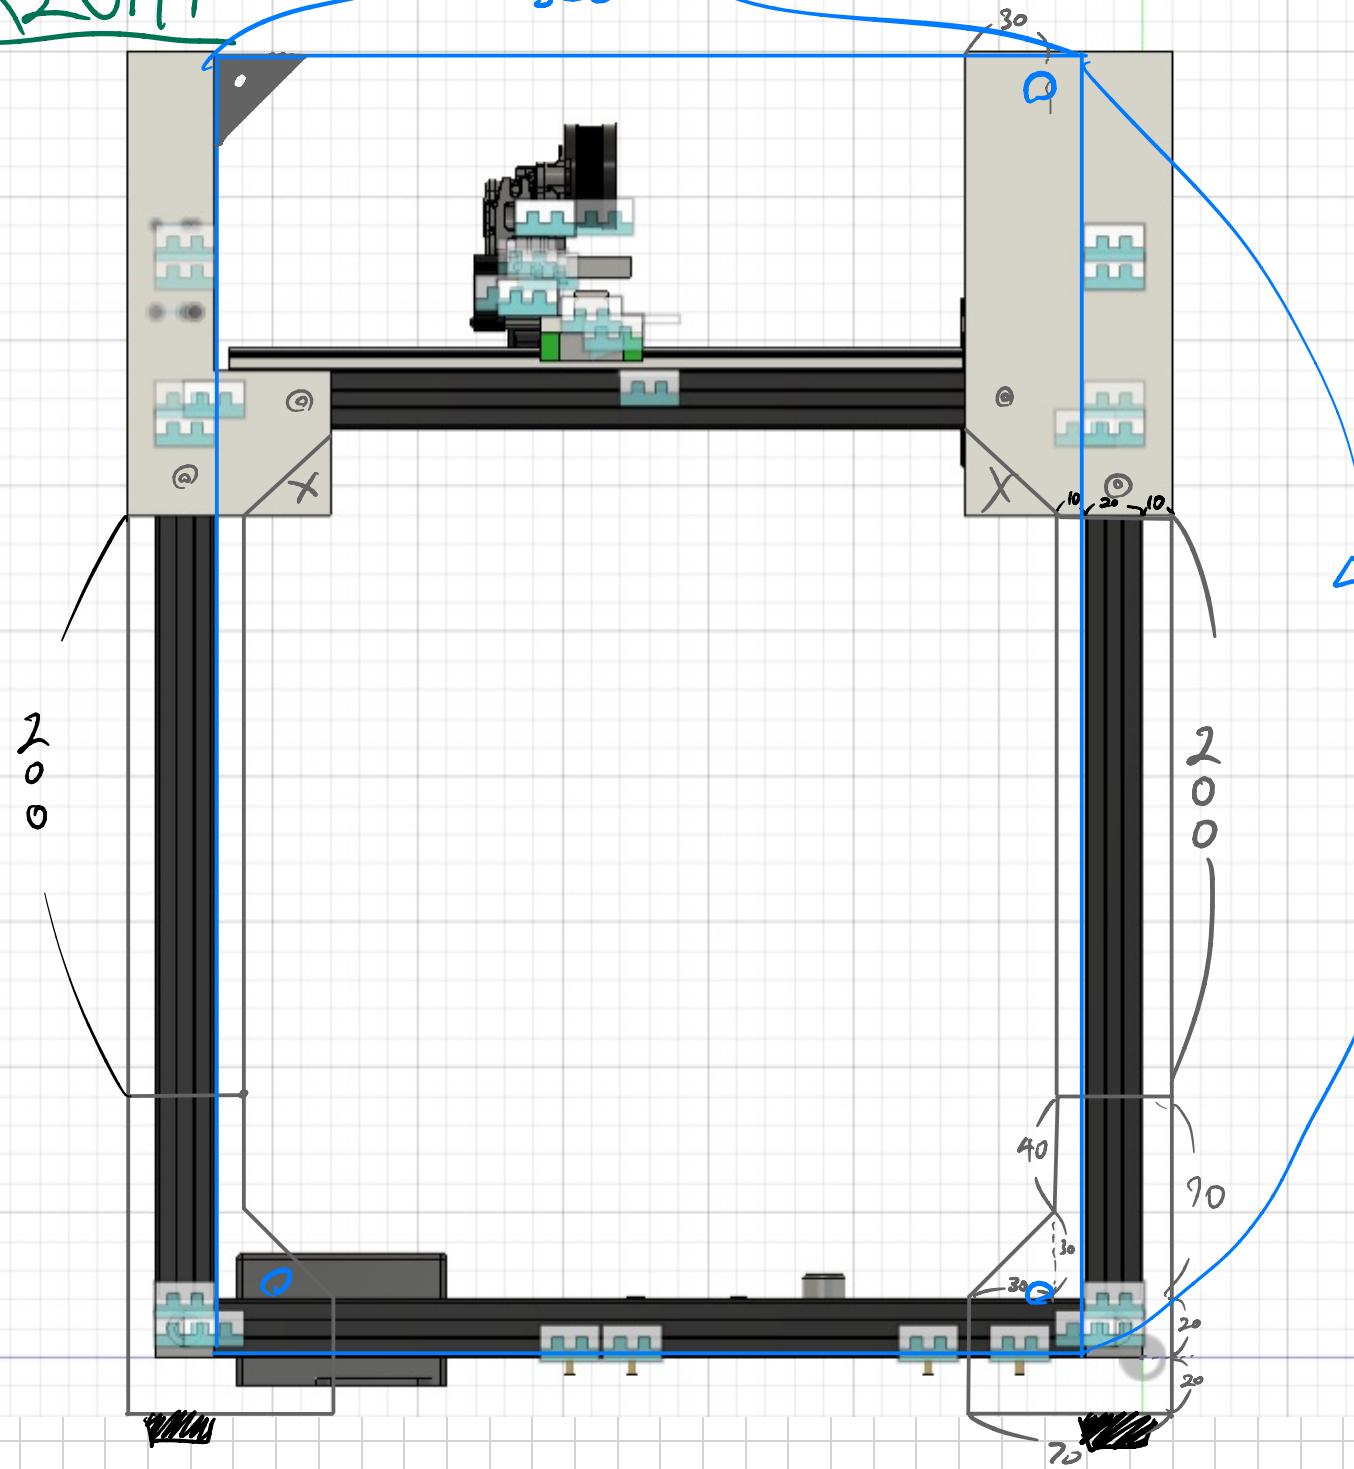


● optional side panel (optional)

BACK

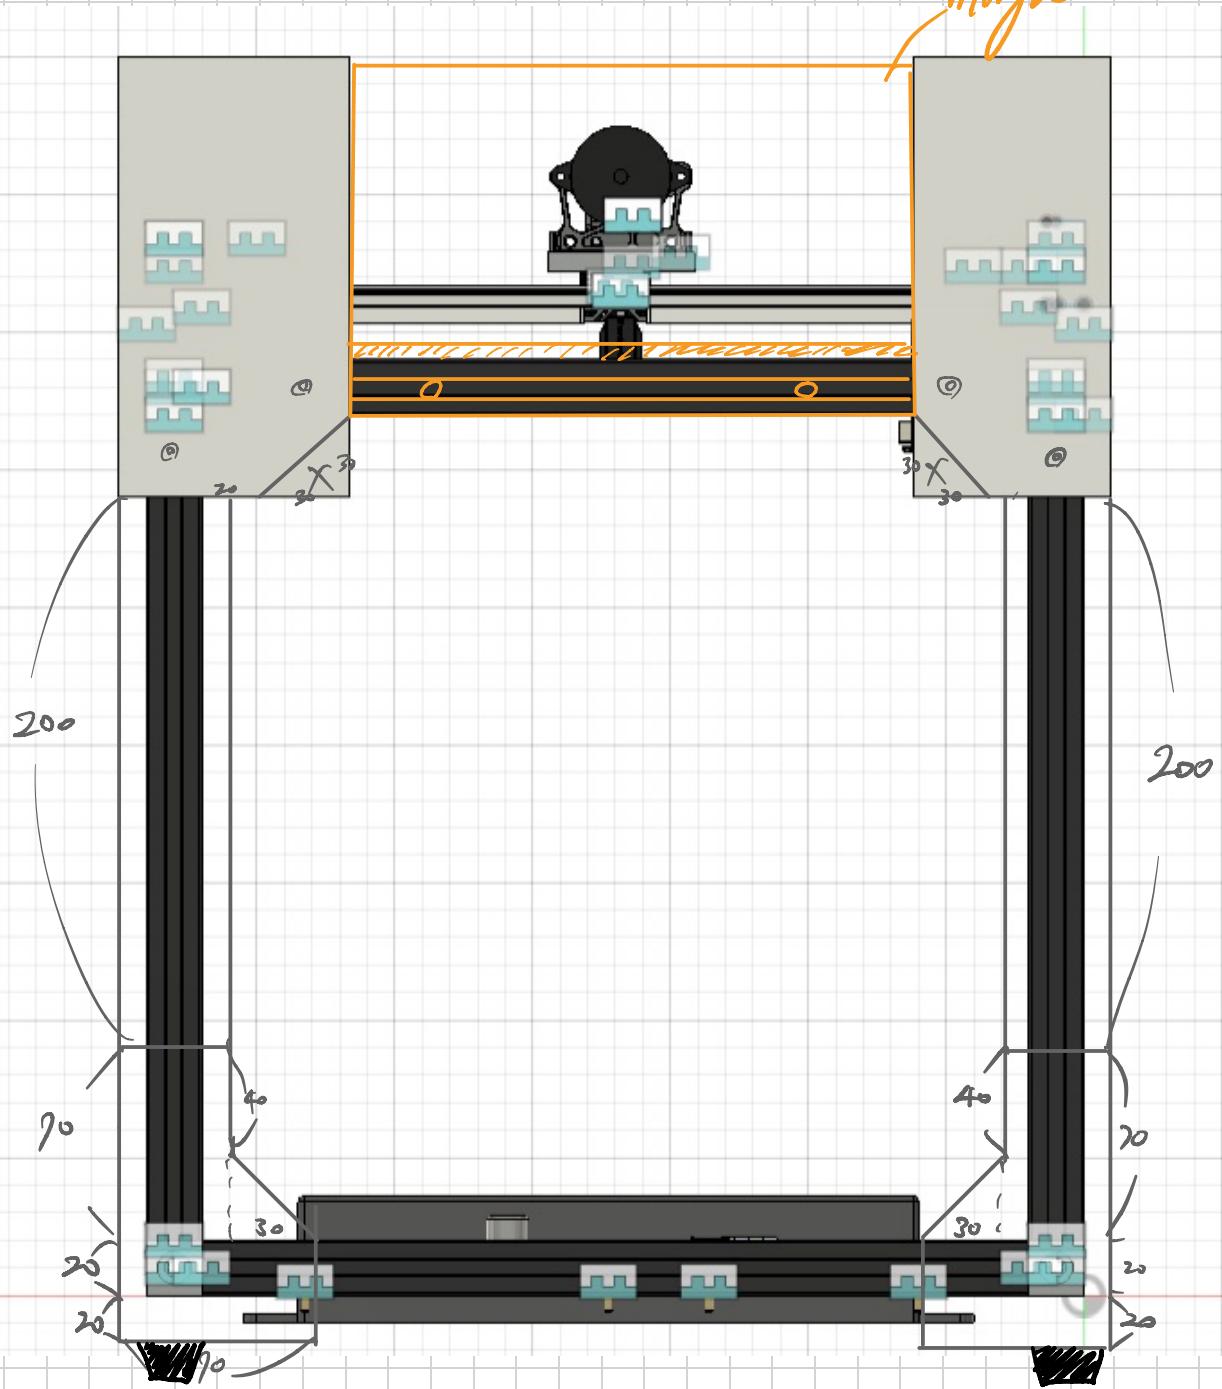


LEFT

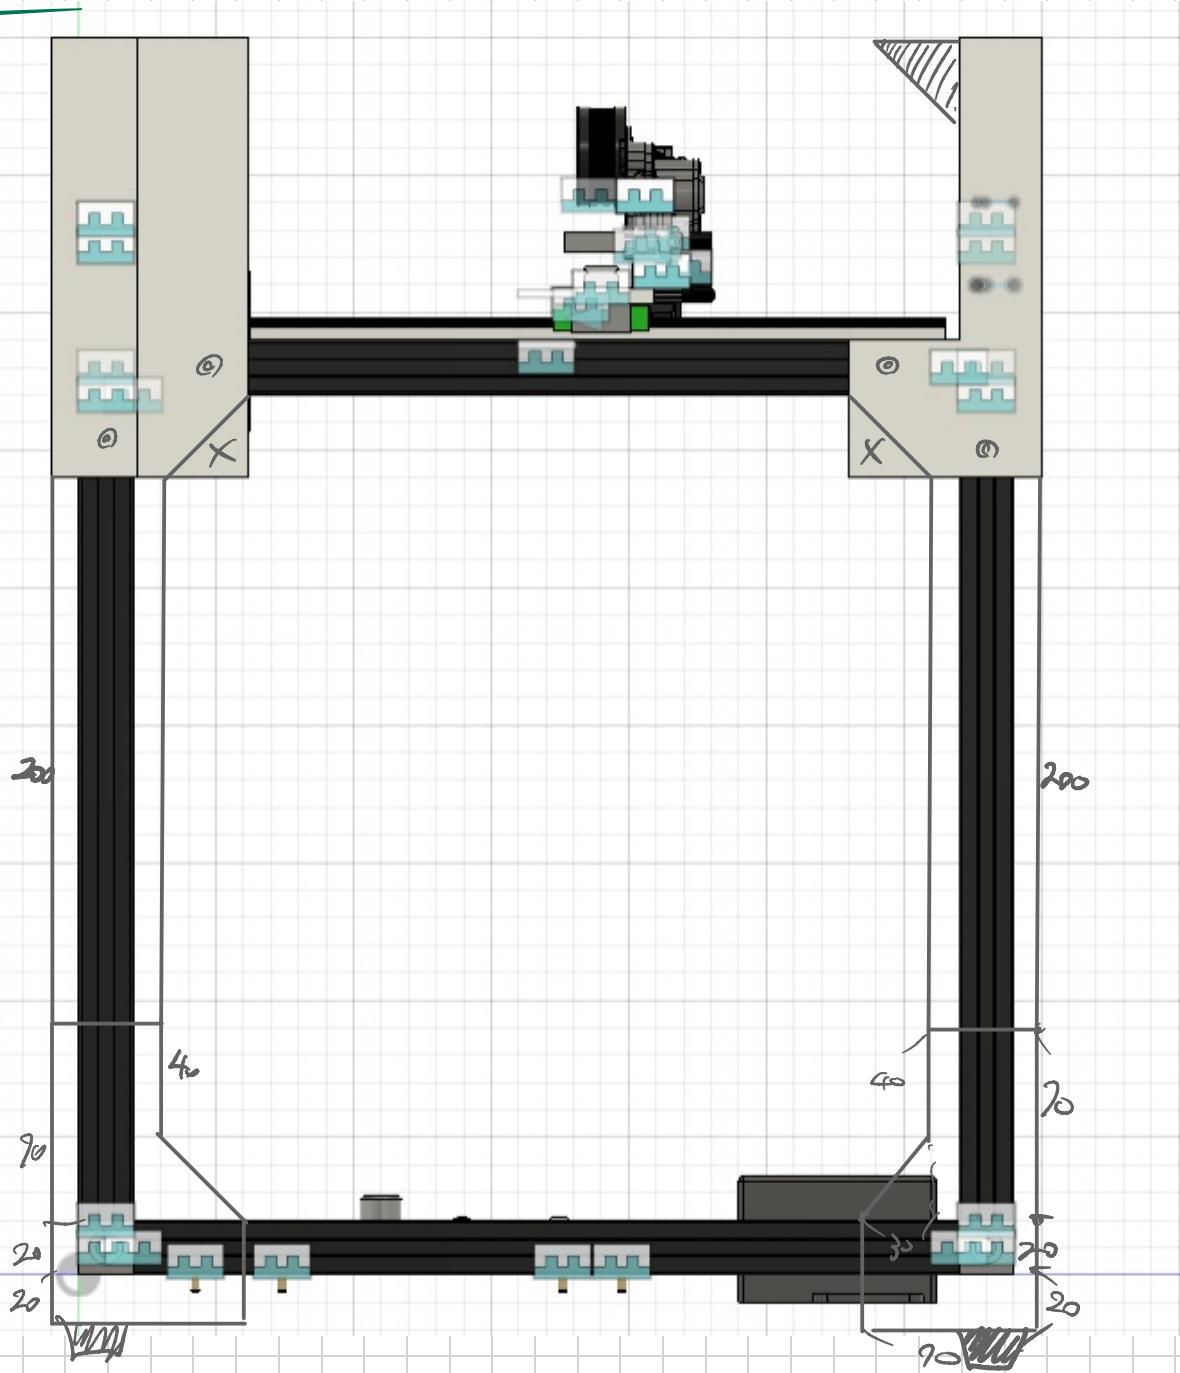

BELT PATH & pulley mount dimensions


TOP

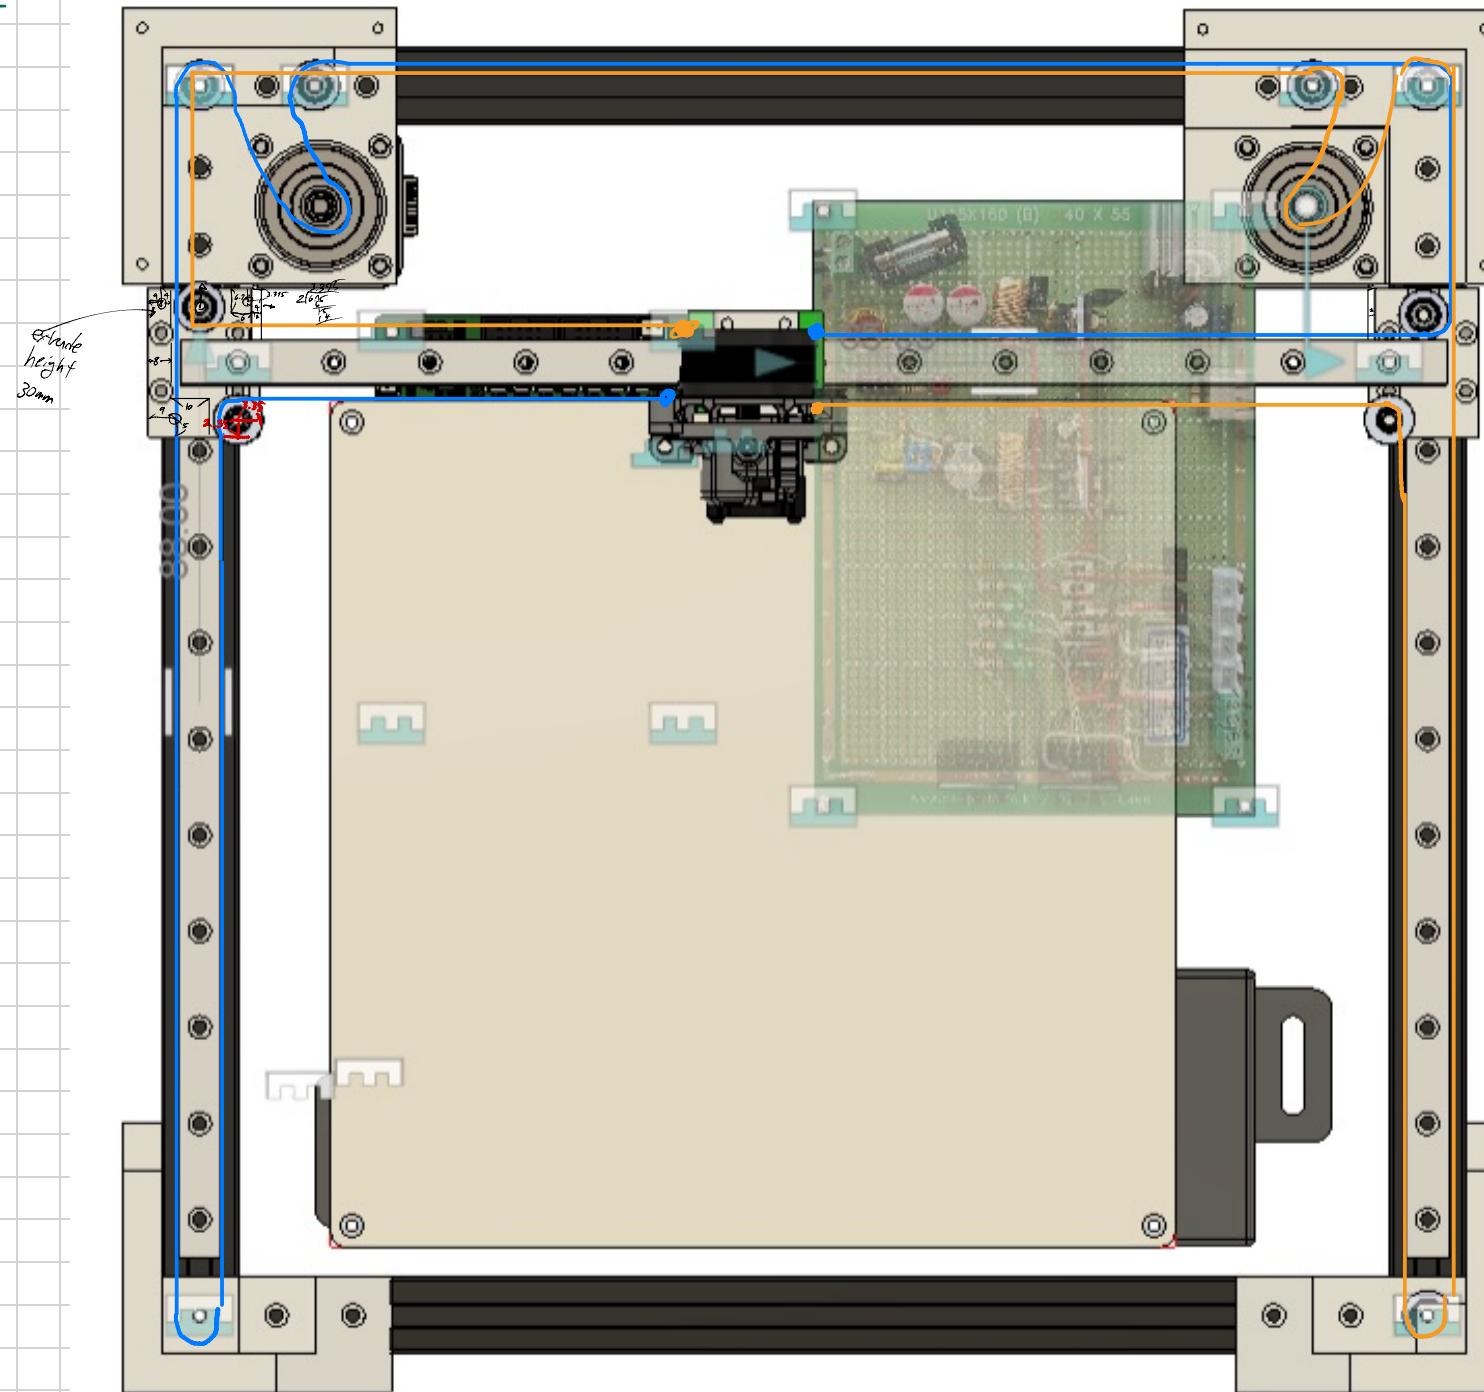


BELT PATH

- BELT A
- BELT B

BOTTOM

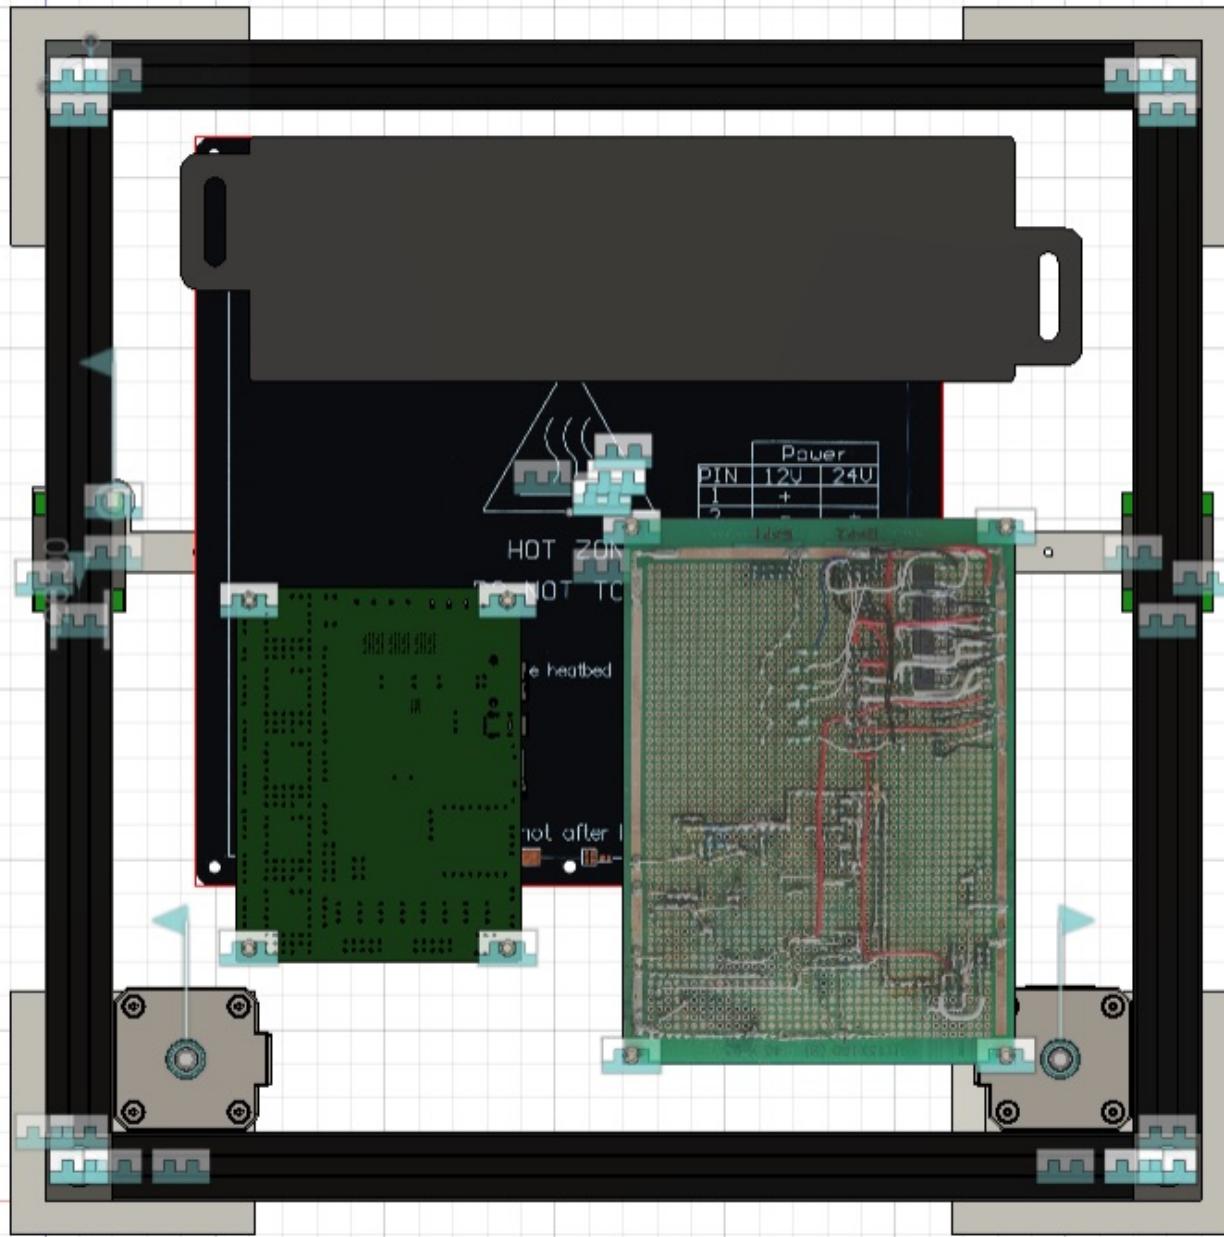

X_AXIS_BLOCK-JOINER / toolhead design guide

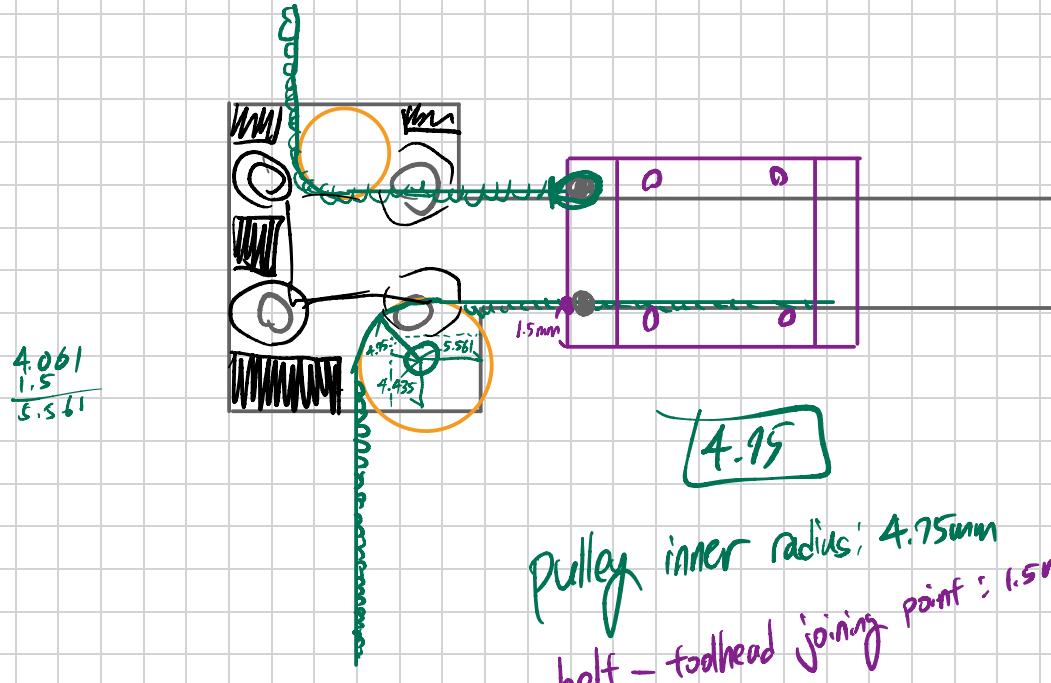


4.95
Pulley inner radius: 4.75mm
belt - toolhead joining point: 1.5mm from linear rail block

How to get flush screwheads ; A design guide

나사못 만드는법/ 디자인하기

대상 : M3 hex screw



나사못 (3.3mm)



나사못

D: 6mm

깊이: 3.5mm

$$\frac{D}{2}$$

즉 $\frac{D}{2}$ 깊이