




CLOCK COMPONENT

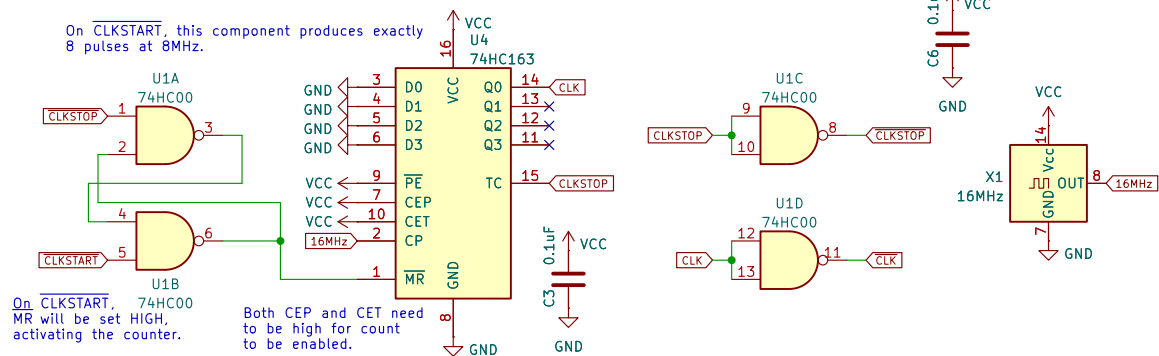



SELECTION COMPONENT

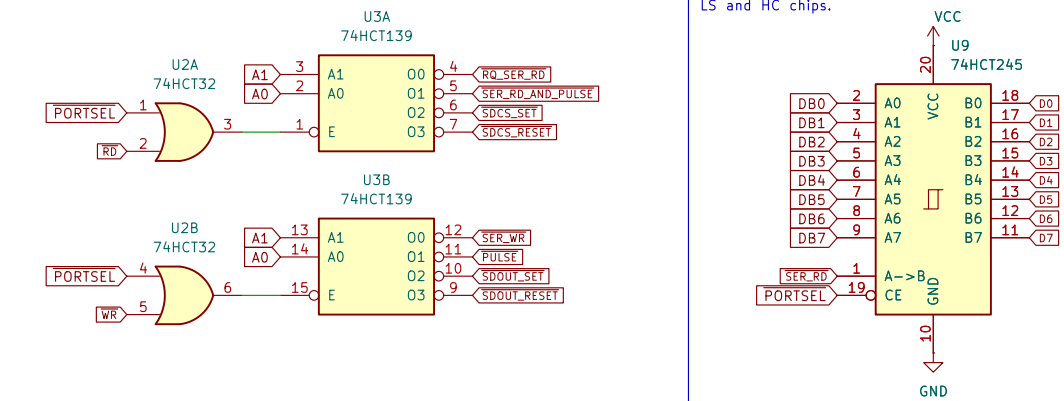


SHIFT REGISTER Z80 -> SD OUT REGISTER

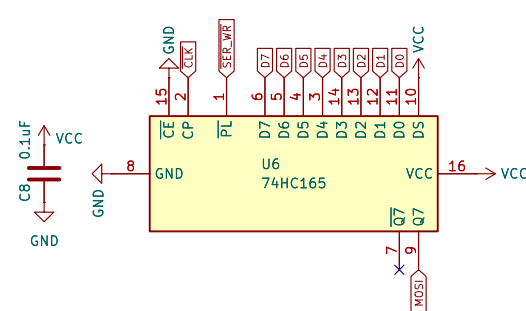

SD CARD S/R LATCHES

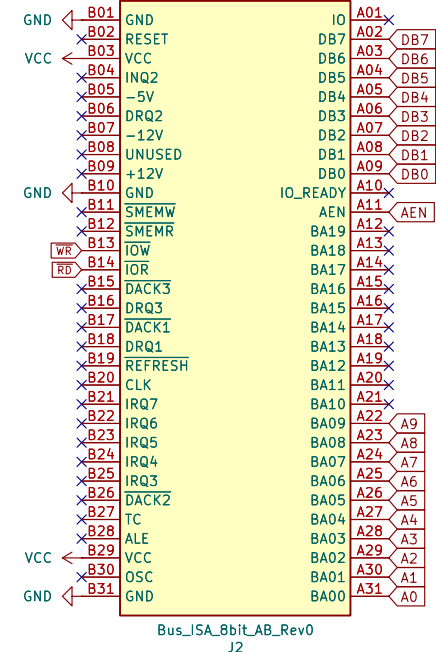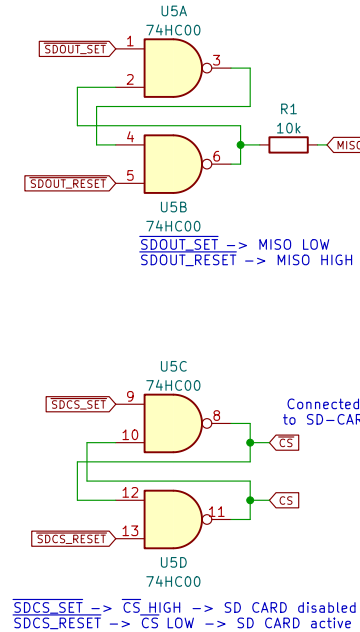

SHIFT REGISTER SD -> Z80 IN REGISTER

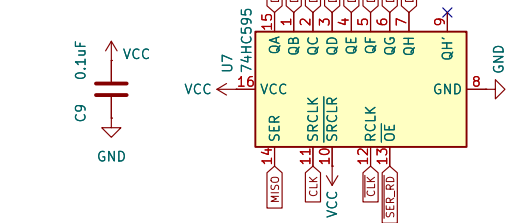

out \$XX0: SER_WR is pulled low, loading value into the shift register and then exchanging a byte with the SD card.
out \$XX1: CLKSTART is pulled low, starting the counter circuit and exchanging a byte between shift register and SD card.
out \$XX2: SDCS_SET is pulled low, pulling CS high, deactivating the SD card.
out \$XX3: SDCS_RESET is pulled low, pulling CS low, activating the SD card.

in \$XX0: SER_RD is pulled low, reading from the shift register. There is **no** exchange with the SD card.
in \$XX1: SER_RD_AND_PULSE is pulled low, reading from the shift register and then exchanging a byte with the SD card.
in \$XX2: SDOUT_SET is pulled low, pulling MISO low via a 10k resistor.
in \$XX3: SDOUT_RESET is pulled low, pulling MISO high via a 10k resistor.

When no card is present, the output of the SD card will follow the output of the SET/RESET latch, however if a card is present, though unresponsive, it will not follow and the same (high) output will be received.

