
SA0J5-04

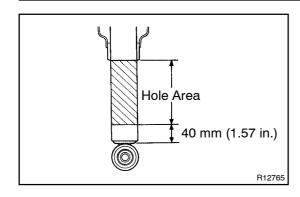

DISPOSAL

MAKE A HOLE IN SHOCK ABSORBER AND REMOVE GAS

- (a) Fully extend the pneumatic cylinder.
- (b) Using a drill, make a hole in the cylinder as shown to remove the gas inside.

CAUTION:

The gas coming out is harmless, but be careful of chips which may fly up when drilling.