BO3Z0-01

# INSTALLATION

## 1. INSTALL REAR ROCKER PANEL MOULDING

- (a) Using a heat light, heat the body mounting surface to 40 60 °C (104 140 °F).
- (b) Remove the adhesive tapes from the body.
- (c) Wipe off stains with cleaner.
- (d) If reusing the moulding:


Clean the moulding.

(1) Using a heat light, heat the moulding to 20 – 30 °C (68 – 86 °F).

#### NOTICE:

## Do not heat the moulding excessively.

- (2) Remove the adhesive tapes from the moulding.
- (3) Wipe off stains with cleaner.

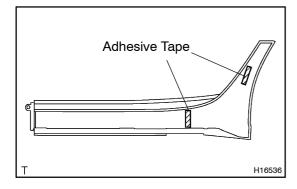

- (4) Apply new adhesive tapes to the moulding as shown in the illustration.
- (e) Using a heat light, heat the body and moulding.

Body: 40 - 60 °C (104 - 140 °F) Moulding: 20 - 30 °C (68 - 86 °F)


## **NOTICE:**

## Do not heat the moulding excessively.


(f) Lift the moulding release sheets face of moulding.

### **NOTICE:**

When the moulding release sheets is removed, make sure that no dirt or dust can get onto the uncoated area.

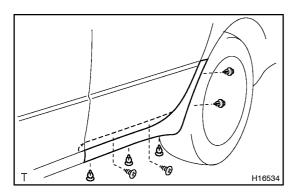

- (g) Install the rear rocker panel moulding with the 2 screws,2 hexagon screws and 3 clips.
- (h) Install the No. 5 rocker panel protector with the 2 nuts and clip.

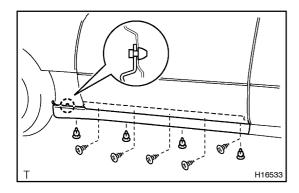

# 2. INSTALL FRONT ROCKER PANEL MOULDING

 $In stall \cite{The first on the continuous continuous$ 

- 3. INSTALL[FRONT[FENDER[MOULDING (See[page[BO-86)
- 4. w/ Mudguard:

**INSTALL FRONT MUDGUARD** 

Install the front mudguard with the 3 screws.