

FRONT FENDER FRONT APRON (ASSY) REPLACEMENT

- 1. REMOVE RADIATOR SUPPORT (See page BP-1)
- 2. REMOVE FRONT FENDER FRONT APRON

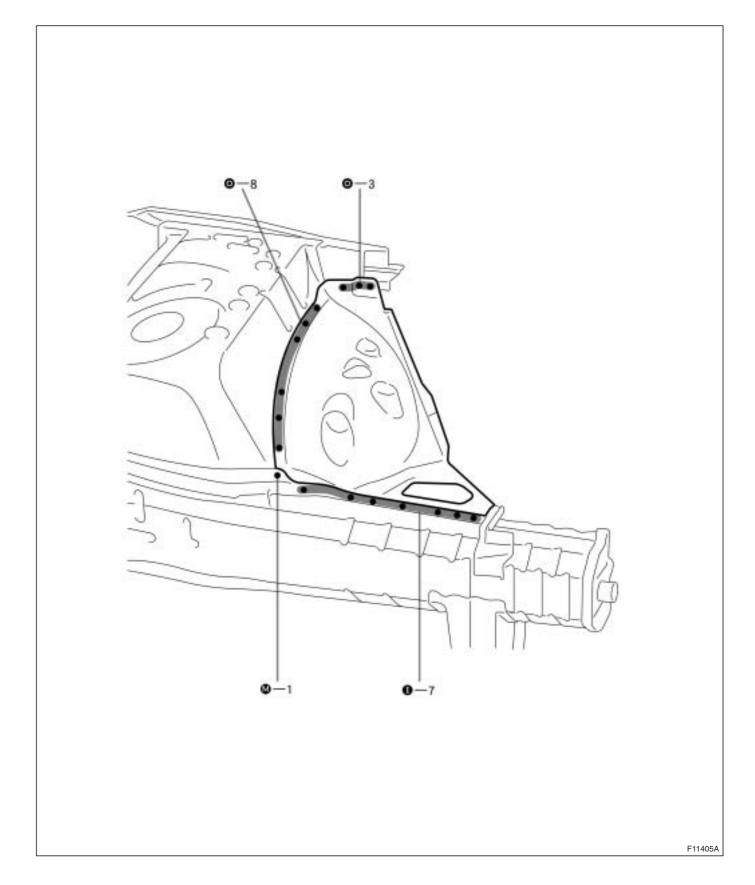

3. INSTALL FRONT FENDER FRONT APRON

(a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

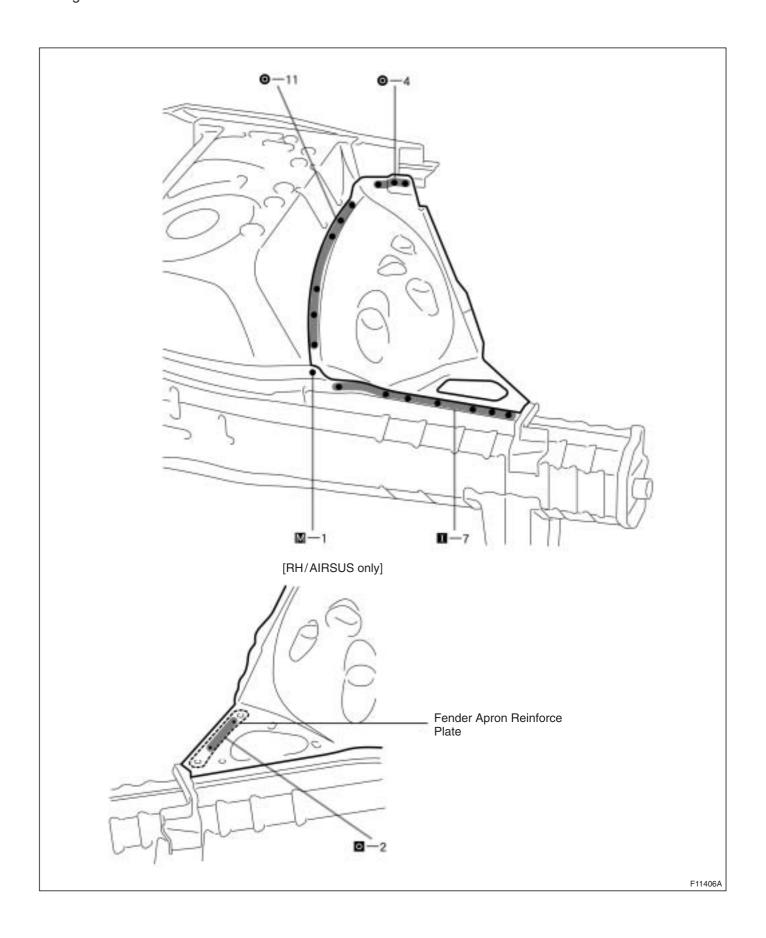

- 4. INSTALL RADIATOR SUPPORT (See page BP-1)
- 5. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-88)
- 6. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)
- 7. APPLYING UNDERCOATING (See page PC-7)
- 8. APPLYING ANTI-RUST AGENT
- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.