


## **ROAD TEST**

05H0B-01

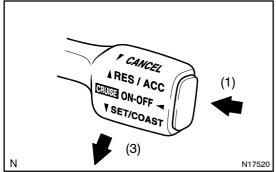


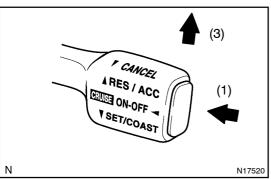

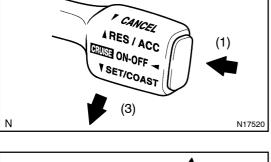



## 1. PROBLEM SYMPTOM CONFIRMATION


- Inspect the SET function. (a)
  - Push the ON-OFF button on. (1)
  - Drive at the required speed (40 km/h (25 mph) or (2)higher).
  - Push the cruise control main switch to SET/COAST. (3)
  - After releasing the switch, check that the vehicle cruises at the set speed.
- (b) Inspect the ACC (ACCEL) switch.
  - Push the ON-OFF button on. (1)
  - Drive at the required speed (40 km/h (25 mph) or (2)
  - Push the cruise control main switch to SET/COAST. (3)
  - (4) Check that vehicle speed increases while the cruise control main switch is pushed to RES/ACC, and that the vehicle cruises at the newly set speed when the switch is released.
  - Momentarily push the cruise control main switch to (5) RES/ACC and then immediately release it. Check that vehicle speed increases by approximately 1.6 km/h (1.0 mph) (Tap-up function).

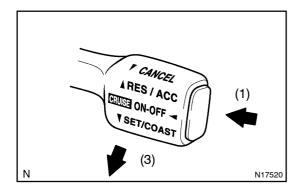

- Inspect the COAST function. (c)
  - Push the ON-OFF button on. (1)
  - Drive at the required speed (40 km/h (25 mph) or (2) higher).
  - Push the cruise control main switch to SET/COAST. (3)
  - Check that vehicle speed decreases while the (4) cruise control main switch is pushed to SET/ COAST, and the vehicle cruises at the newly set speed when the switch is released.
  - Momentarily push the cruise control main switch to (5) SET/COAST, and then immediately release it. Check that vehicle speed decreases by approximately 1.6 km/h (1.0 mph) (Tap-down function).

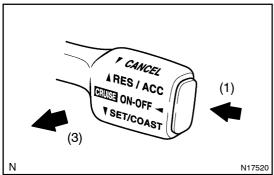

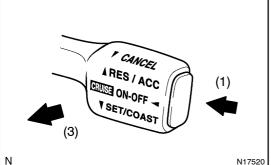

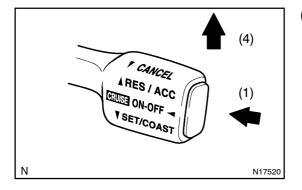

- Inspect the CANCEL function. (d)
  - Push the ON-OFF button on. (1)
  - Drive at the required speed (40 km/h (25 mph) or (2) higher).
  - Push the cruise control main switch to SET/COAST. (3)
  - (4) When doing one of the following, check that the cruise control system is cancelled and that the normal driving mode is reset.
    - Depressing the brake pedal
    - Moving the shift lever to any position except D (6th, 5th, and 4th gears)
    - Pushing the ON-OFF button off
    - Pulling the cruise control main switch to CAN-CEL
- Inspect the RES (RESUME) function.
  - Push the ON-OFF button on.
  - Drive at the required speed (40 km/h (25 mph) or (2)higher).
  - Push the cruise control main switch to SET/COAST. (3)
  - (4) When doing one of the following, check that the cruise control system is cancelled and that the normal driving mode is reset.
    - Depressing the brake pedal
    - Moving the shift lever to any position except D (6th, 5th, and 4th gears)
    - Pulling the cruise control main switch to CAN-
  - (5) After pushing the cruise control main switch to RES/ ACC at a driving speed of more than 40 km/h (25 mph), check that the vehicle restores the speed prior to the cancellation.