
MULTI-DISPLAY REPLACEMENT

7140-01


HINT:

- •□ COMPONENTS: SEE PAGE 71-1.
- •□ LOCATION: SEE PAGE 67-2.
- Installation is in the reverse order of removal.
- 1. SHIP MODE SETTING SEE PAGE 67-5)
- 2. REMOVE [INSTRUMENT [PANEL [FINISH [PANEL [LOWER [CENTER] SEE [PAGE] 71-5])
- 3. REMOVE[PANEL]INSTRUMENT[CLUSTER[FINISH]LOWER[SEE[PAGE[71-6])
- 4. REMOVE[RADIO[RECEIVER[ASSEMBLY[W/BRACKET[SEE[PAGE[67-5]]
- 5. SHIP MODE CONFIRMATION (SEE PAGE 67-5)

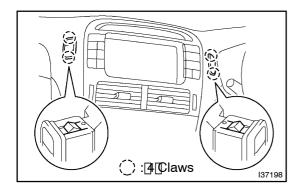

6. REMOVE TEMPERATURE CONTROL SWITCH ASSY

- (a) ☐ Disengage The 2 claws.
- (b) Disconnect the connector and remove the emperature control witch assembly.
- (c) Perform the same procedure on the other side.

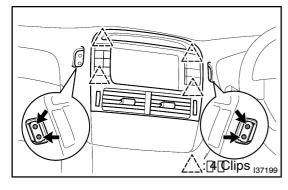


7. REMONE NSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER

- (a) Remove the 4 bolts.
- (b) ☐ Disengage The ☐ Clips.

NOTICE:

In order to prevent the safety pad from being damaged, do not pry with a screwdriver or similar tool.

(c) Disconnect [he connect or and remove he instrument cluster inish panel sub-assy enter.

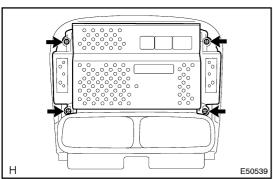

8. ☐ REMOVE MULTI-DISPLAY

(a) Remove the screws and multi-display.

After the perform the screen hoise automatic distinct by the screen hoise occurs (see page 05–1806).