


REMOVAL

1. REMOVE NO. 2 DOOR INSIDE HANDLE BEZEL

Using a screwdriver, remove the No. 2 door inside handle bezel. HINT:

Tape the screwdriver tip before use.

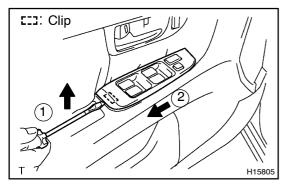


2. REMOVE ARMREST BASE PANEL ASSEMBLY

(a) Using a screwdriver, pry the armrest base panel assembly out.

HINT:


Tape the screwdriver tip before use.

(b) Disconnect the connector and remove the armrest base panel assembly.

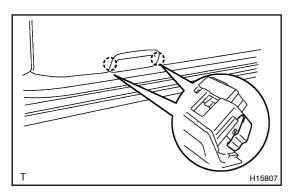


3. REMOVE COURTESY LIGHT ASSEMBLY

- (a) Using a screwdriver, pry the courtesy light assembly out.
- (b) Disconnect the connector and remove the courtesy light assembly.

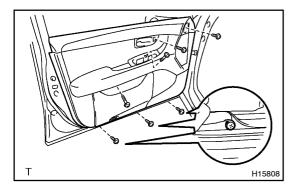

4. REMOVE DOOR TRIM

(a) Remove the 7 screws.

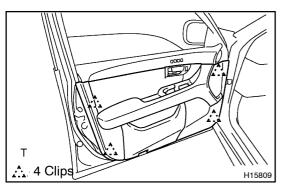


(b) Using a screwdriver, disengage the clips, then pull the trim upward to remove it.

HINT:

Tape the screwdriver tip before use.

(c) Disconnect the connectors.

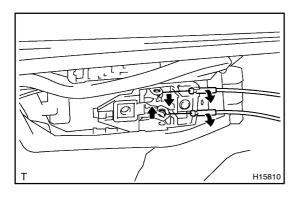

- (d) Disconnect the 2 cables from the inside handle and remove the door trim.
- 5. REMOVE DOOR FRAME GARNISH

Remove the 2 clips and door frame garnish.

- 6. REMOVE OUTSIDE REAR VIEW MIRROR
- (a) Disconnect the connector.
- (b) Remove the 3 bolts and outside rear view mirror.