
## REAR DOOR BELT MOULDING ASSY REPLACEMENT

7614E-01

## HINT:

- The installation procedures are the removal procedures in reverse order.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- 1. REMOVE[DOOR[INSIDE[HANDLE]BEZEL[NO.2[LH[See]page[75-32]]
- 2. REMOVE[REAR[DOOR[ARMREST[BASE[PANEL[UPPER[LH[See[page[75-32]
- 3. REMOVE[\$IDE[TRIM[BOARD[COVER[FRONT[LH[See]page[75-32]]]]
- 4. REMOVE SIDE REAR CURTAIN ASSY LH See page 75-32)
- 5. REMOVE[REAR[DOOR[TRIM[BOARD[\$UB-ASSY[LH[[See]page]75-32]]

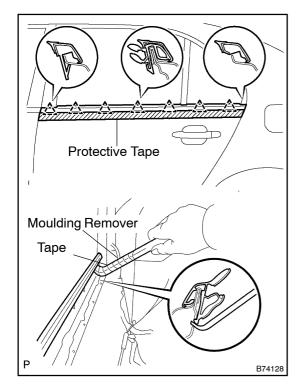

## 6. REMOVE REAR DOOR BELT MOULDING ASSY LH

- (a) Put protective tape under the moulding.
- (b) Remove the screw.
- (c) Using a moulding remover, pry out the moulding as shown in the illustration.

## HINT:

Tape the remover tip before use.