
## STEERING [PAD [SWITCH [MODULATOR REPLACEMENT]

9714E 01

## HINT:


- •□ COMPONENTS: SEE PAGE 60-21.
- •□ LOCATION: SEE PAGE 67-2.
- •□ Installation[is[in[the]reverse[order[of[removal.

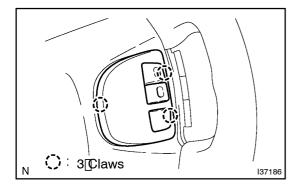

## 1. REMOVE SWITCH & VOLUME CASE

(a) Disengage the \$\psi\change\text{and the switch \$\psi\change\text{volume}}\ case.

- 2. REMOVE[STEERING[WHEEL[COVER[LOWER[NO.2[SEE[PAGE[60-22]]
- 3. REMOVE HORN BUTTON ASSY (SEE PAGE 60-22)

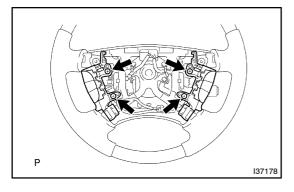

- 4. REMOVE STEERING PAD SWITCH MODULATOR
- (a) Remove the 4 screws.
- (b) Disconnect the connectors and memove the steering ad switch modulator.

- 5. INSTALL[HORN[BUTTON[ASSY]](SEE[PAGE[60-22)]
- 6. INSPECT[HORN[BUTTON[ASSY[SEE[PAGE[60-16]]
- 7. SRS[WARNING[LIGHT[SEE[PAGE[05-954]]