
## RAIN SENSOR REPLACEMENT

660DF-0

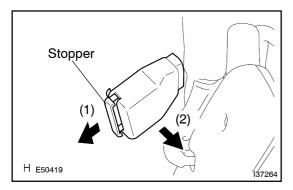

## 1. REMOVE RAIN SENSOR

- (a) Unlock the stopper by pulling it down, and remove the rain sensor
- (b) Disconnect the connector.

## 2. INSTALL RAIN SENSOR

- (a) Connect the connector.
- (b) Install the rain sensor.

## **NOTICE:**

- · Remove any residue left from the silicon sheet on the windshield.
- Clean the dirt on the glass with a cloth, etc.
- When installing a new rain sensor, peel the release paper from the silicon sheet first.
- If reusing the rain sensor, install the new rain sensor tape before installing the rain sensor.
- Be careful not to leave any air bubbles in the rain sensor tape when installing the rain sensor.