



REASSEMBLY

INSTALL SUSPENSION SUPPORT AND COIL SPRING

Install the insulator to the suspension support. HINT:

Match the bolt of the suspension support with the cut-off part of the insulator.

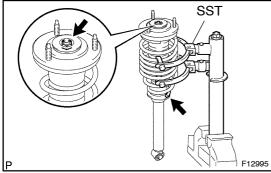

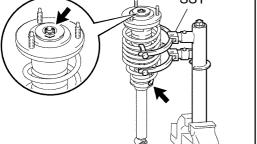

NOTICE:

Using SST, compress coil spring.

09727-30021

SST

Do not use an impact wrench. It will damage the SST.

Install the coil spring to the shock absorber.

HINT:

Fit the lower end of the coil spring into the gap of the spring seat of the shock absorber.

- Install the suspension support and rebound stopper to the rod and temporarily tighten a new nut.
- Rotate the suspension support so that the rod and one of the bolts on suspension support are aligned with the lower bushing.
- Remove the SST. (f)

HINT:

After removing the SST, again check the direction of the suspension support.

