

BO3ZJ-01

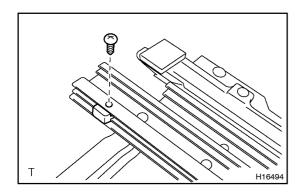

# DISASSEMBLY


## 1. REMOVE GUIDE RAIL STOPPER

- (a) Remove the screw and stopper.
- (b) Employ the same manner described above to the other side.
- 2. REMOVE SUNSHADE TRIM

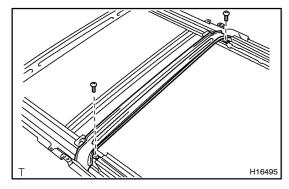

#### 3. REMOVE ROOF DRIP CHANNEL

Remove the roof drip channel as shown in the illustration.

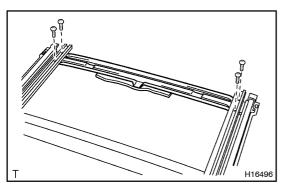


#### 4. REMOVE REAR FRAME


Remove the 4 screws and rear frame.

## 5. REMOVE DRIVE CABLE

(a) Remove the screw and sliding roof panel stopper.

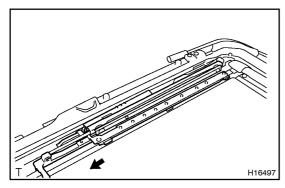


- (b) Slide the drive cable rearward, then remove it.
- (c) Employ the same manner described above to the other side.

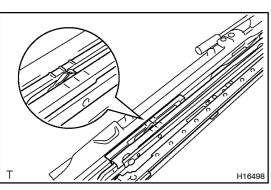

#### HINT:


At the time of reassembly, please refer to the following items.

- Adjust the drive cable to a closed and tilted down position.
- Slide the cable forward or backward to align the 2 marks as shown in the illustration.
- Slide the cable to the forefront with your hand.

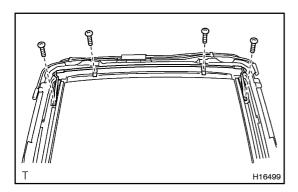

## 6. REMOVE ROOF WIND DEFLECTOR PANEL

Remove the 4 screws and roof wind deflector panel.

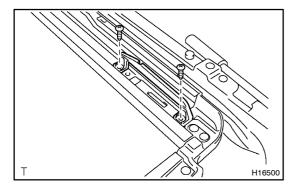


## 7. REMOVE GUIDE BLOCK

- (a) Remove the 2 screws and guide block.
- (b) Employ the same manner described above to the other side.
- 8. REMOVE 2 CUSHIONS
- 9. REMOVE 2 BRACKETS

Remove the 4 screws and 2 brackets.

Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)

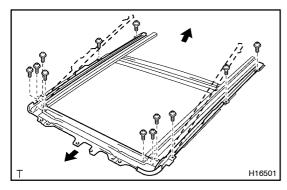

## 10. REMOVE SLIDING ROOF HOUSING

Remove the 12 screws and sliding roof housing.