
DI8UF-02

Wireless Door Lock Buzzer Circuit

WIRING DIAGRAM

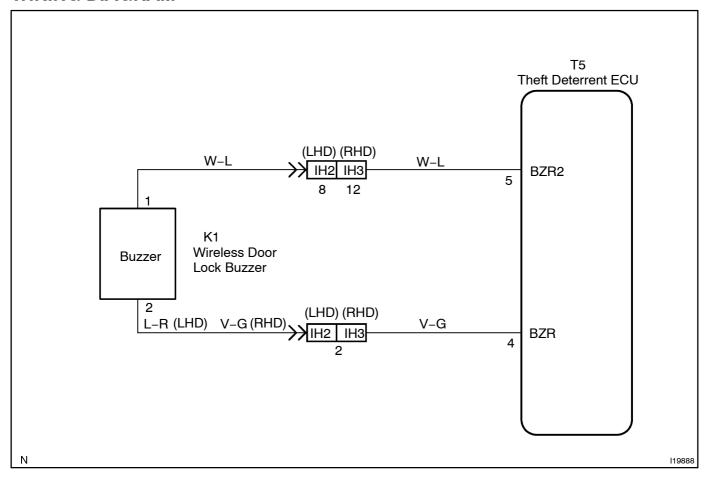

INSPECTION PROCEDURE

HINT:

Incase of using the LEXUS hand-held tester, start the inspection from step of and incase of the LEXUS hand-held tester, start from step 2.

1[

Check[wireless[door[lock[buzzer[using[LEXUS[hand-held[tester.

PREPARATION:

Connect@he@LEXUS@hand-held@ester@o@he@DLC@3.

CHECK:

Check[]hat[]he[]wireless[]door[]ock[]buzzer[]can[]be[]operated[]n[]ACTIVE[]TEST.

OK:

The keyless buzzer sounds.



Proceed_to_next_circuit_inspection_shown_on problem_symptoms_table_(See_page_DI-1197).

NG

2 | Check[wireless[door[lock[buzzer[See[page[DI-780].

NG

Replace wireless door lock buzzer.

OK

3 Check[wireless[and[connector[between[wire[harness[wireless[door[lock[buzzer and[theft[deterrent[ECU[See[page]N-35]).

NG

Repair or replace wireless or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1197).