REPLACEMENT

HINT:

- Use[]the[same[procedures[]or[]the[RH[side[and[LH[side.
- The procedures listed below are for the LH side.
- A[bolt[without]a[lorque[specification[is]shown[in]the[standard[bolt[chart[see]page[03-2)]]
- When replacing the moulding, the at the body and moulding using the at tight.


Heating temperature:

Item	Temperature
Body	40[1o[60°C[(104[1o[]40°E)
Moulding	20[jo[30°C[[68[jo[36°E]

NOTICE:


Do not heat the body and moulding excessively.

- 1. REMOVE[FRONT[FENDER[MUDGUARD]\$UB-ASSY[LH[W/[MUDGUARD]
- (a) Remove the \$\\$\\$\\$\crews and mudguard.
- 2. REMOVE FRONT FENDER OUTSIDE MOULDING LH (See page 76-14)

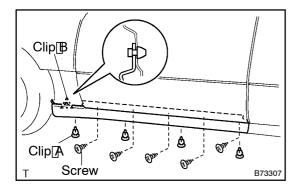


3. REMOVE ROCKER PANEL MOULDING FRONT LH

- (a) Remove the 5 screws and the 4 clips labeled A.
- (b) Using a moulding remover, disengage the clip labeled B and remove the moulding.

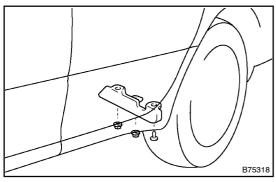


4. REMOVE ROCKER PANEL MOULDING REAR LH


(a) Remove the 2 nuts, clip and No. 5 rocker panel protector.

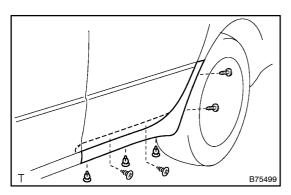

(b) Remove the 2 screws, 2 hexagon screws and 3 clips as shown in the illustration.

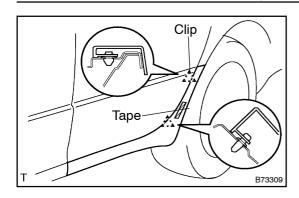

(c) Using a moulding remover, remove the moulding.

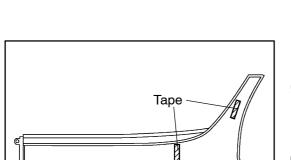

5. INSTALL ROCKER PANEL MOULDING REAR LH

- (a) Clean the body surface.
 - (1) Using a heat light, heat the body surface.
 - (2) Remove the double-sided tape from the body.
 - (3) Wipe off the stains with cleaner.
- (b) If reusing moulding:


Clean the moulding.

- (1) Using a heat light, heat the moulding.
- (2) Remove the double–sided tape from the moulding.
- (3) Wipe off the stains with cleaner.
- (4) Apply new double-sided tape to the moulding as shown in the illustration.
- (c) Install the moulding.
 - (1) Using a heat light, heat the body and moulding.
 - (2) Remove the peeling paper from the face of the moulding.


HINT:

B73310


After removing the peeling paper, keep the exposed adhesive free from dirt and other contaminants.

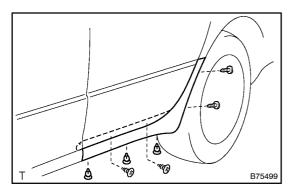

(d) Install the rear rocker panel moulding with the 2 screws, 2 hexagon screws and 3 clips.

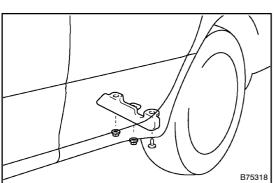

(e) Install the No. 5 rocker panel protector with the 2 nuts and clip.

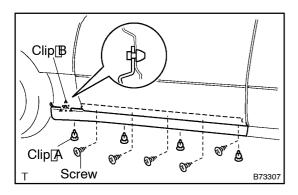

- 6. INSTALL [ROCKER [PANEL [MOULDING [FRONT]]] H
- (a) Install the front rocker panel roulding with the dip tabeled B.
- (b) Install he 4 clips abeled A and 5 screws.

- 7. INSTALL [FRONT [FENDER [OUTSIDE [MOULDING [LH [See page 76-14])]]
- 8. INSTALL FRONT FENDER MUDGUARD SUB-ASSY LH (W/ MUDGUARD)
- (a) Install the front fender mudguard with the 3 screws.