BOAGE OF


## INSTALLATION

## 1. INSTALL OUTSIDE REAR VIEW MIRROR

- (a) Install the outside rear view mirror with the 3 bolts.


  Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)
- (b) Connect the connector.
- 2. INSTALL DOOR FRAME GARNISH

Install the door frame garnish with the 2 clips.

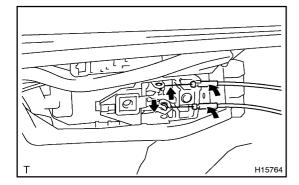


## 3. INSTALL DOOR TRIM


- (a) Connect the 2 cables to the inside handle of the door trim.
- (b) Connect the connectors.

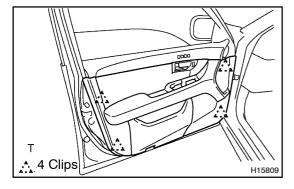

(c) Install the door trim.

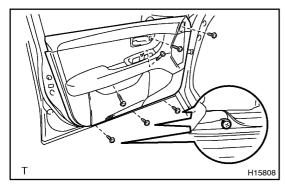

- (d) Install the 7 screws.
- 4. INSTALL COURTESY LIGHT ASSEMBLY

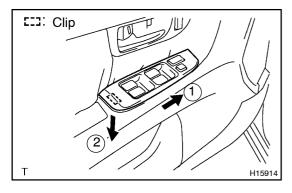

## 5. INSTALL ARMREST BASE PANEL ASSEMBLY

Connect the connector and install the armrest base panel assembly.

6. INSTALL NO. 2 DOOR INSIDE HANDLE BEZEL