BO3YY-01

INSTALLATION

INSTALL ROOF DRIP SIDE FINISH MOULDING

If the roof drip side finish moulding clips come off.

(a) Using a heat light, heat the body moulding clip surface to $40 - 60 \degree \text{C} (104 - 140 \degree \text{F})$.

NOTICE:

Do not heat the body excessively.


- (b) Remove the adhesive tape from the body.
- (c) Wipe off stains with cleaner.
- (d) Apply new adhesive tape to the body as shown in the illustration.
- (e) Using a heat light, heat the body and moulding clip.


Body: 40 - 60 °C (104 - 140 °F) Moulding: 20 - 30 °C (68 - 86 °F)

NOTICE:

Do not heat the body excessively.

- (f) Lift the moulding release sheet face of the body.
- (g) Install the clip.

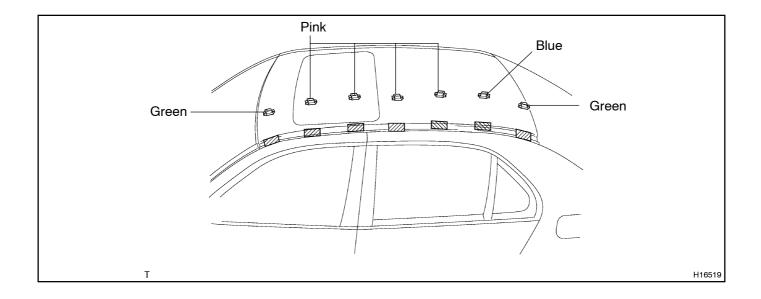

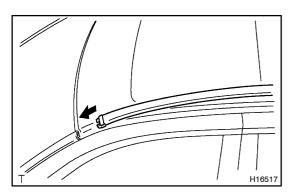

- (h) Mount the roof drip side finish moulding to the body panel.
- (i) Slide the roof drip side finish moulding forward and set it to the windshield outside moulding upper end.

(j) Tap the roof drip side finish moulding clip areas by your hand to fix the roof drip side finish moulding.

