
SA1JN-04

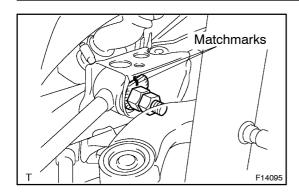

INSTALLATION

I. INSTALL TOE CONTROL LINK

(a) Install the toe control link to the rear suspension member with the toe adjust cam, toe adjust plate and nut.

HINT:

After stabilizing the suspension arm, align the matchmarks on the cam plate and rear suspension member, and torque the nut.

Torque: 50 N·m (510 kgf·cm, 37 ft·lbf)

(b) Connect the toe control link to the axle carrier with a new nut.

Torque: 50 N·m (510 kgf·cm, 37 ft·lbf)

2. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

3. CHECK[REAR[WHEEL[ALIGNMENT[(See])page SA-10)