
SA0KF-03

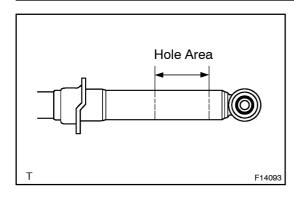

DISPOSAL

- I. FULLY EXTEND SHOCK ABSORBER ROD
- 2. DRILL HOLE TO REMOVE GAS FROM CYLINDER

Using a drill, make a hole in the cylinder as shown to bleed the gas inside.

CAUTION:

The gas coming out is harmless, but be careful of chips which may fly up when drilling.