
SYSTEM DIAGRAM

05HRM-01

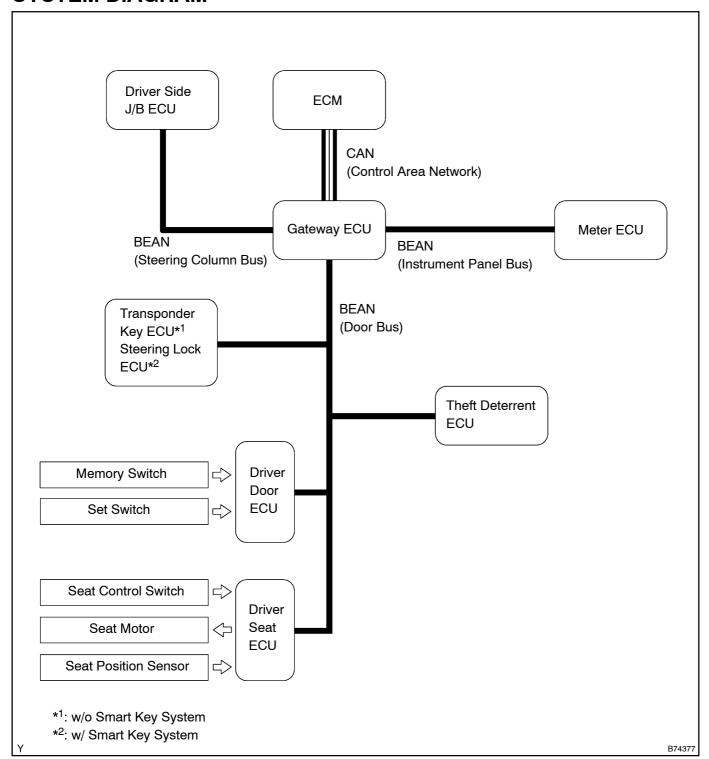

Communication Table

Sender	Receiver	Signal	Line
Driver Door ECU	Driver Seat ECU	Driver's door courtesy switch signal	BEAN
		Memory switch signal	BEAN
		Driver's side mirror position signal	BEAN
Pssenger Door ECU	Driver Seat ECU	Passenger's side mirror position signal	BEAN
Transponder Key ECU* ¹ Steering Lock ECU* ²	Driver Seat ECU	Push switch signal	BEAN
		Ignition switch signal	BEAN
		Key switch signal	BEAN
Theft Deterrent ECU	Driver Seat ECU	Key ID signal	BEAN
		Wireless registration key ID signal	BEAN
		Memory call command signal	BEAN
Driver Side J/B ECU	Driver Seat ECU	Memory information transmission request signal	BEAN
		Belt anchor position information	BEAN
Meter ECU	Driver Seat ECU	Vehicle speed signal	BEAN
ECM	Driver Seat ECU	Shift position P and N signal	BEAN, CAN

HINT:

^{*1:} w/o Smart key system
*2: w/ Smart key system