

## **FRONT FENDER APRON (ASSY)**

## **REPLACEMENT**

- 1. REMOVE RADIATOR SUPPORT (See page BP-1)
- 2. REMOVE FRONT FENDER APRON
- (a) Leave the front fender apron rear extension to the vehicle, remove the front fender apron.

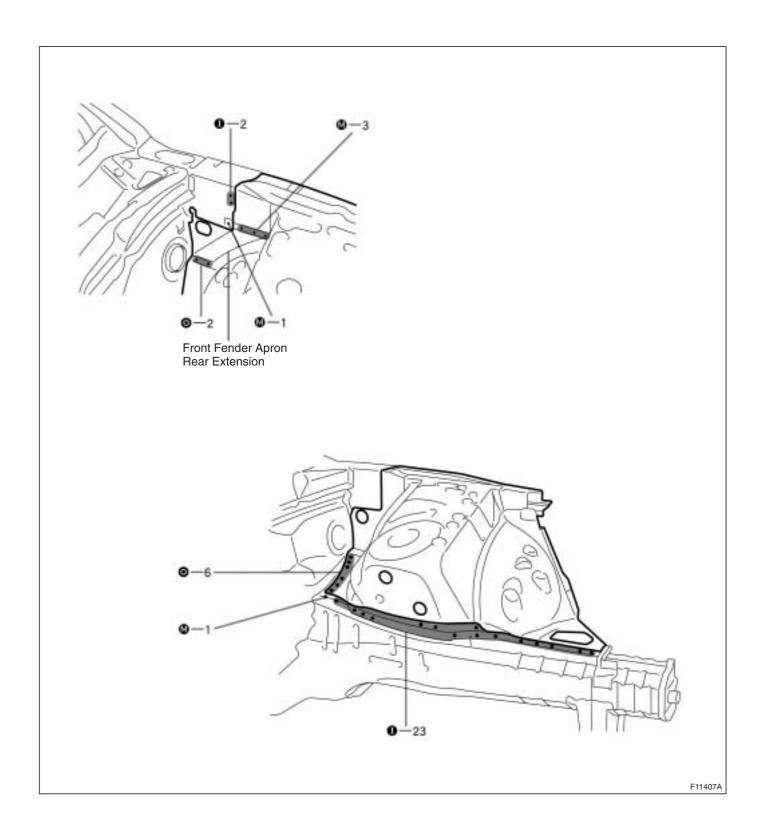

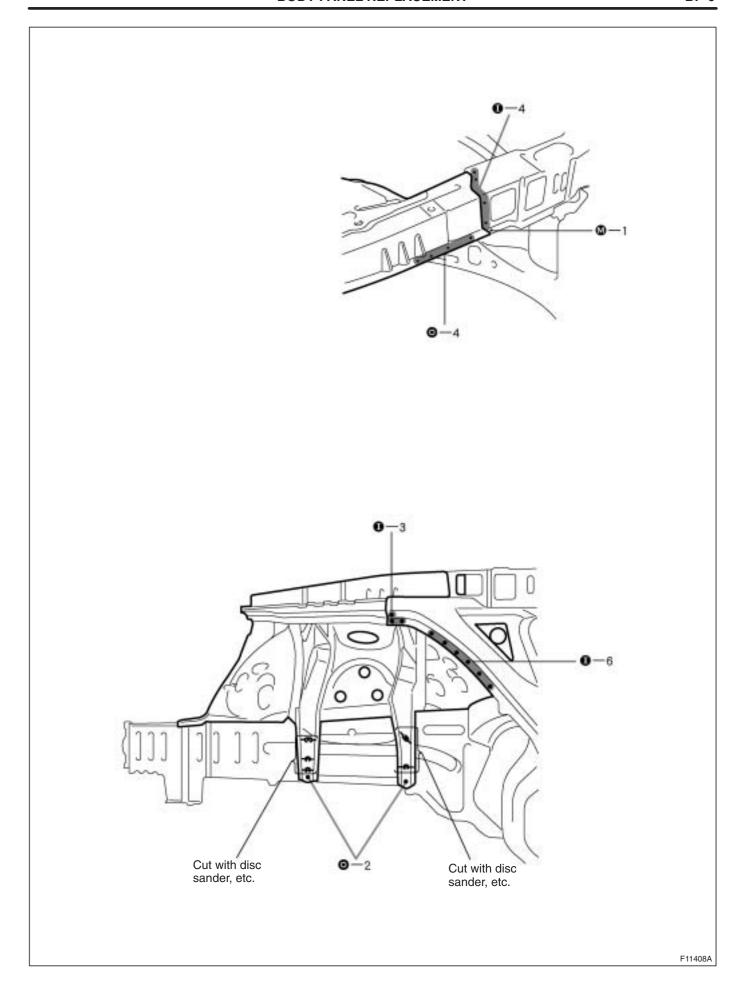

## 3. INSTALL FRONT FENDER APRON


HINT


Inspect the fitting of the front fender and hood, etc. before welding, since this affects the appearance of the finish.

- (a) Remove the front fender apron rear extension from the new parts of front fender apron.
- (b) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:

Make sure each measurement is correct, as this parts affects the front wheel alignment.

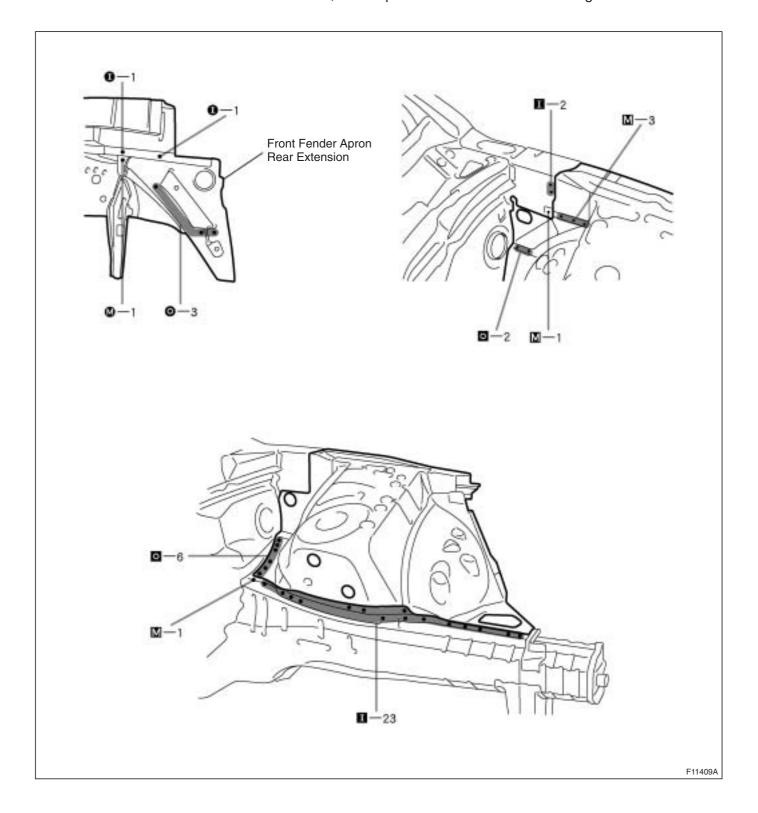

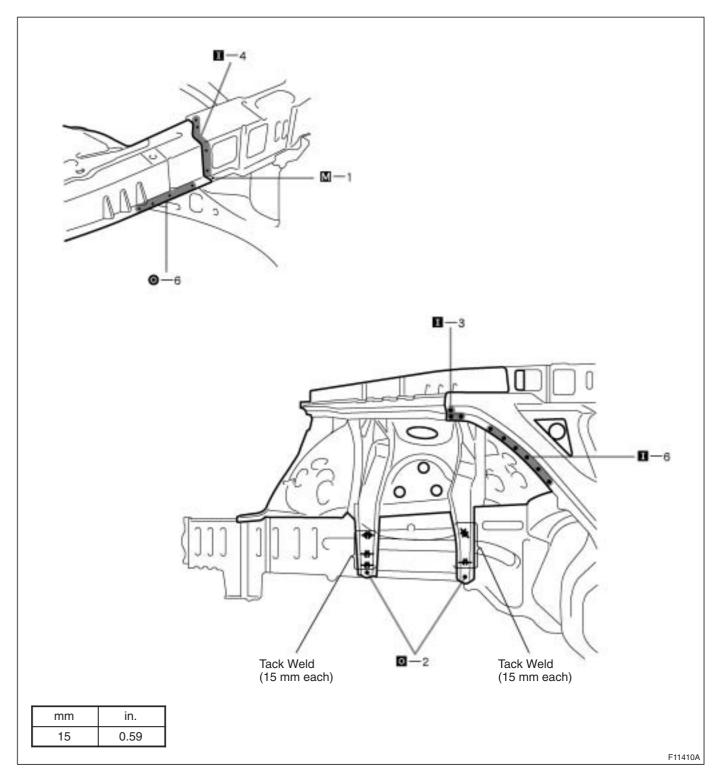

- 4. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-88)
- 5. MEASURING THE UNDER BODY DIMENSIONS (See page BP-88)
- 6. INSTALL RADIATOR SUPPORT (See page BP-1)
- 7. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)
- 8. APPLYING UNDER COATING (See page PC-7)
- 9. APPLYING ANTI-RUST AGENT
- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.