
SA0IZ-03

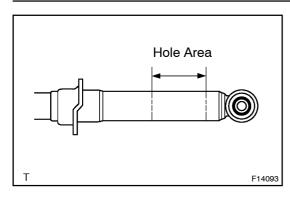

## **DISPOSAL**

- 1. FULLY EXTEND SHOCK ABSORBER ROD
- 2. DRILL HOLE TO REMOVE GAS FROM CYLINDER
  Using a drill, make a hole in the cylinder as shown to remove

Using a drill, make a hole in the cylinder as shown to remove the gas inside.

## **CAUTION:**

The gas coming out is harmless, but be careful of chips which may fly up when drilling.