
COWL TOP SIDE PANEL (ASSY)

REPLACEMENT

- 1. REMOVE COWL TOP TO APRON BRACE (See page BP-19)
- 2. REMOVE COWL TOP SIDE PANEL

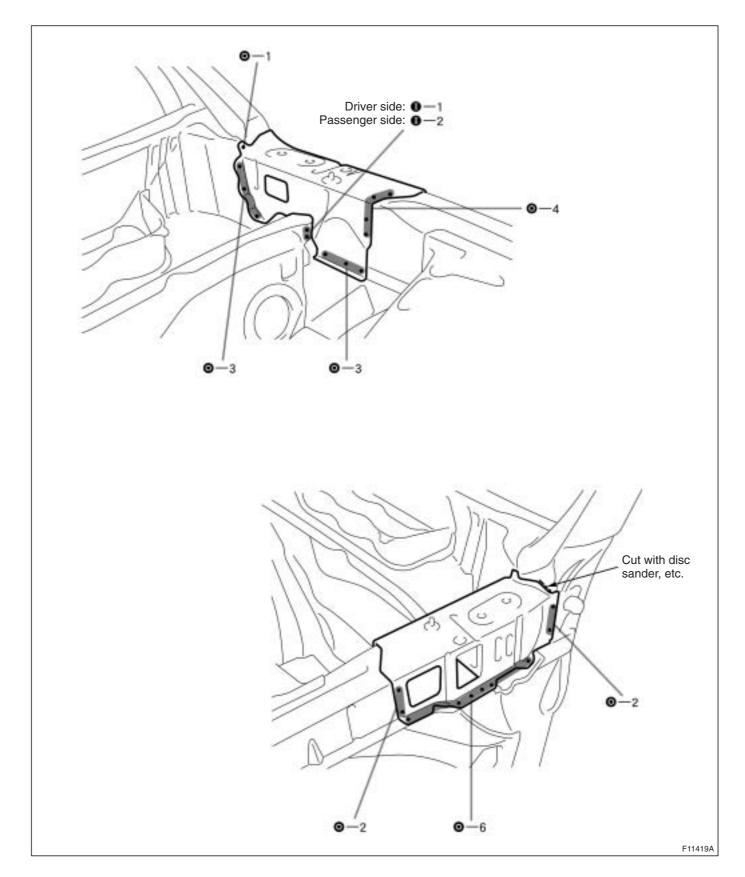


3. INSTALL COWL TOP SIDE PANEL

HINT:

Inspect the fitting of the front fender and hood, etc. before welding, since this affects the appearance of the finish.

(a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

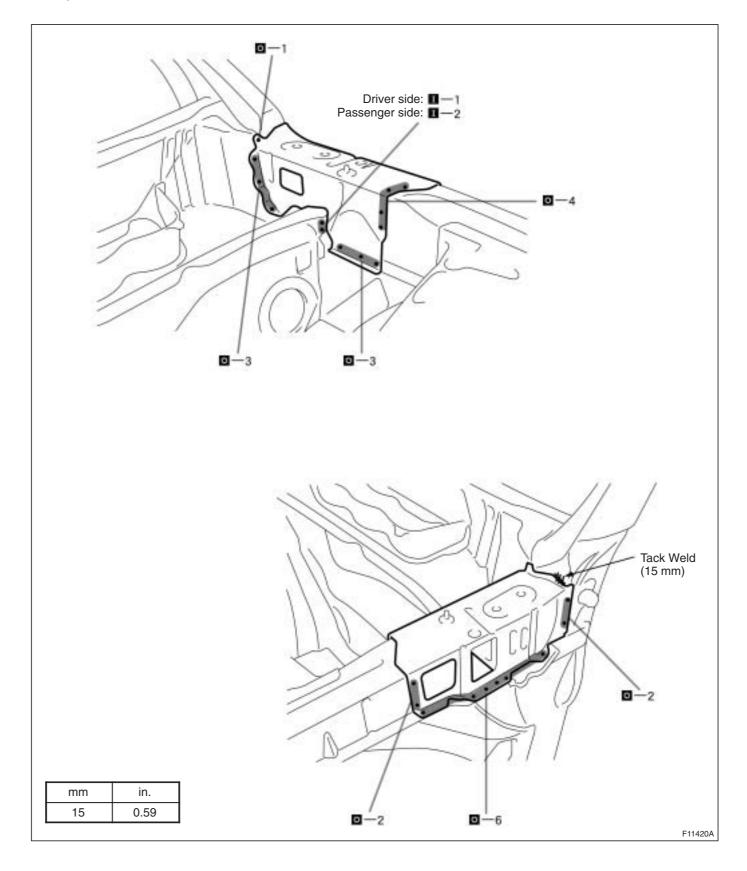

- 4. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-88)
- 5. INSTALL COWL TOP TO APRON BRACE (See page BP-19)
- 6. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)
- 7. APPLYING ANTI-RUST AGENT
- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.