
## **DISPOSAL**

270HK-01

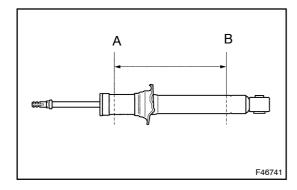

## 1. DISPOSE OF SHOCK ABSORBER ASSY REAR LH

- (a) Fully extend the shock absorber rod.
- (b) Using a drill, make a hole in the cylinder somewhere between A and B as shown in the illustration to discharge the gas inside.

## **CAUTION:**

- Be careful when drilling as shards of metal may fly about. Always use the proper safety equipment.
- The gas is colorless, odorless and non-poisonous.