


# PARKING BRAKE PEDAL **ON-VEHICLE INSPECTION**

## **CHECK PARKING BRAKE PEDAL TRAVEL**

Depress the parking brake pedal all the way and count the number of clicks.

Parking brake pedal travel at 300 N (31 kgf, 68.3 lbf): 6 - 8 clicks

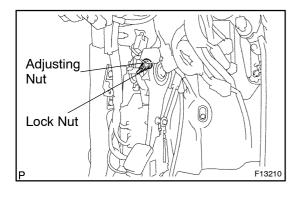

## IF NECESSARY, ADJUST PARKING BRAKE

#### HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment[See]page[BR-53).

- Loosen the lock nut and turn the adjusting nut until the pedal travel becomes correct.
- (b) Tighten the lock nut.

Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf)