
FI0Y8-01

INSTALLATION

- 1. INSTALL THROTTLE BODY
- (a) Connect[]he[]water[]bypass[]hose[]o[]he[]manifold[]hermostat[]on[]he[]hrottle[]body.

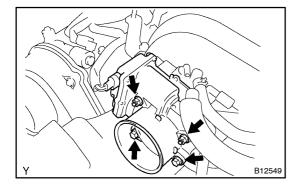

(b) Installamew@asketand@he@hrottlepodywith@heppolts and phuts.

Torque: 18[N·m[[185[kgf·cm, 13[ft·lbf]

- (c) Connect[the[water[bypass[hose[to[the[No.5[water[bypass pipe]hn[the[throttle[body.
- (d) ☐ Connect ☐ the ☐ connector.
- 2. INSTALL INTAKE AIR CONNECTOR PIPE
- 3. FILL WITH ENGINE COOLANT (See page FI-1)
- 4. START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS
- 5. INSTALL V-BANK COVER