
## HORN ASSY REPLACEMENT

7700K-0

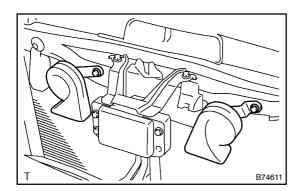

- 1. REMOVE HIGH PITCHED HORN ASSY
- (a) Disconnect the connector.
- (b) Remove the bolt and horn.
- 2. REMOVE LOW PITCHED HORN ASSY
- (a) Disconnect the connector.
- (b) Remove the bolt and horn.

## 3. INSTALL HIGH PITCHED HORN ASSY

- (a) Place the stay onto the baffle part in the radiator support upper, and then install the horn with the bolt. **Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)**
- (b) Connect the connector.
- 4. INSTALL LOW PITCHED HORN ASSY
- (a) Place the stay onto the baffle part in the radiator support upper, and then install the horn with the bolt. Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)
- (b) Connect the connector.