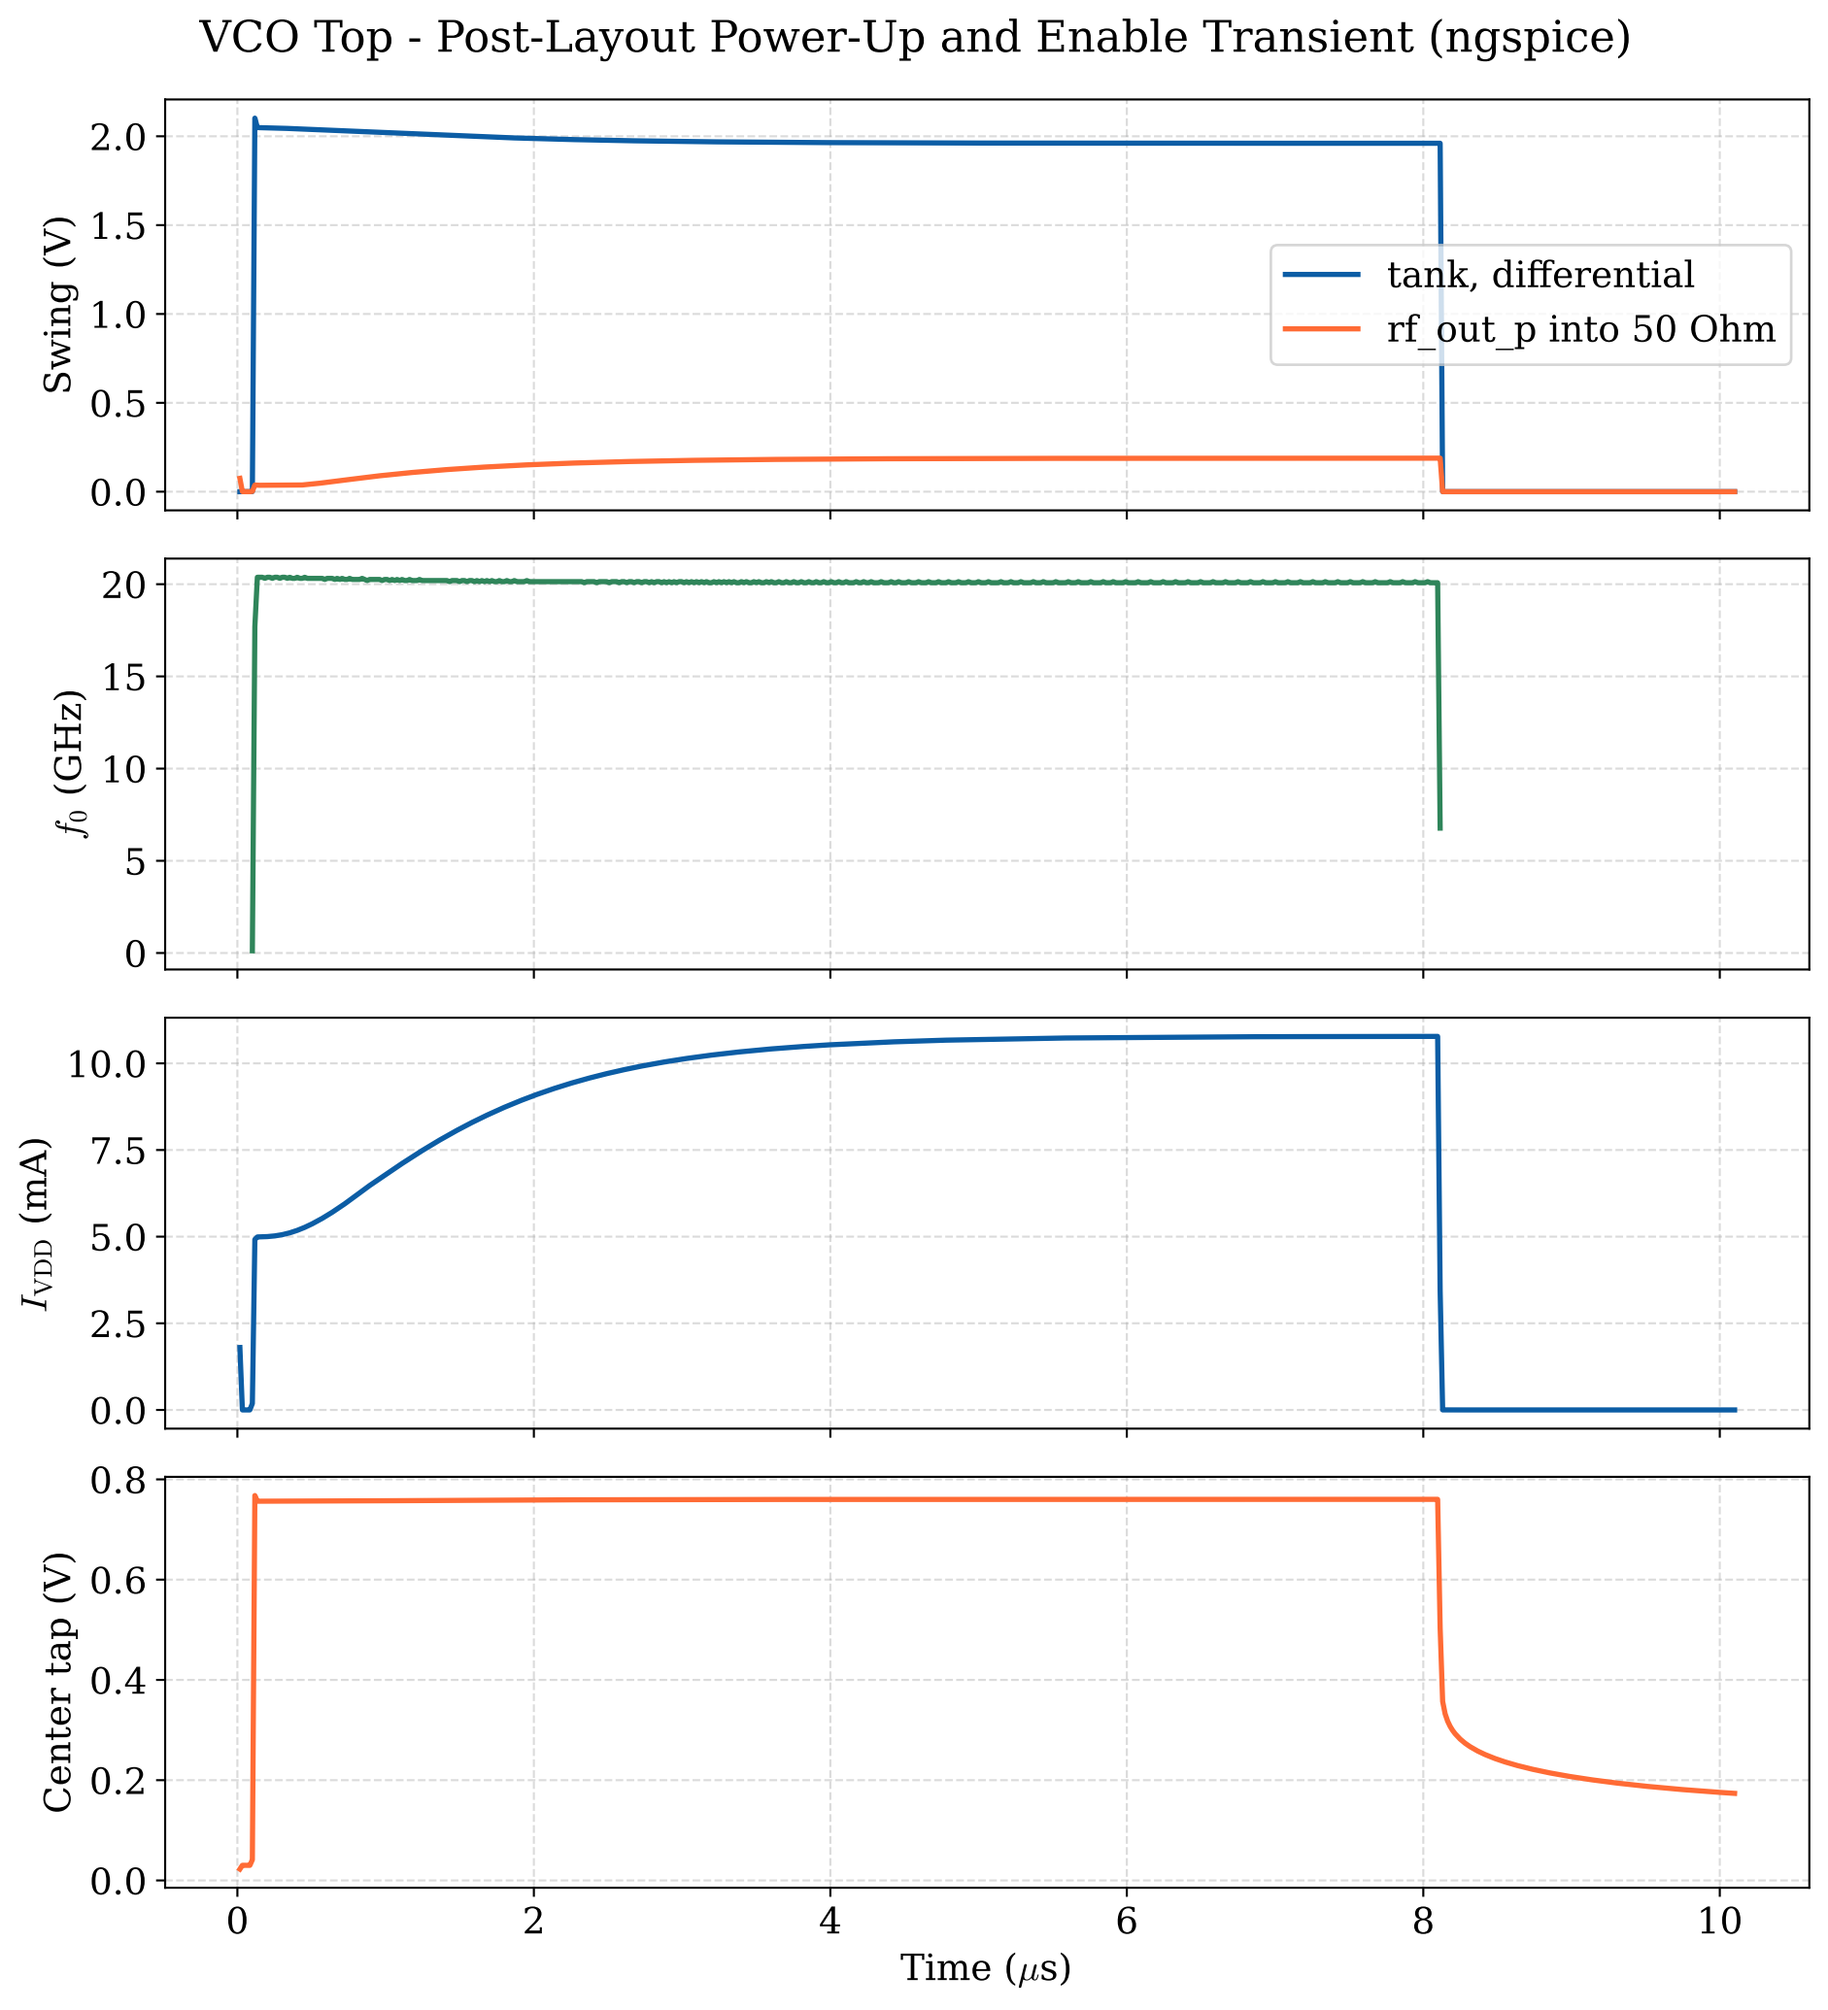
VCO Top - Post-Layout Power-Up and Enable Transient (ngspice)
Swing (V)
tank, differential
rf_out_p into 50 Ohm
f_0 (GHz)
I_{VDD} (mA)
Center tap (V)
Time (μs)