

SLEEPERPLAN / WORKSHOP PACK

REVIEWED_WORKSHOP_PLAN

Reviewed workshop build - 2 courses, 2400x1200 mm

As of 2026-09-06 | Generator 0.1.0 | Plan 6ebfa2b9d9d2dd15

Worked example unless your own surveyed job file has been used. A reviewed status records human checks; it is not structural certification.

BED	OUTSIDE L x W x H (mm)	COURSES	CLEAR OPENING (mm)	FILL (litres)
front-01	2400 x 1200 x 400	2	2200 x 1000	770.0

8 labelled pieces | 30 fixing entries | 6 purchased sleepers | 6 saw cuts

Timber + screw purchases: GBP 189.30

Known subtotal: GBP 463.30. All required cost lines supplied.

Cutting: exact. All explored cutting patterns and inventory states solved.

Use BUILD.md for the assembly sequence. Use cuts.csv for saw bands and fixings.csv for full coordinates. Treat all pilot entries marked UNCONFIRMED as mark-out only, not a drilling instruction.

REVIEW GATES & ASSUMPTIONS

TYPE	CHECK
NOTE	Zero end trim assumes square, sound, usable factory/cut ends. Nominal 2400 mm is not a measurement.
NOTE	Catalogue prices are dated snapshots. The configured store and collection stock are NOT confirmed.
NOTE	Geometry and straight screw-path clearance are checked; timber strength, screw capacity, long-term movement and soil pressure are NOT calculated. Supports/bracing, liner detailing and foundations are site-specific and not drawn by v1.

PURCHASES & COSTS


Catalogue retail purchase prices as displayed; VAT is not recalculated. Explicit extras and labour are added on the same user-supplied basis. Not a tax invoice.

ITEM	NEED / BUY	LINE TOTAL
wickes-276785 - 2400 mm sleeper / matching section	6 needed / 6 sleeper	GBP 168.00
wickes-287686 - 7 x 150 mm screws; 25/pack	16 needed / 1 pack	GBP 9.00
wickes-287688 - 7 x 250 mm screws; 25/pack	14 needed / 1 pack	GBP 12.30
consumables - Saw blade wear, driver bits, PPE	1 needed / 1 job	GBP 8.00
fill - Topsoil and compost mix bulk supply	1 needed / 1 job	GBP 65.00
liner - Heavy duty geotextile membrane liner	1 needed / 1 job	GBP 12.00
preservative - Cut-end timber treatment preservative	1 needed / 1 job	GBP 14.00
site_preparation - Ground levelling and clearing	1 needed / 1 job	GBP 30.00
supports - Base timber levelling packing & pins	1 needed / 1 job	GBP 15.00
transport - Collection travel and van load	1 needed / 1 job	GBP 25.00
labour - Labour (nearest penny, half-up)	180 needed / 180 minute	GBP 105.00

Known subtotal: GBP 463.30

front-01 / 2 courses / assembled view

REVIEWED_WORKSHOP_PLAN | Same timber section throughout | Schematic colour, not a finish sample

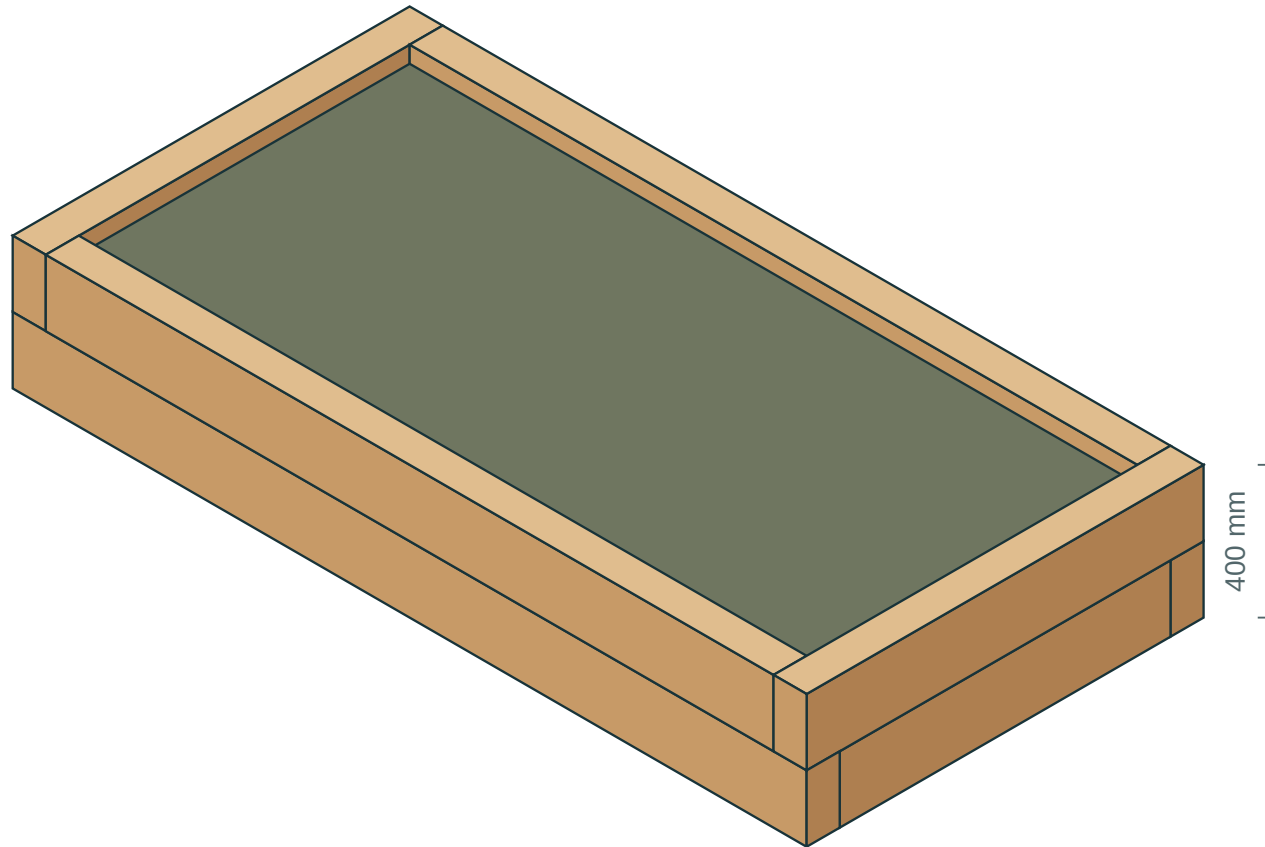


Outside: 2400 x 1200 x 400 mm | Clear opening: 2200 x 1000 mm

Geometric fill: 770 litres at 50 mm below the top. No settlement allowance.

front-01 / course 1 / plan view

REVIEWED_WORKSHOP_PLAN | All dimensions mm | Origin O = outside S/W corner | NOT a 1:1 template

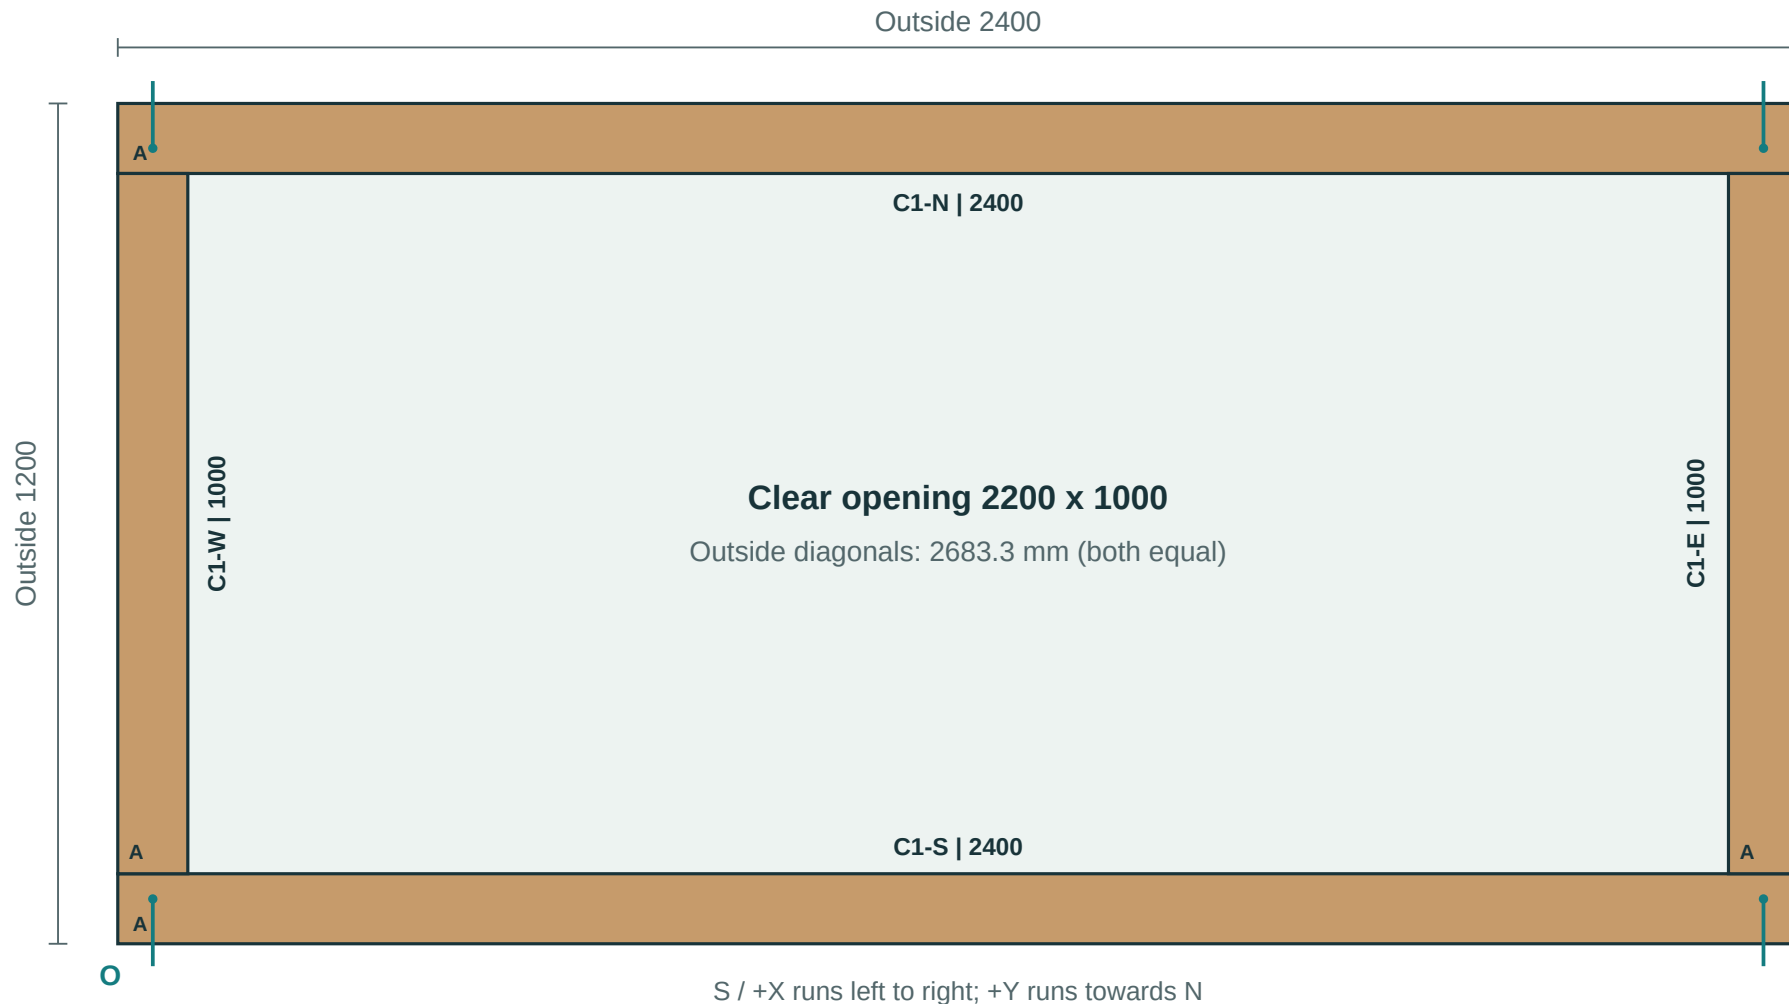


Circles = top fixing entries. Arrows = two corner screws at different heights.

Piece sheets give the entry face, datum, coordinates and hardware. A is each piece's lower-X / lower-Y end.

front-01 / course 2 / plan view

REVIEWED_WORKSHOP_PLAN | All dimensions mm | Origin O = outside S/W corner | NOT a 1:1 template

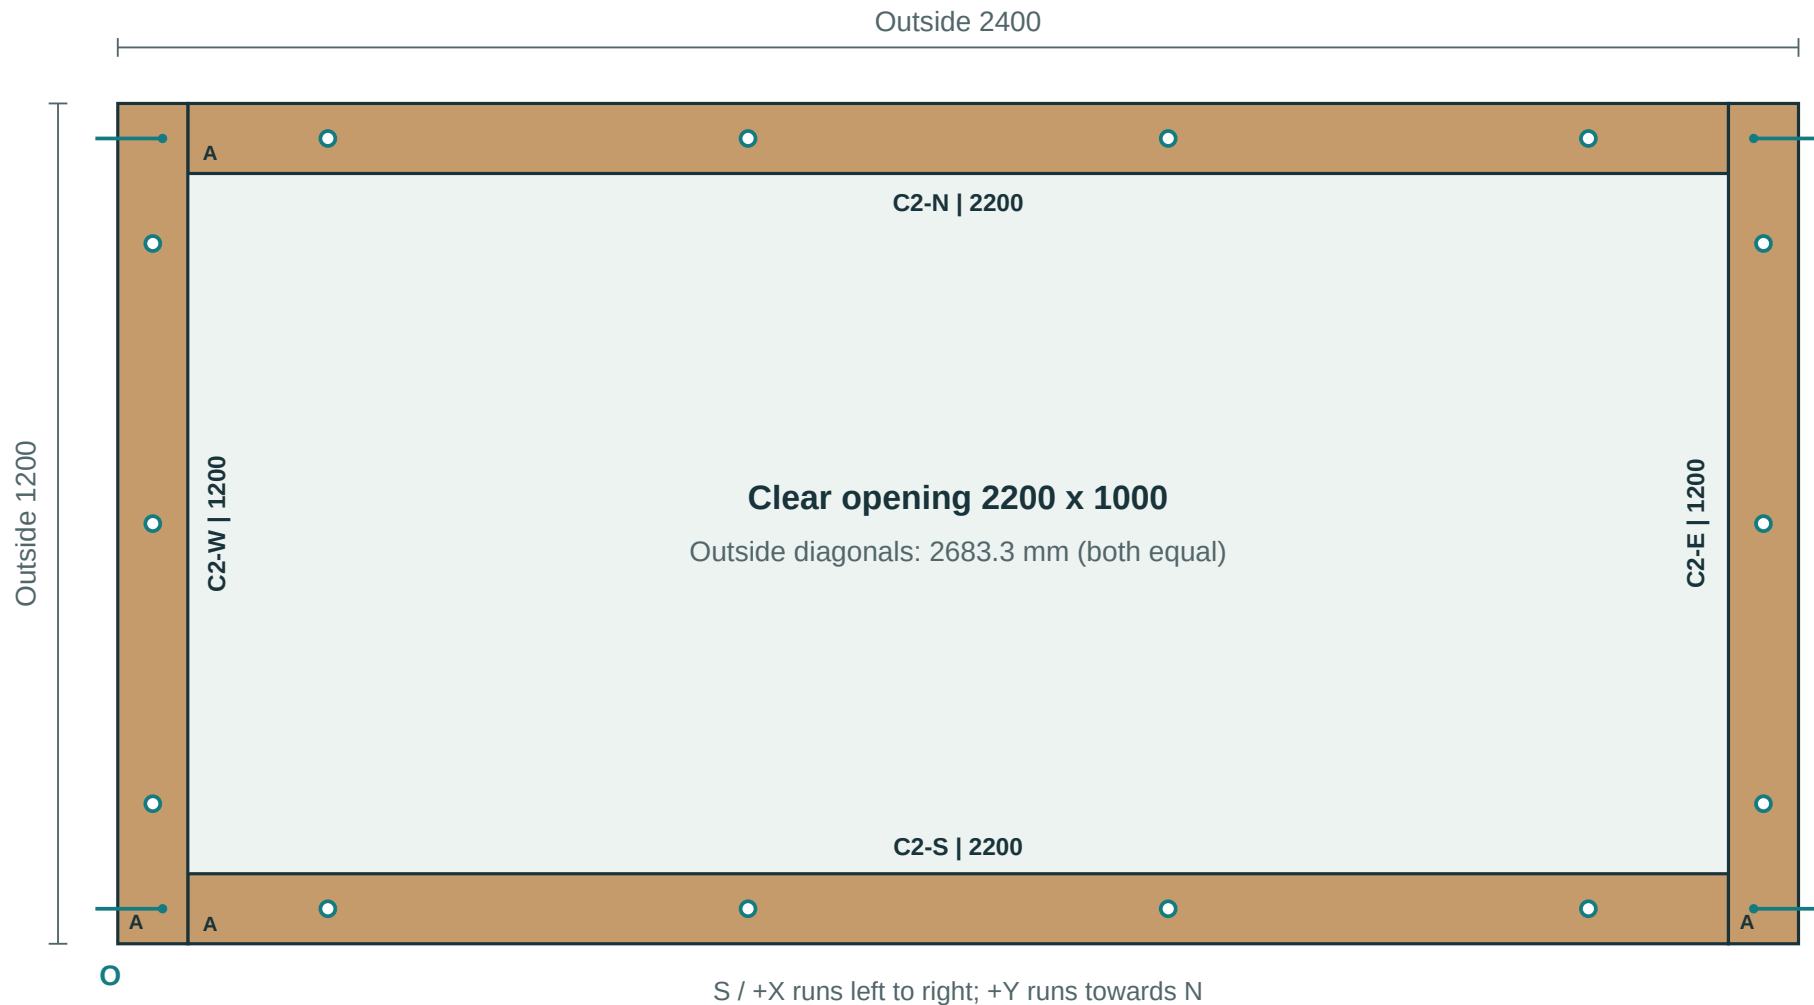

Circles = top fixing entries. Arrows = two corner screws at different heights.

Piece sheets give the entry face, datum, coordinates and hardware. A is each piece's lower-X / lower-Y end.

Stock allocation / cutting diagram

Measure every kerf band from ORIGINAL stock datum A. Finished pieces are exact; this drawing is NOT to scale for tracing.

B001 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm




Waste kerf bands from original A (mm): none - use the sound full length

B002 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm




Waste kerf bands from original A (mm): none - use the sound full length

B003 | wickes-276785 | 2400 mm | 1 saw cuts | offcut 197 mm



Waste kerf bands from original A (mm): 2200..2203

B004 | wickes-276785 | 2400 mm | 1 saw cuts | offcut 197 mm



Waste kerf bands from original A (mm): 2200..2203

B005 | wickes-276785 | 2400 mm | 2 saw cuts | offcut 194 mm




Waste kerf bands from original A (mm): 1200..1203; 2203..2206

Exact saw band positions and blade-centre coordinates are in cuts.csv. Kerf widths here may be exaggerated for visibility.

Stock allocation / cutting diagram

Measure every kerf band from ORIGINAL stock datum A. Finished pieces are exact; this drawing is NOT to scale for tracing.

B006 | wickes-276785 | 2400 mm | 2 saw cuts | offcut 194 mm

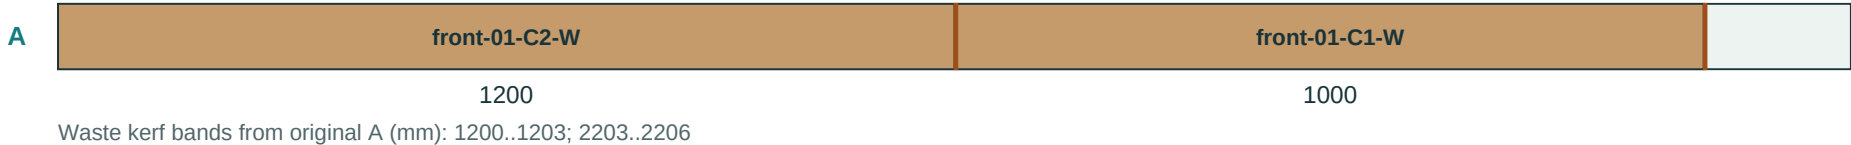


Exact saw band positions and blade-centre coordinates are in cuts.csv. Kerf widths here may be exaggerated for visibility.

front-01-C1-S / 2400 x 100 x 200 mm

REVIEWED_WORKSHOP_PLAN | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge


A



V=0 edge

OUTER FACE / U from A; W measured UP from bottom / side S

A

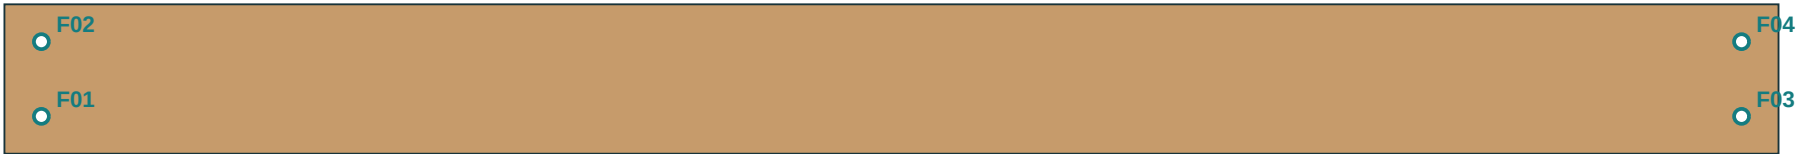

Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.


FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	0	50	7 x 150	5 mm x 100 mm deep
F02	outer	50	0	150	7 x 150	5 mm x 100 mm deep
F03	outer	2350	0	50	7 x 150	5 mm x 100 mm deep
F04	outer	2350	0	150	7 x 150	5 mm x 100 mm deep

front-01-C1-N / 2400 x 100 x 200 mm

REVIEWED_WORKSHOP_PLAN | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge


A



V=0 edge

OUTER FACE / U from A; W measured UP from bottom / side N

A

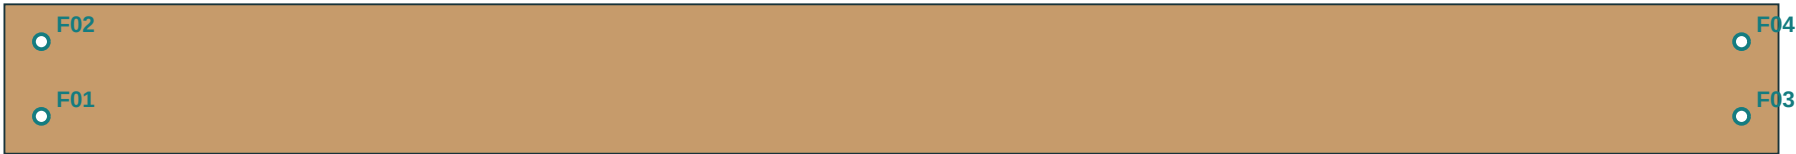

Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.


FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	100	50	7 x 150	5 mm x 100 mm deep
F02	outer	50	100	150	7 x 150	5 mm x 100 mm deep
F03	outer	2350	100	50	7 x 150	5 mm x 100 mm deep
F04	outer	2350	100	150	7 x 150	5 mm x 100 mm deep

front-01-C1-W / 1000 x 100 x 200 mm

REVIEWED_WORKSHOP_PLAN | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge


A



V=0 edge

OUTER FACE / U from A; W measured UP from bottom / side W

A



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
--------	------	----------	---	------	-------	-------


No screw entry points on this piece; it receives screws from adjoining members.

front-01-C1-E / 1000 x 100 x 200 mm

REVIEWED_WORKSHOP_PLAN | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge


A



V=0 edge

OUTER FACE / U from A; W measured UP from bottom / side E

A



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.


FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
--------	------	----------	---	------	-------	-------

No screw entry points on this piece; it receives screws from adjoining members.

front-01-C2-S / 2200 x 100 x 200 mm

REVIEWED_WORKSHOP_PLAN | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



V=0 edge

OUTER FACE / U from A; W measured UP from bottom / side S




Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	top	200	50	200	7 x 250	5 mm x 180 mm deep
F02	top	800	50	200	7 x 250	5 mm x 180 mm deep
F03	top	1400	50	200	7 x 250	5 mm x 180 mm deep
F04	top	2000	50	200	7 x 250	5 mm x 180 mm deep

front-01-C2-N / 2200 x 100 x 200 mm

REVIEWED_WORKSHOP_PLAN | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



V=0 edge

OUTER FACE / U from A; W measured UP from bottom / side N




Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	top	200	50	200	7 x 250	5 mm x 180 mm deep
F02	top	800	50	200	7 x 250	5 mm x 180 mm deep
F03	top	1400	50	200	7 x 250	5 mm x 180 mm deep
F04	top	2000	50	200	7 x 250	5 mm x 180 mm deep

front-01-C2-W / 1200 x 100 x 200 mm

REVIEWED_WORKSHOP_PLAN | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge

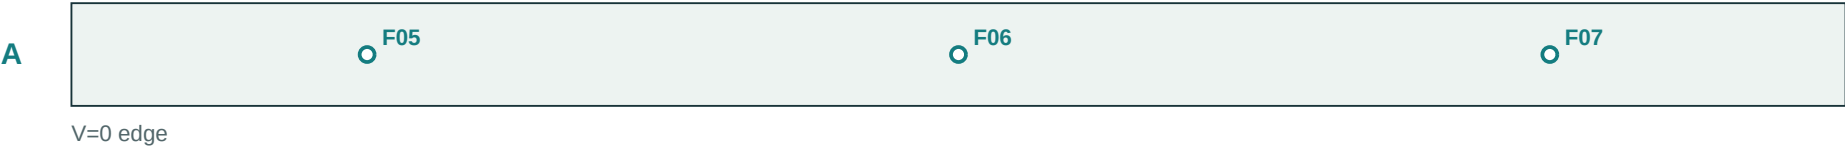

OUTER FACE / U from A; W measured UP from bottom / side W




Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	0	50	7 x 150	5 mm x 100 mm deep
F02	outer	50	0	150	7 x 150	5 mm x 100 mm deep
F03	outer	1150	0	50	7 x 150	5 mm x 100 mm deep
F04	outer	1150	0	150	7 x 150	5 mm x 100 mm deep
F05	top	200	50	200	7 x 250	5 mm x 180 mm deep
F06	top	600	50	200	7 x 250	5 mm x 180 mm deep
F07	top	1000	50	200	7 x 250	5 mm x 180 mm deep

front-01-C2-E / 1200 x 100 x 200 mm

REVIEWED_WORKSHOP_PLAN | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge

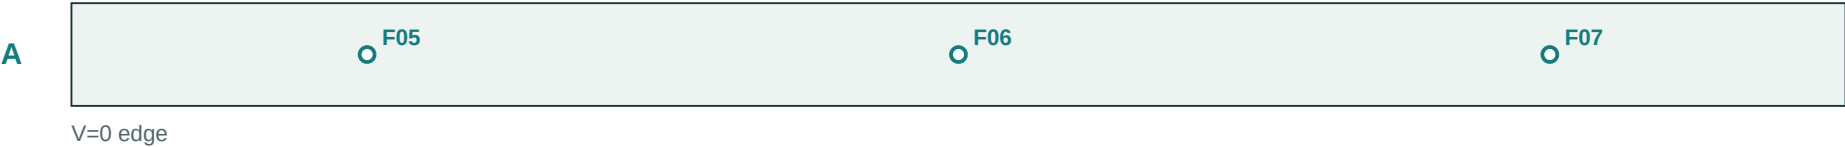

OUTER FACE / U from A; W measured UP from bottom / side E



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	100	50	7 x 150	5 mm x 100 mm deep
F02	outer	50	100	150	7 x 150	5 mm x 100 mm deep
F03	outer	1150	100	50	7 x 150	5 mm x 100 mm deep
F04	outer	1150	100	150	7 x 150	5 mm x 100 mm deep
F05	top	200	50	200	7 x 250	5 mm x 180 mm deep
F06	top	600	50	200	7 x 250	5 mm x 180 mm deep
F07	top	1000	50	200	7 x 250	5 mm x 180 mm deep