

# SLEEPERPLAN / WORKSHOP PACK

DRAFT\_MARK\_OUT\_ONLY

## Offer option - 1 course

As of 2026-09-06 | Generator 0.4.0 | Plan fe0c049d92f327fc

Worked example unless your own surveyed job file has been used. A reviewed status records human checks; it is not structural certification.

| BED          | OUTSIDE L x W x H (mm) | COURSES | CLEAR OPENING (mm) | FILL (litres) |
|--------------|------------------------|---------|--------------------|---------------|
| offer-bed-01 | 2400 x 1400 x 200      | 1       | 2200 x 1200        | 396.0         |

## 4 labelled pieces | 8 fixing entries | 4 purchased sleepers | 2 saw cuts

Timber + screw purchases: GBP 113.00

Known subtotal: GBP 113.00. NOT a completed job cost. Unpriced items remain.

Cutting: exact. All explored cutting patterns and inventory states solved.

Use BUILD.md for the assembly sequence. Use cuts.csv for saw bands and fixings.csv for full coordinates. Treat all pilot entries marked UNCONFIRMED as mark-out only, not a drilling instruction.

# REVIEW GATES & ASSUMPTIONS

| TYPE    | CHECK                                                                                                                                                                                                                                                                               |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BLOCKER | Measure actual stock length/section, usable ends and saw kerf; update inputs before cutting.                                                                                                                                                                                        |
| BLOCKER | Review foundations, drainage, soil loads, support/bracing and any buried services on site.                                                                                                                                                                                          |
| BLOCKER | Review screw suitability, end-grain connections, penetration and spacing with a competent builder / supplier.                                                                                                                                                                       |
| BLOCKER | Record reviewer, reviewed_on and review notes before releasing a workshop pack.                                                                                                                                                                                                     |
| BLOCKER | Release readiness requires review.approved_physical_design_hash to equal the current physical design hash, so an edited job cannot inherit an old review. Run a draft plan, then copy the printed physical design hash into the job's review block after a genuine physical review. |
| BLOCKER | wickes-287686: fixing centres are mark-out only. Confirm pilot diameter/depth or a manufacturer-supported no-pilot instruction; none is inferred.                                                                                                                                   |
| NOTE    | offer-bed-01: centre reach is approximately 700 mm from 2 accessible side(s); confirm with the user. 650 mm is a planning prompt, not an accessibility standard.                                                                                                                    |
| NOTE    | Zero end trim assumes square, sound, usable factory/cut ends. Nominal 2400 mm is not a measurement.                                                                                                                                                                                 |
| NOTE    | Known subtotal only; unpriced: consumables, fill, liner, preservative, site_preparation, supports, transport, labour                                                                                                                                                                |
| NOTE    | Catalogue prices are dated snapshots. The configured store and collection stock are NOT confirmed.                                                                                                                                                                                  |
| NOTE    | Geometry and straight screw-path clearance are checked; timber strength, screw capacity, long-term movement and soil pressure are NOT calculated. Supports/bracing, liner detailing and foundations are site-specific and not drawn by v1.                                          |

# PURCHASES & COSTS

Catalogue retail purchase prices as displayed; VAT is not recalculated. Explicit extras and labour are added on the same user-supplied basis. Not a tax invoice.

| ITEM                                                                   | NEED / BUY           | LINE TOTAL |
|------------------------------------------------------------------------|----------------------|------------|
| wickes-256948 - 1800 mm sleeper / matching section                     | 2 needed / 2 sleeper | GBP 48.00  |
| wickes-276785 - 2400 mm sleeper / matching section                     | 2 needed / 2 sleeper | GBP 56.00  |
| wickes-287686 - 7 x 150 mm screws; 25/pack                             | 8 needed / 1 pack    | GBP 9.00   |
| consumables - Drill bits, blades, PPE and other consumables            | 1 needed / 1 job     | UNPRICED   |
| fill - Soil / compost / mulch supply                                   | 1 needed / 1 job     | UNPRICED   |
| liner - Liner / protection and attachment (or explicitly not required) | 1 needed / 1 job     | UNPRICED   |
| preservative - Compatible cut-end preservative                         | 1 needed / 1 job     | UNPRICED   |
| site_preparation - Ground preparation / bedding / disposal             | 1 needed / 1 job     | UNPRICED   |
| supports - Site-specific stakes, bracing, brackets and their fixings   | 1 needed / 1 job     | UNPRICED   |
| transport - Collection / delivery / travel                             | 1 needed / 1 job     | UNPRICED   |
| labour - Labour (nearest penny, half-up)                               | UNCONFIRMED          | UNPRICED   |

**Known subtotal: GBP 113.00**

# Parts and fixings board / visual checklist

DRAFT\_MARK\_OUT\_ONLY | Verify quantity and ID before each step

## TOOLS / HANDLING

- [2x] two people for long/heavy members
- [CHECK] confirm A/TOP/OUTER labels
- [STOP] resolve blockers before drilling

Hammer + driver/bit set + square/level

## FASTENERS

wickes-287686

 Pilot UNCONFIRMED

7 x 150 mm  
Need 8 entries

## TIMBER PARTS

| PIECE ID          | BED          | COURSE | SIDE | LENGTH | SECTION | BOARD | A DATUM       |
|-------------------|--------------|--------|------|--------|---------|-------|---------------|
| offer-bed-01-C1-E | offer-bed-01 | 1      | E    | 1200   | 100x200 | B003  | Lower X/Y end |
| offer-bed-01-C1-N | offer-bed-01 | 1      | N    | 2400   | 100x200 | B001  | Lower X/Y end |
| offer-bed-01-C1-S | offer-bed-01 | 1      | S    | 2400   | 100x200 | B002  | Lower X/Y end |
| offer-bed-01-C1-W | offer-bed-01 | 1      | W    | 1200   | 100x200 | B004  | Lower X/Y end |

Use this board as the pre-flight checklist. Exact cut order and coordinates remain in cuts.csv and fixings.csv.

# Workshop process / script-driven sequence

DRAFT\_MARK\_OUT\_ONLY | Follow these steps with BUILD.md, cuts.csv and fixings.csv

1. Receive and inspect timber stock; reject twisted/split members.

2. Label each stock board Bxx and mark datum A before any cut.

3. Execute cuts.csv in sequence; kerf\_start..kerf\_end is waste band.

4. Re-label produced parts and preserve A / TOP / OUTER orientation.

5. Drill and drive by piece fixing sheets (exact U, V, W coordinates).

6. Assemble course-by-course using per-course plan sheets.

## CORRECT

Check entry face, direction arrow and quantity before each action.

## INCORRECT

Never drill or drive when pilot\_mode is UNCONFIRMED.

All positions, lengths and hardware IDs are generated from plan geometry; do not freehand from screenshots.

# Stock arrival, board IDs and datum A

Label before cutting; keep original A datum for every stock item

B001 | wickes-276785 | gross 2400 mm



B002 | wickes-276785 | gross 2400 mm



B003 | wickes-256948 | gross 1800 mm



B004 | wickes-256948 | gross 1800 mm




Use these B IDs in parts.csv and cuts.csv. Datum A in cut coordinates always refers to original stock, not the finished part.

# Fastener card / wickes-287686

Use with piece fixing sheets for exact side and coordinates

Cross-section view (not to scale in thickness)

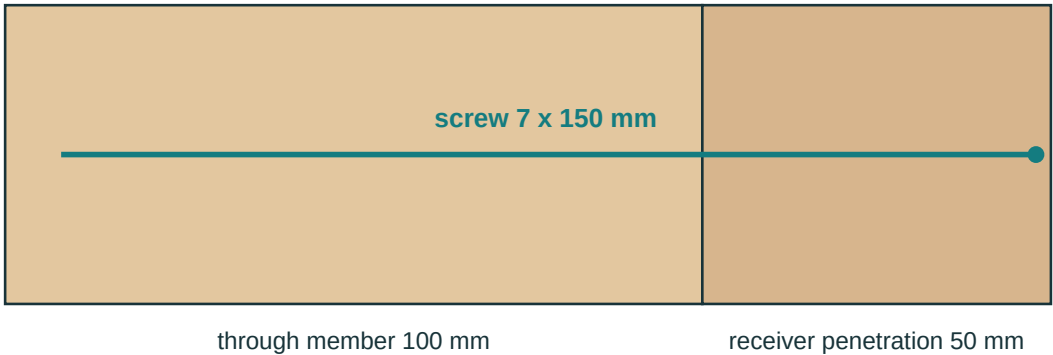


Used in fixing kinds: corner  
Entry faces in this plan: outer  
Entries scheduled: 8

**Pilot: UNCONFIRMED - stop and confirm drill bit diameter/depth before drilling.**

Exact side, point and direction are in piece fixing sheets and fixings.csv (U from A, V, W, and direction XYZ).

## offer-bed-01 / 1 courses / assembled view

DRAFT\_MARK\_OUT\_ONLY | Same timber section throughout | Schematic colour, not a finish sample

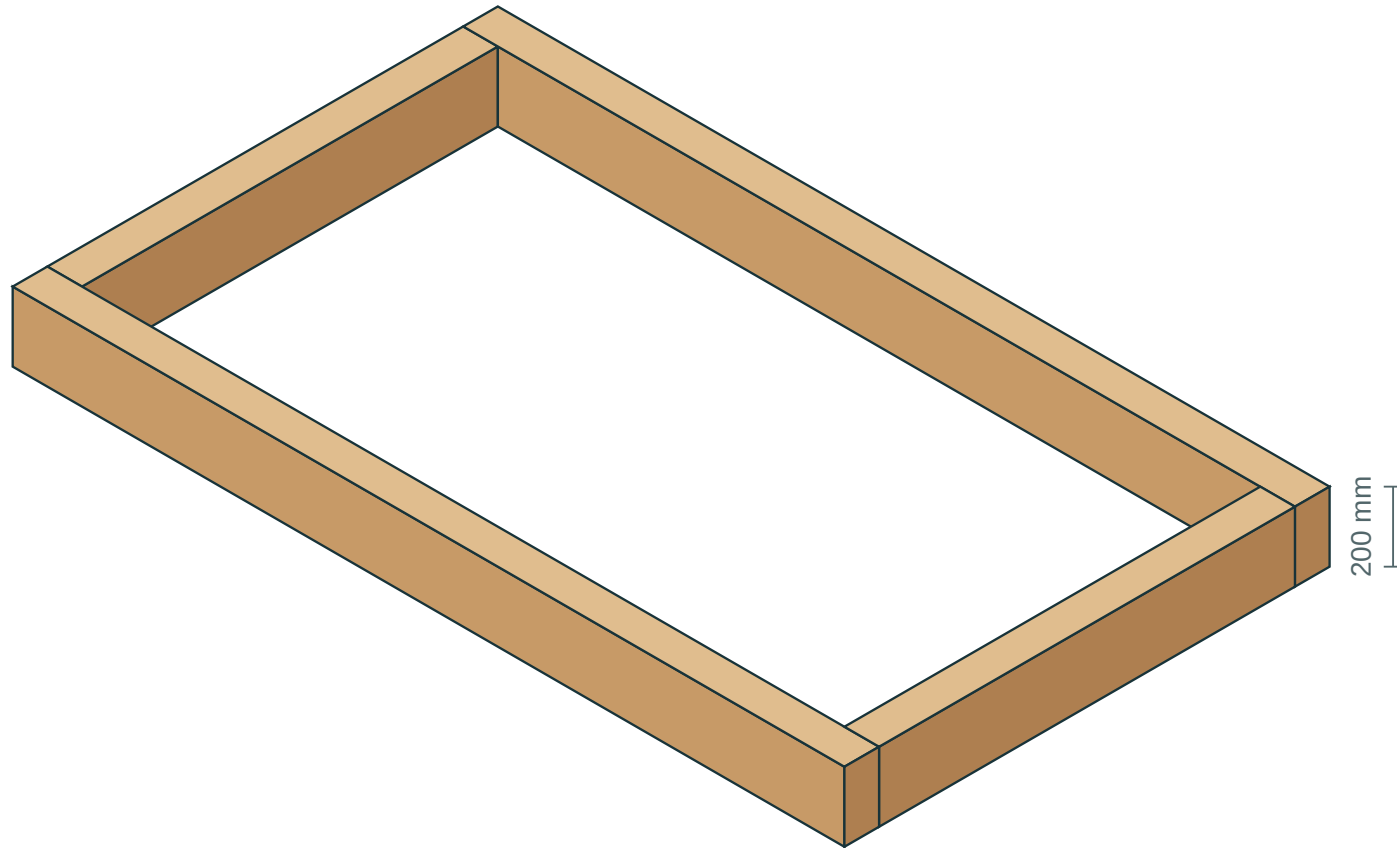


**Outside: 2400 x 1400 x 200 mm | Clear opening: 2200 x 1200 mm**

Geometric fill: 396 litres at 50 mm below the top. No settlement allowance.



## offer-bed-01 / course 1 / plan view

DRAFT\_MARK\_OUT\_ONLY | All dimensions mm | Origin O = outside S/W corner | NOT a 1:1 template

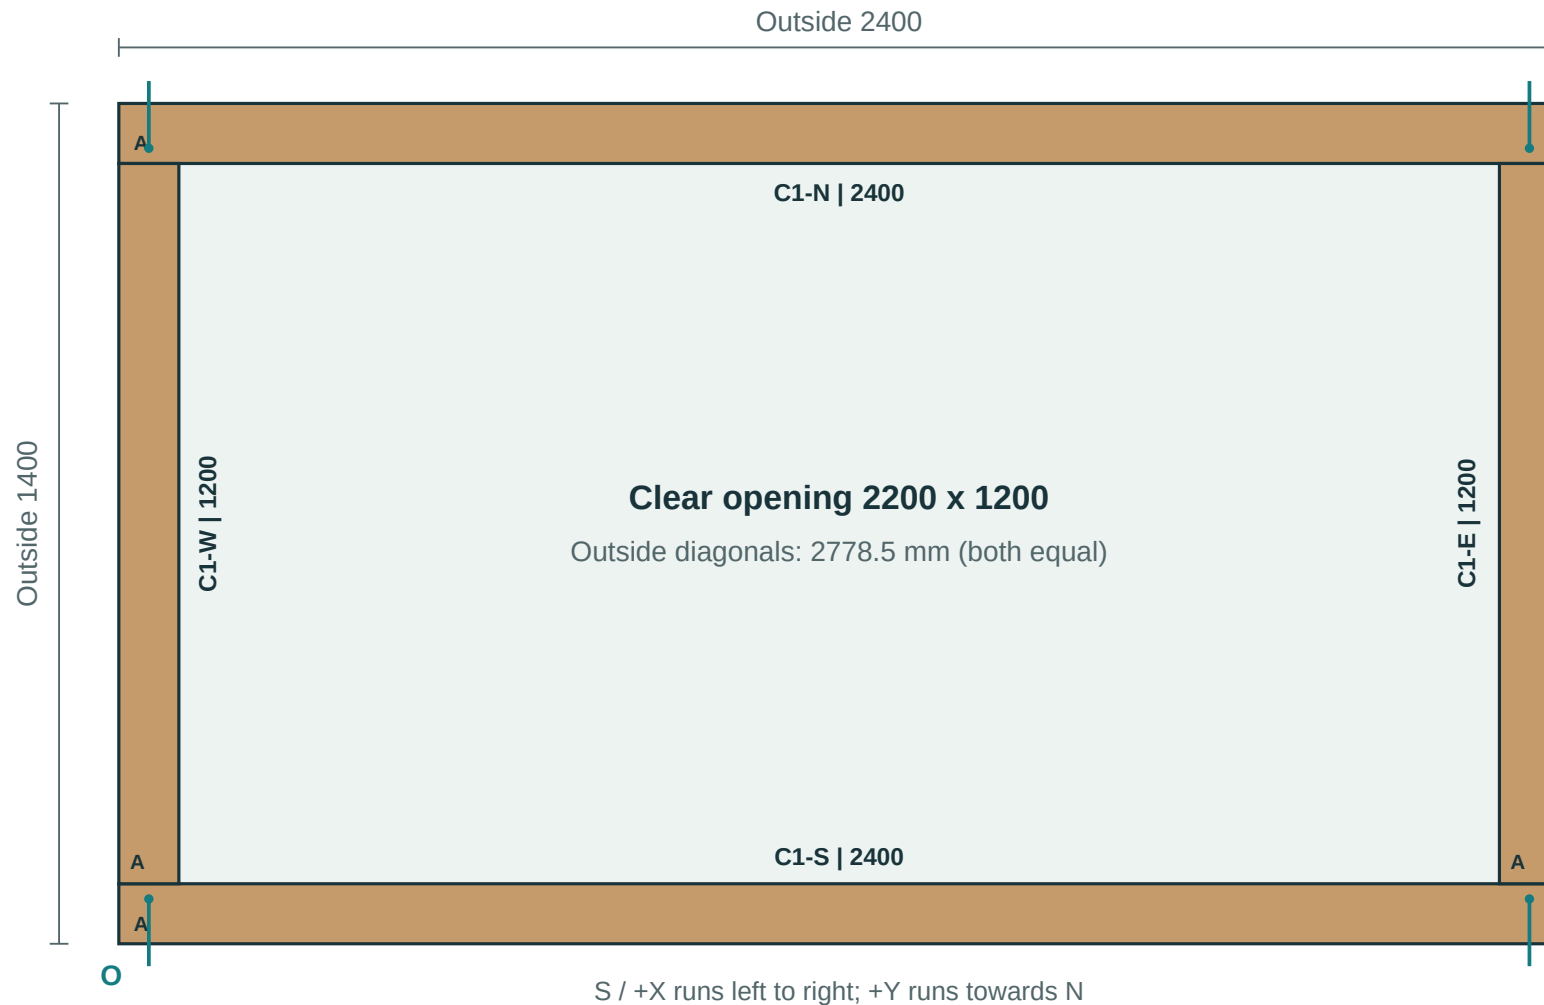

Circles = top fixing entries. Arrows = two corner screws at different heights.

Piece sheets give the entry face, datum, coordinates and hardware. A is each piece's lower-X / lower-Y end.

# Stock allocation / cutting diagram

Measure every kerf band from ORIGINAL stock datum A. Finished pieces are exact; this drawing is NOT to scale for tracing.

**B001 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm**



Waste kerf bands from original A (mm): none - use the sound full length

**B002 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm**



Waste kerf bands from original A (mm): none - use the sound full length

**B003 | wickes-256948 | 1800 mm | 1 saw cuts | offcut 597 mm**



Waste kerf bands from original A (mm): 1200..1203

**B004 | wickes-256948 | 1800 mm | 1 saw cuts | offcut 597 mm**



Waste kerf bands from original A (mm): 1200..1203

Exact saw band positions and blade-centre coordinates are in cuts.csv. Kerf widths here may be exaggerated for visibility.

# offer-bed-01-C1-S / 2400 x 100 x 200 mm

DRAFT\_MARK\_OUT\_ONLY | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side S



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

| FIXING | FACE  | U FROM A | V | W UP | SCREW   | PILOT                       |
|--------|-------|----------|---|------|---------|-----------------------------|
| F01    | outer | 50       | 0 | 50   | 7 x 150 | UNCONFIRMED - mark out only |
| F02    | outer | 50       | 0 | 150  | 7 x 150 | UNCONFIRMED - mark out only |
| F03    | outer | 2350     | 0 | 50   | 7 x 150 | UNCONFIRMED - mark out only |
| F04    | outer | 2350     | 0 | 150  | 7 x 150 | UNCONFIRMED - mark out only |

# offer-bed-01-C1-N / 2400 x 100 x 200 mm

DRAFT\_MARK\_OUT\_ONLY | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side N




Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

| FIXING | FACE  | U FROM A | V   | W UP | SCREW   | PILOT                       |
|--------|-------|----------|-----|------|---------|-----------------------------|
| F01    | outer | 50       | 100 | 50   | 7 x 150 | UNCONFIRMED - mark out only |
| F02    | outer | 50       | 100 | 150  | 7 x 150 | UNCONFIRMED - mark out only |
| F03    | outer | 2350     | 100 | 50   | 7 x 150 | UNCONFIRMED - mark out only |
| F04    | outer | 2350     | 100 | 150  | 7 x 150 | UNCONFIRMED - mark out only |

offer-bed-01-C1-W / 1200 x 100 x 200 mm

DRAFT\_MARK\_OUT\_ONLY | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge

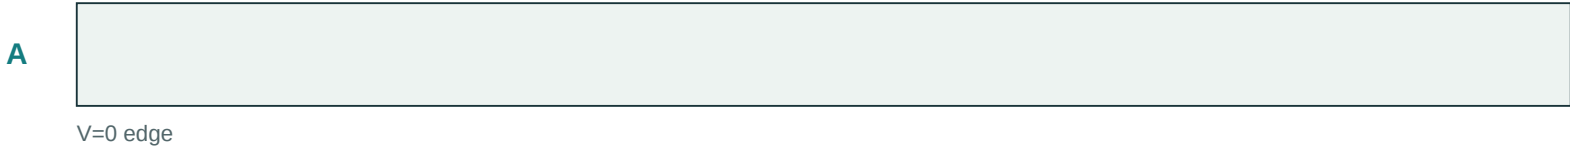

OUTER FACE / U from A; W measured UP from bottom / side W



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.


| FIXING | FACE | U FROM A | V | W UP | SCREW | PILOT |
|--------|------|----------|---|------|-------|-------|
|--------|------|----------|---|------|-------|-------|

No screw entry points on this piece; it receives screws from adjoining members.

offer-bed-01-C1-E / 1200 x 100 x 200 mm

DRAFT\_MARK\_OUT\_ONLY | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge

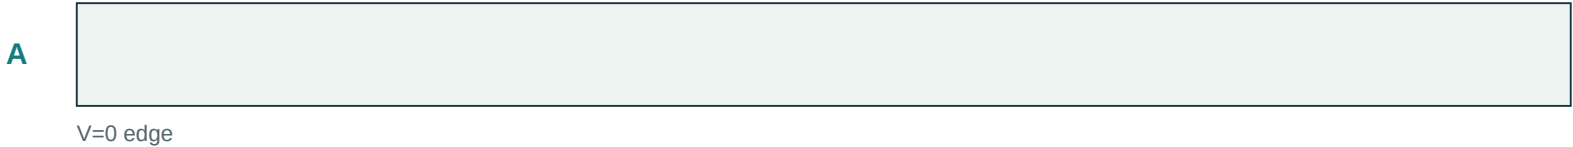

OUTER FACE / U from A; W measured UP from bottom / side E



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

| FIXING | FACE | U FROM A | V | W UP | SCREW | PILOT |
|--------|------|----------|---|------|-------|-------|
|--------|------|----------|---|------|-------|-------|

No screw entry points on this piece; it receives screws from adjoining members.