

SLEEPERPLAN / WORKSHOP PACK

DRAFT_MARK_OUT_ONLY

First rectangular bed draft - 2400 x 1400

As of 2026-09-06 | Generator 0.4.0 | Plan 8f84cf99d0a42b9

Worked example unless your own surveyed job file has been used. A reviewed status records human checks; it is not structural certification.

BED	OUTSIDE L x W x H (mm)	COURSES	CLEAR OPENING (mm)	FILL (litres)
first-bed-01	2400 x 1400 x 600	3	2200 x 1200	1452.0

12 labelled pieces | 56 fixing entries | 12 purchased sleepers | 6 saw cuts

Timber + screw purchases: GBP 354.60

Known subtotal: GBP 354.60. NOT a completed job cost. Unpriced items remain.

Cutting: exact. All explored cutting patterns and inventory states solved.

Use BUILD.md for the assembly sequence. Use cuts.csv for saw bands and fixings.csv for full coordinates. Treat all pilot entries marked UNCONFIRMED as mark-out only, not a drilling instruction.

REVIEW GATES & ASSUMPTIONS

TYPE	CHECK
BLOCKER	Measure actual stock length/section, usable ends and saw kerf; update inputs before cutting.
BLOCKER	Review foundations, drainage, soil loads, support/bracing and any buried services on site.
BLOCKER	Review screw suitability, end-grain connections, penetration and spacing with a competent builder / supplier.
BLOCKER	Record reviewer, reviewed_on and review notes before releasing a workshop pack.
BLOCKER	Release readiness requires review.approved_physical_design_hash to equal the current physical design hash, so an edited job cannot inherit an old review. Run a draft plan, then copy the printed physical design hash into the job's review block after a genuine physical review.
NOTE	Screw heads, bearing seats, recesses and driver access are NOT modelled. On stacked courses a protruding head can stop the next course sitting flat even though all shafts pass the collision check, and recessing a seat deepens the hole and moves the tip. Confirm the head-seat detail with the actual hardware before stacking any course.
BLOCKER	wickes-287686: fixing centres are mark-out only. Confirm pilot diameter/depth or a manufacturer-supported no-pilot instruction; none is inferred.
BLOCKER	wickes-287688: fixing centres are mark-out only. Confirm pilot diameter/depth or a manufacturer-supported no-pilot instruction; none is inferred.
NOTE	first-bed-01: same corner arrangement on every course. Deliberately not interlocked; review the connection.
NOTE	first-bed-01: centre reach is approximately 700 mm from 2 accessible side(s); confirm with the user. 650 mm is a planning prompt, not an accessibility standard.
NOTE	Zero end trim assumes square, sound, usable factory/cut ends. Nominal 2400 mm is not a measurement.
NOTE	Known subtotal only; unpriced: consumables, fill, liner, preservative, site_preparation, supports, transport, labour
NOTE	Catalogue prices are dated snapshots. The configured store and collection stock are NOT confirmed.
NOTE	Geometry and straight screw-path clearance are checked; timber strength, screw capacity, long-term movement and soil pressure are NOT calculated. Supports/bracing, liner detailing and foundations are site-specific and not drawn by v1.

PURCHASES & COSTS

Catalogue retail purchase prices as displayed; VAT is not recalculated. Explicit extras and labour are added on the same user-supplied basis. Not a tax invoice.

ITEM	NEED / BUY	LINE TOTAL
wickes-256948 - 1800 mm sleeper / matching section	6 needed / 6 sleeper	GBP 144.00
wickes-276785 - 2400 mm sleeper / matching section	6 needed / 6 sleeper	GBP 168.00
wickes-287686 - 7 x 150 mm screws; 25/pack	24 needed / 2 pack	GBP 18.00
wickes-287688 - 7 x 250 mm screws; 25/pack	32 needed / 2 pack	GBP 24.60
consumables - Drill bits, blades, PPE and other consumables	1 needed / 1 job	UNPRICED
fill - Soil / compost / mulch supply	1 needed / 1 job	UNPRICED
liner - Liner / protection and attachment (or explicitly not required)	1 needed / 1 job	UNPRICED
preservative - Compatible cut-end preservative	1 needed / 1 job	UNPRICED
site_preparation - Ground preparation / bedding / disposal	1 needed / 1 job	UNPRICED
supports - Site-specific stakes, bracing, brackets and their fixings	1 needed / 1 job	UNPRICED
transport - Collection / delivery / travel	1 needed / 1 job	UNPRICED
labour - Labour (nearest penny, half-up)	UNCONFIRMED	UNPRICED

Known subtotal: GBP 354.60

Parts and fixings board / visual checklist (page 1 of 2)

DRAFT_MARK_OUT_ONLY | Verify quantity and ID before each step

TOOLS / HANDLING

[2x] two people for long/heavy members

[CHECK] confirm A/TOP/OUTER labels

[STOP] resolve blockers before drilling

Hammer + driver/bit set + square/level

FASTENERS

wickes-287686

Pilot UNCONFIRMED

7 x 150 mm
Need 24 entries

wickes-287688

Pilot UNCONFIRMED

7 x 250 mm
Need 32 entries

TIMBER PARTS

PIECE ID	BED	COURSE	SIDE	LENGTH	SECTION	BOARD	A DATUM
first-bed-01-C1-E	first-bed-01	1	E	1200	100x200	B007	Lower X/Y end
first-bed-01-C1-N	first-bed-01	1	N	2400	100x200	B001	Lower X/Y end
first-bed-01-C1-S	first-bed-01	1	S	2400	100x200	B002	Lower X/Y end
first-bed-01-C1-W	first-bed-01	1	W	1200	100x200	B008	Lower X/Y end
first-bed-01-C2-E	first-bed-01	2	E	1200	100x200	B009	Lower X/Y end
first-bed-01-C2-N	first-bed-01	2	N	2400	100x200	B003	Lower X/Y end
first-bed-01-C2-S	first-bed-01	2	S	2400	100x200	B004	Lower X/Y end
first-bed-01-C2-W	first-bed-01	2	W	1200	100x200	B010	Lower X/Y end
first-bed-01-C3-E	first-bed-01	3	E	1200	100x200	B011	Lower X/Y end
first-bed-01-C3-N	first-bed-01	3	N	2400	100x200	B005	Lower X/Y end

Use this board as the pre-flight checklist. Exact cut order and coordinates remain in cuts.csv and fixings.csv.

Parts and fixings board / visual checklist (page 2 of 2)

DRAFT_MARK_OUT_ONLY | Verify quantity and ID before each step

TIMBER PARTS (continued)

PIECE ID	BED	COURSE	SIDE	LENGTH	SECTION	BOARD	A DATUM
first-bed-01-C3-S	first-bed-01	3	S	2400	100x200	B006	Lower X/Y end
first-bed-01-C3-W	first-bed-01	3	W	1200	100x200	B012	Lower X/Y end

Use this board as the pre-flight checklist. Exact cut order and coordinates remain in cuts.csv and fixings.csv.

Workshop process / script-driven sequence

DRAFT_MARK_OUT_ONLY | Follow these steps with BUILD.md, cuts.csv and fixings.csv

1. Receive and inspect timber stock; reject twisted/split members.

2. Label each stock board Bxx and mark datum A before any cut.

3. Execute cuts.csv in sequence; kerf_start..kerf_end is waste band.

4. Re-label produced parts and preserve A / TOP / OUTER orientation.

5. Drill and drive by piece fixing sheets (exact U, V, W coordinates).

6. Assemble course-by-course using per-course plan sheets.

CORRECT

Check entry face, direction arrow and quantity before each action.

INCORRECT

Never drill or drive when pilot_mode is UNCONFIRMED.

All positions, lengths and hardware IDs are generated from plan geometry; do not freehand from screenshots.

Stock arrival, board IDs and datum A (page 1 of 2)

Label before cutting; keep original A datum for every stock item

B001 | wickes-276785 | gross 2400 mm



B002 | wickes-276785 | gross 2400 mm



B003 | wickes-276785 | gross 2400 mm



B004 | wickes-276785 | gross 2400 mm



B005 | wickes-276785 | gross 2400 mm



B006 | wickes-276785 | gross 2400 mm



B007 | wickes-256948 | gross 1800 mm



B008 | wickes-256948 | gross 1800 mm



Use these B IDs in parts.csv and cuts.csv. Datum A in cut coordinates always refers to original stock, not the finished part.

Stock arrival, board IDs and datum A (page 2 of 2)

Label before cutting; keep original A datum for every stock item

B009 | wickes-256948 | gross 1800 mm



B010 | wickes-256948 | gross 1800 mm



B011 | wickes-256948 | gross 1800 mm



B012 | wickes-256948 | gross 1800 mm




Use these B IDs in parts.csv and cuts.csv. Datum A in cut coordinates always refers to original stock, not the finished part.

Fastener card / wickes-287686

Use with piece fixing sheets for exact side and coordinates

Cross-section view (not to scale in thickness)

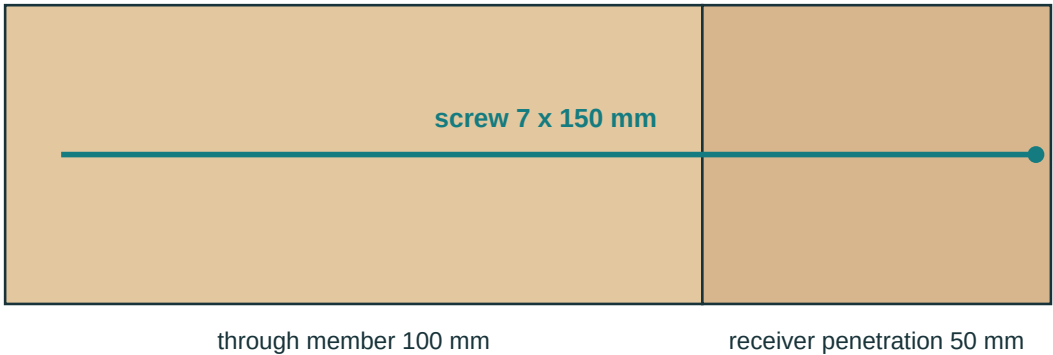

Used in fixing kinds: corner
Entry faces in this plan: outer
Entries scheduled: 24

150 mm nominal


Pilot: UNCONFIRMED - stop and confirm drill bit diameter/depth before drilling.

Exact side, point and direction are in piece fixing sheets and fixings.csv (U from A, V, W, and direction XYZ).

Fastener card / wickes-287688

Use with piece fixing sheets for exact side and coordinates

Cross-section view (not to scale in thickness)

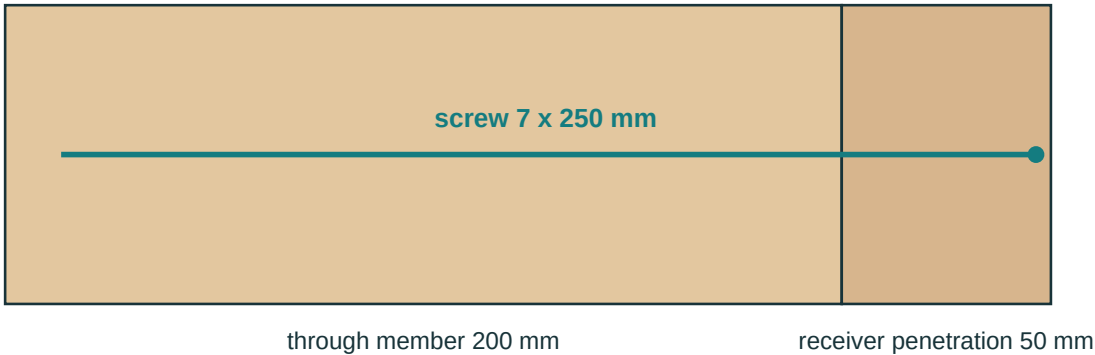


Used in fixing kinds: stack
Entry faces in this plan: top
Entries scheduled: 32

Pilot: UNCONFIRMED - stop and confirm drill bit diameter/depth before drilling.

Exact side, point and direction are in piece fixing sheets and fixings.csv (U from A, V, W, and direction XYZ).

first-bed-01 / 3 courses / assembled view

DRAFT_MARK_OUT_ONLY | Same timber section throughout | Schematic colour, not a finish sample

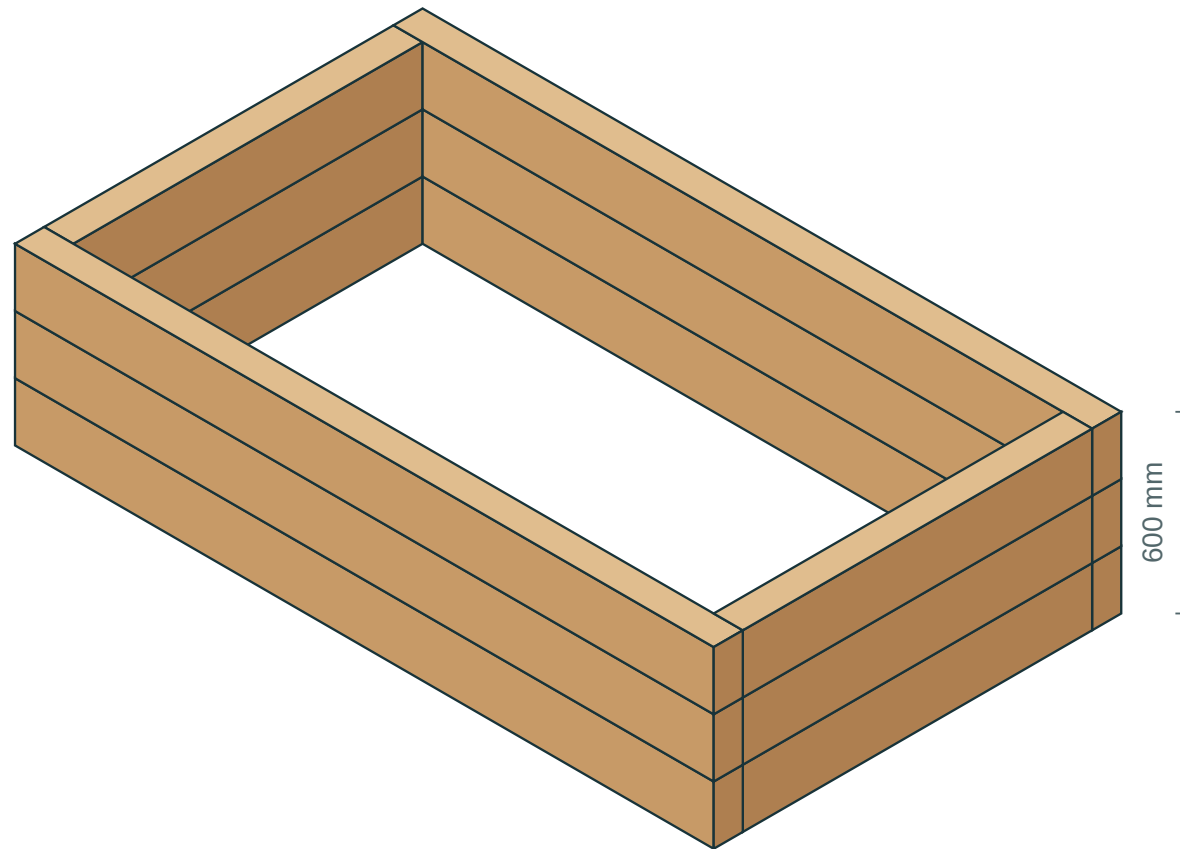


Outside: 2400 x 1400 x 600 mm | Clear opening: 2200 x 1200 mm

Geometric fill: 1452 litres at 50 mm below the top. No settlement allowance.

first-bed-01 / course 1 / plan view

DRAFT_MARK_OUT_ONLY | All dimensions mm | Origin O = outside S/W corner | NOT a 1:1 template

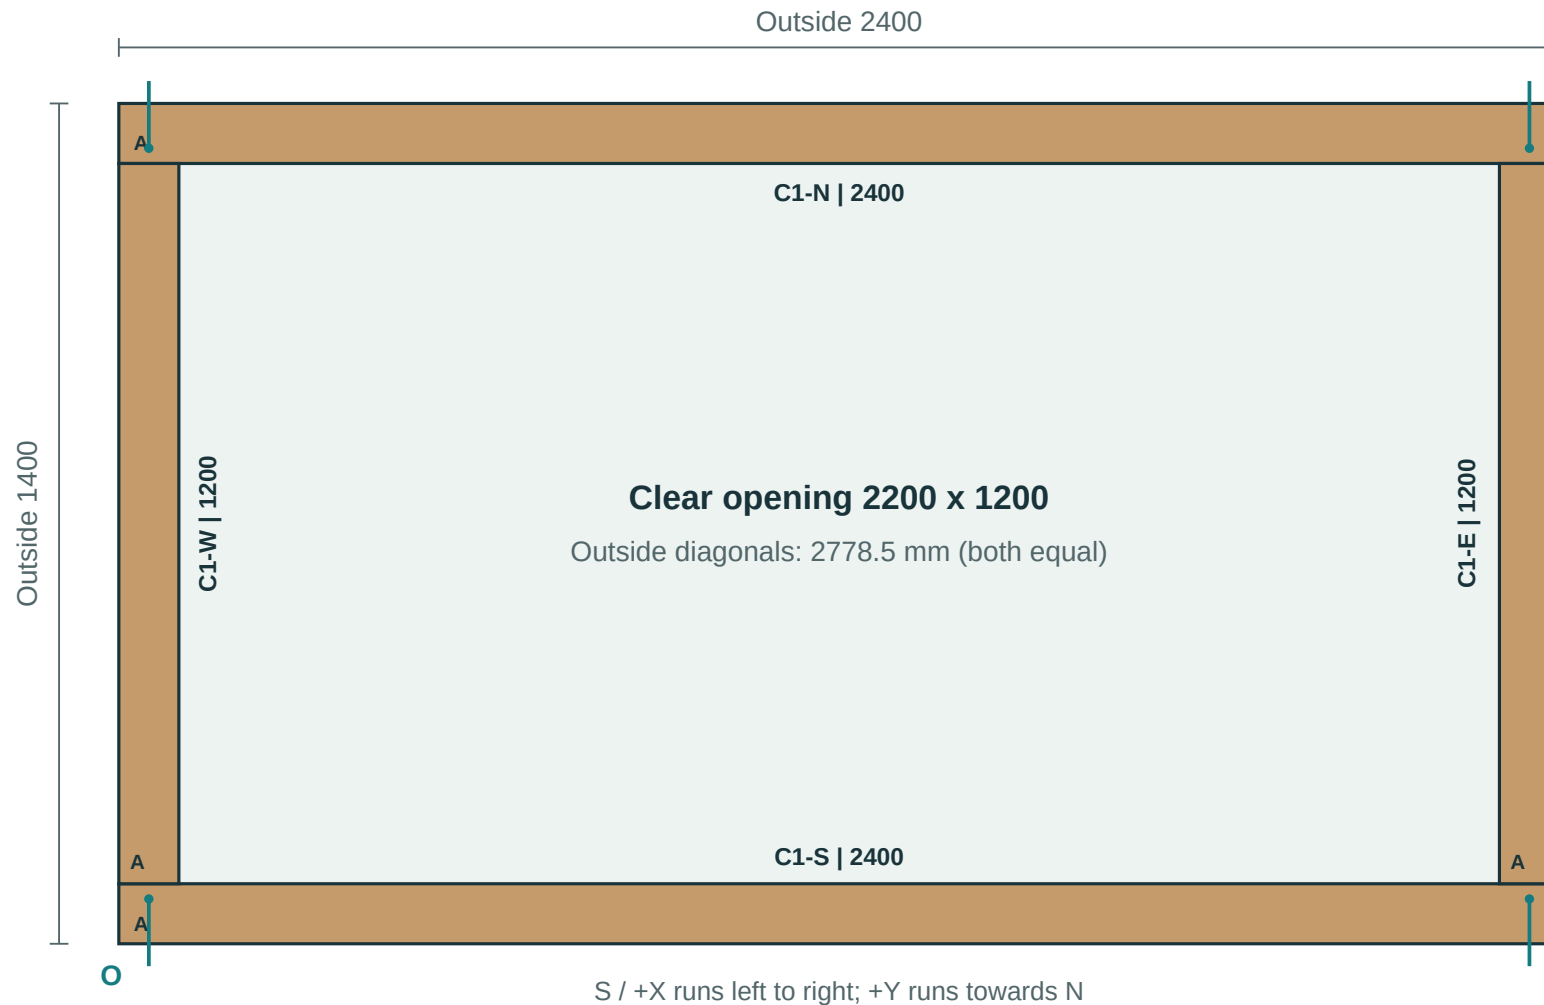


Circles = top fixing entries. Arrows = two corner screws at different heights.

Piece sheets give the entry face, datum, coordinates and hardware. A is each piece's lower-X / lower-Y end.

first-bed-01 / course 2 / plan view

DRAFT_MARK_OUT_ONLY | All dimensions mm | Origin O = outside S/W corner | NOT a 1:1 template

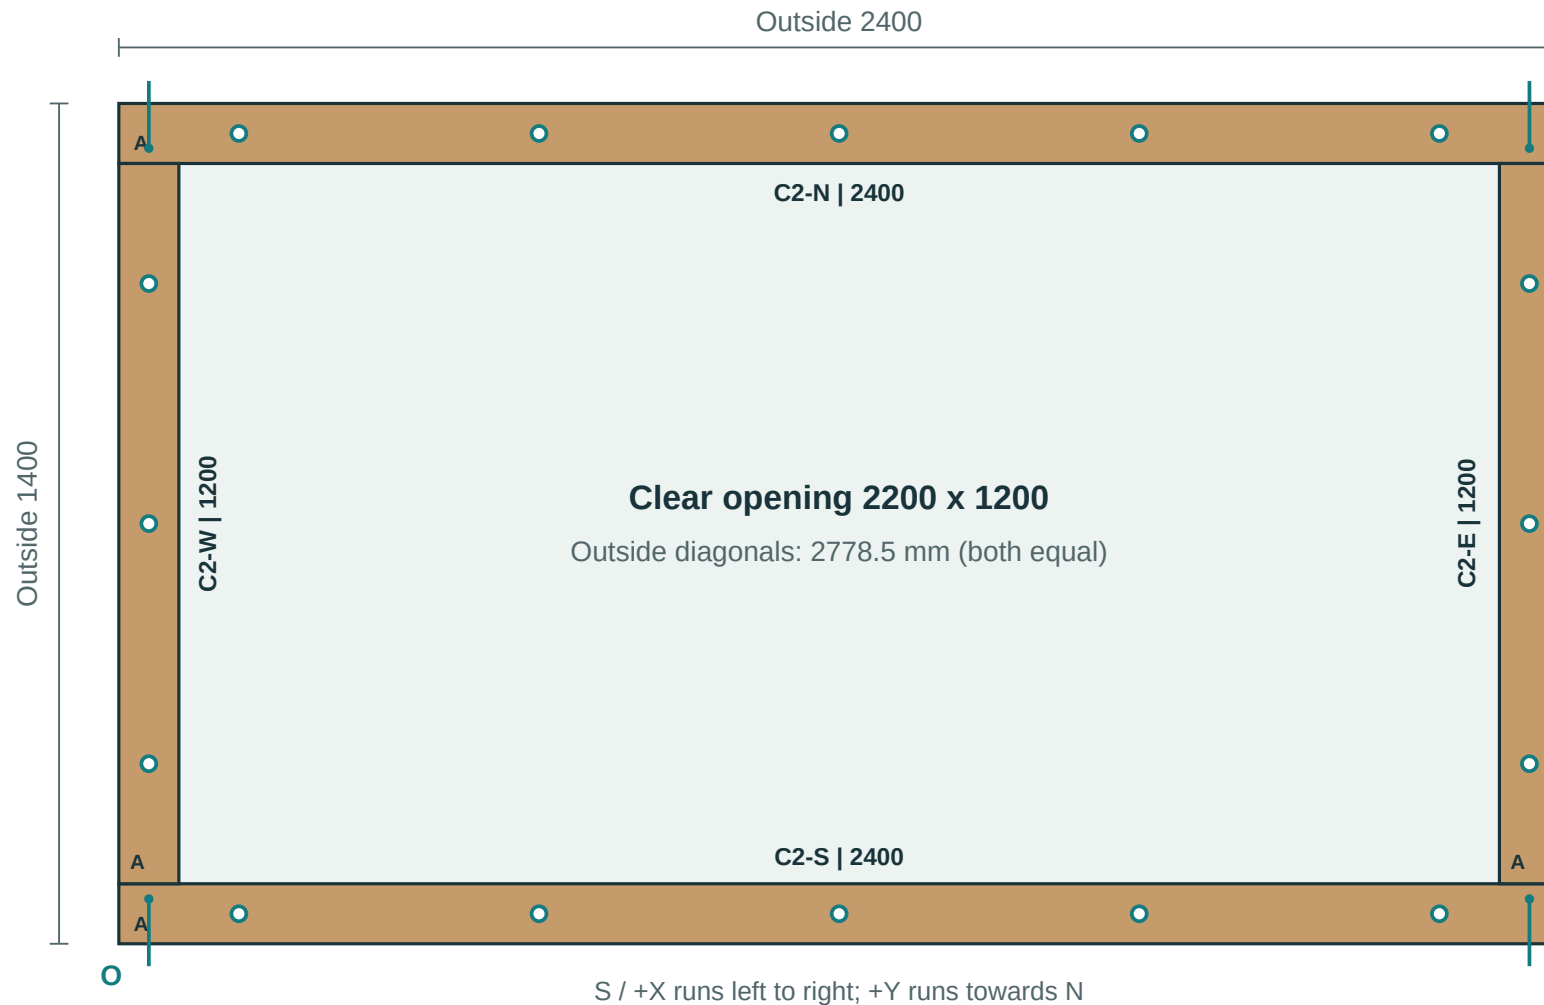


Circles = top fixing entries. Arrows = two corner screws at different heights.

Piece sheets give the entry face, datum, coordinates and hardware. A is each piece's lower-X / lower-Y end.

first-bed-01 / course 3 / plan view

DRAFT_MARK_OUT_ONLY | All dimensions mm | Origin O = outside S/W corner | NOT a 1:1 template

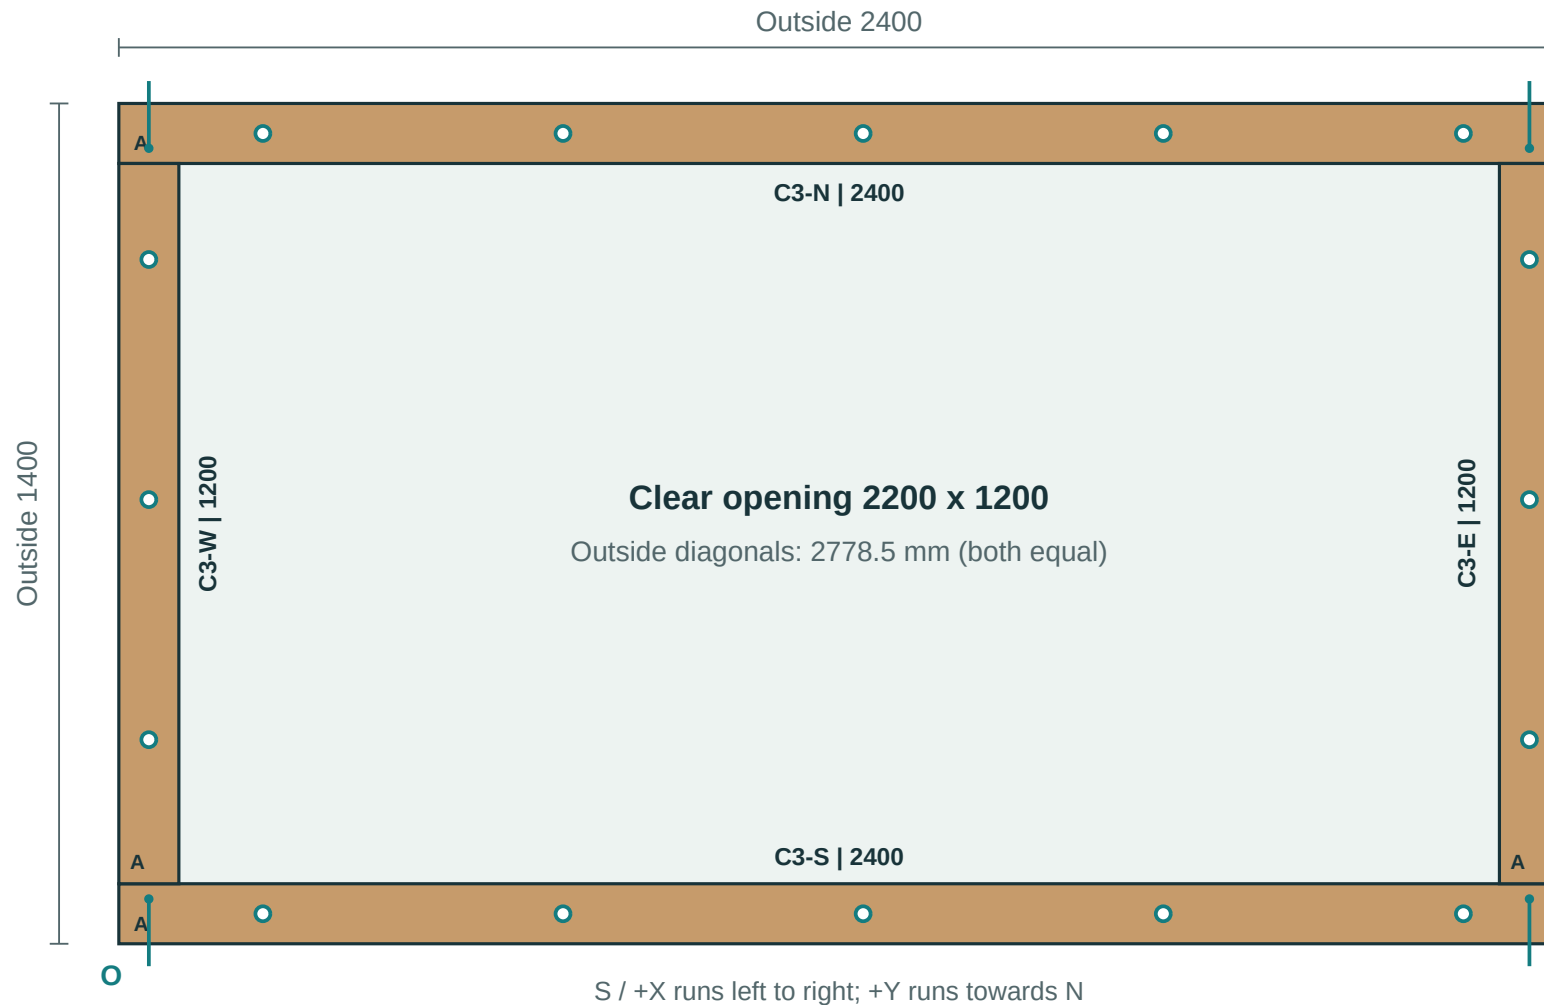

Circles = top fixing entries. Arrows = two corner screws at different heights.

Piece sheets give the entry face, datum, coordinates and hardware. A is each piece's lower-X / lower-Y end.

Stock allocation / cutting diagram

Measure every kerf band from ORIGINAL stock datum A. Finished pieces are exact; this drawing is NOT to scale for tracing.

B001 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm




Waste kerf bands from original A (mm): none - use the sound full length

B002 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm




Waste kerf bands from original A (mm): none - use the sound full length

B003 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm




Waste kerf bands from original A (mm): none - use the sound full length

B004 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm



Waste kerf bands from original A (mm): none - use the sound full length

B005 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm



Waste kerf bands from original A (mm): none - use the sound full length

Exact saw band positions and blade-centre coordinates are in cuts.csv. Kerf widths here may be exaggerated for visibility.

Stock allocation / cutting diagram

Measure every kerf band from ORIGINAL stock datum A. Finished pieces are exact; this drawing is NOT to scale for tracing.

B006 | wickes-276785 | 2400 mm | 0 saw cuts | offcut 0 mm



Waste kerf bands from original A (mm): none - use the sound full length

B007 | wickes-256948 | 1800 mm | 1 saw cuts | offcut 597 mm



Waste kerf bands from original A (mm): 1200..1203

B008 | wickes-256948 | 1800 mm | 1 saw cuts | offcut 597 mm



Waste kerf bands from original A (mm): 1200..1203

B009 | wickes-256948 | 1800 mm | 1 saw cuts | offcut 597 mm



Waste kerf bands from original A (mm): 1200..1203

B010 | wickes-256948 | 1800 mm | 1 saw cuts | offcut 597 mm



Waste kerf bands from original A (mm): 1200..1203

Exact saw band positions and blade-centre coordinates are in cuts.csv. Kerf widths here may be exaggerated for visibility.

Stock allocation / cutting diagram

Measure every kerf band from ORIGINAL stock datum A. Finished pieces are exact; this drawing is NOT to scale for tracing.

B011 | wickes-256948 | 1800 mm | 1 saw cuts | offcut 597 mm



Waste kerf bands from original A (mm): 1200..1203

B012 | wickes-256948 | 1800 mm | 1 saw cuts | offcut 597 mm



Waste kerf bands from original A (mm): 1200..1203

Exact saw band positions and blade-centre coordinates are in cuts.csv. Kerf widths here may be exaggerated for visibility.

first-bed-01-C1-S / 2400 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side S



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	0	50	7 x 150	UNCONFIRMED - mark out only
F02	outer	50	0	150	7 x 150	UNCONFIRMED - mark out only
F03	outer	2350	0	50	7 x 150	UNCONFIRMED - mark out only
F04	outer	2350	0	150	7 x 150	UNCONFIRMED - mark out only

first-bed-01-C1-N / 2400 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side N




Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	100	50	7 x 150	UNCONFIRMED - mark out only
F02	outer	50	100	150	7 x 150	UNCONFIRMED - mark out only
F03	outer	2350	100	50	7 x 150	UNCONFIRMED - mark out only
F04	outer	2350	100	150	7 x 150	UNCONFIRMED - mark out only

first-bed-01-C1-W / 1200 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge

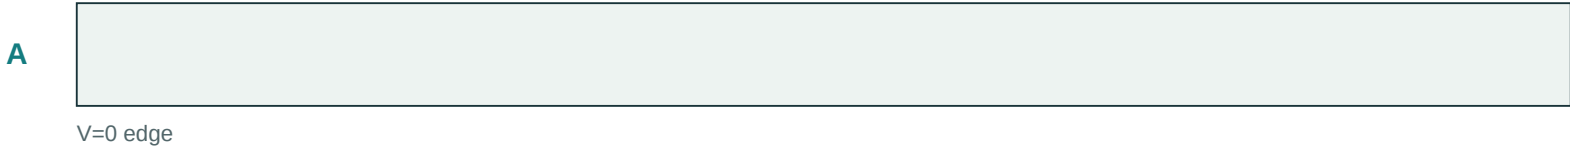

OUTER FACE / U from A; W measured UP from bottom / side W



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.


FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
--------	------	----------	---	------	-------	-------

No screw entry points on this piece; it receives screws from adjoining members.


first-bed-01-C1-E / 1200 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge

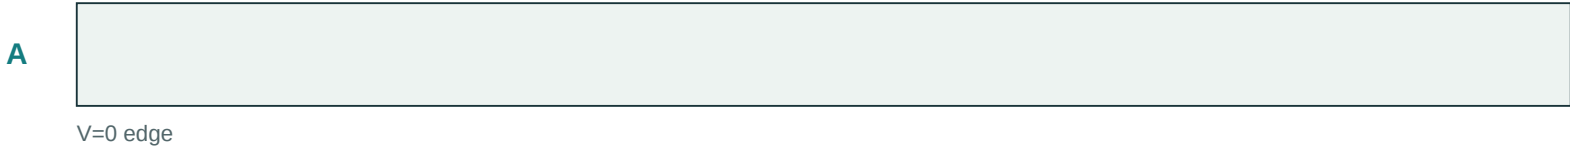

OUTER FACE / U from A; W measured UP from bottom / side E

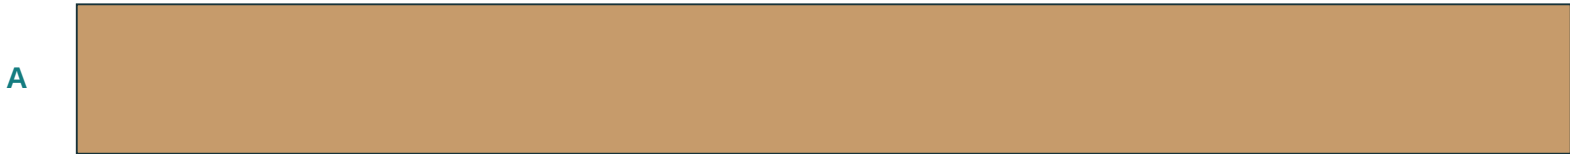

Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
--------	------	----------	---	------	-------	-------

No screw entry points on this piece; it receives screws from adjoining members.

first-bed-01-C2-S / 2400 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side S



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	0	50	7 x 150	UNCONFIRMED - mark out only
F02	outer	50	0	150	7 x 150	UNCONFIRMED - mark out only
F03	outer	2350	0	50	7 x 150	UNCONFIRMED - mark out only
F04	outer	2350	0	150	7 x 150	UNCONFIRMED - mark out only
F05	top	200	50	200	7 x 250	UNCONFIRMED - mark out only
F06	top	700	50	200	7 x 250	UNCONFIRMED - mark out only
F07	top	1200	50	200	7 x 250	UNCONFIRMED - mark out only
F08	top	1700	50	200	7 x 250	UNCONFIRMED - mark out only
F09	top	2200	50	200	7 x 250	UNCONFIRMED - mark out only

first-bed-01-C2-N / 2400 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side N



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	100	50	7 x 150	UNCONFIRMED - mark out only
F02	outer	50	100	150	7 x 150	UNCONFIRMED - mark out only
F03	outer	2350	100	50	7 x 150	UNCONFIRMED - mark out only
F04	outer	2350	100	150	7 x 150	UNCONFIRMED - mark out only
F05	top	200	50	200	7 x 250	UNCONFIRMED - mark out only
F06	top	700	50	200	7 x 250	UNCONFIRMED - mark out only
F07	top	1200	50	200	7 x 250	UNCONFIRMED - mark out only
F08	top	1700	50	200	7 x 250	UNCONFIRMED - mark out only
F09	top	2200	50	200	7 x 250	UNCONFIRMED - mark out only

first-bed-01-C2-W / 1200 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side W



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	top	200	50	200	7 x 250	UNCONFIRMED - mark out only
F02	top	600	50	200	7 x 250	UNCONFIRMED - mark out only
F03	top	1000	50	200	7 x 250	UNCONFIRMED - mark out only

first-bed-01-C2-E / 1200 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side E



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	top	200	50	200	7 x 250	UNCONFIRMED - mark out only
F02	top	600	50	200	7 x 250	UNCONFIRMED - mark out only
F03	top	1000	50	200	7 x 250	UNCONFIRMED - mark out only

first-bed-01-C3-S / 2400 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



V=0 edge

OUTER FACE / U from A; W measured UP from bottom / side S



corner x1



stack x1



vertical


Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	0	50	7 x 150	UNCONFIRMED - mark out only
F02	outer	50	0	150	7 x 150	UNCONFIRMED - mark out only
F03	outer	2350	0	50	7 x 150	UNCONFIRMED - mark out only
F04	outer	2350	0	150	7 x 150	UNCONFIRMED - mark out only
F05	top	240	50	200	7 x 250	UNCONFIRMED - mark out only
F06	top	740	50	200	7 x 250	UNCONFIRMED - mark out only
F07	top	1240	50	200	7 x 250	UNCONFIRMED - mark out only
F08	top	1740	50	200	7 x 250	UNCONFIRMED - mark out only
F09	top	2240	50	200	7 x 250	UNCONFIRMED - mark out only

first-bed-01-C3-N / 2400 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global X end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge

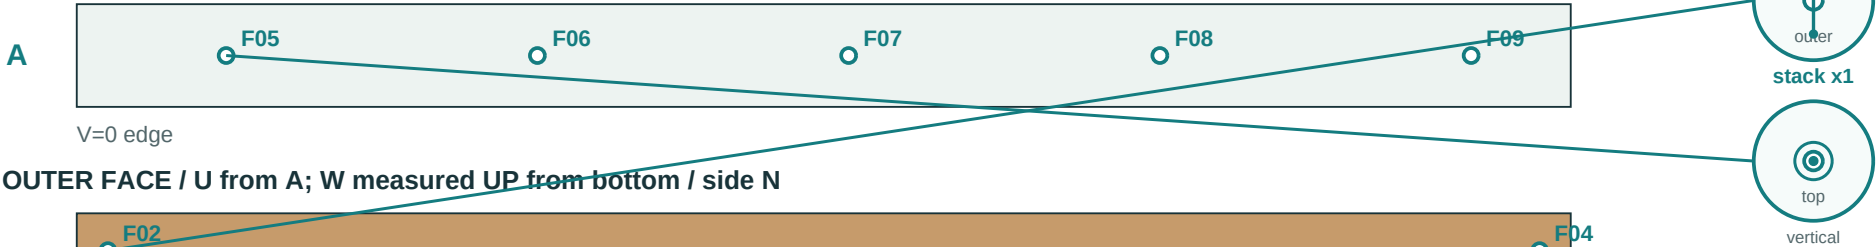

OUTER FACE / U from A; W measured UP from bottom / side N




Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	outer	50	100	50	7 x 150	UNCONFIRMED - mark out only
F02	outer	50	100	150	7 x 150	UNCONFIRMED - mark out only
F03	outer	2350	100	50	7 x 150	UNCONFIRMED - mark out only
F04	outer	2350	100	150	7 x 150	UNCONFIRMED - mark out only
F05	top	240	50	200	7 x 250	UNCONFIRMED - mark out only
F06	top	740	50	200	7 x 250	UNCONFIRMED - mark out only
F07	top	1240	50	200	7 x 250	UNCONFIRMED - mark out only
F08	top	1740	50	200	7 x 250	UNCONFIRMED - mark out only
F09	top	2240	50	200	7 x 250	UNCONFIRMED - mark out only

first-bed-01-C3-W / 1200 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge

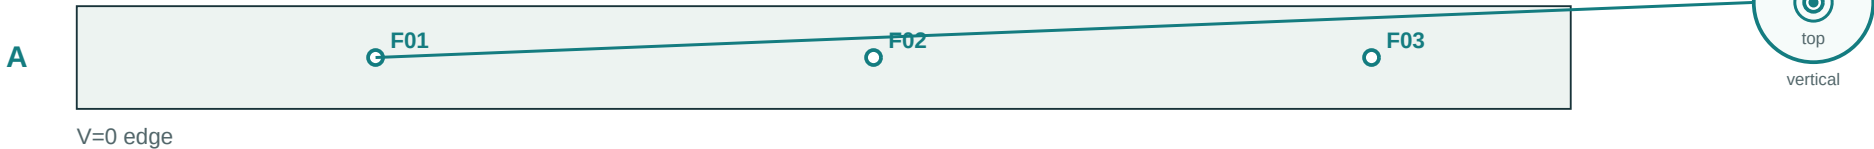

OUTER FACE / U from A; W measured UP from bottom / side W



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	top	240	50	200	7 x 250	UNCONFIRMED - mark out only
F02	top	640	50	200	7 x 250	UNCONFIRMED - mark out only
F03	top	1040	50	200	7 x 250	UNCONFIRMED - mark out only

first-bed-01-C3-E / 1200 x 100 x 200 mm

DRAFT_MARK_OUT_ONLY | Datum A = lower global Y end | Coordinates in mm, rounded to 0.1 for display

TOP FACE / U along length; V across width from its lower-coordinate edge



OUTER FACE / U from A; W measured UP from bottom / side E



Views intentionally stretch section depth for legibility. Use the coordinates below, not a ruler on this sheet.

FIXING	FACE	U FROM A	V	W UP	SCREW	PILOT
F01	top	240	50	200	7 x 250	UNCONFIRMED - mark out only
F02	top	640	50	200	7 x 250	UNCONFIRMED - mark out only
F03	top	1040	50	200	7 x 250	UNCONFIRMED - mark out only