

REFERENCE / CUT + PART REGISTER

Cut and label sheet.

Keep this beside the saw. Every dimension is from original stock datum A.

STOCK BOARD	STOCK LENGTH	RESULT
B001	2400	C1-N / full length
B002	2400	C1-S / full length
B003	2400	C2-N / full length
B004	2400	C2-S / full length
B005	2400	C3-N / full length
B006	2400	C3-S / full length
B007	1800	C1-E / cut 1200; offcut 597
B008	1800	C1-W / cut 1200; offcut 597
B009	1800	C2-E / cut 1200; offcut 597
B010	1800	C2-W / cut 1200; offcut 597
B011	1800	C3-E / cut 1200; offcut 597
B012	1800	C3-W / cut 1200; offcut 597


ALL SIX CROSSCUTS

Kerf_start = 1200. Kerf_end = 1203. Blade centre = 1201.5. Keep the datum side. This assumes 3 mm kerf and zero end trims.

REFERENCE / CORNER ENTRY CARD

Use on every long S/N member.

Outer-face mark-out only. Pilot/head-seat recipe remains TBC.

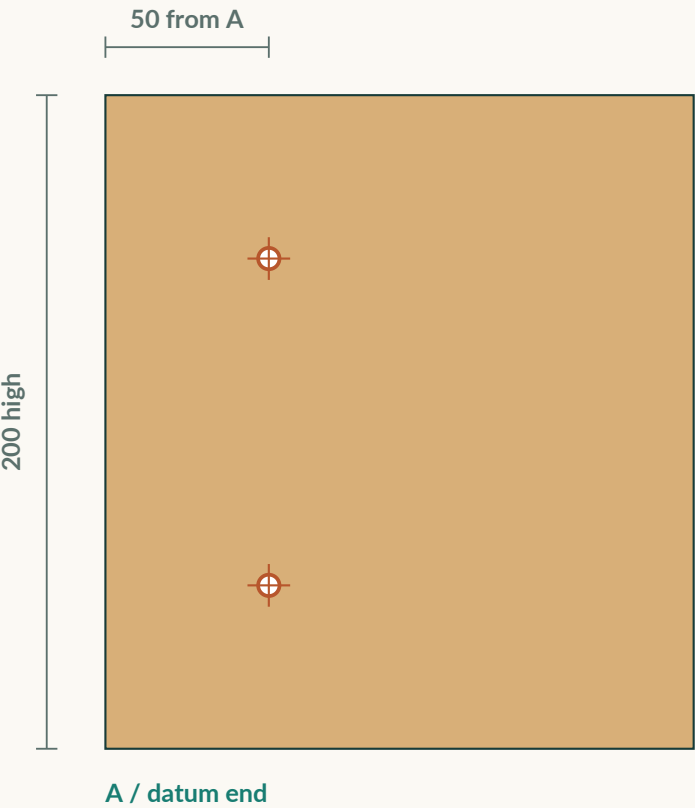

EACH LONG MEMBER

END	U FROM A	HEIGHT W	SCREW
A end	50	50 and 150	7 × 150
Far end	2350	50 and 150	7 × 150

QUANTITY

4 entries per long member × 6 long members = 24 fitted corner screws.

RECEIVER


At U = 50 the screw enters W. At U = 2350 it enters E. Clamp the receiving short-member end against the inner face of the long member.

REFERENCE / COURSE 2 STACK CARD


Mark sixteen top entries.

V = 50 across every 100 mm top face. W = 200, entry from TOP.

C2-S + C2-N

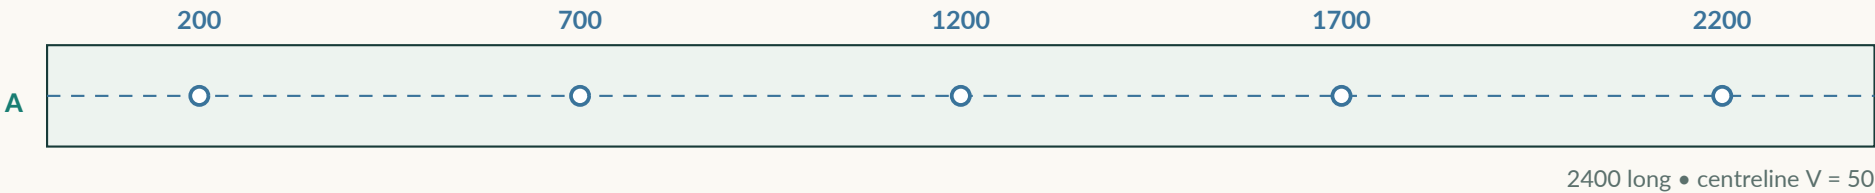

C2-W + C2-E

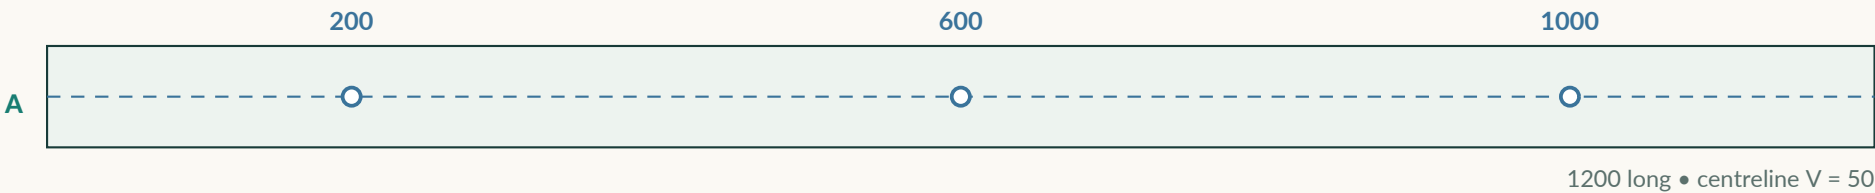

PIECES	ENTRIES EACH	TOTAL
S / N	5	10
W / E	3	6
COURSE 2 STACK		16

PLUS CORNERS


Course 2 also has the ordinary 8 corner entries on S/N. Total fixing entries belonging to course 2 = 24.

REFERENCE / COURSE 3 STACK CARD

Mark the staggered sixteen top entries.

V = 50; W = 200. Every U value is 40 mm beyond the corresponding course-2 value.

C3-S + C3-N

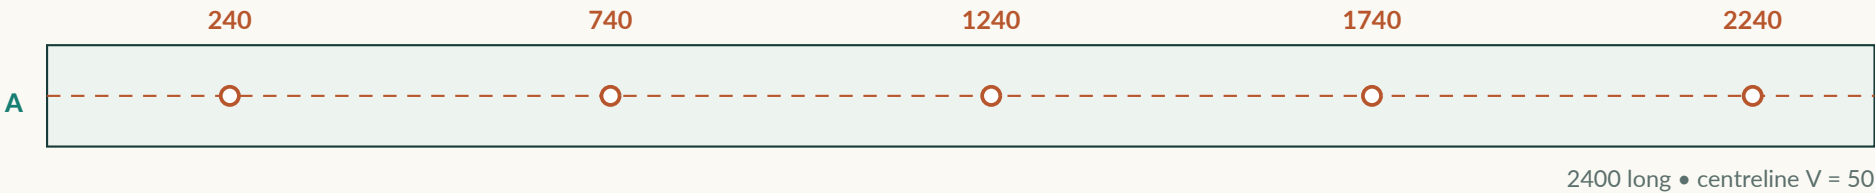

C3-W + C3-E



PIECES	ENTRIES EACH	TOTAL
S / N	5	10
W / E	3	6
COURSE 3 STACK		16

PLUS CORNERS

Course 3 also has 8 ordinary corner entries. Total fixing entries belonging to course 3 = 24.

REFERENCE / FASTENER PATHS

Nominal paths, not drill depths.

Use these only to identify the selected hardware and the modelled path through the timber.

CORNER


1 7 × 150



Outer-face entry. Nominal 100 through + 50 into receiving short-member end.

STACK

2 7 × 250

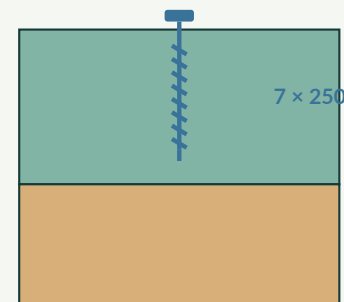

Top entry. Nominal 200 through + 50 into the course below.

DO NOT TURN THESE NUMBERS INTO A PILOT DEPTH

A screw path and a drilling operation are not the same thing. Pilot diameter/depth, any through-bore and any head-seat operation must be separately approved.

REFERENCE / PRE-DRILL HOLD POINT

Release checklist.

Tick these before replacing TBC with real drill instructions.

- ☐ Actual timber section and usable ends measured
- ☐ Actual saw kerf confirmed
- ☐ Exact screw product / lot on hand
- ☐ Corner joint recipe reviewed
- ☐ Stack joint recipe reviewed
- ☐ Pilot / clearance operation recorded
- ☐ Head seating / recess operation recorded
- ☐ Driver bit and tool access confirmed
- ☐ Course-2 head interference physically checked
- ☐ Support / drainage detail reviewed
- ☐ Controlled corner trial completed
- ☐ Controlled stacked-interface trial completed
- ☐ Job physical-design hash matches approval

UNTIL THEN

Use this pack for layout, dry-fit and cutting. Do not infer a drill bit or recess from screw diameter.