

LTspice Cursor Usage

Cursor placement on the simulated $V(\text{out})$ waveform.

What this demonstrates

The capture shows the waveform, a vertical cursor at approximately 4.020 ms, and the LTspice cursor readout with the corresponding voltage measurement.

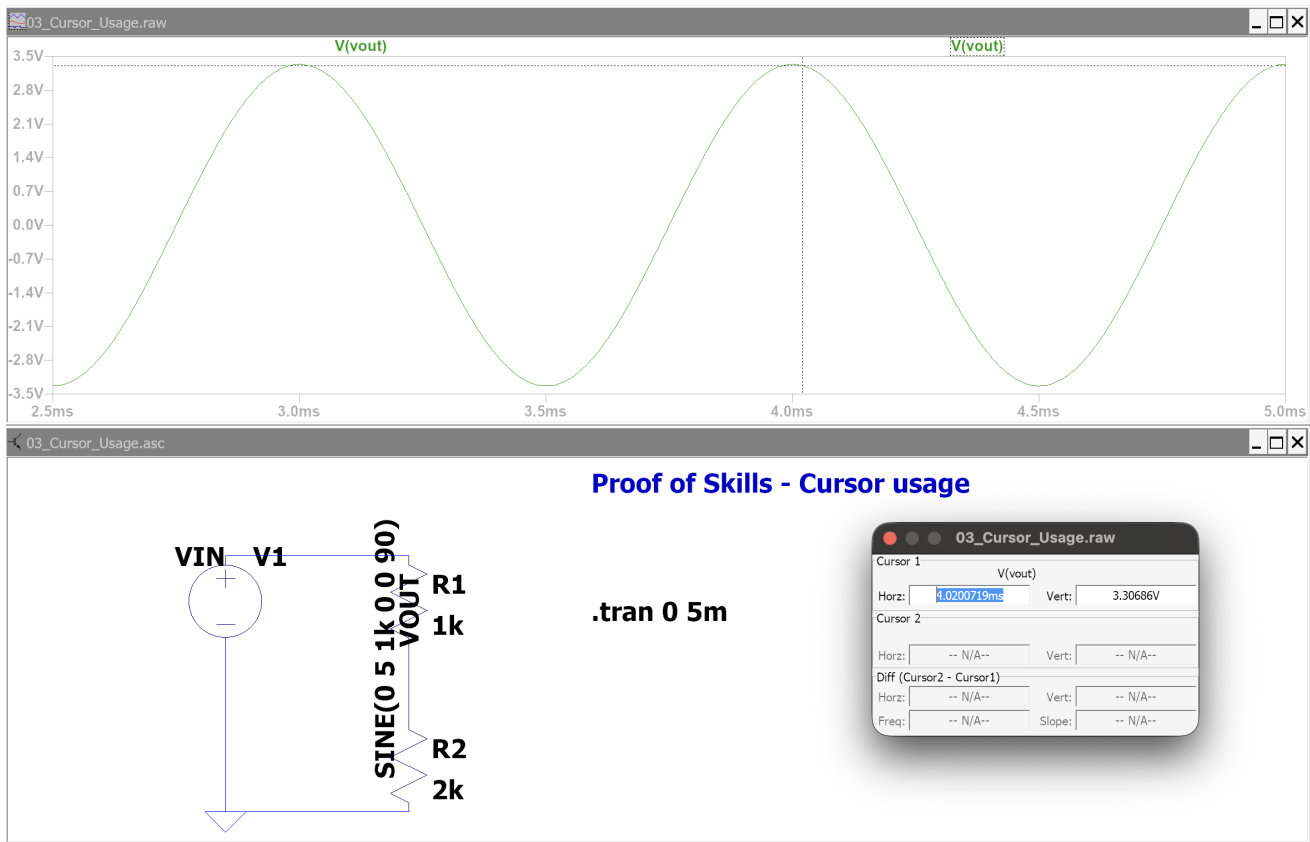


Figure 1. Cursor placement and LTspice readout on $V(\text{out})$.