## ANTI-STATIC BRUSH INSTALLATION

## You should have 1 Anti-Static Brush:




Required tools:
Phillips head screwdriver.

## Beveled edge will face the plastic guard.


## TO INSTALL:

1. Turn power to ticket machine off.Locate the ticket cutter assembly (fig 1).

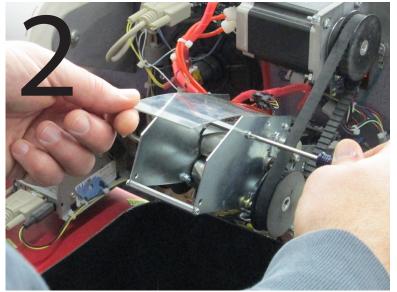

2. Remove top hexagonal spacer. Save 2 screws for Anti-Static Brush installation.



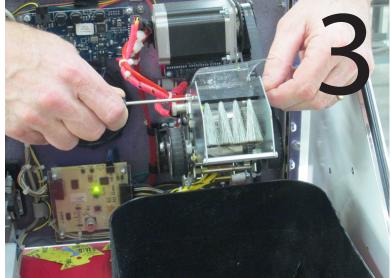


3. Using saved screws, install Anti-Static Brush in place of top hexagonal spacer. Please refer to 3a and 3b



3a. Use the pre-tapped holes to screw into the brush.



3b. Make sure brush is at a slight upward angle. Tickets should barely hit the brush.

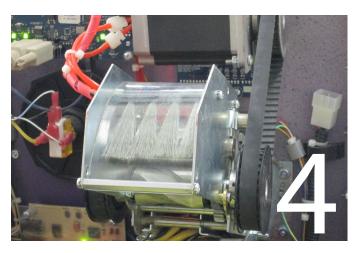

4. Replace plastic shield under front hexagonal spacer.

5. Turn power back on. Test to make sure tickets do not get caught on brush.

