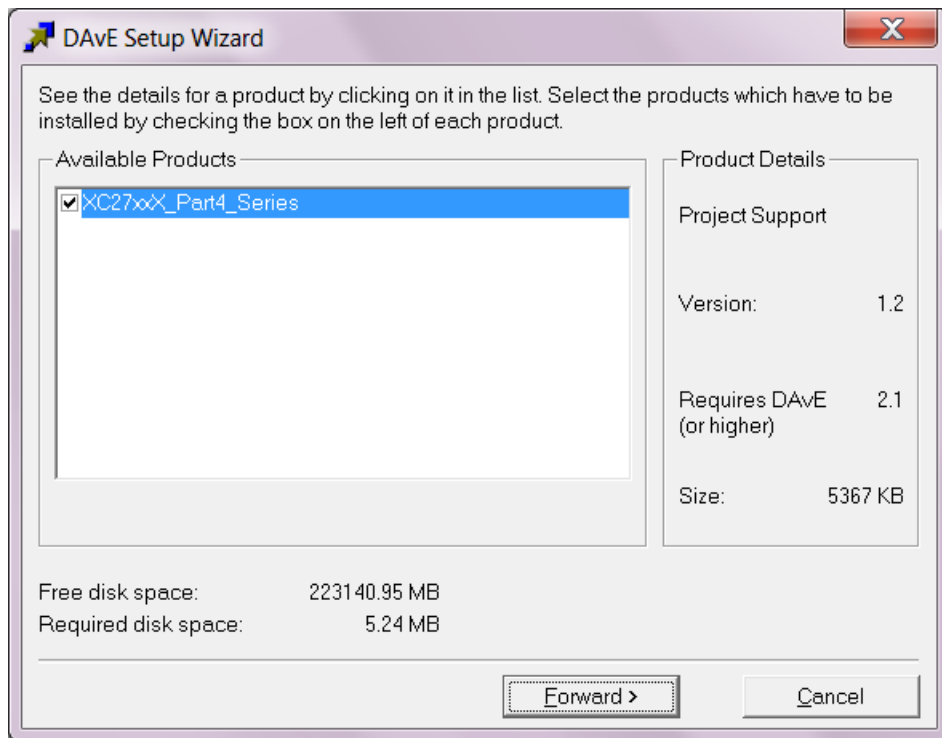## Installation Procedure for XC27xxX_Part4_Series Dip:

Prerequisite:
- DAvE should be installed.
- DAvE XC27xxX_Part4_Series Dip should be available in local drive
  {Dip File could be downloaded from Infineon Technologies Website or copied from
   XC27xxX_Part4_Series Starter Kit}

- Double Click "XC27xxX_Part4_Series" dip file

- DAvE Setup Wizard opens as shown below. Select the "XC27xxX_Part4_Series" Product &
  click "Forward"

- Click "Install" to Finish Installation.