



MAINTENANCE INSTRUCTION

DOING THE RIGHT THINGS RIGHT

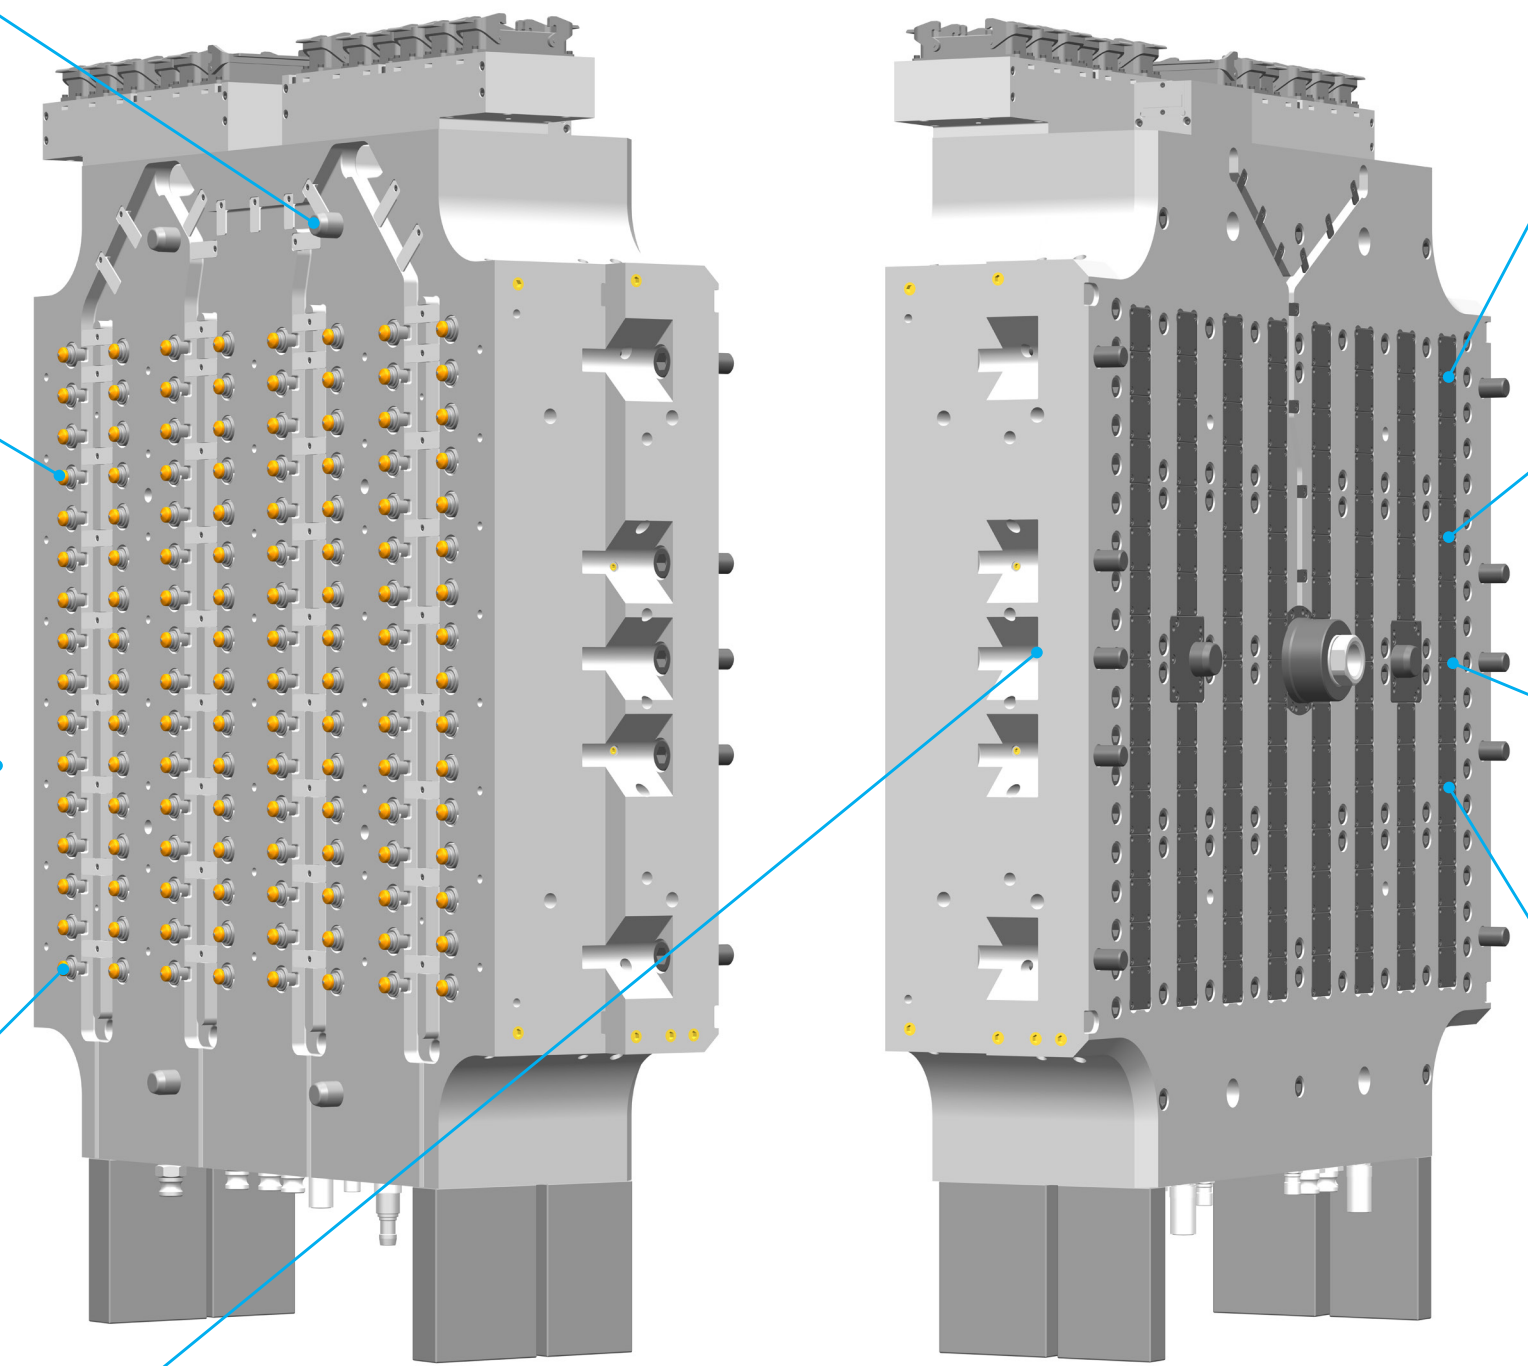

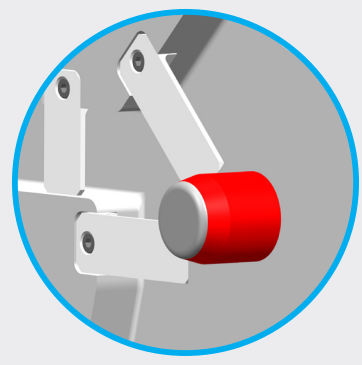


- guide pillars have to be cleaned and lubricated before assembling of the cavity plate
 - if required
- use food approved oil (NT2928)
 - before mounting of the cavity plate

1




- cleaning of the nozzle area
 - if required
- check for cracks on the nozzle tip, or any other visible damages
 - before mounting of the cavity plate

2

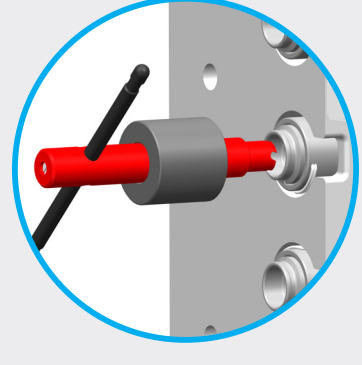


- use the nozzle tip extractor for disassembling
 - if required
- use the cleaning tool for the nozzle housing for cleaning of the thread
 - before mounting of the cavity plate

3

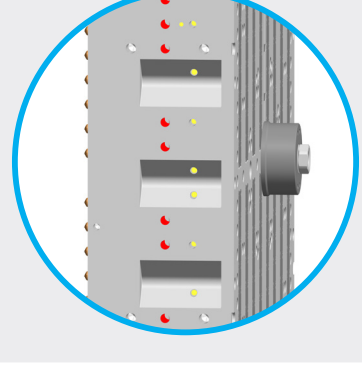


- vacuum out PET dust out of the holes
 - weekly maintenance
- use powerful industrial vacuum cleaner 2000W

4

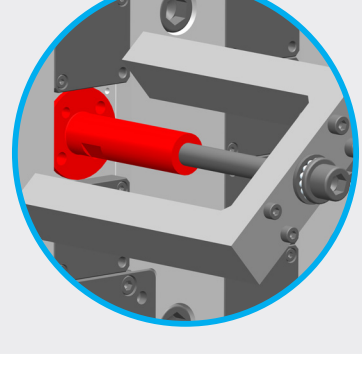


- pull needle to remove PET deposits
- use the extractor no.: PN149
 - after 5 million shots or before if required
 - (depends on resin type and/or additives such as colours or UV blockers)

5

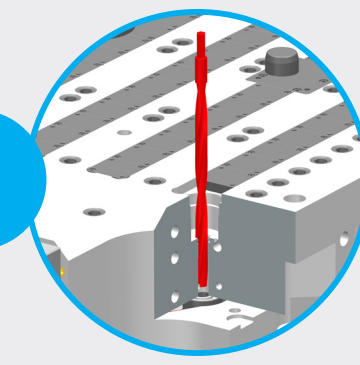


- carefully drill out PET deposits, then vacuum remaining particles
- use drill no.: PN 709-01/02
 - after 5 million shots or before if required

6

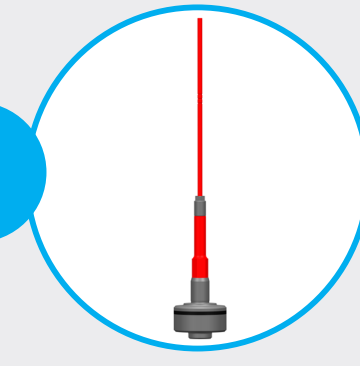


- clean the deposition at the needle and extension as well
 - after 5 million shots or before if required

7

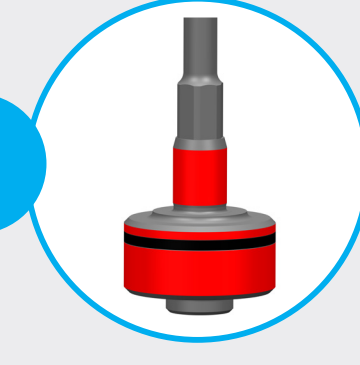

- clean piston, replace piston sealing and lubricate the piston slightly with food approved oil (NT2928) before assembly
- Use tool: OHV190-X
 - after 5 million shots or before if required

8

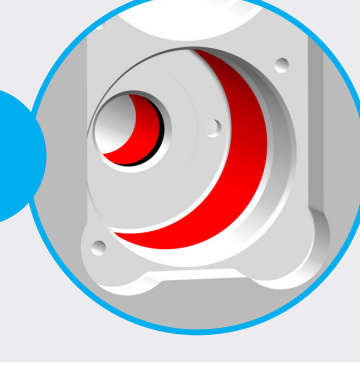

- clean sealing area
- replace and lubricate the garlock sealing slightly with food approved oil (NT2928) before assembly
 - after 5 million shots or before if required

9





service@otto-hofstetter.ch | +41 55 285 22 50

Otto Hofstetter AG | Zürcherstrasse 73 | 8730 Uznach | Switzerland | www.otto-hofstetter.swiss


MAINTENANCE INSTRUCTION

DOING THE RIGHT THINGS RIGHT

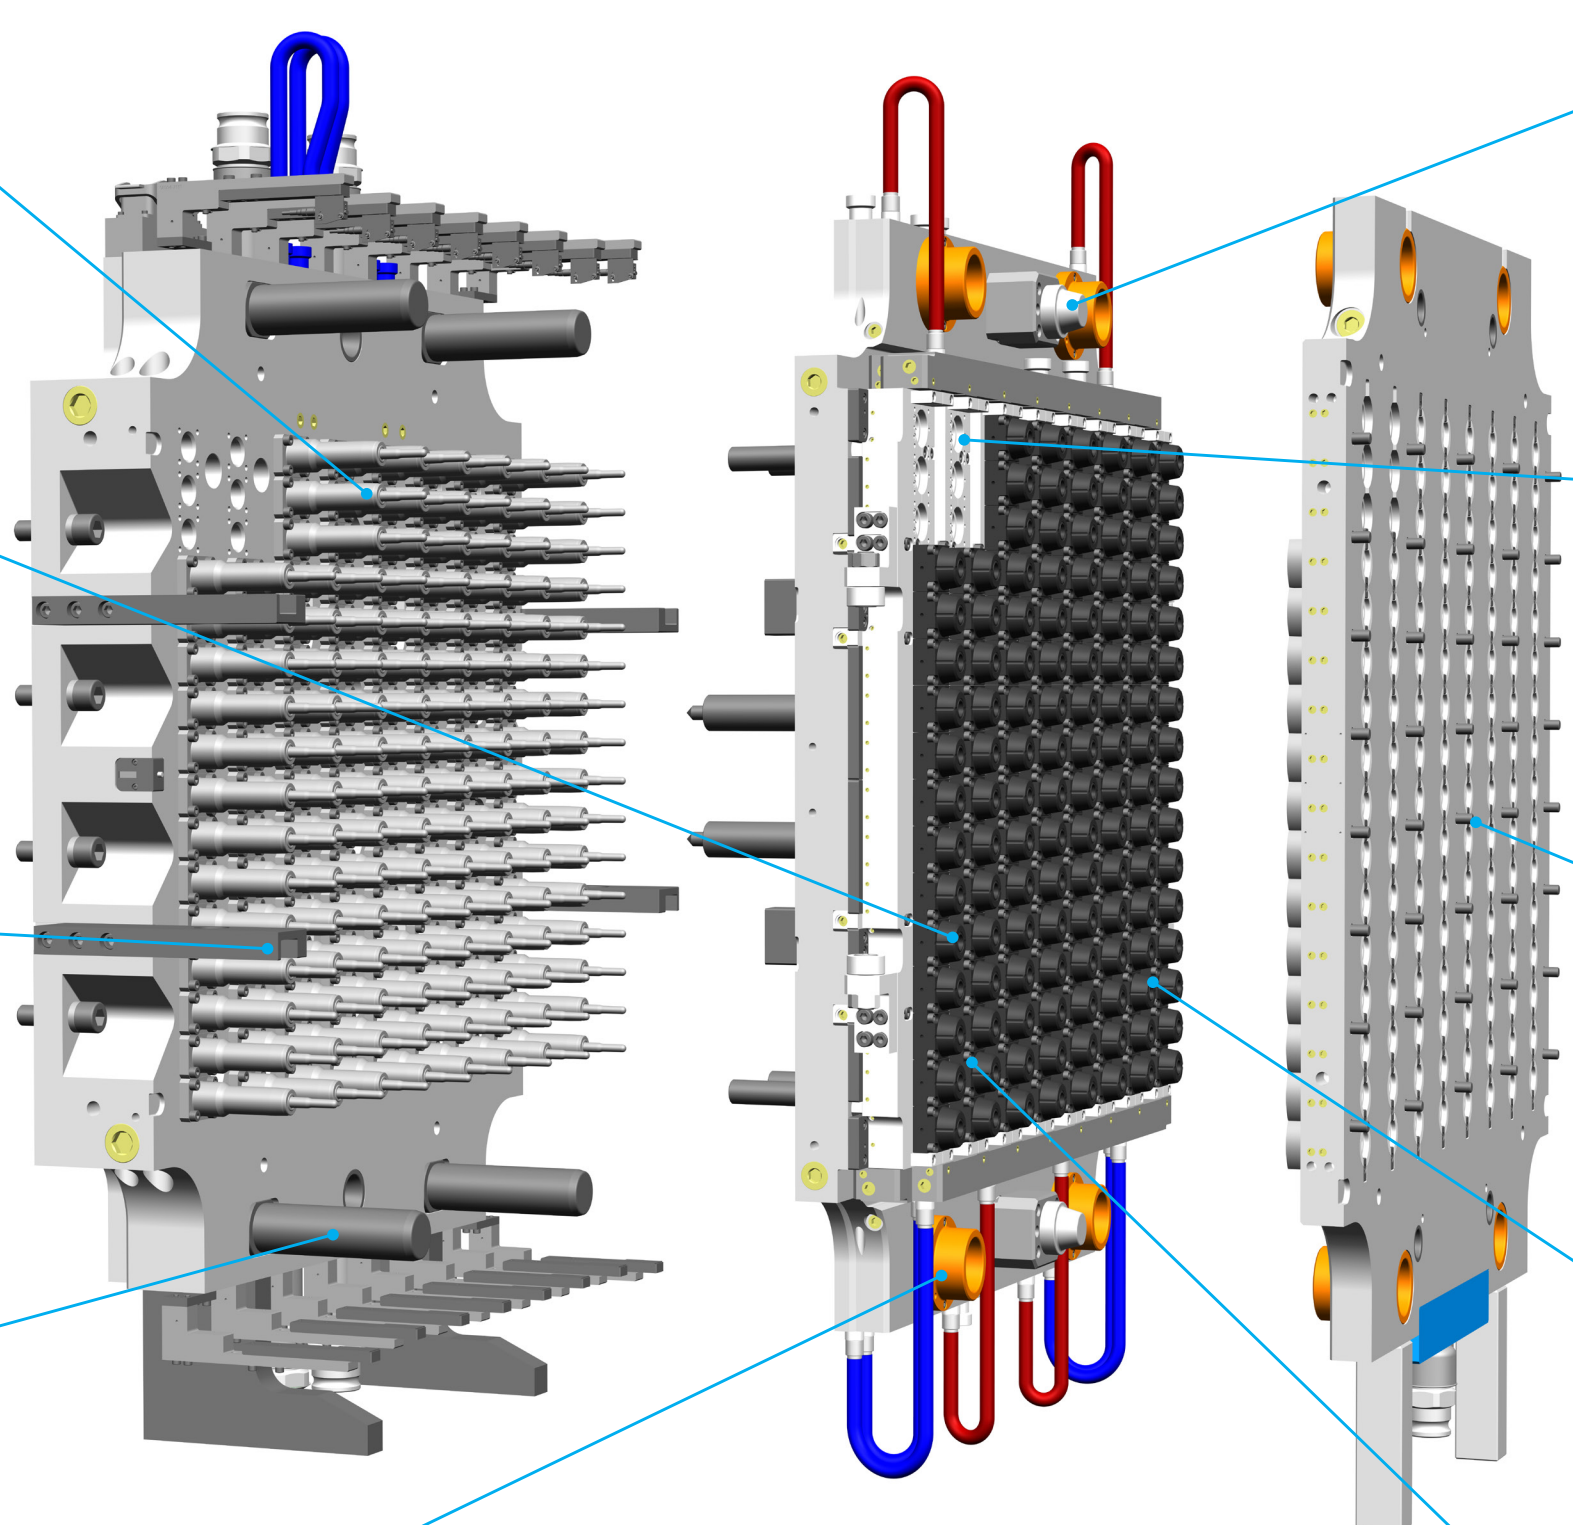


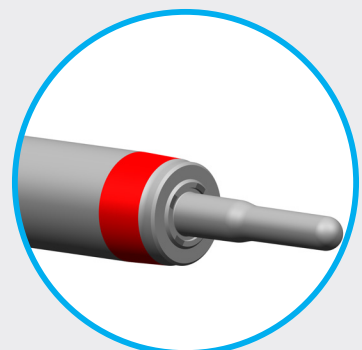


- cleaning of the core venting
- lubricate with food approved oil (NT2928)
 - weekly or as required (depends on resin type and/or additives such as colours or UV blockers)

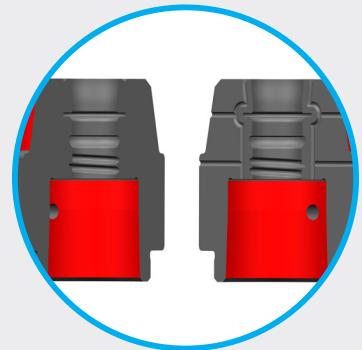


- cleaning of the venting channels
- lubricate with food approved oil (NT2928)
 - monthly or as required (depends on resin type and/or additives such as colours or UV blockers)

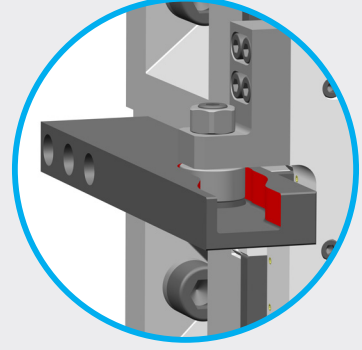


- check visually
- lubricate cam and roll with Motorex Grease AL-MP2
 - weekly or as required

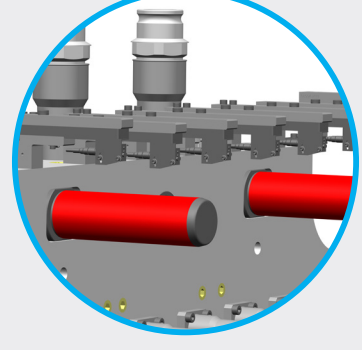


- clean and lubricate slightly
- use food approved oil (NT2928)
 - weekly or as required

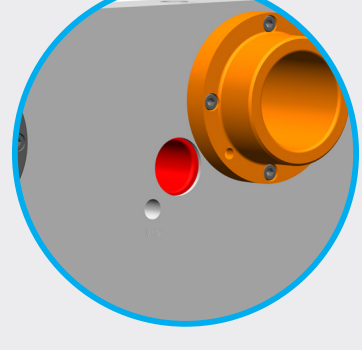


- clean and lubricate guide bushes on both stripper and cavity plate slightly
- use food approved oil (NT2928)
 - weekly or as required

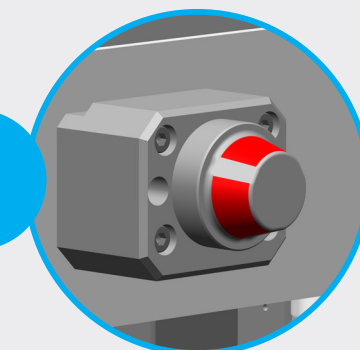


- clean and lubricate slightly
- use Motorex Grease AL-MP2
 - weekly or as required

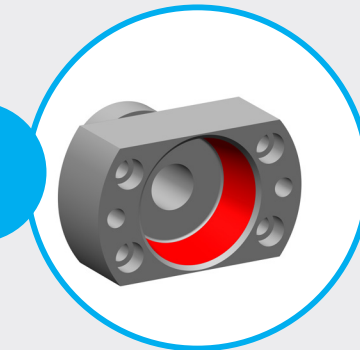


- clean and lubricate the cone
- use food approved oil (NT2928)
 - weekly or as required

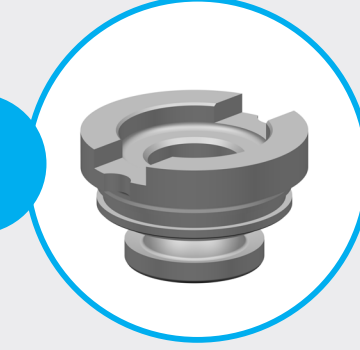

- check visually
 - if required
- clean during other maintenance jobs
 - before mounting of the cavity plate

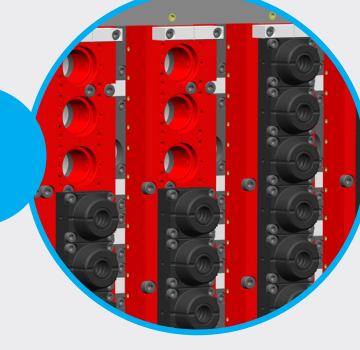

- clean and lubricate slide guidances
 - monthly or as required
- use Motorex Grease AL-MP2

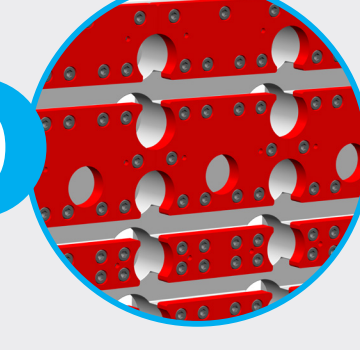

- clean and lubricate the slide plates
 - weekly or as required
- use food approved oil (NT2928)
- check on plastic chips before start up



service@otto-hofstetter.ch | +41 55 285 22 50

Otto Hofstetter AG | Zürcherstrasse 73 | 8730 Uznach | Switzerland | www.otto-hofstetter.swiss