
✨ What It Shows

- **Alarms** — up to 6 weekday-scheduled alarms with an LED + sound alert.
- **Clock & date** — always on top.
- **Firmware updates** — checks for new firmware once a day and installs it over WiFi, or update manually.
- **Flight recall** — tap the aircraft count to show the last overhead flight's details.
- **Flights overhead** *(optional — on by default)* — a mini radar of live aircraft near you: callsign, route, altitude, speed, distance, airline logo, and the plane's actual ground track.
- **Pool temperature** *(optional — off by default)* — current water temperature and history graphs, if you have a Govee pool thermometer.
- **Settings** — every option on the device is configurable on-screen: units, clock, WiFi, location, flight tracking, alarms, and more.
- **Sleep mode** — the screen sleeps overnight and wakes on touch.
- **Startup chime** — a short rising melody + LED sweep plays on power-on (stays silent when it wakes from sleep mode). Additionally, a chime plays after a firmware update.
- **Weather** — current temperature, feels-like, humidity, sunrise/sunset, wind speed/direction with gusts, an 8-day forecast, and temperature history graphs (Day / Week / Month / Year).

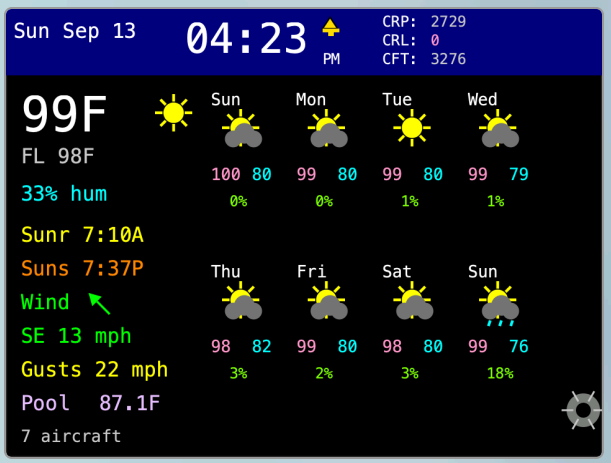

🌬️ Wind Tiers

Color	Tier	Sustained	Gusts
Green	calm	under 15 mph	under 20 mph
Yellow	gusty	15–24 mph	20–34 mph
Orange	strong	25–30 mph	35–45 mph
Red	advisory	31+ mph	46+ mph

🔄 Resetting (Settings → Reset)


Every option asks you to confirm and says exactly what it clears:


- **Restart** — reboots only; clears nothing.
- **Graph Data** — clears pool and weather temperature history.
- **Settings** — clears settings and credentials (keeps touch calibration).
- **Network** — clears WiFi credentials and IP settings (static IP, hostname); everything else is kept.
- **Factory Reset** — clears *everything*: settings, credentials, files, history, and touch calibration. The next boot recalibrates touch and asks for WiFi again.
- **Cancel** — backs out without changing anything.

> ⚠ **Factory Reset erases any pre-loaded airline logos** — restoring logos requires regenerating and reloading them from a development computer.

🛠️ Troubleshooting

- **Taps land in the wrong spot** — press and hold anywhere on the screen for **10 seconds** to recalibrate.
- **Wrong weather or no flights nearby** — fix your location under **Settings → Location**.
- **A flight's route or track looks wrong** — route and ground-track data come from public flight-data feeds that may not have the latest data, so they can be missing, outdated, or inaccurate.
- **New WiFi network** — re-enter it under **Settings → Network**.

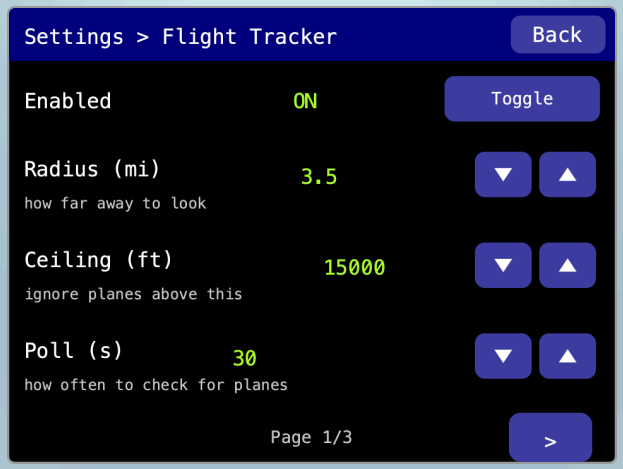


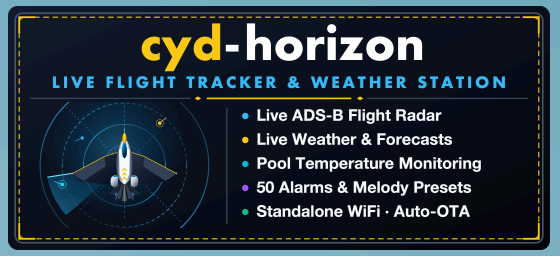


Live flight tracker & weather station for **Cheap Yellow Display (CYD)** boards:

- **2.8" 2432S028R**
- **4" E32R40T**

Once it's set up it runs on your WiFi — no computer needed.

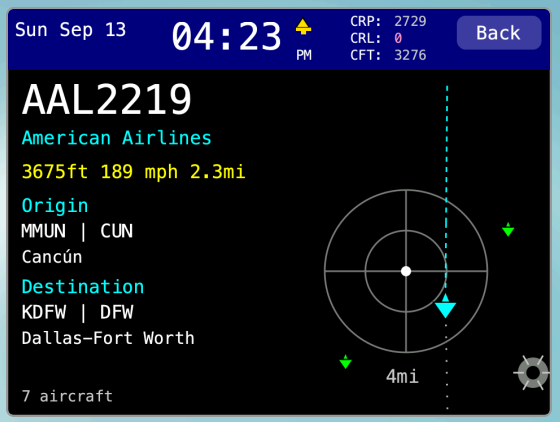

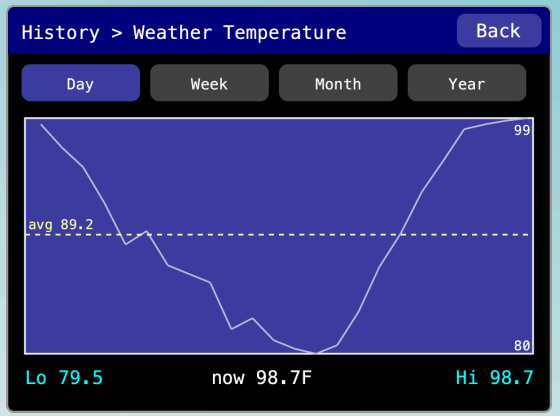

Firmware v3.10.4+

github.com/improving-minnesota/cyd-horizon

🚀 Getting Started

1. **Plug it in.** On a brand-new device (or after a Factory Reset) it first asks you to tap a few crosshairs to calibrate the touchscreen — this is skipped if calibration is already saved.
2. **Enter WiFi.** Type your network name and password with the on-screen keyboard. (Change it later under **Settings → Network**.)
3. Done — the dashboard appears and starts loading weather and flights.

📍 Set Your Location

Weather and flights need to know where you are. On first boot the device guesses your location from your internet connection — check that it's right:

Open **Settings → Location**, then use whichever is easiest:

- **Search Address** — type your city or address and pick the match.
- **Set** — type your latitude and longitude directly.
- **Find by IP** — guess again from your connection.

🔑 OpenSky Account (Recommended)

Flights work out of the box, but a free OpenSky account raises your daily limit and removes the yellow "anonymous" warning.

1. Create a free account at **opensky-network.org**.
2. Go to **My OpenSky → Account** and create an **API client** — that downloads a file containing your **client ID** and **client secret**.
3. On the device: open **Settings → Flight Tracker**, page right to the **OpenSky Credentials** screen, and enter both.

The three small readouts in the header — **CRP**, **CRL**, **CFT** — show your remaining daily OpenSky credits (tap them for detail). Grey is healthy, yellow is low, pink is nearly out. Credits reset daily.

🌡️ Govee Pool Thermometer (Optional)

Only if you own a Govee pool thermometer:

1. Create a free developer account at **developer.govee.com** and generate an **API key**.
2. On the device: open **Settings → Pool Temp**, turn it **on**, enter the key, tap **Fetch Devices**, and pick your thermometer.

👆 Using the Dashboard

The main screen isn't just a display — several spots are **buttons you can tap**:


- **Cog (bottom-right)** — open settings.
- **Weather temperature (top-left)** — weather history graph.
- **Pool reading** — pool temperature history graph.
- **Aircraft count (bottom-left)** — details of the last overhead flight.
- **CRP / CRL / CFT (header)** — OpenSky credits detail.
- **Clock/date (header)** — open the alarm editor.
- Any settings or graph screen returns to the dashboard after 2 minutes untouched.

⏰ Alarms

Up to 6, each with its own weekdays and a **Notify** pattern. Leave all weekdays off for a one-time alarm. Set the time with the ▼ / ▲ arrow buttons — hour on the left, minute on the right (the hour rolls through AM/PM) — or tap the time to type it. A bell icon sits beside the clock while any alarm is on. **Delete** asks for confirmation before removing an alarm.

When one fires: **Dismiss** stops it for today; **Snooze** refires in 5 min (up to 3 snoozes, then it dismisses for the day). Alarms fire on time even during Sleep Mode — the device wakes itself at the alarm time — and a snoozed or missed alarm still fires after a power loss.

> 🔈 Sound requires an **external speaker** plugged into the board's small JST port — the display has no built-in speaker, so without one alarms flash the LED only. Loudness comes from **Notify Volume** under Settings → General; it applies to alarms, the callsign alert, and the boot chime.

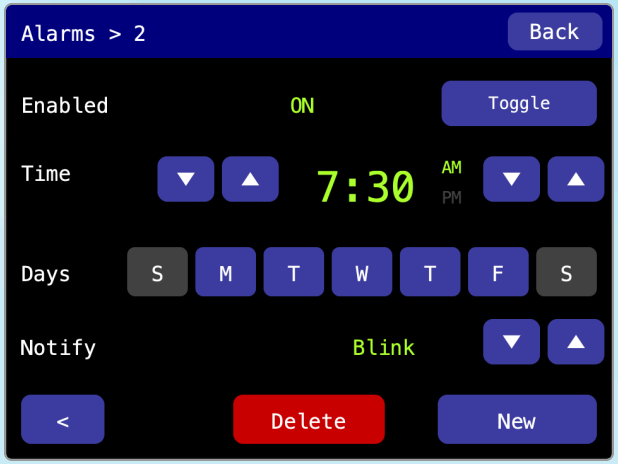

⚙️ Settings at a Glance

Defaults shown in parentheses.

- **About** — version, author, and firmware update status / install.
- **Calibrate Touch** — rerun touch calibration.
- **Flight Tracker** — enabled (on); radar radius (3.5, in mi/km/nm — how far away to look); altitude ceiling (15,000, in ft/m — planes above it are ignored); poll interval (30 s); timer bar (off); home airport (none); watch callsign — (none, matches any part of a callsign; * matches every flight); callsign notify (Radar); LED blink (on); Show IATA Airports (on); OpenSky credentials.
- **General** — theme color picked from swatch rows (tap a hue, then a shade or grey — colors the header and screen buttons); auto-update (on); Notify Volume (levels 1–10, default 10); units (Imperial ft/mph/mi, Metric m/km/h/km, or Aviation ft/kts/nm — also sets weather and pool temps to °F or °C); clock (12-hour with AM/PM, or 24-hour).
- **Location** — your coordinates (auto-guessed on first boot).
- **Network** — WiFi network (shows *Scanning* while it searches); DHCP or static IP; device hostname.
- **Pool Temp** — (off) enable, enter the API key, pick your thermometer. While off, no data is collected.
- **Reset** — see the back cover.
- **Sleep Mode** — enabled (on); sleeps 10:00 PM – 8:00 AM; a touch wakes it for 5 minutes.

💡 LED & Border Colors

- **Red border / LED** — something needs attention: no WiFi, bad OpenSky credentials, exhausted OpenSky credits, or missing weather/pool data.
- **Yellow** — OpenSky is running anonymously; flights still work.
- **Flight blinks** — blue for any overhead flight; red when it's departing your home airport; green when arriving; yellow when both ends are your home airport. A watched callsign instead plays its **Callsign Notify** pattern on the LED and speaker while its details are shown — independent of the blink setting.

📦 Firmware Updates

The device keeps its firmware current over WiFi. **Auto-Update** (on by default) checks once a day and installs new releases; to update manually, open **Settings → About** and tap **Install** if a newer version is offered. If an update fails, it rolls back automatically.