

Programmer's Guide - Power Saving

Ingchips Technology Co., Ltd.


Web: http://www.ingchips.com E-mail: service@ingchips.com

Tel: 010-85160285

Address: Room 803, Building #3, Zijin Digital Park, Haidian District, Beijing

Room 316, Tower A, Juxin Building, Xiangke Road #58, Shanghai

Room 1009, Shuguang Building, Science Park, Nanshan District, Shenzhen

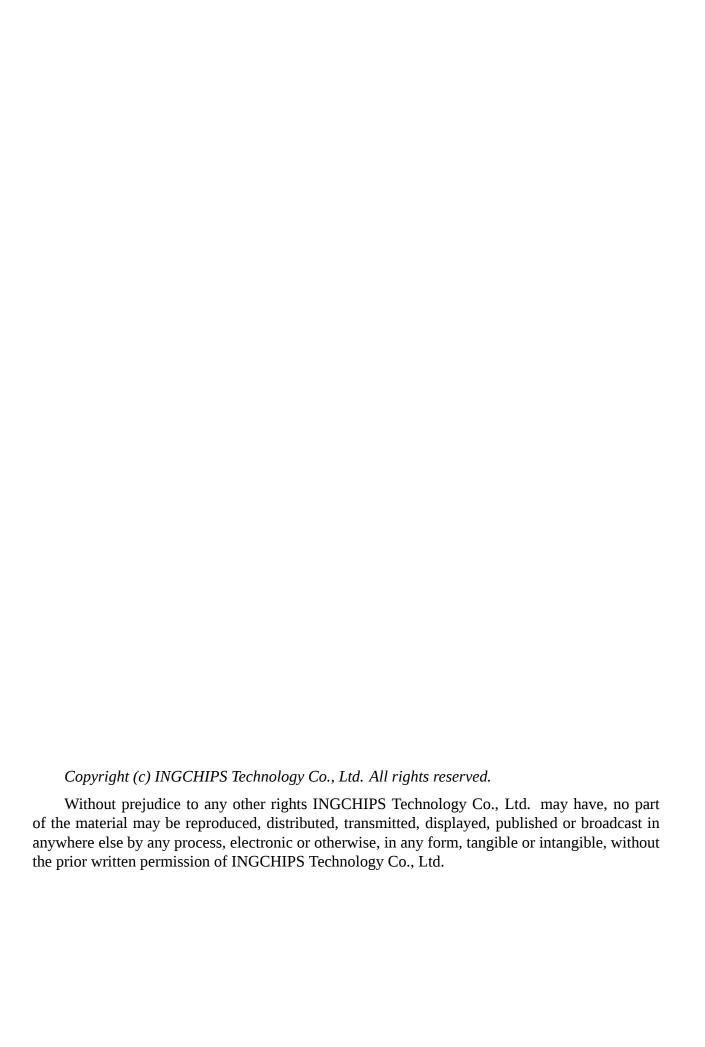

Contents

Re	evisio	n History	ix
1	Intr	roduction	1
	1.1	Abbreviations & Terminology	1
	1.2	References	2
2	Frai	mework	3
	2.1	Sleep Modes	4
	2.2	Wake up Sources	6
	2.3	Involvement of Apps	7
	2.4	Shutdown	8
3	API		9
	3.1	Callback events	9
		3.1.1 PLATFORM_CB_EVT_QUERY_DEEP_SLEEP_ALLOWED	9
		3.1.2 PLATFORM_CB_EVT_ON_DEEP_SLEEP_WAKEUP	10
	3.2	Interrupts	11
		3.2.1 Side Note on Priority	12
	3.3	Shutdown	12
	3.4	The Real-time Clock	13
		3.4.1 Internal real-time RC Clock	14
	3.5	Timers	15
	3.6	IDLE Procedure	16
	3.7	Timing	17



4	Port	ting	19
	4.1	API	20
	4.2	Port to FreeRTOS	20
	4.3	Port to RT-Thread	21
	4.4	Port to Huawei LiteOS	21
	4.5	Port to Azure RTOS ThreadX	22
	4.6	Truly No OS	22
_			0.5
5	Tips	s on Low Power Products	2 5
	5.1	Clock Gating	25
	5.2	Choose Best Frequency	25
		5.2.1 CPU	25
		5.2.2 CPU + Flash	26
		5.2.3 Computational Intensive vs Hardware Timing	28

List of Figures

2.1	Idle Process	3
3.1	Sleep Time Calculation	18
5.1	Electric Charge Consumption	27
5.2	Electric Charge Consumption (Flash $168MHz$)	27



List of Tables

1.1	Abbreviations	1
1.2	Terminology	2
2.1	Sleep modes	4
2.2	External wake up sources of ING918	6
2.3	External wake up sources of ING916	6
3.1	Default Priorities of Interrupts	12
3.2	Tuned Frequencies by platform_rt_rc_auto_tune	14
3.3	Default Timing Configurations	18
3.4	Examples for LL_DELAY_COMPENSATION	18
4.1	Relevant RT-Thread APIs	21
4.2	Relevant LiteOS APIs	22
4.3	Relevant ThreadX APIs	22
5.1	CPU Current Consumption (mA)	25
5.2	CPU Current Consumption Per MHz ($\mu A/M$ Hz)	26
5.3	CPU Power Consumption Per MHz ($\mu W/MHz$)	26



Revision History

Version	Note	Data
0.9	Initial	2023-02-23
0.9.1	Add Timing section	2023-02-28
0.9.2	Update 32k clock	2023-03-07
0.9.2	Update Interrupt: Priority	2023-03-09
0.9.3	Minor fixes	2023-03-17
0.9.4	Add information on wake up handler	2023-04-06
0.9.5	Update information of ING916 shutdown	2023-06-05
0.9.6	32k renamed to Real-time clock	2023-11-14



Chapter 1

Introduction

Welcome to use *INGCHIPS* 918/916 Software Development Kit.

Power saving is important in Bluetooth LE products, especially for those using batteries. This document is a guide for developing low power products from the perspective of software.

Roughly speaking, the goal of power saving is, when there is something to do, to design the system carefully to reduce power consumption; when there is nothing to do, to put the system into special modes to reduce power consumption. The latter one is covered by the power saving Framework, while the former one is briefly discussed in Tips on Low Power System.



Information about ING916 is subject to change.

1.1 Abbreviations & Terminology

Table 1.1: Abbreviations

Abbreviation	Notes
BLE	Bluetooth Low Energy
CPU	Central Processing Unit
IRQ	Interrupt Request
QSPI	Quad Serial Peripheral Interface
RAM	Random Access Memory
ROM	Read Only Memory
RTOS	Real-time Operating System kernel
SDK	Software Development Kit



Table 1.2: Terminology

Terminology	Notes
Cache	A small but fast memory that stores copies of data from frequently used
	main memory locations
Flash	An electronic non-volatile computer storage medium
FreeRTOS	A real-time operating system kernel
ISR	Interrupt Service Routine
KiB	1024 Bytes
Share memory	Memory in SoC that can be accessed by BLE sub-system (shared by
	BLE and CPU sub-systems)
System memory	Memory in SoC that can be accessed by CPU sub-system, but not BLE
	sub-system. It is starting from $0x20000000$.
System tick	A system timer that can be used to generate periodic interrupts or
	measure time
Real-time clock	The clock that keeps running in power saving modes

1.2 References

- 1. FreeRTOS¹
- 2. Mastering the FreeRTOS $^{\mbox{\tiny TM}}$ Real Time Kernel 2

https://freertos.org

 $^{^2} https://www.freertos.org/Documentation/161204_Mastering_the_FreeRTOS_Real_Time_Kernel-A_Hands-On_Tutorial_Guide.pdf$

Chapter 2

Framework

The implementation of power saving in SDK is designed to be easy to use. Generally, power saving relies on the idle process in RTOS, which is usually a process¹ having the lowest priority. It's a common practice for OS(es) to have an idle process, for example, the idle process with PID 0 in Windows and Linux.

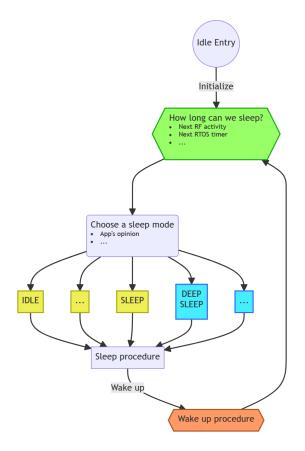


Figure 2.1: Idle Process

Figure 2.1 is an overview of the idle process. Once initialized, the idle process keeps trying

¹In embedding systems, it may also be called a *task* or *thread*.



to put the system into sleep modes to save power. It first checks how long the system could sleep, i.e. sleep time, which is generally determined by:

- When the next BLE sub-system activity occurs;
- When the next RTOS timer expires.

Note that, peripherals, such as hardware timers, UART, are not taken into account here.

Then, the idle process makes choice on sleep modes. Following factors are considered:

- · Sleep time
- App's opinion;
- Current system state.

Different sleep modes have their own hard time requirements, because it needs extra time to bring the system into sleep modes and wake it up again. App's opinion tells the idle process a subset of sleep modes which are allowed to be chosen from. Current system state including BLE sub-system is also considered.

After the most suitable sleep mode which consumes lowest power, is decided, the sleep procedure stops RTOS and takes the system into the chosen sleep mode.

After waken up, the wake up procedure performs post processing to make sure everything is normal, for example, the system tick is taken care of here. This framework knows nothing about peripherals and their configurations, and it just notifies App that the system has waken up. App could take this opportunity to configure peripherals. After everything is ready, the wake up procedure allows RTOS to continue. And the whole loop is started all over again.

2.1 Sleep Modes

There are a variety of sleep modes available (supported by SoC and power saving framework) summarized in Table 2.1.

ModeING918ING916NotesIDLE✓✓Everything is active; CPU is waiting for interrupts.SNOOZE✓Same as IDLE except RF is shutdown.SLEEP✓Same as IDLE except BLE sub-system is shutdown.DEEP SLEEP✓CPU and peripherals are all shutdown. All memory is retained.DEEPER SLEEP✓Like DEEP SLEEP. Only a small portion of memory is

retained.

Table 2.1: Sleep modes



Mode	ING918 ING916	Notes
BLE ONLY SLEEP	√	Like DEEP SLEEP, but BLE sub-system fully functional

IDLE mode is the slightest sleep mode, backed by the underlying CPU while other modes are defined and backed by dedicated logic in the SoC out of CPU itself. There are subtle differences between different sleep modes besides the notes in Table 2.1:

- For DEEP SLEEP on ING916, some peripherals, such as GPIO, can be optionally put into special low power modes, rather than powered off, in which case, its output could be retained or acting as wake up sources;
- In DEEPER SLEEP, comparing with DEEP SLEEP:
 - Less peripherals are allowed to be put into special low power modes;
 - Internal $1\mu s$ timer becomes less accurate;
 - Only 16KiB of system memory is retained;
 - BLE sub-system including share memory is powered off, so all BLE configurations/parameters are lost;
- For BLE ONLY SLEEP, the system can be waken up only by BLE sub-system;
- DEEPER SLEEP is only available in the *mini* bundles.

Different sleep modes consume different amount of current, since different components in SoC consume different amount of current. Here is a very rough quantitative summary, providing a qualitative analysis:

• CPU + Flash

Current consumption heavily depends on working frequency. It may vary from about 1mA to more than 10mA.

For ING918, CPU clock is fixed at 48MHz, consuming $\sim 5mA$.

· RAM retention

More memory retained, more current is needed. It costs roughly $\sim 0.02 \mu A$ per KiB.

BLE Activity

It costs from several mA to more than 10mA.



2.2 Wake up Sources

There are two types of sources that can cause the system to wake up:

• Internal sources

There is only one internal source: sleep timer. It is a dedicated hardware timer used only by the idle process, configured to sleep time, and cause the system to wake up when expired.

This timer has 32 bits, and is driven by the Real-time clock.

External sources

External sources are given in Table 2.2 and Table 2.3².

Table 2.2: External wake up sources of ING918

Mode	Sources
IDLE	All interrupts.
SNOOZE	All interrupts.
SLEEP	All interrupts.
DEEP SLEEP	EXT_INT.

Table 2.3: External wake up sources of ING916

Mode	Sources
IDLE	All interrupts.
DEEP SLEEP	GPIO/RTC/Comparator. Configurable.
DEEPER SLEEP	GPIO. Configurable.
BLE ONLY SLEEP	BLE sub-system.



- No matter which mode SoC is in, RESET pin always works, but we don't name it as an external wake up source;
- Watchdog is an ordinary peripheral, and powered off in DEEP SLEEP, DEEPER SLEEP, and BLE ONLY SLEEP modes.

²Refer to *Programmer's Guide - ING916XX Peripheral* for the configuration of wake up sources



2.3 Involvement of Apps

Sleep modes can be classified into two categories, Category A that do not need the involvements of Apps (IDLE, SNOOZE, and SLEEP), and Category B that do need the involvements of Apps (DEEP SLEEP, DEEPER SLEEP, and BLE ONLY SLEEP).

This framework tried its best to minimize the involvements of Apps, and there are just two things to be handled by Apps:

- Tell the idle process which modes in Category B are allowed to be used;
 For ING916, Apps can take this opportunity to configure external wake up sources as well.
- 2. (Re-)Configure peripherals after waken up from Category B sleep modes.

These two things are done in two platform event handlers.

How to determine if a mode in Category B is allowed? Here are some suggestions.

DEEP SLEEP

- If peripherals can't be powered off now, for example, UART is running or FIFO not empty, then NO;
- Hardware timer is used, which generates interrupts very frequently (such as 1000*Hz*), then NO.

DEEPER SLEEP

- If DEEP SLEEP is not allowed, then NO;
- If external wake up source does not fit the need, for example, comparator is required as a wake up source, then NO;
- If memory outside of the retained range is in use, for example, memory allocated from Link Layer's heap, then NO;
- If internal $1\mu s$ timer should be as accurate as in DEEP SLEEP, then NO.

• BLE ONLY SLEEP

- If DEEP SLEEP is not allowed, then NO;
- If other external wake up source are needed, then NO.



2.4 Shutdown

The idle process implements an automatic and passive power saving mechanism. A proactive mechanism also exists, *Shutdown*, where developers can optionally specify a time after which the system is powered on again, and a portion of memory to be retained during shutdown. The time can be set to 0, which means to disable the power on timer, and stay in shutdown mode unless external power on signal is asserted or RESET.

• For ING918

Shutdown is based on DEEP SLEEP, except that most of if not all memory is powered off too. As in DEEP SLEEP, the system can be powered on again by EXT_INT.

For ING916

Shutdown can be backed by DEEP SLEEP (default) or DEEPER SLEEP, which can be selected by bit 0 of a debugger parameter PLATFORM_CFG_PS_DBG_4 at present. The system can be powered on again by external sources (Table 2.3), too.

Comparing with DEEP SLEEP, all of the system memory can be retained in DEEP SLEEP, and a bit more current is consumed.



For SDK v8.3.5 or elder versions, shutdown is always based on DEEPER SLEEP.

Chapter 3

API

There is a global switch for power saving, *Enable* or *Disable*, which can be configured by platform_config at any time:

```
// To enable power saving
platform_config(PLATFORM_CFG_POWER_SAVING, PLATFORM_CFG_ENABLE);

// To disable power saving
platform_config(PLATFORM_CFG_POWER_SAVING, PLATFORM_CFG_DISABLE);
```

3.1 Callback events

As discussed in Involvement of Apps, there are two events that should be handled by Apps:

3.1.1 PLATFORM_CB_EVT_QUERY_DEEP_SLEEP_ALLOWED

Handler of this event returns bit combination of allowed sleep modes in Category B. A value of 0 means that no mode in Category B is allowed at present.

```
#define PLATFORM_ALLOW_DEEP_SLEEP ...
#define PLATFORM_ALLOW_DEEPER_SLEEP ...
#define PLATFORM_ALLOW_BLE_ONLY_SLEEP ...
```

When DEEPER SLEEP is allowed, DEEP SLEEP is also allowed implicitly. For example, if both DEEP and DEEPER SLEEP are allowed, then:



```
return PLATFORM_ALLOW_DEEP_SLEEP + PLATFORM_ALLOW_DEEPER_SLEEP;
```

or, simply (although not recommended),

```
return PLATFORM_ALLOW_DEEPER_SLEEP;
```

For ING916, Apps can also configure external wake up sources in the handle.

When a sleep mode returned as allowed but is not supported in the system, the sleep mode is ignored.

3.1.2 PLATFORM_CB_EVT_ON_DEEP_SLEEP_WAKEUP

In the handler of this event, Apps can re-initialize peripherals and do other jobs according to the needs.

Input parameter void *data is casted from platform_wakeup_call_reason_t:

```
typedef enum
{
    PLATFORM_WAKEUP_REASON_NORMAL = ...,
    PLATFORM_WAKEUP_REASON_ABORTED = ...,
} platform_wakeup_call_reason_t;
```

PLATFORM_WAKEUP_REASON_NORMAL means that this event is emitted for a normal (successful) wake up procedure, i.e. the sleep procedure is completed successfully; *PLATFORM_WAKEUP_REASON_ABORTED* means that the previous sleep procedure is aborted, i.e. sleep had not happened at all. For example, trying to go to DEEP SLEEP while EXT_INT is asserted will be a failure, and sleep will not happen.

Event with *PLATFORM_WAKEUP_REASON_NORMAL* is always emitted; while event with *PLATFORM_WAKEUP_REASON_ABORTED* is emitted when PLATFORM_CFG_ALWAYS_CALL_WAKEUP is *Enabled*. For ING918, PLATFORM_CFG_ALWAYS_CALL_WAKEUP is default to *Disabled*; while for ING916, default to *Enabled*. This is because for ING916, external wake up sources such GPIO might need to be reconfigured if sleep procedure is aborted. Without this event, Apps will not be able to do such reconfiguration. Since external sources are not configurable in the case of ING918, so it is default to *Disabled*.

If PLATFORM_CFG_ALWAYS_CALL_WAKEUP is *Enabled*, then there will be a *PLATFORM_CB_EVT_ON_DEEP_SLED* event *definitely* for each *PLATFORM_CB_EVT_QUERY_DEEP_SLEEP_ALLOWED* event that returns a non-0 value.

At present, this handler is invoked in a *strange* context. It is in neither an ordinary process, nor an interrupt service routine. In the case of FreeRTOS, neither normal APIs or their *FromISR* variants are allowed, with only a few exceptions, such as:



• Use xSemaphoreGiveFromISR on a binary semaphore.

The prototype of event handles should be compatible of:

```
typedef uint32_t (*f_platform_evt_cb)(void *data, void *user_data);
```

Handlers are registered by:

```
void platform_set_evt_callback(
   // the event
   platform_evt_callback_type_t type,
   // the callback function
   f_platform_evt_cb f,
   // user data that will be passed into callback function `f`
   void *user_data
);
```

3.2 Interrupts

Since CPU is powered off in Category B sleep modes, after waken up, from CPU's point of view, interrupts should be re-enabled.

For example, an UART port is used the App with both Rx and Tx interrupts are enabled. Then, in the waken up event handle, not only the peripheral itself should be re-initialized, its Rx and Tx interrupts enabled, but also the corresponding position in interrupt vector table. In the case of ARM Cortex-M processors, it is called NVIC¹.

If the ISR is registered by platform_set_irq_callback, then there are two options to reenable the interrupt:

- 1. Call platform_set_irq_callback again, since this API will enable the interrupt;
- Use platform_enable_irq:

```
void platform_enable_irq(
   // corresponding interrupt request type
  platform_irq_callback_type_t type,
  // flag = 1 for enable; flag = 0 for disable
  uint8_t flag);
```

¹Nested Vectored Interrupt Controller



If the ISR is in the table registered by platform_set_irq_callback_table, then use platform_enable_irq, too.

In the case of ARM Cortex-M processors, the priority of an interrupt is identified by an unsigned integer whose width is __NVIC_PRIO_BITS, where a higher value represents a lower priority. Therefore, the highest priority is 0 and the lowest is (1 « __NVIC_PRIO_BITS) - 1. Note that, 0 is not allowed here², so the highest priority shall be 1. When using FreeRTOS, the value for highest priority is defined by and can be got from configLIBRARY_MAX_SYSCALL_INTERRUPT_PRIORITY.

Priorities of interrupts are all reset to default configurations as well after waken up. Default configurations are given in Table 3.1.

Interrupt	ING918	ING916
BLE sub-system	3	6
Others	5	11

Table 3.1: Default Priorities of Interrupts

3.2.1 Side Note on Priority

The BLE stack in ING91X are designed to be soft real-time as much as possible, for example, the whole system can be stopped and resumed later without lost of BLE connection if the supervision timer is not reached. For hard real-time, there are deadlines that must be met each and every time. In such cases, developers might need to change those priorities and will assign the highest priorities to those interrupts that look like to the most important. However, that is not the optimal algorithm. Rate Monotonic Algorithm³ is a classic algorithm that should be considered firstly.

To modify priority, call platform_read_info to get the underlying IRQ number, then use corresponding API of CPU to modify it. For example, change the priority of UARTO to 7, in the case of ARM Cortex-M processors:

```
IRQn_Type n = (IRQn_Type)platform_read_info(
  PLATFOFM_INFO_IRQ_NUMBER + PLATFORM_CB_IRQ_UART0);
NVIC_SetPriority(n, 7);
```

When assigning a higher priority than BLE sub-system, Link Layer APIs are **NOT** allowed to be invoked in these ISR(s) even though they are marked as *thread safe*.

3.3 Shutdown

Shutdown is initiated by calling platform_shutdown:

²This is required by software bundles.

³Liu and Leyland, 1973, Scheduling Algorithms for Multiprogramming in a Hard Real-Time Environment.



```
void platform_shutdown(
   // Duration before power on again (measured in cycles of real-time clock)
   const uint32_t duration_cycles,
   // Pointer to the start of data to be retained
   const void *p_retention_data,
   // Size of the data to be retained
   const uint32_t data_size);
```

When duration_cycles is zero, power on when external wake up source is asserted. When duration_cycles is not zero, it must be larger than a minimum value of 825 cycles (about 25.18ms) reserved for hardware. data_size can be zero too if no data is needed to be retained. Only part of SYS memory starting from 0x2000000 can be retained.

If this function fails, it will return. If this function successes, CPU is powered off, so it will not return.

3.4 The Real-time Clock

The Real-time clock is crucial for power saving. There are two sources for this clock, one is internal real-time RC clock, and the other is the real-time crystal oscillator which needs an external crystal. So, platform provides APIs to select clock source, and change settings:

PLATFORM CFG RT RC EN

Enable/Disable the internal real-time RC clock. Default: Enabled.

PLATFORM_CFG_RT_OSC_EN

Enable/Disable the real-time crystal oscillator. Default: Enable.

PLATFORM CFG RT CLK

Real-time clock selection. Flag is platform_rt_clk_src_t with default value PLATFORM_RT_RC:

```
typedef enum
{
    // external real-time crystal oscillator
    PLATFORM_RT_OSC,
    // internal real-time RC clock
    PLATFORM_RT_RC
} platform_rt_clk_src_t;
```

When modifying this configuration, both RT_RC and RT_OSC should be **enabled**. For ING918: both clocks must be running; To ensure a clock is running:



- RT_OSC: wait until status of RT_OSC is OK;
- RT_RC: wait $100\mu s$ after enabled.

It's recommended to wait another $100\mu s$ before disabling the unused one.

PLATFORM_CFG_RT_CLK_ACC

Configure Real-time clock accuracy in *ppm*.

PLATFORM_CFG_RT_CLK_CALI_PERIOD

Real-time clock auto-calibration⁴ period in seconds. Default: $3600 \times 2 = 2(hours)$. Beside auto-calibration, it can also be started manually by:

```
uint32_t platform_calibrate_rt_clk(void);
```

The frequency of Real-time clock can be calculated from calibration value:

$$f = \frac{65536000000}{Cali}$$
Hz,

 $where, the \ calibration \ value \ (\textit{Cali}) \ is \ an \ unsigned \ integer \ returned \ by \ \texttt{platform_read_info(PLATFORM_INFO_RT_integer)}.$

3.4.1 Internal real-time RC Clock

The internal real-time RC clock is less accurate real-time crystal oscillator generally. It can be tuned by selecting property capacitor and resistor. This process is done by invoking:

```
uint16_t platform_rt_rc_auto_tune(void);
```

The frequency is tuned to different frequencies by platform_rt_rc_auto_tune at present (Table 3.2).

Table 3.2: Tuned Frequencies by platform_rt_rc_auto_tune

Family	Frequency (Hz)
ING918	50000
ING916	32768

This process takes hundreds of milliseconds, so it recommended to use it in a thread but not in app_main. This process can be done only once after starting up. It also returns a value representing the best choice which can be saved and used to tune the clock directly in latter restarts:

⁴Calibration means to measure the frequency of this clock with another high frequency and high precision clock.



```
void platform_rt_rc_tune(
  uint16_t value // returned by `platform_rt_rc_auto_tune`
);
```

This framework does not depends on a specific frequency, and it is possible to tune to a another frequency by calling platform_rt_rc_auto_tune2:

```
uint16_t platform_rt_rc_auto_tune2(
   // target frequency in Hz
   uint32_t target_frequency);
```



ING918: RC clock's power supply after waken up from DEEP SLEEP is different from starting up. Therefore, calling platform_rt_rc_auto_tune() after DEEP SLEEP can achieve better accuracy.

3.5 Timers

Platform also provides a few timer APIs coupled with power saving.

There is an internal counter increased by 1 per $1\mu s$, which wraps after 7953.64 days ($\approx 21.79 years$). Therefore, this timer can be treated as never wrapping practically. This counter is carefully recovered during waking up⁵. It is reset to zero when power up again from shutdown. Use platform_get_us_time to read this counter:

```
uint64_t platform_get_us_time(void);
```

System tick is disabled and restarted when entering and leaving sleep modes. It's difficult to properly reconfigure it accurately. Platform provides a configure item PLATFORM_CFG_RTOS_ENH_TICK. When enabled, accuracy of system ticks is improved but less power efficiency.

Platform also provides another timer that survives in all sleep modes and is more accurate than system ticks. Such timers can be created by calling platform_set_timer:

⁵For DEEPER SLEEP mode of ING916, it is coarsely recovered comparing to other modes.



```
void platform_set_timer(
  // callback function when timer expires
  void (* callback)(void),
  // timer expires after this delay from now
  // Unit: 625us
  uint32_t delay);
```

This timer has some unique features:

- Comparing to hardware timers, this timer can be thought as "running" during power saving mode;
- Comparing to RTOS software timers, this timer is software + hardware too;
- Comparing to RTOS software timers, this timer may be more accurate in some circumstance;
- This function always succeed, and only fails when running out of memory.

callback is also the identifier of the timer. So below two lines defines only one timer expiring after 200 units but not two separate timers:

```
platform_set_timer(f, 100);
platform_set_timer(f, 200);
```

The callback function is called in a RTOS task (if existing), but not an ISR.

Range of delay is $0 \sim \textit{Ox7ffffff}$. When delay is zero, the timer associated with the callback function is cleared. Since delay is in $625 \mu s$, the maximum delay is $372.827 \textit{hours} (\approx 15.5345 \textit{days})$.

3.6 IDLE Procedure

As mentioned in Sleep Modes, IDLE mode is base on CPU's feature solely. It's common for CPU to have an instruction that instruct CPU to stop and enter a slight sleep mode. It can wake up (continue to execute) *quickly* when there is any interrupt/exception, or other signals. For x86 processors, the instruction is *HLT* (halt), while for ARM Cortex-M processors, it is *wfi* (wait for interrupts) or *wfe* (wait for events). When there is only one ARM Cortex-M processor, the IDLE procedure is simply a *wfi* guarded by a pair of synchronization barriers:

```
__DSB();
__wfi();
__ISB();
```



Since there is a PLL in ING916, CPU and other components may run at a range of frequencies, event PLATFORM_CB_EVT_IDLE_PROC is defined to provide flexibility of customizing the IDLE procedure. This event is emitted each time IDLE mode is entered, and default IDLE procedure is replaced by the callback function. For example, Apps can lower clock frequencies to enjoy much low power consumption in IDLE mode if the slower response in waking up is acceptable:

```
static uint32_t idle_proc(void *dummy, void *user_data)
{
    SYSCTRL_ConfigPLLClk(DIV_PRE, LOOP, 63);
    __DSB();
    __WFI();
    __ISB();
    SYSCTRL_ConfigPLLClk(DIV_PRE, LOOP, DIV_OUTPUT);
    return 0;
}

platform_set_evt_callback(PLATFORM_CB_EVT_IDLE_PROC,
    idle_proc, NULL);
```

3.7 Timing

Finally, there are several configuration to share some information about *outside* world to the power saving framework.

 PLATFORM_CFG_xx_TIME_REDUCTION which helps to answer how much time the sleep can take;

As shown in Figure 3.1, suppose now is T_0 , and next action occurs at T_1 . Obviously, the system can not sleep for (T_1-T_0) , since there are pre-processing and post-processing in both hardware and software, which will take some time too. So extra time needs to be reduced from (T_1-T_0) .

The amount of time can be configured through PLATFORM_CFG_SLEEP_TIME_REDUCTION for SLEEP mode, and PLATFORM_CFG_DEEP_SLEEP_TIME_REDUCTION for DEEP SLEEP and DEEPER SLEEP modes.

PLATFORM_CFG_SLEEP_TIME_REDUCTION is not applicable to ING916.

PLATFORM_CFG_LL_DELAY_COMPENSATION which helps to answer when starting to configure BLE sub-system.

Suppose a BLE activity occurs at T_1 exactly, Link Layer software need to properly configure it before T_1 . Since CPU may run at a variant of frequencies, time needed to do this job also varies. This configurations tells the framework how much time shall be reserved for Link Layer software: let t be PLATFORM_CFG_LL_DELAY_COMPENSATION, then Link Layer will start at $(T_1 - t)$.



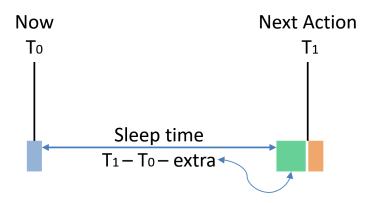


Figure 3.1: Sleep Time Calculation

This configuration is not applicable to ING918.

Default values are given in Table 3.4.

Table 3.3: Default Timing Configurations

Item	Default for ING918 (μs)	Default for ING916 (μs)
SLEEP_TIME_REDUCTION	450	_
DEEP_SLEEP_TIME_REDUCTION	550	4000
LL_DELAY_COMPENSATION	_	200

Generally, these values do not need to updated in the case of ING918. If the wake up handler does a lot of processing, then those two reductions should be increased accordingly.

It's much more complicated for ING916. Good values can be found by trial and error, when precise measurement is impossible. When values are too small, BLE functions will be affected, so it can be used as an indicator. Table 3.4 lists reference values for LL_DELAY_COMPENSATION.

Table 3.4: Examples for LL_DELAY_COMPENSATION

CPU Frequency (MHz)	Value (μs)
48	1200
32	2000
24	2500
16	5000
8	9000

Chapter 4

Porting

When using NoOS variants of platform bundles, power saving framework needs to be ported to other RTOS(es). The main work is to port the idle process to the targeting RTOS. The idle process looks like this:

```
void idle_task(void)
    for (;;)
        timeout_tick = rtos_next_busy_tick();
        if (platform_pre_suppress_ticks_and_sleep_processing(
          timeout_tick) > some_limit)
        {
            rtos_stop_scheduler();
            platform_pre_sleep_processing();
            platform_post_sleep_processing();
            tick_cnt = how_long_has_I_slept();
            rtos_compensate_system_ticks(tick_cnt);
            restart_system_ticks();
            rtos_resume_scheduler();
        }
        platform_os_idle_resumed_hook();
    }
}
```

What needs to be ported is exactly those rtos_... functionalities:

- rtos_next_busy_tick returns how many ticks the CPU can be put in sleep modes;
- rtos_stop_scheduler stops the scheduler

¹Since system tick interrupts are disabled during sleep, it is called tick-less low power feature in some RTOS(es).



- rtos_compensate_system_tick compensates ticks counter of RTOS
- rtos_resume_scheduler resumes the scheduler

how_long_has_I_slept calculates how long the last sleep was in ticks which is used to compensates ticks counter of RTOS. The result can be deduced by check system tick registers of CPU, or use other real-time timer including platform_get_us_time. restart_system_tick restarts system ticks.

Besides, optionally, similar function of PLATFORM_CFG_RTOS_ENH_TICK needs to be ported too.



The idle process must be the **only** process having the lowest priority. Some RTOS(es) supported multiple processes have the same lowest priority. Developers should ensure that no other processes are having the lowest priority.

4.1 API

NoOS variants of platform bundles provide a collection of APIs to cooperate the porting.

```
// Pre-suppress ticks and sleep processing
// @return adjusted ticks to sleep
uint32_t platform_pre_suppress_ticks_and_sleep_processing(
    // expected ticks to sleep
    uint32_t expected_ticks
);

// Preprocessing for tick-less sleep
void platform_pre_sleep_processing(void);

// Postprocessing for tick-less sleep
void platform_post_sleep_processing(void);

// Hook for idle task got resumed
void platform_os_idle_resumed_hook(void);
```

4.2 Port to FreeRTOS

FreeRTOS² is a real-time operating system for micro controllers and small microprocessors. It is a cross-platform RTOS kernel that is distributed freely under the MIT open source license.

²https://www.freertos.org/



Platform binaries that has a built-in RTOS bundles FreeRTOS. NoOS variants are certainly portable to FreeRTOS. The portable can be done by just defining several macros to feed above APIs into FreeRTOS, such as:

```
#define configPRE_SUPPRESS_TICKS_AND_SLEEP_PROCESSING(xExpectedIdleTime) \
   do {
        xExpectedIdleTime = \
            platform_pre_suppress_ticks_and_sleep_processing(xExpectedIdleTime); \
        } while (0)
```

A complete example can be found in SDK repository³.

4.3 Port to RT-Thread

RT-Thread⁴ is an open source embedded real-time operating system for IoT devices. It has a small size, rich features, high performance and scalability.

rtos_... functionalities can be mapped to relevant RT-Thread APIs as shown in Table 4.1.

rtos_... Functionalities

RT-Thread APIs

rtos_next_busy_tick

rtos_stop_scheduler

rt_enter_critical,

rt_hw_interrupt_disable

rtos_compensate_system_tick

rt_exit_critical, rt_hw_interrupt_enable

Table 4.1: Relevant RT-Thread APIs

A complete example can be found in SDK repository⁵.

4.4 Port to Huawei LiteOS

Huawei LiteOS⁶ was a lightweight real-time operating system for IoT devices developed by Huawei. It was open source, POSIX compliant, and has been incorporated into HarmonyOS.

rtos_... functionalities can be mapped to relevant LiteOS APIs as shown in Table 4.2.

³https://github.com/ingchips/ING918XX_SDK_SOURCE/tree/master/examples/peripheral_console_freertos

⁴https://www.rt-thread.io/

https://github.com/ingchips/ING918XX_SDK_SOURCE/tree/master/examples/peripheral_console_rt-thread

⁶https://gitee.com/LiteOS/LiteOS



Table 4.2: Relevant LiteOS APIs

rtos Functionalities	LiteOS APIs
rtos_next_busy_tick	OsSleepTicksGet
rtos_stop_scheduler	LOS_IntLock
rtos_compensate_system_tick	OsSysTimeUpdate
rtos_resume_scheduler	LOS_IntRestore

A complete example can be found in SDK repository⁷.

4.5 Port to Azure RTOS ThreadX

Azure RTOS ThreadX⁸ is Microsoft's Real-Time Operating System (RTOS) for deeply embedded, real-time, and IoT applications. It has a small footprint, fast execution speed, and advanced features such as preemption-threshold scheduling, event chaining.

rtos_... functionalities can be mapped to relevant ThreadX APIs as shown in Table 4.3.

Table 4.3: Relevant ThreadX APIs

rtos Functionalities	ThreadX APIs
rtos_next_busy_tick	tx_timer_get_next
rtos_stop_scheduler	TX_DISABLE
rtos_compensate_system_tick	tx_time_increment
rtos_resume_scheduler	TX_RESTORE

A detailed explanation can be found online⁹.

4.6 Truly No OS

It's possible to run NoOS bundles without any RTOS, including full functional power saving. A complete example can be found in SDK repository¹⁰.

In the example, because there are no software timers, and no next busy tick, the whole idle process couldn't be simpler:

⁷https://github.com/ingchips/ING918XX_SDK_SOURCE/tree/master/examples-gcc/peripheral_console_liteos

⁸http://docs.microsoft.com/azure/rtos/threadx

⁹https://ingchips.github.io/blog/2022-03-11-threadx-porting/

¹⁰ https://github.com/ingchips/ING918XX_SDK_SOURCE/tree/master/examples-gcc/peripheral_console_realtime



```
static void idle_process(void)
{
    uint32_t ticks =
        platform_pre_suppress_ticks_and_sleep_processing(0xffffff);
    if (ticks < 5) return;
    enter_critical();
    platform_pre_sleep_processing();
    platform_post_sleep_processing();
    leave_critical();
    platform_os_idle_resumed_hook();
}</pre>
```



Chapter 5

Tips on Low Power Products

Here are some tips for building low power products.

5.1 Clock Gating

Make sure that clock is gated for those peripherals that are not used. Since clock of all peripherals (except SYSCTRL and the default UART¹) are defaults to gated, so, make sure do not release the gating for those peripherals that are not used. If default UART is not used, then gate its clock.

5.2 Choose Best Frequency

For SoC that has complex clock configurations like ING916, clock frequencies of each peripheral as well as CPU itself, should be chosen with care.

5.2.1 **CPU**

The lower frequency, the less current is consumed. But, with a lower frequency, processing time becomes longer. Do not only measure current, but also execution time.

Table 5.1 shows current consumption² of CPU running at varies frequencies under room temperature.

Table 5.1: CPU Current Consumption (mA)

Frequency (MHz)	$V_{bat} = 3.3V$	$V_{bat} = 2.5V$	$V_{bat} = 1.8V$
112	8.95	11.32	14.26
64	5.97	7.17	9.26

¹It is UART0 if there are multiple UART peripherals.

²Refer to *ING916X BLE5.3 SoC Test Report*.



Frequency (MHz)	$V_{bat} = 3.3V$	$V_{bat} = 2.5V$	$V_{bat} = 1.8V$
24	1.71	2.06	2.69
8	0.90	1.09	1.47

Better ways to measure power efficiency is to measure current per MHz (Table 5.2) or power per MHz (Table 5.3).

Table 5.2: CPU Current Consumption Per MHz ($\mu A/MHz$)

Frequency (MHz)	$V_{bat} = 3.3V$	$V_{bat} = 2.5V$	$V_{bat} = 1.8V$
112	89.9	101.1	127.3
64	93.3	112.0	144.7
24	71.3	85.8	112.1
8	112.6	136.3	183.8

Table 5.3: CPU Power Consumption Per MHz ($\mu W/MHz$)

Frequency (MHz)	$V_{bat} = 3.3V$	$V_{bat} = 2.5V$	$V_{bat} = 1.8V$
112	263.7	252.7	229.2
64	307.8	280.1	260.4
24	235.1	214.6	201.8
8	371.3	340.6	330.8

From these numbers we can see that:

- It's not power efficient to do computation at a very low frequency, for example, under the same condition, running at 8MHz consumes at least 40% more power than 112MHz;
- 24*MHz* looks like a sweet spot if the processing delay is acceptable;
- If frequency is fixed, always try to use lower V_{bat} voltage.

5.2.2 CPU + **Flash**

Flash embedded in ING916 SoC interfacing CPU through QSPI, which might become a bottleneck without cache. Since cache is shutdown in Category B sleep modes, in a short duration after waking up, the system works like without cache. Therefore, it is important to measure current consumption in such cases.

For example, create a function filled with 8192~NOP(s) (no operation) that is larger than I-Cache, loop the function for 200~times, and measure the used electric charge. Figure 5.1 shows the result. It can be found that when lowering Flash frequency, much more electric charge is used. To put it simple, run Flash as fast as possible to save power.



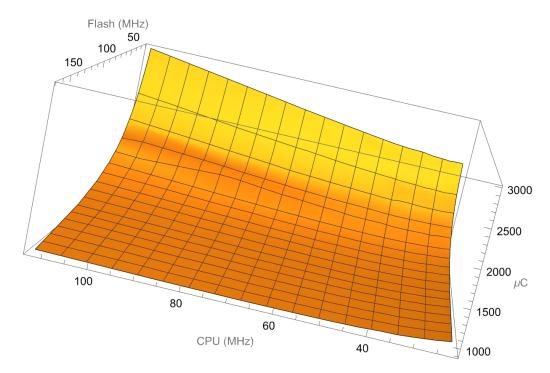


Figure 5.1: Electric Charge Consumption

Further more, focusing on Flash running at 168MHz, the best frequency for CPU is $\sim 67MHz$, as shown in Figure 5.2. If Flash running at 192MHz, the best frequency for CPU is $\sim 77MHz$. These two groups of numbers show that in the case of no cache, it's better to set the frequency of CPU to be 40% of that of Flash, proving that Flash is really the bottleneck.

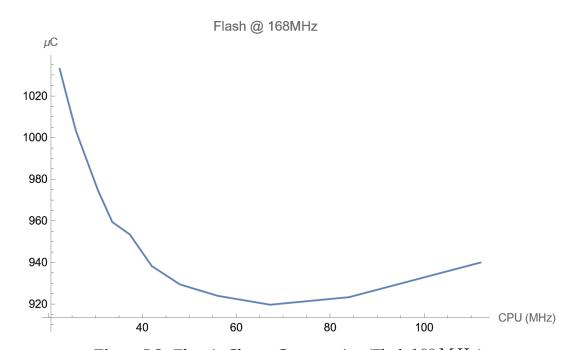


Figure 5.2: Electric Charge Consumption (Flash 168MHz)

On the other hand, when cache becomes hot and has a high hit rate, it would be better to run



CPU as fast as possible and the impaction of the slower Flash can be neglected.

5.2.3 Computational Intensive vs Hardware Timing

There are computational intensive jobs, and there are slow hardware operations that need quite some time to complete. Different strategies shall be considered.

For computational intensive jobs, check section CPU on how to let it run more efficiently. For slow hardware operations, check if sleep modes can be utilized; if not, consider changing to a lower clock frequency for CPU, Flash, and notably *hclk*.

Chapter 6

FAQ

- **Q**: Why do the reconfiguration in event handler of waking up? The framework can remember all peripheral configurations and reconfigure them.
- A: Configure a peripheral is not an easy job like writing a bulk of registers. It's impractical to
 handle all peripherals one by one. On the other hand, it's easy for Apps to reconfigure them,
 as the code is ready there.
- **Q**: What happened to CPU in sleep modes of Category B?
- A: It's powered off.

• **Q**: How to debug programs when power saving is enabled?

• A: It depends on which part of programs need to be debugged.

For the part between PLATFORM_CB_EVT_QUERY_DEEP_SLEEP_ALLOWED and PLATFORM_CB_EVT_ON_DEEP_SLEEP_WAKEUP, it's generally not debug-able.

For other parts, firstly, disable power saving and debug it as usual. After everything is OK, reenable power saving. Or, in the handler of PLATFORM_CB_EVT_QUERY_DEEP_SLEEP_ALLOWED check if debugger is attached, and if so, disallow sleep modes of Category B:

```
uint32_t query_deep_sleep_allowed(void *dummy,
    void *user_data)
{
    if (IS_DEBUGGER_ATTACHED())
        return 0;
    // ....
}
```

