Parquinho de Atividades

ref. 0995.4

ASSEMBLY INSTRUCTIONS

Assembly video on YouTube:
youtu.be/TlkPxxjigBc



Product size: **7 ft 10 in × 3 ft 5 in × 4 ft 4 in (2.39 × 1.04 × 1.32 m)**
Play set with a platform, slide, goal with net, basketball hoop and tic-tac-toe with 9 turning cubes
Includes 1 ball
Several children can play at the same time: one on the platform and the others at the basketball hoop, the goal and the tic-tac-toe
To be assembled by an adult, with a 10 mm wrench.
7 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Follow this order: the **cubes** on the **wall**, the wall on the **side frames**, the **floor**, the **bars**, the **goal net**, the **hoop** and the **slide**.
- Only fully tighten the screws once the parts are fitted.
- Assemble on level ground: on uneven ground the parts will not line up.


Tools

- **10 mm open-end or combination wrench**: M6×45 screws (14 pcs, steps 3, 4 and 6)

There are no specific tightening torques for the fasteners. The rivet nuts come already fitted in the parts.

Screws in this playground


Each type has its own color. The same card appears in each step and in the assembly video.

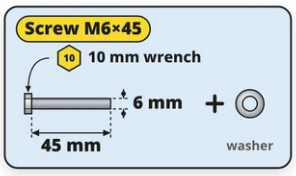


14× Screw M6×45 · steps 3, 4 and 6

PARTS LIST

Parquinho de Atividades parts



SIDE FRAME (A) **2×**
No. 1 · ref. 995402



RED WALL (B) **1×**
No. 2 · ref. 995403



CUBE (C) **9×**
No. 3 · ref. 957608



FLOOR (D) **1×**
No. 4 · ref. 995404



BAR (E) **2×**
No. 5 · ref. 987602

GOAL NET (F) **1×**
No. 6 · ref. 2070144



BASKETBALL HOOP (G) **1×**
No. 7 · ref. 988702



SLIDE (H) **1×**
No. 8 · ref. 995405



SCREW M6×45 **14×**
No. 9 ·
ref. 2090194




WASHER M8 **14×**
No. 10 ·
ref. 2090185

PRODUCT ASSEMBLY

Step by step


In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1 STEP 1 OF 7
Cubes on the wall

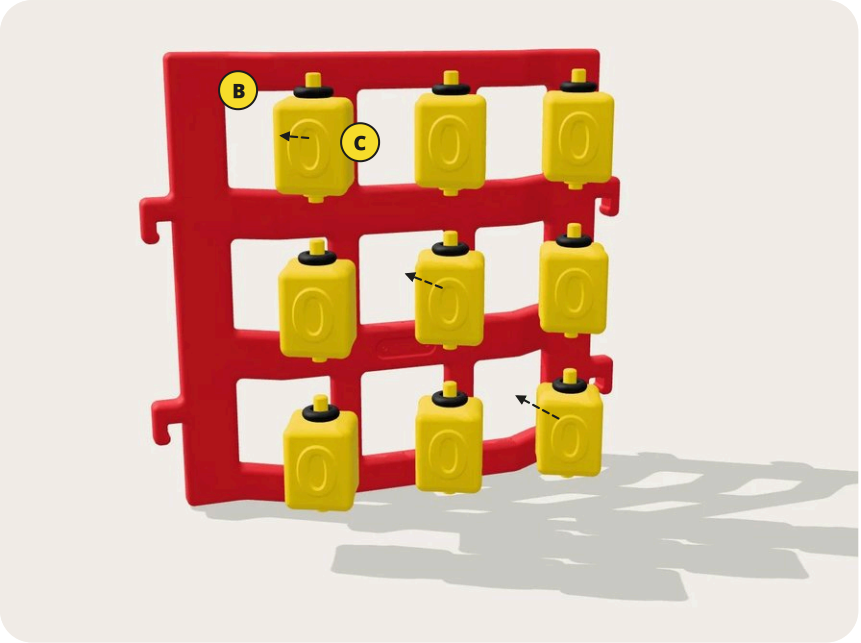

B Red wall (B)

C Cube (C)

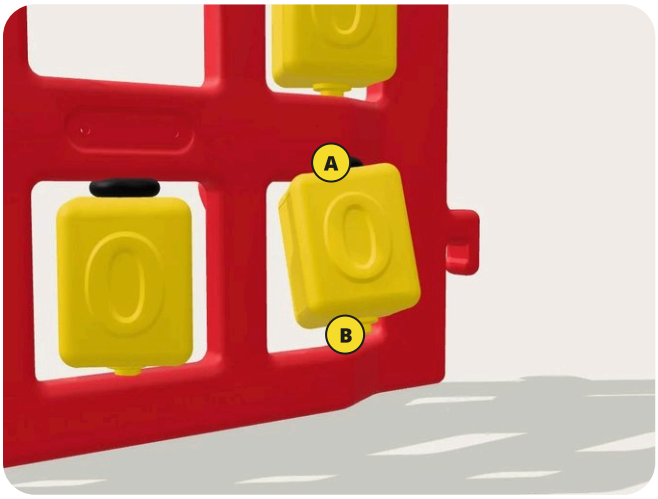

The top pin goes in first; then the bottom pin

A Top pin: goes in first

B Bottom pin: then

Lay out the parts: the 2 **side frames (A)**, the **red wall (B)**, the 9 **cubes (C)**, the **floor (D)**, the 2 **bars (E)**, the **goal net (F)**, the **basketball hoop (G)**, the **slide (H)**, the ball and the 14 screws with washers.

Each cube has a pin on top, the longer one, and one underneath. First put the top pin into the upper hole of the wall, pushing the cube up.

Then bring the bottom pin to the lower hole and let go of the cube: it drops in and turns freely. Do the same with all 9 cubes.


PARTS FOR THIS STEP



9× Cube (C)
ref. 957608




1× Red wall (B)
ref. 995403

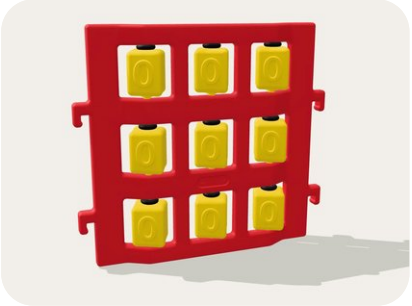

How it looks at the end of step 1

STEP 2 OF 7


2 Wall on the side frames

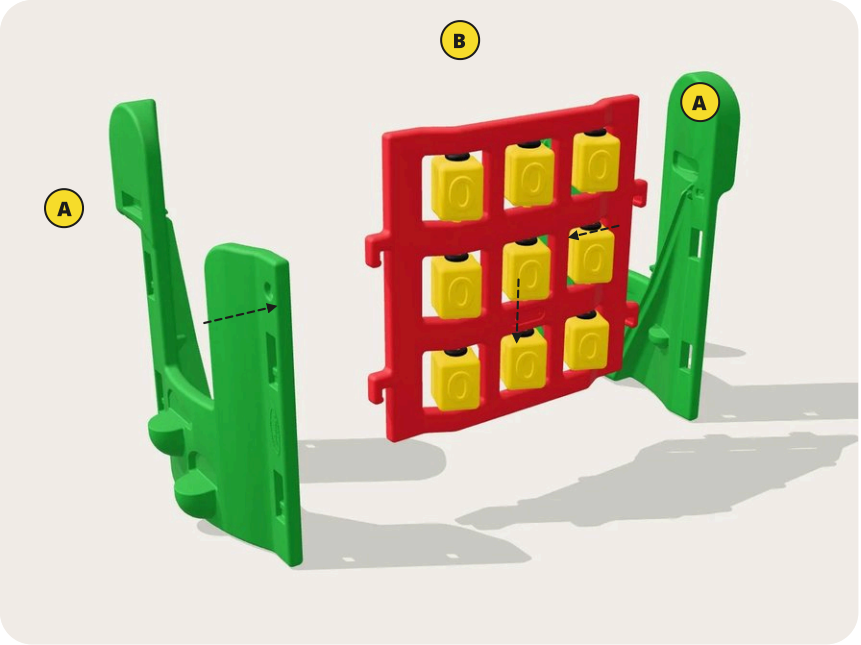

A Side frame (A)

A Side frame (A)

B Wall (B)

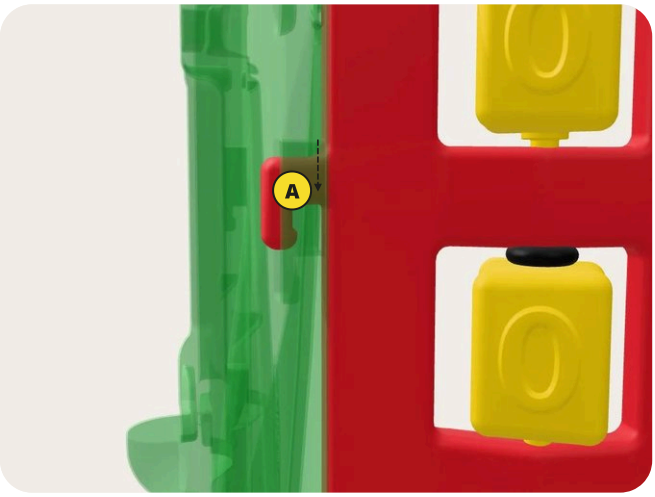

The wall hooks go down over the side frame's post

A Wall hook

Stand the 2 **side frames (A)** upright, facing each other.


Lift the **red wall (B)** about 5 cm (2 in) above its final position, with the hooks at its ends over the posts of the side frames, and lower it: the hooks lock onto both side frames.

CAUTION
With a second person holding the side frames, fitting is easier and the parts will not tip over.

PARTS FOR THIS STEP




2× Side frame (A)
ref. 995402

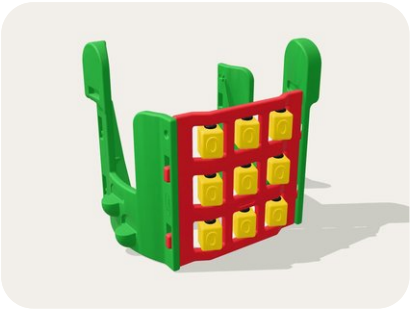


How it looks at the end of step 2

STEP 3 OF 7

3 Platform

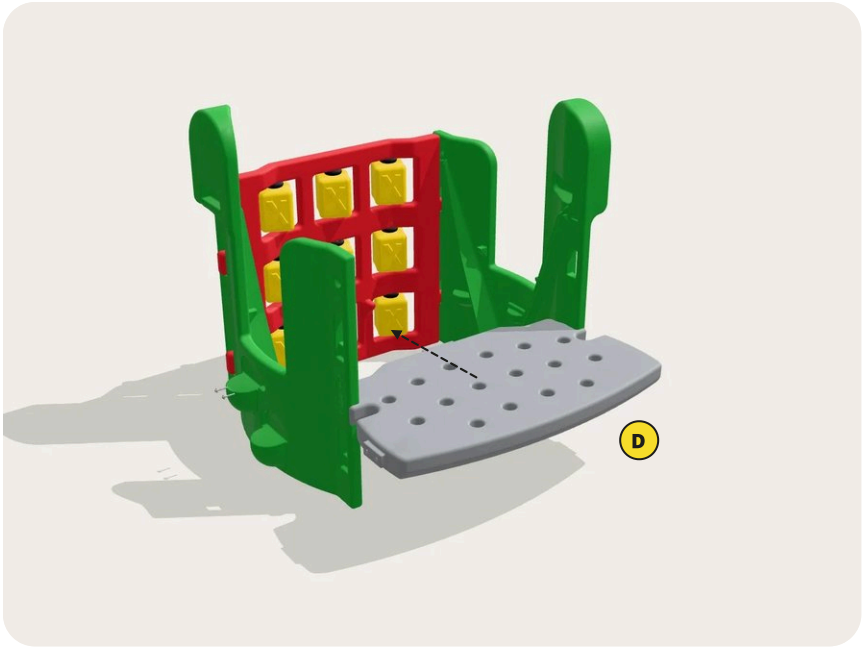

D Floor (D)

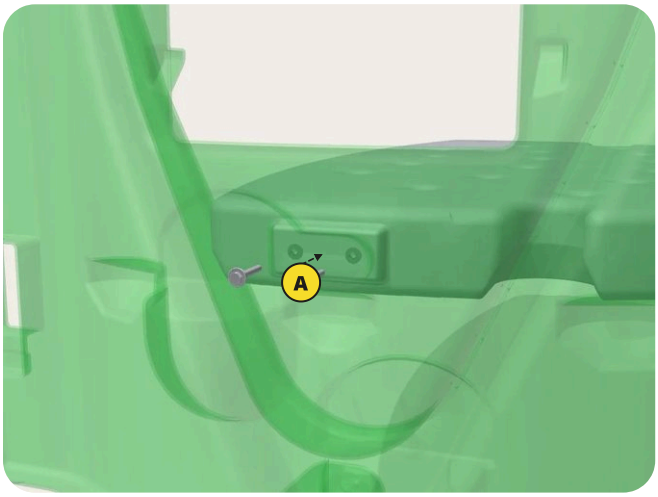

Floor screws, from outside the side frame

A Screw M6×45 + washer, from outside the side frame


Fit the **floor (D)** between the side frames from the open side, the goal side, and push it until it touches the wall.

Fix the floor with 6 M6×45 screws with washers: 2 from outside each side frame and 2 from outside the red wall. Use the 10 mm wrench.

PARTS FOR THIS STEP

- **1×** Floor (D) ref. 995404
- **6×** Screw M6×45 ref. 2090194
- **6×** Washer one on each screw

SCREW AND TOOL

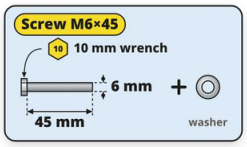


Tool: **10 mm wrench.**



How it looks at the end of step 3


STEP 4 OF 7

4 Bars

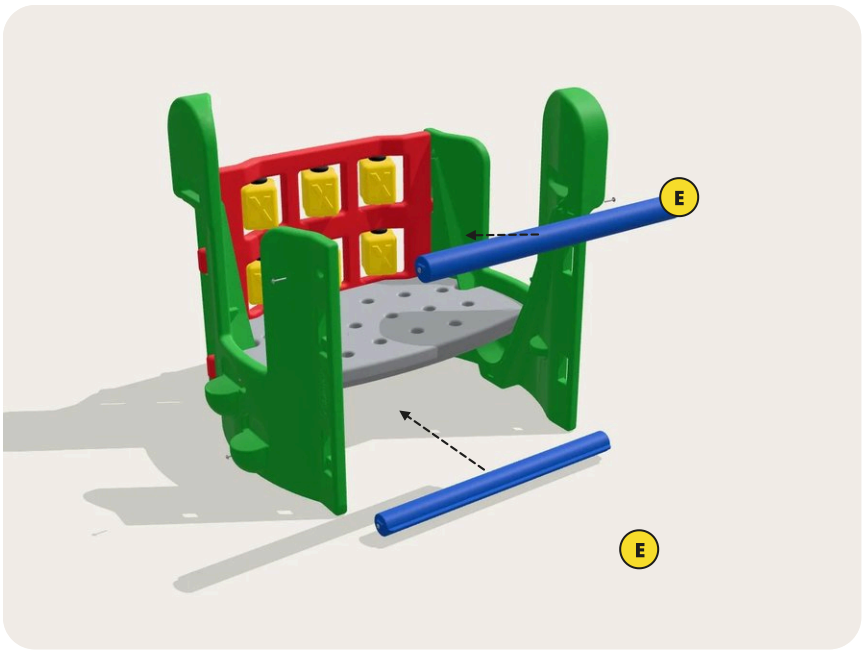

E Bar (E)

E Bar (E)

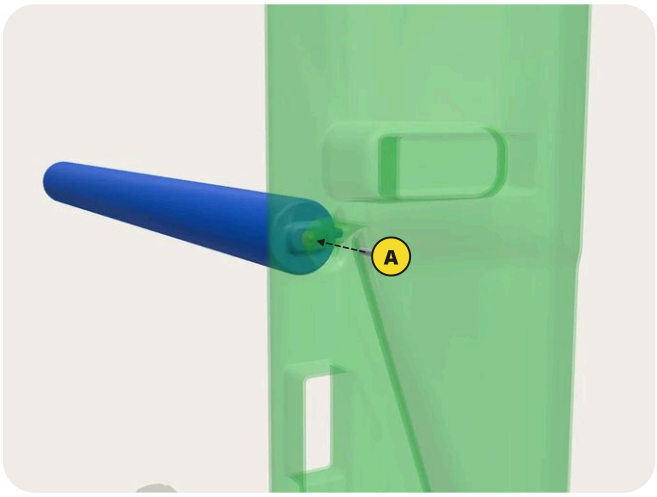

One screw at each end of the bar, from outside the side frame

A Screw M6×45 + washer at the bar's end

Place one **bar (E)** up high, between the ends of the side frames on the open side, and the other one low, near the ground.

Fix each end with 1 M6×45 screw with washer, from outside the side frame: 4 screws in all.


PARTS FOR THIS STEP

2× Bar (E) ref. 987602

4× Screw M6×45 ref. 2090194

4× Washer one on each screw

SCREW AND TOOL

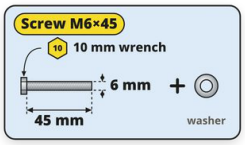

Tool: **10 mm wrench.**



How it looks at the end of step 4

STEP 5 OF 7

5 Goal net



F Net (F)

Tie the end of the cord of the **goal net (F)** to the first hole of the top bar.

Run the cord between the links of the net and the holes of the bar, to the end of the bar. Repeat on the other three sides of the net.

PARTS FOR THIS STEP


1× Goal net (F)
ref. 2070144




How it looks at the end of step 5

STEP 6 OF 7

6 Basketball hoop

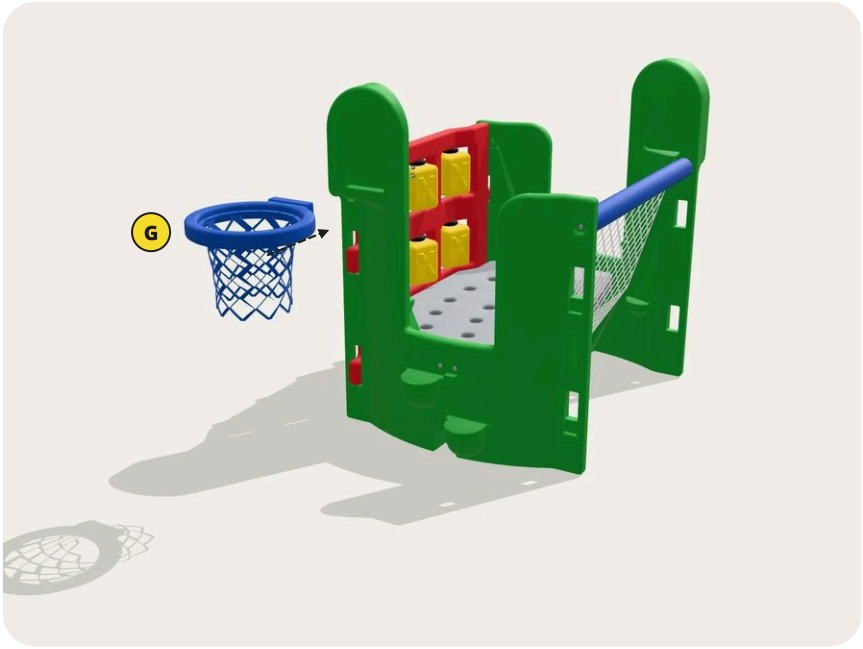

G Basketball hoop (G)

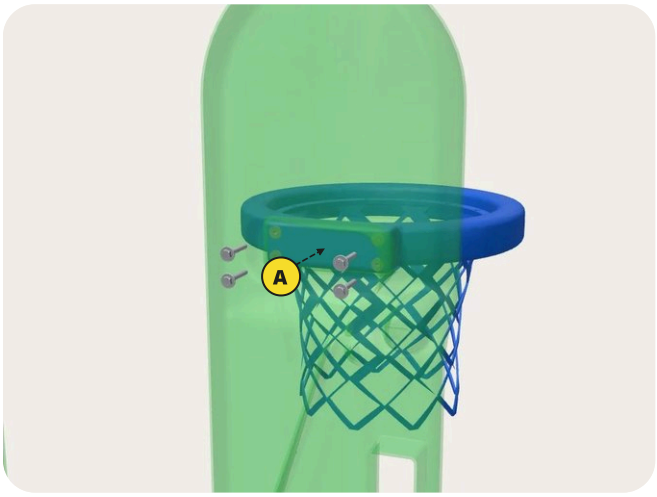

4 hoop screws, put in from inside the side frame

A 4 screws M6×45 + washer, from inside

If the hoop's net comes loose, tie it to the **basketball hoop (G)**.

Hold the hoop against the backboard of the side frame, on the outside, and fix it with 4 M6×45 screws with washers, put in from inside the side frame.


PARTS FOR THIS STEP

1× Basketball hoop (G) ref. 988702

4× Screw M6×45 ref. 2090194

4× Washer one on each screw

SCREW AND TOOL

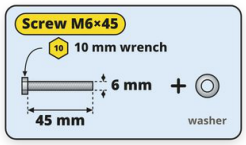

Tool: **10 mm wrench.**



How it looks at the end of step 6

STEP 7 OF 7

7 Slide



H Slide (H)

Fit the **slide (H)** on the other side frame: lower the hooks at its top end into the slots of the side frame, with the other end on the ground.

PARTS FOR THIS STEP




1× Slide (H)
ref. 995405



How it looks at the end of step 7


FASTENING DETAILS

How each part is held

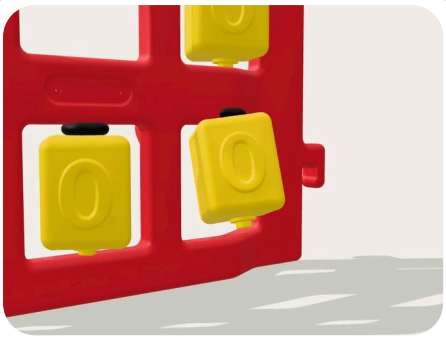


Cubes

Top pin into the upper hole first; then the bottom pin into the lower hole.

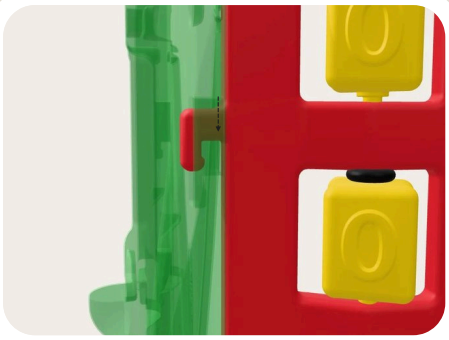


Wall

The hooks at its ends go down over the posts of both side frames.

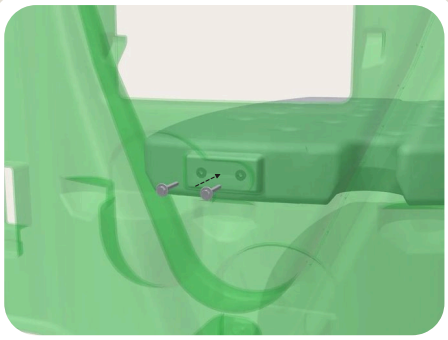

Platform

6 screws: 2 from outside each side frame and 2 from outside the wall.

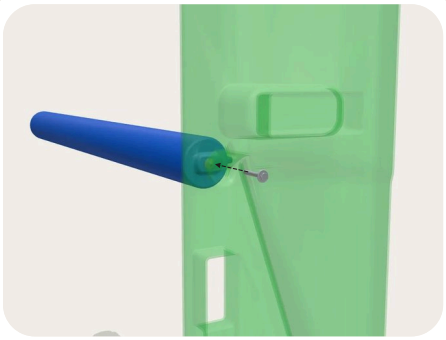


Bars

1 screw at each end, from outside the side frame.



Basketball hoop

4 screws, put in from inside the side frame.

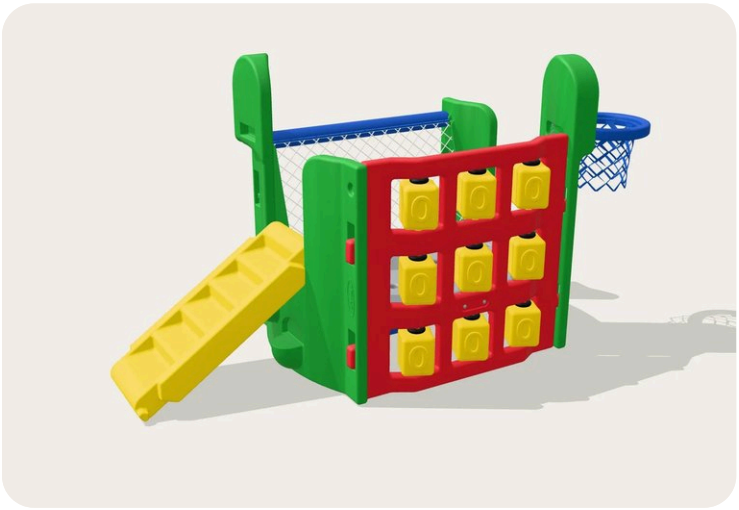


Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Check that the 14 screws are tight, that the wall is fitted on both side frames, that the slide is held and that the 9 cubes turn.

INSTALLATION DETAILS

Location and safety area

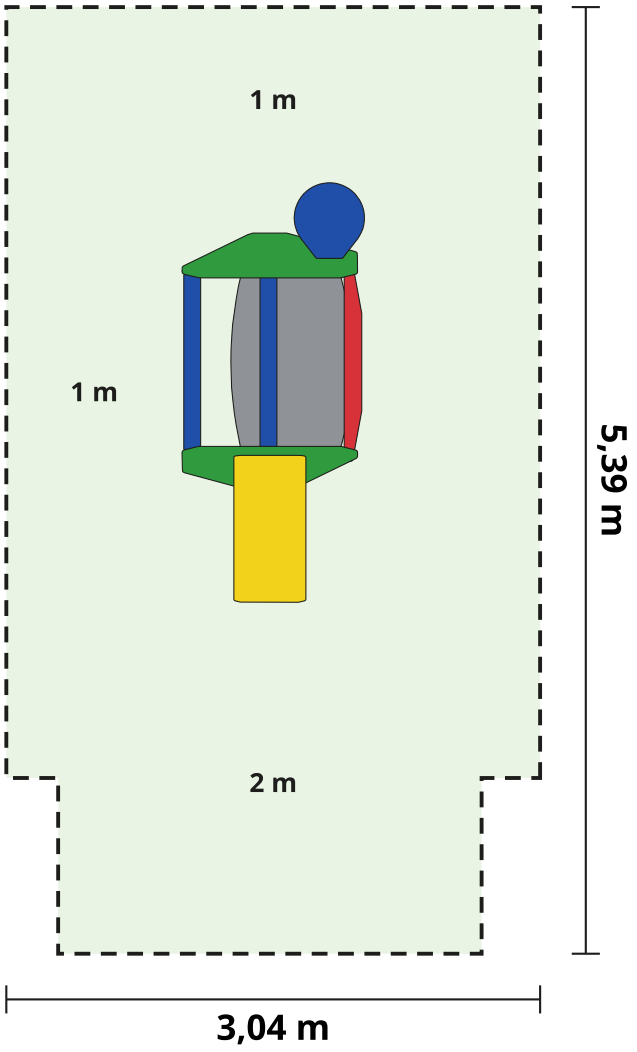

Area reserved for installation and impact (top view): 1 m (3 ft 3 in) clear around it and 2 m (6 ft 7 in) at the slide's exit, 3.04 × 5.39 m (10 ft × 17 ft 8 in). Product size: 2.39 × 1.04 × 1.32 m.

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Fall space: neighboring static equipment with overlapping fall spaces must be at least 1.50 m apart for a fall height of up to 600 mm, and 2.50 m for higher falls. Maximum fall height of this product: **390 mm**.

Slide landing area: at least 1000 mm from the sides of the run-out section and 2000 mm (type 01 run-out) or 1000 mm (type 02 run-out) from the end of the run-out section.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Space taken: the assembled play set takes about 2.39 × 1.04 m (7 ft 10 in × 3 ft 5 in) of floor, counting the slide and the hoop; keep 1 m (3 ft 3 in) clear around it and 2 m (6 ft 7 in) at the slide's exit, as in the figure.

Use the product on grass, sand, carpet or another soft, level surface.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

INSPECTION AND MAINTENANCE

Keep the playground safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Screws tight, wall fitted, slide held and cubes turning

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Parquinho de Atividades · ref. 0995.4
Keep this manual for future reference.