# Universo dos Fofossauros

ref. 2060.9

**ASSEMBLY INSTRUCTIONS**

Assembly video on YouTube:
**youtu.be/rdZQVMWfK2s**

Product size: **9,73 × 7,15 × 2,27 m**
Playground with 8 towers joined by 7 bridges, double swing, 2 sectional slides, curved slide, 2 tunnel slides, 3 ramps, 2 climbing walls and 17 tree tops
Age: 3 to 8 years. Maximum load of 80 kg per platform.
Assembly by adults. Ask a second person to help carry the slides, the tunnels and the bridges to the modules.
103 steps · keep this manual for future reference.

BEFORE YOU START

# Read carefully

## Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

## Assembly rules

- Mind the tube orientation: the **holes always face up**.
- Every screw must go in with a **washer**, for a more even and secure tightening.
- Walls always with the **rivet nuts facing out**, and always an **EVA spacer** between two walls.
- Slides, ramps and bridges are bolted to the platform **from the bottom up**.
- Where the slide sections join, **do not swap the screws**: 5/16" × 2" with nut on the flanges and M8×40 in the recess.
- Build in the order of the modules (1 to 9): each new module is joined to the previous one by a bridge.

## Tools

- **10 mm open-end or combination wrench**: M6×90 screws (32 pcs, steps 9, 25, 37, 53, 63, 76, 87 and 99) and M6×45 screws (132 pcs, steps 14, 18, 27–29, 39, 42–46, 55, 67, 68, 78, 79, 89–92 and 101–103)
- **13 mm open-end or combination wrench**: M8×40 screws (10 pcs, steps 11, 40, 41, 65 and 66)
- **2 × 13 mm wrenches** (or a wrench + a 13 mm socket): 5/16" × 2 1/4" screws with nut (21 sets, steps 10, 12, 13, 15, 26, 38, 54, 64, 77, 88 and 100) and M8×70 screws with nut (2 sets, step 11) and 5/16" × 2" screws with nut (16 sets, steps 40, 41, 65 and 66). One holds the nut while the other turns the screw.
- Pliers

There are no specific tightening torques for the fasteners. The rivet nuts come already fitted in the parts.

# Screws in this playground

Each type has its own color. The same card appears in each step and in the assembly video.

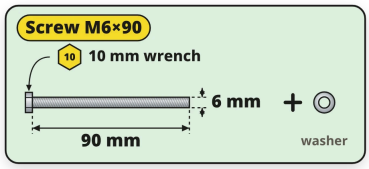


**32×** Screw M6×90 · steps 9, 25, 37, 53, 63, 76, 87 and 99

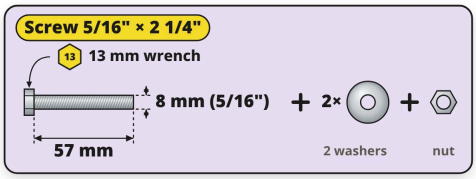


**21×** Screw 5/16" × 2 1/4" · steps 10, 12, 13, 15, 26, 38, 54, 64, 77, 88 and 100

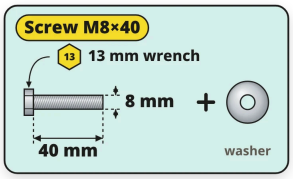


**10×** Screw M8×40 · steps 11, 40, 41, 65 and 66

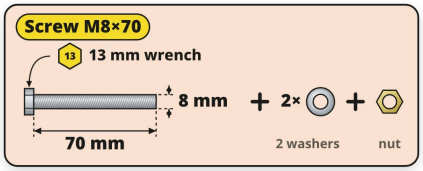


**2×** Screw M8×70 · step 11

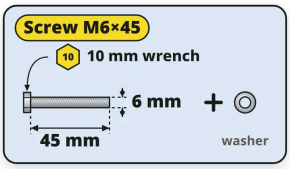


**132×** Screw M6×45 · steps 14, 18, 27–29, 39, 42–46, 55, 67, 68, 78, 79, 89–92 and 101–103

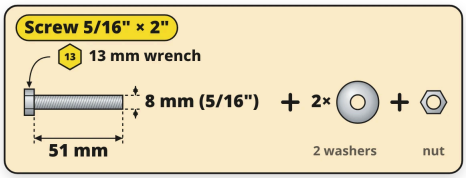


**16×** Screw 5/16" × 2" · steps 40, 41, 65 and 66

PARTS LIST

# Universo dos Fofossauros parts

**M6 RIVET** — **416×**
No. 1 · ref. 2090183 · already fitted

**BROWN PLATFORM** — **8×**
No. 2 · ref. 1022110

**HEX SCREW M6×45 mm** — **132×**
No. 3 · ref. 2090194

**M8 WASHER – Ø24 mm** — **236×**
No. 4 · ref. 2090347



**TUBE 2210** — **16×**
No. 5 · ref. 1022130

**LEG** — **14×**
No. 6 · ref. 998708

**TUNNEL SLIDE WALL** — **2×**
No. 7 · ref. 998730

**HEX SCREW M6×90 mm** — **32×**
No. 8 · ref. 2090460

**EVA SEAL** — **30×**
No. 9 · ref. 998728

**TRIX FOFOSSAURO WALL, ORANGE** — **2×**
No. 10 · ref. 1022111

**LEFT EYE (BIU)** — **6×**
No. 11 · ref. 935404

**RIGHT EYE (BIU)** — **6×**
No. 12 · ref. 935405

**FOFOSSAUROS CLIMBING WALL** — **2×**
No. 13 · ref. 1022103

**SCOT FOFOSSAURO WALL, GREEN – NO SWING** — **2×**
No. 14 · ref. 1022112

**EYE (GUGA)** — **14×**
No. 15 · ref. 951002

**ORANGE STRIPED WALL** — **7×**
No. 16 · ref. 998726

**FOFOSSAUROS PLATFORM COVER** — **4×**
No. 17 · ref. 1022105

**FOFOSSAUROS TREE TOP** — **17×**
No. 18 · ref. 1022104

**SMALL BLACK END CAP** — **17×**
No. 19 · ref. 2090439

**HEX SCREW UNC 5/16" × 2 1/4"** — **21×**
No. 20 · ref. 2090392

**5/16" NYLON SELF-LOCKING NUT** — **37×**
No. 21 · ref. 2090370



**SHORT TUBE 1550** — **14×**
No. 22 · ref. 1003202

**TUBE CAP** — **16×**
No. 23 · ref. 1100137

**TUNNEL SLIDE** — **2×**
No. 24 · ref. 998702

**TUNNEL SLIDE BASE** — **4×**
No. 25 · ref. 998714

**SMALL CROSSBAR** — **4×**
No. 26 · ref. 953203

**BRIDGE** — **7×**
No. 27 · ref. 1000902

**TRIX FOFOSSAURO WALL, GREEN** — 4×
No. 28 · ref. 1022101

**SCOT FOFOSSAURO WALL, PURPLE – NO SWING** — 4×
No. 29 · ref. 1022102

**YELLOW STRIPED WALL** — 3×
No. 30 · ref. 998707

**ORANGE WALL WITH DOTS** — 2×
No. 31 · ref. 998706



**TUBE 1600** — 2×
No. 32 · ref. 1022134

**BLUE RAMP** — 3×
No. 33 · ref. 1022114

**YELLOW WALL WITH DOTS** — 4×
No. 34 · ref. 998727

**CURVED SLIDE** — 1×
No. 35 · ref. 998703

**SLIDE – ENTRY SECTION** — 2×
No. 36 · ref. 1022107

**HEX SCREW UNC 5/16" × 2"** — 16×
No. 37 · ref. 1090113

**M8 RIVET NUT** — 10×
No. 38 · ref. 2090448

**HEX SCREW M8×40** — 10×
No. 39 · ref. 2090320



**SLIDE – STRAIGHT SECTION** — 2×
No. 40 · ref. 1022108

**SLIDE – EXIT SECTION** — 2×
No. 41 · ref. 1022109

**SCOT FOFOSSAURO WALL, GREEN – FOR THE SWING** — 1×
No. 42 · ref. 1022115

**MULTI-SWING METAL CLAMP** — 1×
No. 43 · ref. 954312

**M8 FLAT WASHER** — 4×
No. 44 · ref. 2090185

**SWING BASE** — 1×
No. 45 · ref. 1022106

**HEX BOLT M8×70, FULLY THREADED** — 2×
No. 46 · ref. 2090329

**MULTI-SWING TUBE 2450 mm** — 1×
No. 47 · ref. 1004301

**MULTI-SWING LARGE HOOK** — 4×
No. 48 · ref. 954313

**TUBE 1665 mm** — 2×
No. 49 · ref. 1022117

**FOFOSSAUROS METAL CLAMP** — 1×
No. 50 · ref. 1022116

**SWING SEAT** — 2×
No. 51 · ref. 935504

**SWING LEG REST** — 2×
No. 52 · ref. 935503



**SWING ROPE** — 4×
No. 53 · ref. 2090274

**SWING BACKREST** — 2×
No. 54 · ref. 935502

**HOOK** — 4×
No. 55 · ref. 287605

**WALL WITH WINDOW** — 1×
No. 56 · ref. 1000903

PRODUCT ASSEMBLY

# Step by step

In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

---

1

STEP 1 OF 103 · MODULE 1 – SWING TOWER

## Module 1: legs and platform

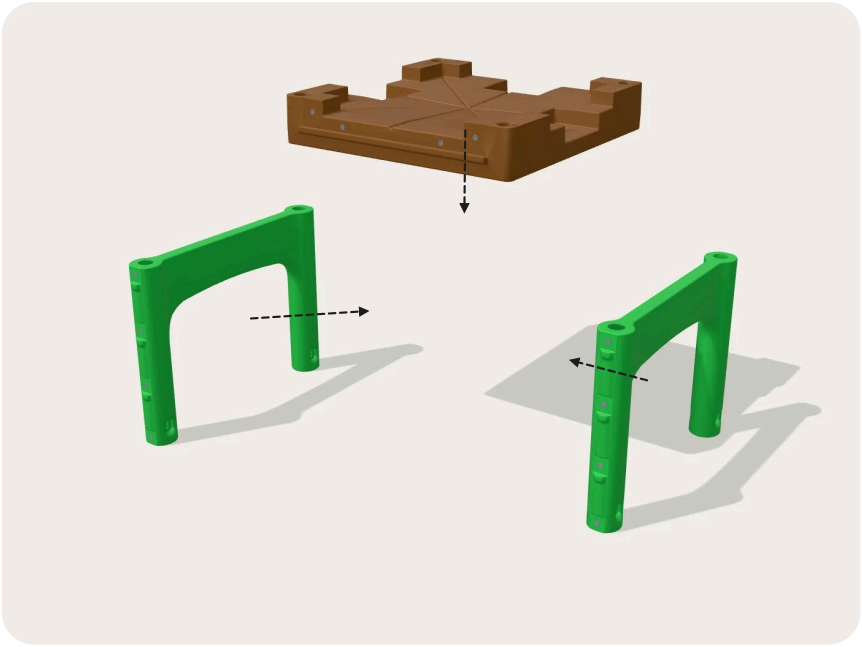

Stand the **2 legs** parallel and rest the **platform** on them, fitting the corners.

PARTS FOR THIS STEP

**2×** Leg
ref. 998708

**1×** Brown platform
ref. 1022110

**How it looks at the end of step 1**

STEP 2 OF 103 · MODULE 1 – SWING TOWER

# 2 Tubes: 2 tubes of 2210 mm and 1 of 1550 mm

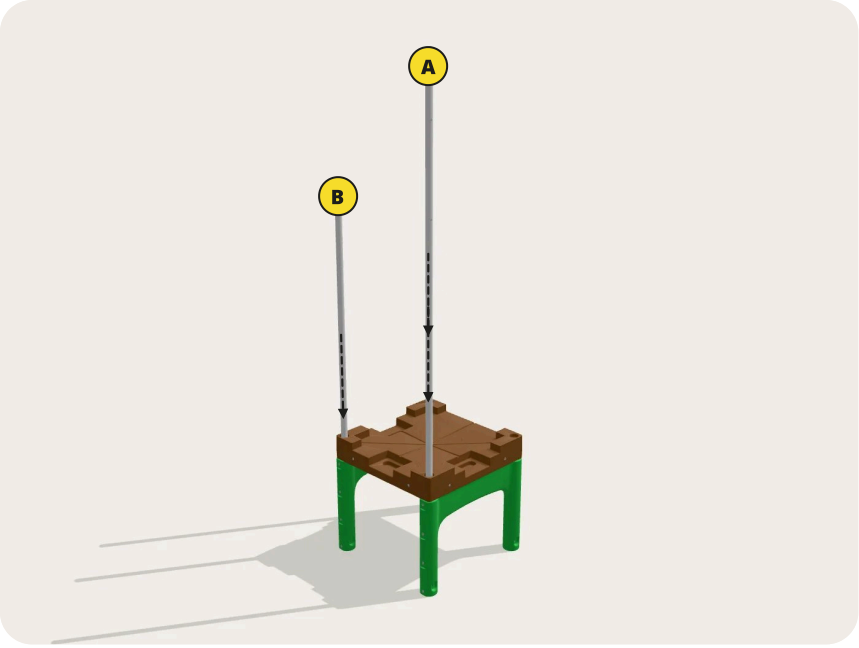


A Tubes 2210 mm (2)

B Tube 1550 mm

Insert **2 tubes of 2210 mm and 1 of 1550 mm** in the corners shown, all the way down.

The last corner stays without a tube for now: the 1550 mm tube goes there, after the walls.

**CAUTION**
Tube holes **always facing up**.

## PARTS FOR THIS STEP

**1×** Tube 1550 ref. 1003202

**2×** Tube 2210 ref. 1022130

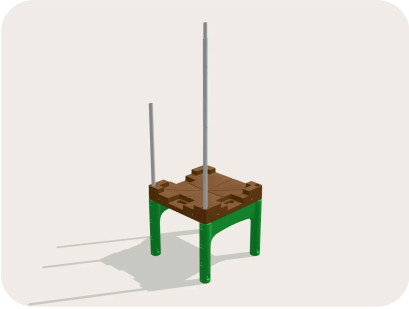

How it looks at the end of step 2

# 3 Identify the walls

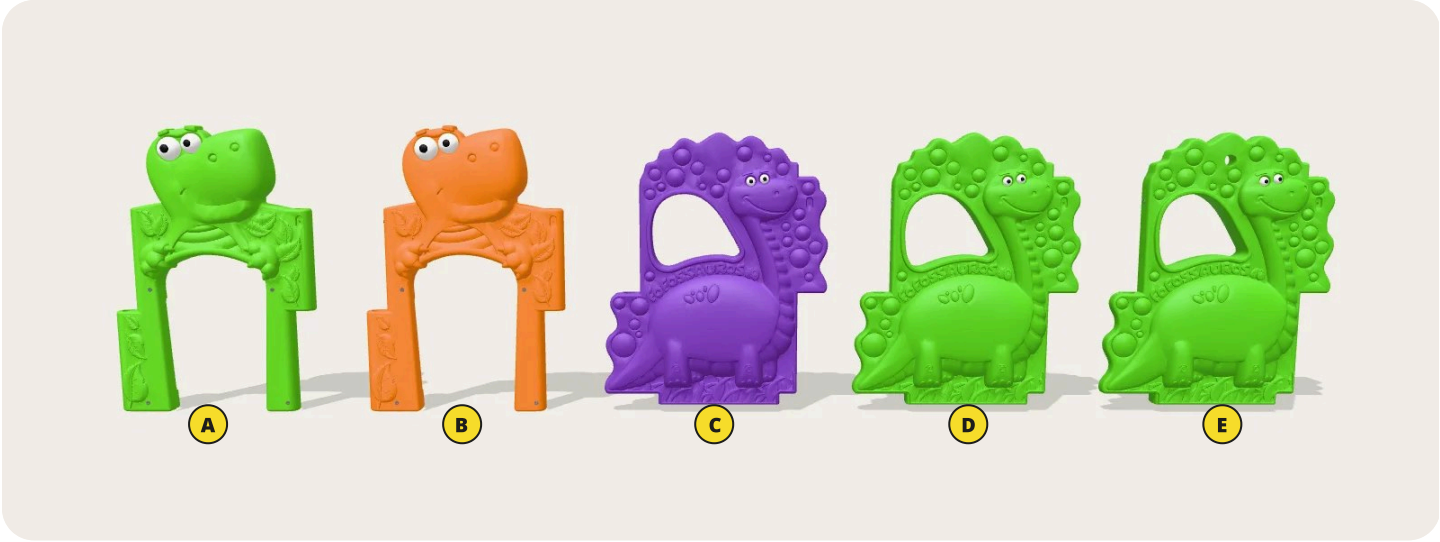


- **A** Green Trix Fofossauro (4)
- **B** Orange Trix Fofossauro (2)
- **C** Purple Scot Fofossauro (4)
- **D** Green Scot Fofossauro (2)
- **E** Green Scot Fofossauro for the swing (1)

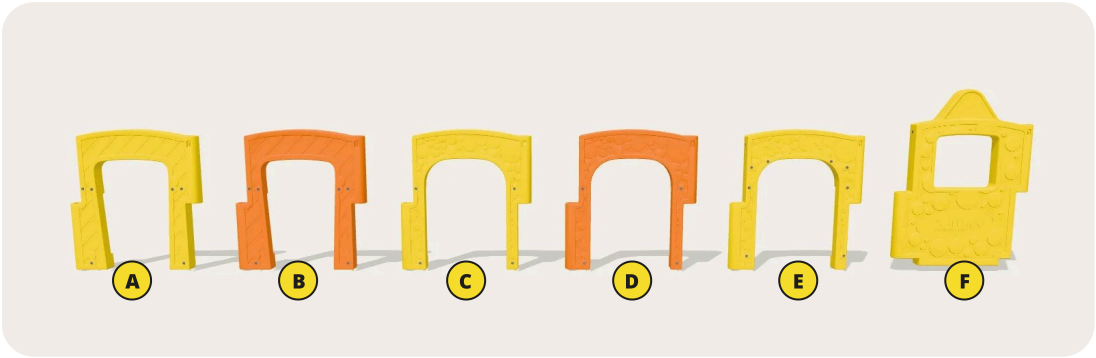


**Striped walls, walls with dots and wall with window**

- **A** Yellow striped wall (3)
- **B** Orange striped wall (7)
- **C** Yellow wall with dots (4)
- **D** Orange wall with dots (2)
- **E** Yellow tunnel wall with dots (2)
- **F** Wall with window (1)

The Universo dos Fofossauros has **32 walls of 11 kinds**, 4 in each module. Sort the walls by kind before you start: each step says which wall goes on each side.

**CAUTION**
When fitting the walls, always keep the **rivets facing out**: they are used to fix the ramps, the slides and the bridges.

STEP 4 OF 103 · MODULE 1 – SWING TOWER

# 4 Orange striped wall and EVA

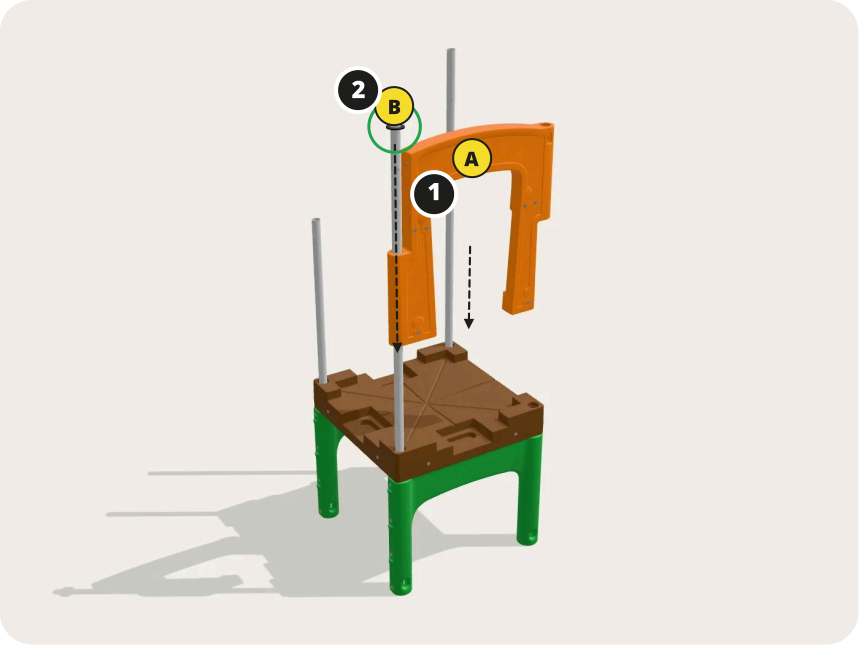


A Orange striped wall: side of the bridge to Module 3

B EVA spacer on top, in the corner

**1.** Fit the **orange striped wall** down the tubes, on the side of the bridge to Module 3.

**2.** Put an **EVA spacer** on top, in the corner shown.

**CAUTION**

The **order of the walls matters**: in each corner, the sleeve of one wall sits below and the other one on top. Follow the order of the steps; out of order, the sleeves clash and the wall will not go down. The EVA spacer goes **on top, before** the wall that closes that corner: there is always an EVA spacer between two walls.

## PARTS FOR THIS STEP

**1×** Orange striped wall
ref. 998726

**1×** EVA seal (spacer)
ref. 998728

How it looks at the end of step 4

STEP 5 OF 103 · MODULE 1 – SWING TOWER

# 5 Yellow wall with dots and EVA

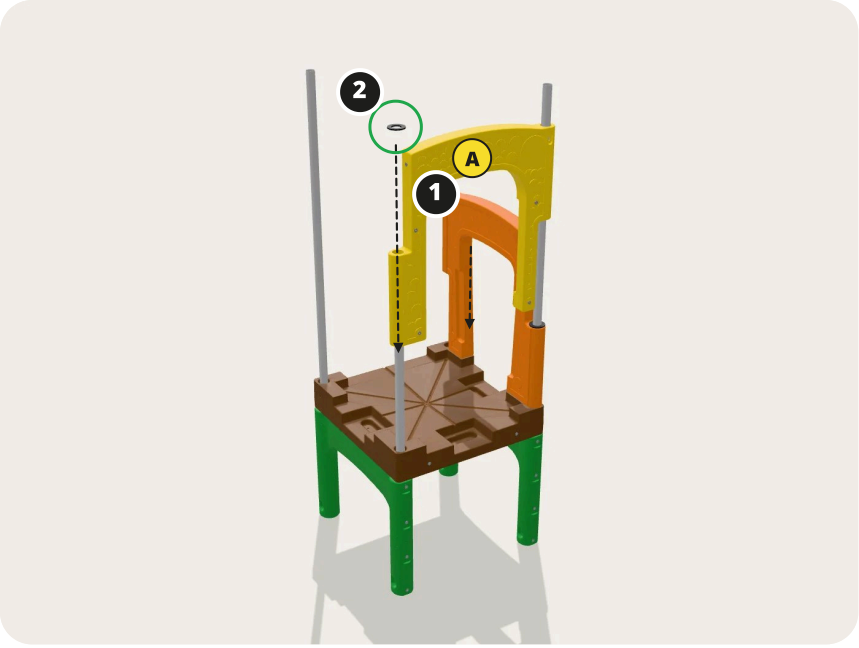


A Yellow wall with dots: side of the bridge to Module 4

**1.** Fit the **yellow wall with dots** down the tubes, on the side of the bridge to Module 4.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Yellow wall with dots
ref. 998727

**1×** EVA seal (spacer)
ref. 998728

How it looks at the end of step 5

STEP 6 OF 103 · MODULE 1 – SWING TOWER

# 6 Orange striped wall and EVA

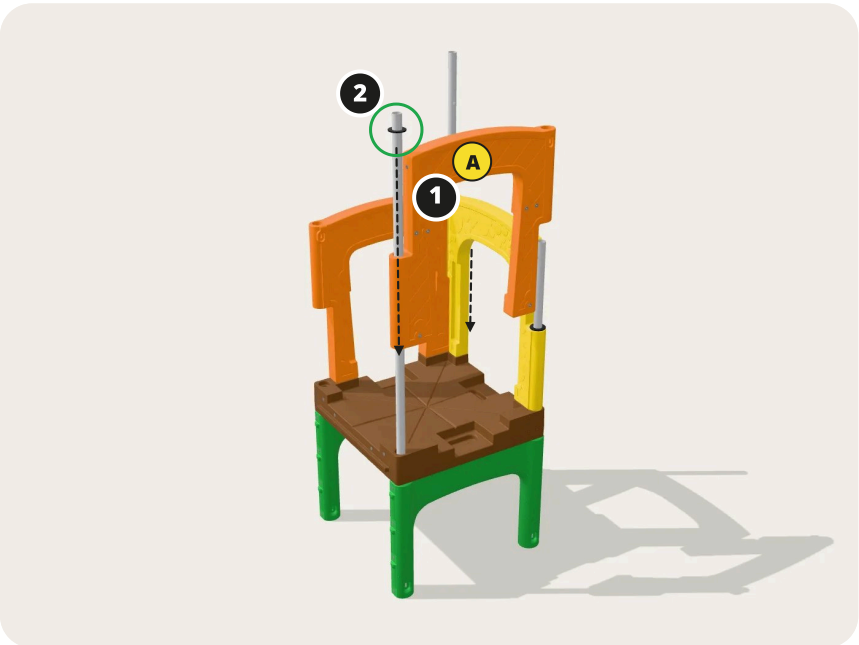


A Orange striped wall: side of the bridge to Module 5

**1.** Fit the **orange striped wall** down the tubes, on the side of the bridge to Module 5.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Orange striped wall
ref. 998726

**1×** EVA seal (spacer)
ref. 998728

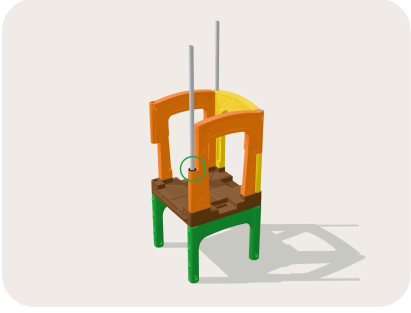

How it looks at the end of step 6

# 7 Green Scot Fofossauro for the swing: comes down open and turns

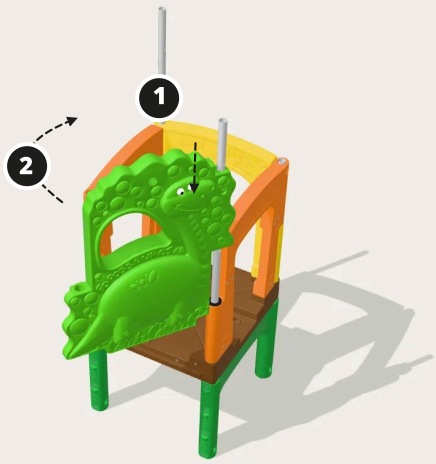


**1.** Fit the end of the **green Scot Fofossauro for the swing** onto the 2210 mm tube in the corner and lower the wall straight down, **open to the outside**.

**2.** With the wall resting on the platform, **turn it around the tube** until it closes the square (swing side): in the corner without a tube, its sleeve goes **under** the sleeve of the orange striped wall.

## PARTS FOR THIS STEP

**1×** Scot Fofossauro wall, green, for the swing
ref. 1022115

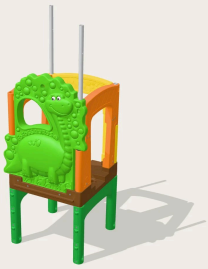

How it looks at the end of step 7

8

STEP 8 OF 103 · MODULE 1 – SWING TOWER

# Last EVA, last tube and caps

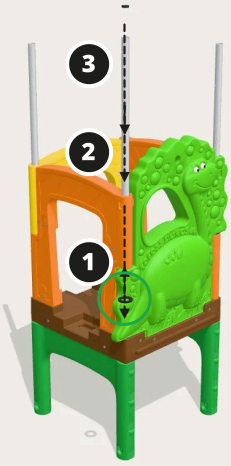


**1.** Slide the last **EVA spacer in from the front**, horizontally, in the corner that still has no tube.

**2.** Lower the last **tube, 1550 mm**: it passes through the wall sleeves and locks the set.

**3.** Fit the **caps** on top of the 2 shorter tubes.

## PARTS FOR THIS STEP

- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 1550 ref. 1003202
- **2×** Tube cap ref. 1100137

How it looks at the end of step 8

# 9 Join the walls: 4 M6×90 bolts

**A** 4 M6×90 bolts + washer, 1 in each corner

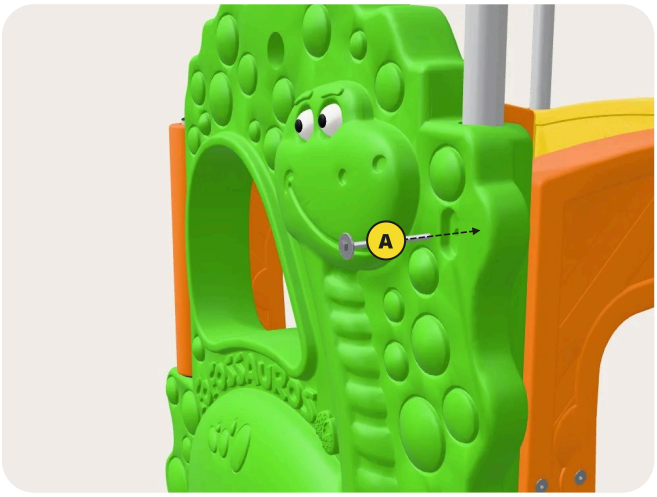


**M6×90 bolt through the walls and the tube**

**A** M6×90 bolt + washer, from the outside in, through the walls and the tube

Join the walls with **4 M6×90 bolts with washer**, 1 in each corner, put in **from the outside in**.

## PARTS FOR THIS STEP

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

**4×** Hex bolt M6×90
ref. 2090460

## SCREW AND TOOL




Tool: **10 mm wrench.**

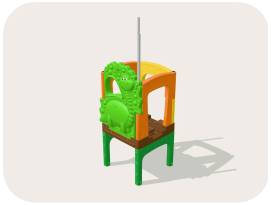

How it looks at the end of step 9

# 10 Tree tops

**A** Tree tops on the 2 tubes of 2210 mm

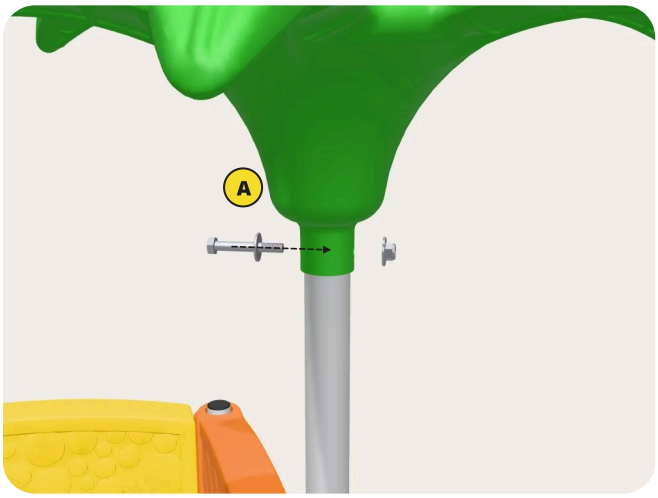


**Fixing the top to the tube**

**A** 5/16" × 2 1/4" bolt + washer on both sides + lock nut

Fit a **tree top** on top of each **2210 mm tube**.

Fix each top with **1 bolt 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 lock nut**, through the top and the tube.

## PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **2×** 5/16" lock nut ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **2×** Small black end cap ref. 2090439

## SCREW AND TOOL




Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

**How it looks at the end of step 10**

# 11 Module 2 – swing: base and tubes

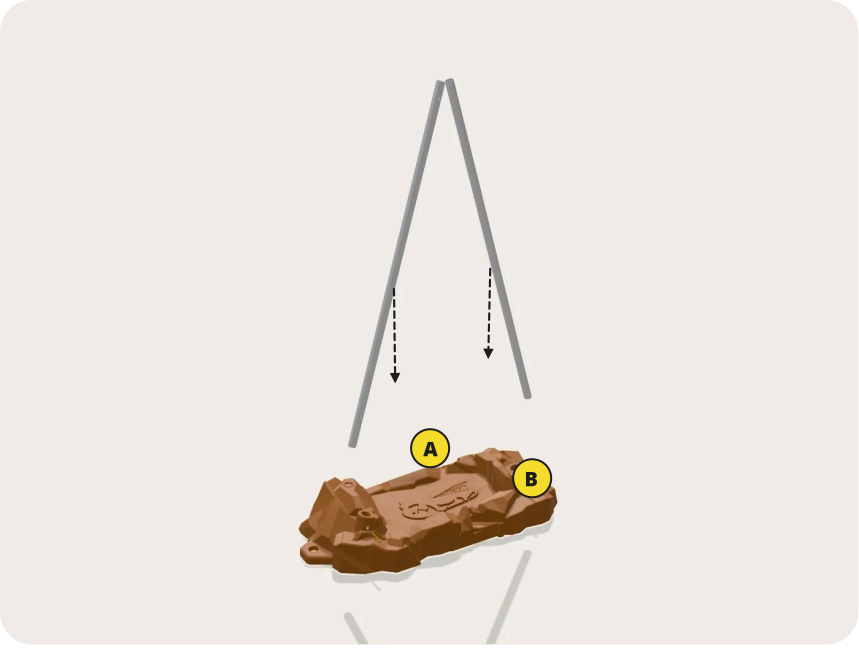


A "Fofossauros" name facing the outside of the playground

B M8×70 bolt + washer on each tube

## SCREWS AND TOOLS

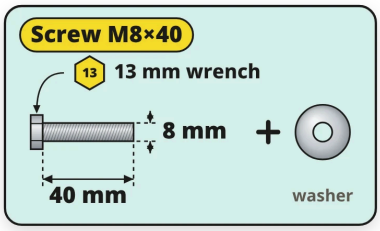


Tool: **13 mm wrench.**

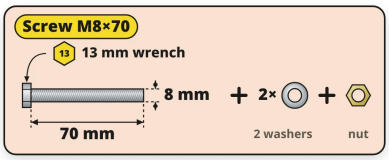


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Place the **swing base** with the name **"Fofossauros" facing out** of the playground, on the side of the green Scot Fofossauro of Module 1.

Fit the **2 tubes of 1665 mm** in the base and fix each one with **1 M8×70 bolt with washer**.

To fix the base to the ground, use **2 M8×40 bolts with washer**; if you do not fix it, fill the base with **sand** through the opening.

## PARTS FOR THIS STEP

- **1×** Swing base ref. 1022106
- **2×** Tube 1665 ref. 1022117
- **2×** Hex bolt M8×40 ref. 2090320
- **2×** Hex bolt M8×70 ref. 2090329
- **2×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

How it looks at the end of step 11

# 12 Swing: metal clamp and tree top

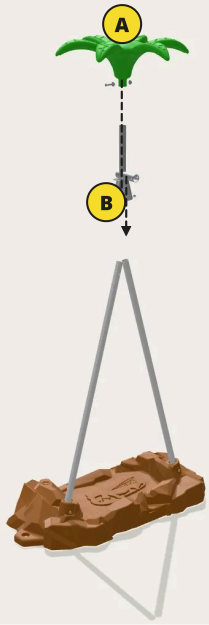


**A** Tree top on the metal clamp: 1 bolt 5/16" × 2 1/4" + 2 washers + nut

**B** Clamp on the 2 tubes: 2 bolts 5/16" × 2 1/4" + nut

## SCREW AND TOOL

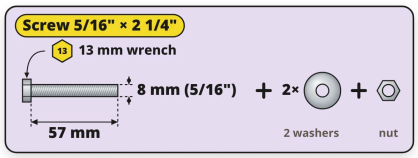


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit the **tree top** on the **Fofossauros metal clamp** and fix it with **1 bolt 5/16" × 2 1/4"**, **2 washers** and a **lock nut**.

Fit the clamp, with the top, on the top of the **2 tubes** coming out of the base and fix it with **2 bolts 5/16" × 2 1/4"** and **lock nut**.

## PARTS FOR THIS STEP

- **1×** Tree top ref. 1022104
- **1×** Fofossauros metal clamp ref. 1022116
- **2×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **3×** 5/16" lock nut ref. 2090370
- **3×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **1×** Small black end cap ref. 2090439

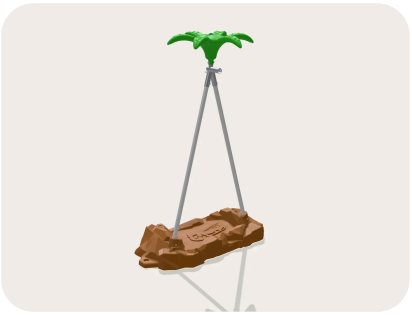

How it looks at the end of step 12

STEP 13 OF 103 · MODULE 2 – SWING

# 13 Swing: multi-swing tube in the clamp

A Multi-swing tube (2450 mm) in the clamp: 1 bolt 5/16" × 2 1/4" + nut

## SCREW AND TOOL

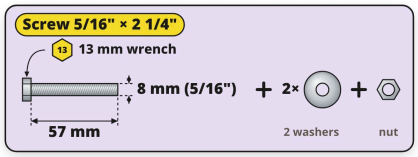


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit the **2450 mm multi-swing tube** (with the 4 hooks facing down) in the **Fofossauros metal clamp**.

Fix it with **1 bolt 5/16" × 2 1/4"** and a **lock nut**.

## PARTS FOR THIS STEP

- **4×** Multi-swing tube hook ref. 954313
- **1×** Multi-swing tube 2450 ref. 1004301
- **1×** 5/16" lock nut ref. 2090370
- **1×** Hex bolt 5/16" × 2 1/4" ref. 2090392

How it looks at the end of step 13

STEP 14 OF 103 · MODULE 2 – SWING

# 14 Swing: clamp on the green Scot Fofossauro

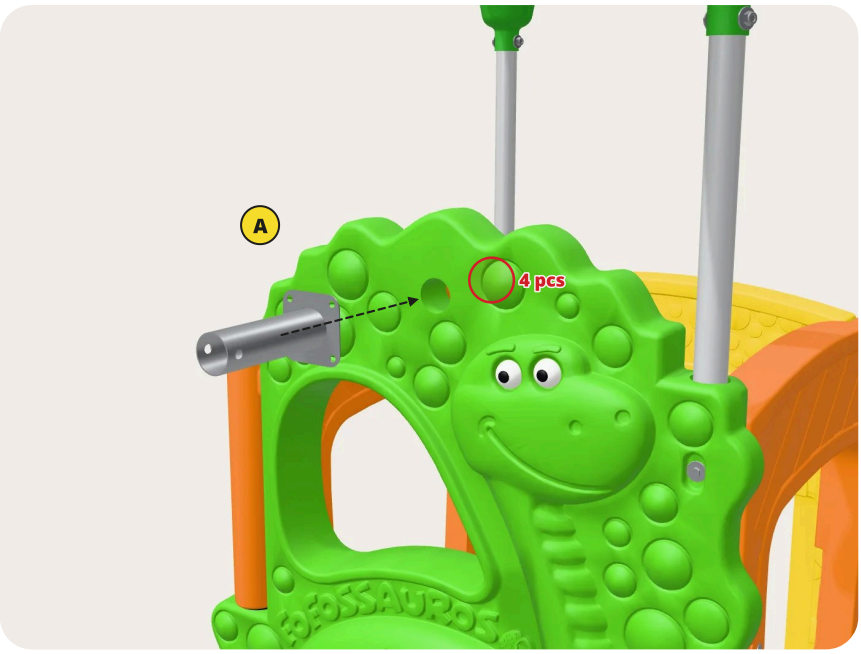


A Multi-swing clamp in the top opening of the green Scot Fofossauro

## SCREW AND TOOL

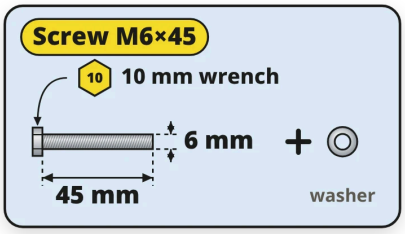


Tool: **10 mm wrench**.

Fit the **multi-swing metal clamp** through the top opening of the **green Scot Fofossauro** of Module 1.

Fix it with **4 M6×45 bolts** with **flat washer**.

## PARTS FOR THIS STEP

- **1×** Multi-swing metal clamp ref. 954312
- **4×** M8 flat washer one on each screw
- **4×** Hex bolt M6×45 ref. 2090194

How it looks at the end of step 14

STEP 15 OF 103 · MODULE 2 – SWING

# 15 Swing: fit to Module 1

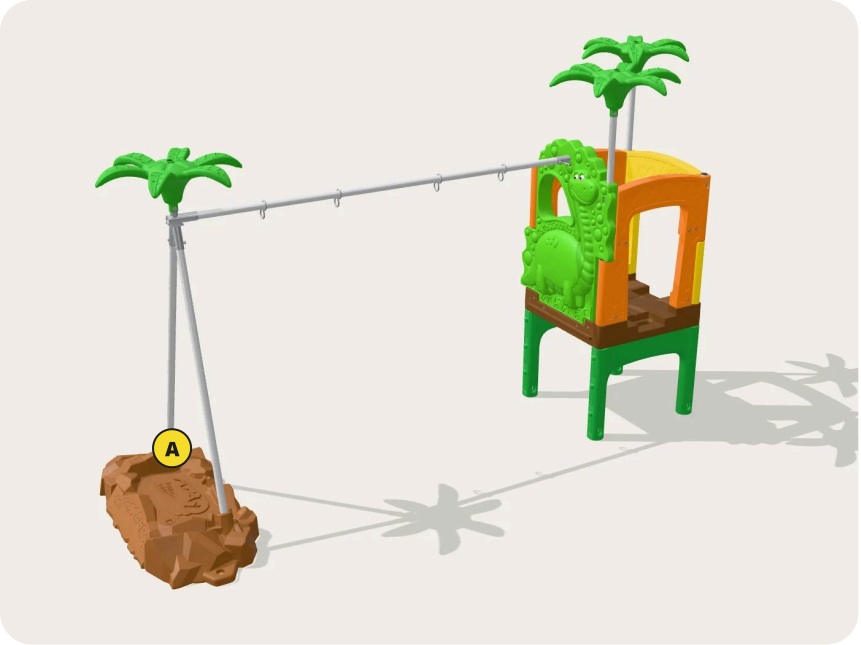


**A** Push the base toward Module 1: the tube goes into the multi-swing clamp

## SCREW AND TOOL

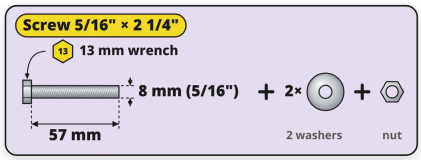


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

**Push** the swing base toward Module 1 until the end of the multi-swing tube goes into the **multi-swing clamp** on the green Scot Fofossauro.

Fix the clamp to the tube with **1 bolt 5/16" × 2 1/4"** and a **lock nut**, through the hole across both parts.

## PARTS FOR THIS STEP

**1×** 5/16" lock nut ref. 2090370

**1×** Hex bolt 5/16" × 2 1/4" ref. 2090392

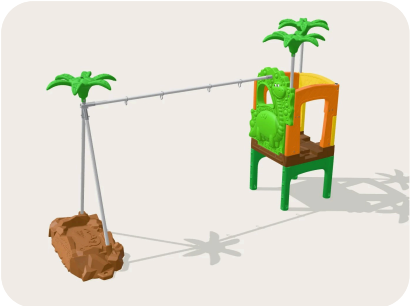

How it looks at the end of step 15

# 16 Swings

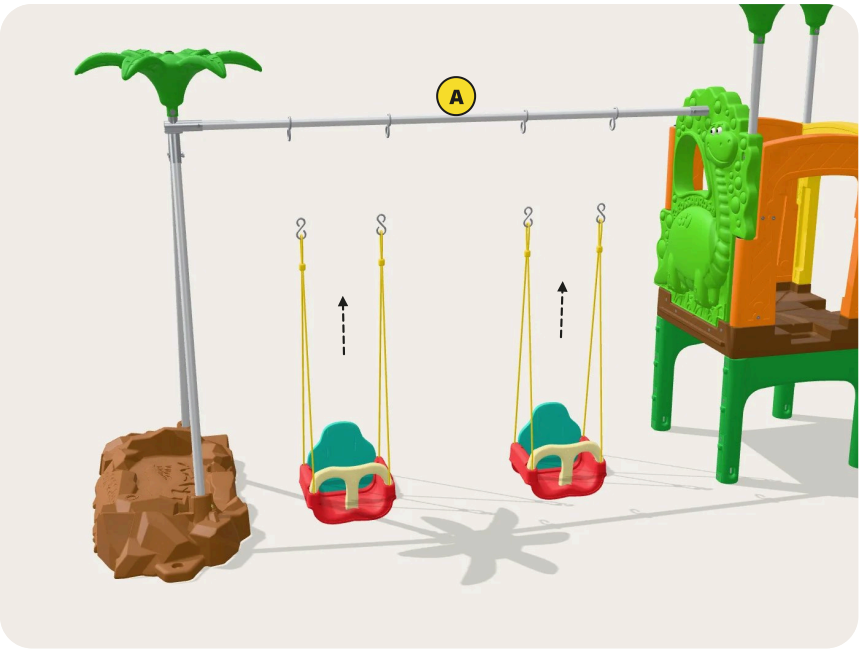


A The 4 ropes on the 4 hooks of the multi-swing tube

The **2 swings** come assembled. Before hanging them, check the **knots underneath** (figure-8 knot, one on each front part) and that the ropes are locked in the fins at the back of the seat.

Hook the **4 ropes** on the **4 hooks** of the multi-swing tube and close the hooks.

Set the backrest to the child's size (position A up to 24 months, B up to 36 months) and always use the **safety belt**.

**CAUTION**
Whoever installs the swing must check the knots and **put their own weight on the seat** before letting children use it.

## PARTS FOR THIS STEP

- **4×** Swing hook ref. 287605
- **2×** Swing backrest ref. 935502
- **2×** Swing leg rest ref. 935503
- **2×** Swing seat ref. 935504
- **4×** Swing rope ref. 2501007

**How it looks at the end of step 16**

# Module 3: legs and platform

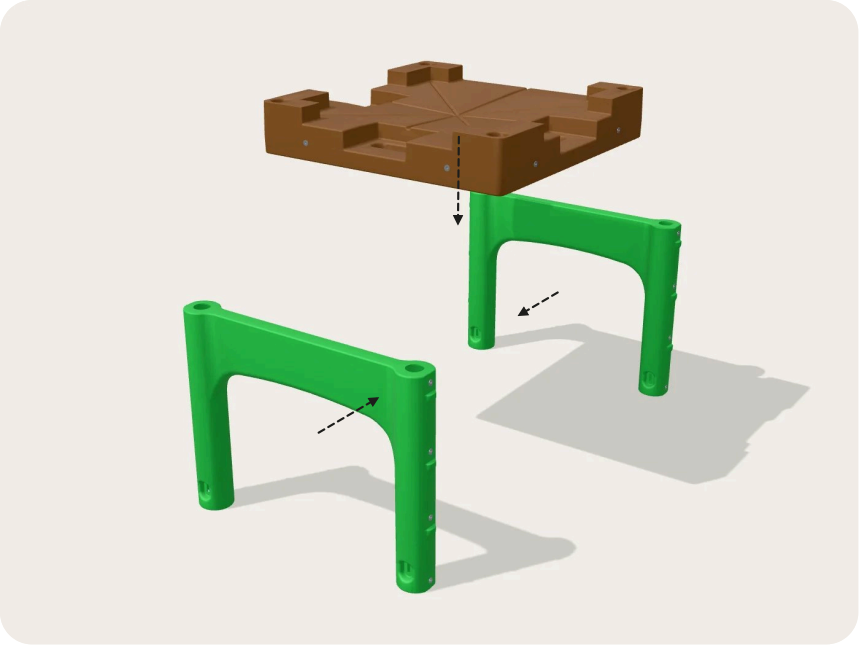

Stand the **2 legs** parallel and rest the **platform** on them, fitting the corners.

## PARTS FOR THIS STEP

**2×** Leg
ref. 998708

**1×** Brown platform
ref. 1022110

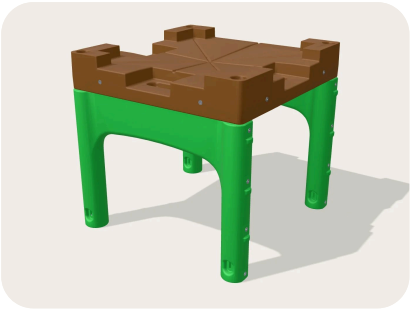

**How it looks at the end of step 17**

# 18 Platform cover

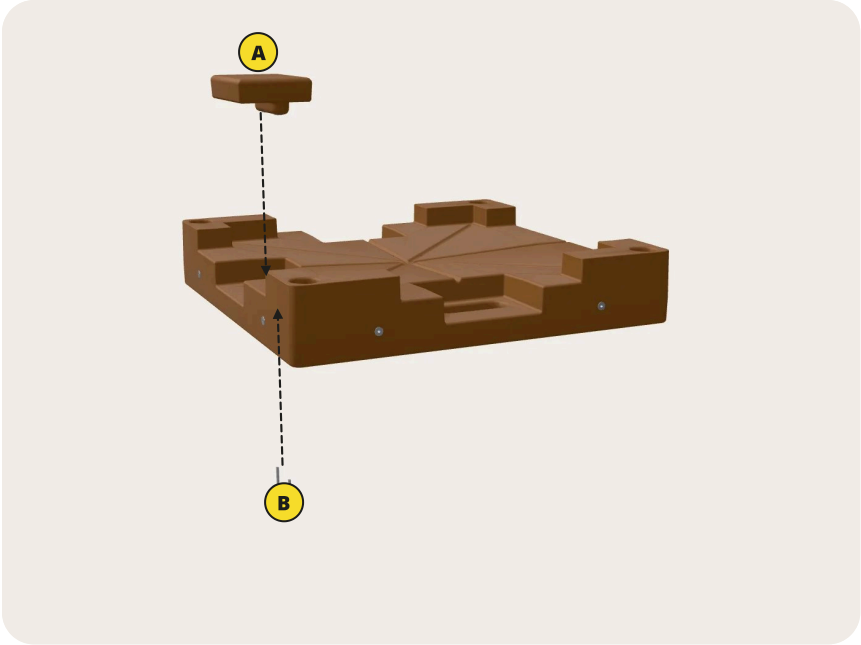


**A** The cover comes down from above into the opening in the platform

**B** 2 M6×45 bolts + washer, under the platform, from the bottom up

## SCREW AND TOOL

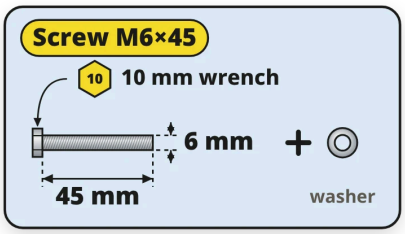


Tool: **10 mm wrench**.

Fit the **platform cover** from above, into the opening in the platform.

Under the platform, fix the cover with **2 M6×45 bolts with washer**, **from the bottom up**.

## PARTS FOR THIS STEP

**1×** Platform cover
ref. 1022105

**2×** Hex bolt M6×45
ref. 2090194

**2×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

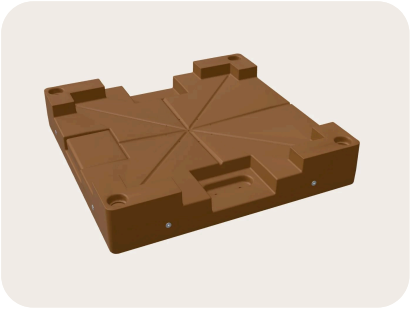

How it looks at the end of step 18

STEP 19 OF 103 · MODULE 3 – TUNNEL AND RAMP

# 19 Tubes: 2 tubes of 2210 mm and 1 of 1550 mm

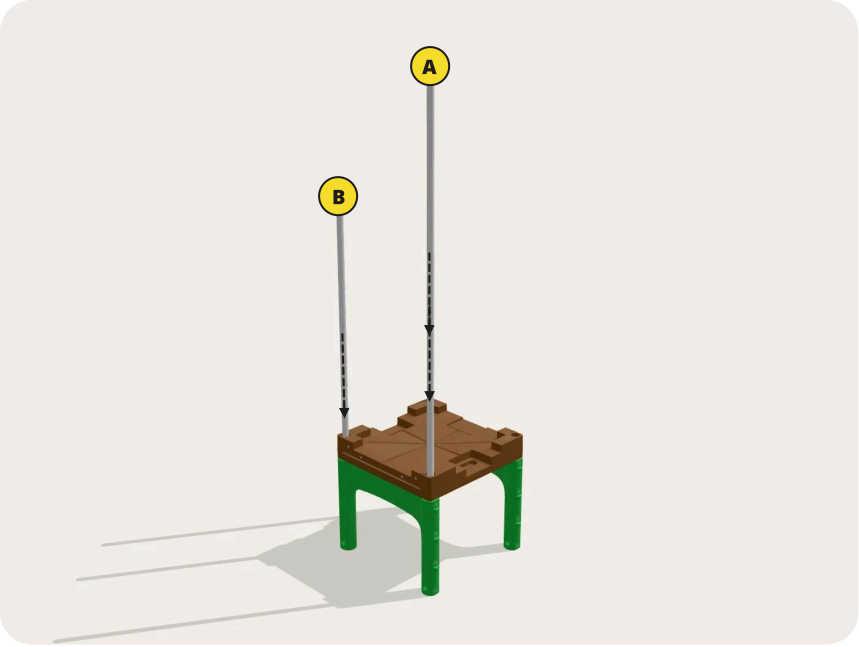


A Tubes 2210 mm (2)

B Tube 1550 mm

Insert **2 tubes of 2210 mm and 1 of 1550 mm** in the corners shown, all the way down.

The last corner stays without a tube for now: the 1550 mm tube goes there, after the walls.

**CAUTION**
Tube holes **always facing up**.

## PARTS FOR THIS STEP

**1×** Tube 1550 ref. 1003202

**2×** Tube 2210 ref. 1022130

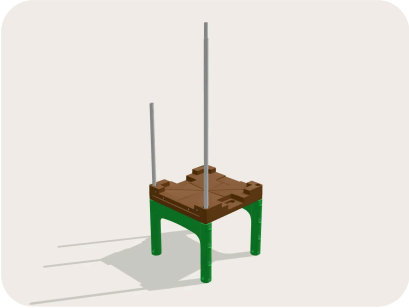

**How it looks at the end of step 19**

# 20 Green Trix Fofossauro and EVA

A Green Trix Fofossauro: ramp side

**1.** Fit the **green Trix Fofossauro** down the tubes, on the ramp side.

**2.** Put an **EVA spacer** on top, in the corner shown.

**CAUTION**
The **order of the walls matters**: in each corner, the sleeve of one wall sits below and the other one on top. Follow the order of the steps; out of order, the sleeves clash and the wall will not go down.

## PARTS FOR THIS STEP

**1×** EVA seal (spacer)
ref. 998728

**1×** Trix Fofossauro wall, green
ref. 1022101

How it looks at the end of step 20

STEP 21 OF 103 · MODULE 3 – TUNNEL AND RAMP

# 21 Yellow tunnel wall with dots and EVA

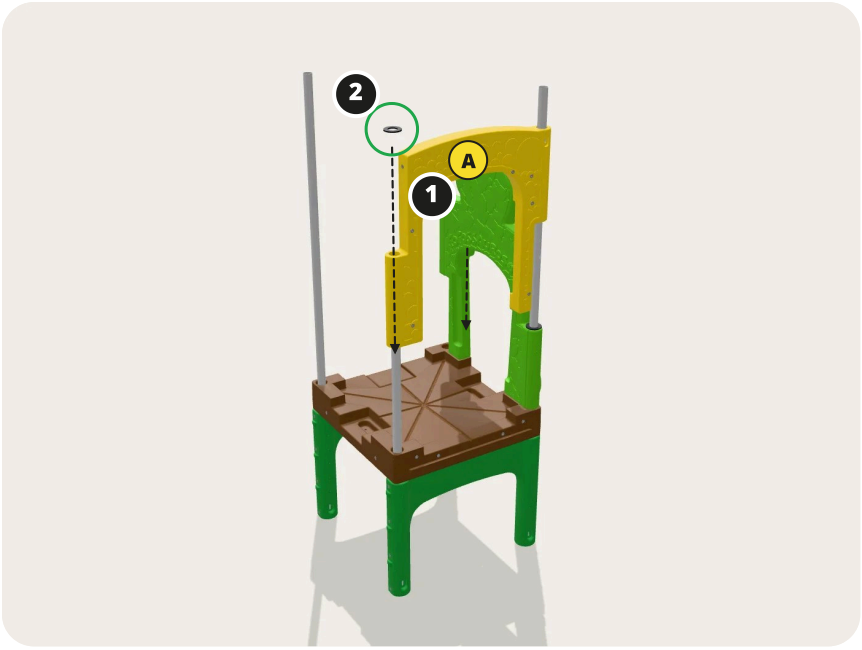


A Yellow tunnel wall with dots: tunnel slide side

**1.** Fit the **yellow tunnel wall with dots** down the tubes, on the tunnel slide side.

**2.** Put an **EVA spacer** on top, in the corner shown.

## PARTS FOR THIS STEP

**1×** EVA seal (spacer)
ref. 998728

**1×** Yellow tunnel wall with dots
ref. 998730

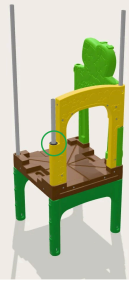

How it looks at the end of step 21

STEP 22 OF 103 · MODULE 3 – TUNNEL AND RAMP

# 22 Yellow striped wall and EVA

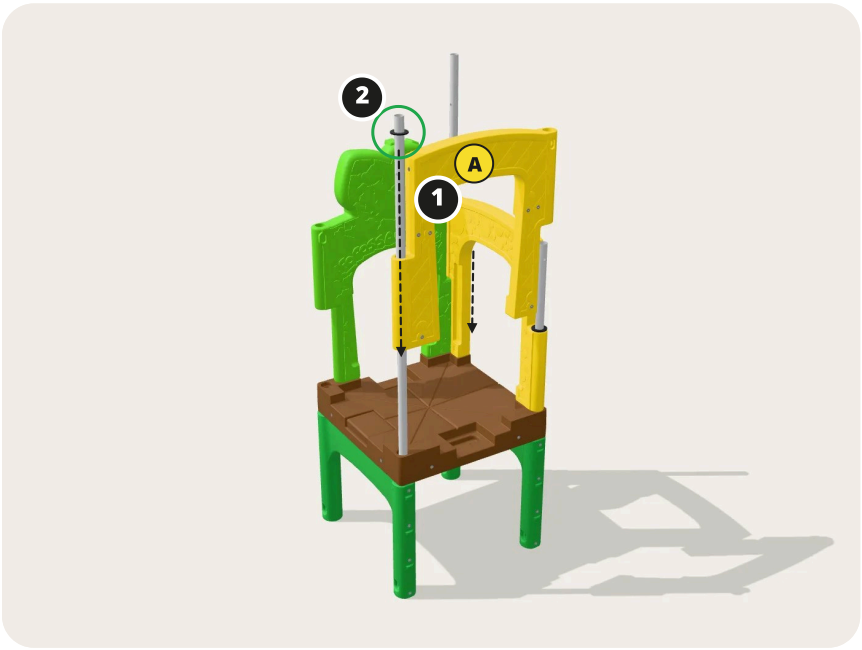


A Yellow striped wall: side of the bridge to Module 1

**1.** Fit the **yellow striped wall** down the tubes, on the side of the bridge to Module 1.

**2.** Put an **EVA spacer** on top, in the corner shown.

## PARTS FOR THIS STEP

**1×** Yellow striped wall
ref. 998707

**1×** EVA seal (spacer)
ref. 998728

How it looks at the end of step 22

STEP 23 OF 103 · MODULE 3 – TUNNEL AND RAMP

# 23 Purple Scot Fofossauro: comes down open and turns

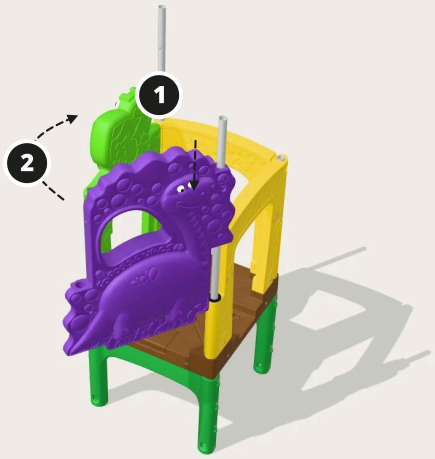


**1.** Fit the end of the **purple Scot Fofossauro** onto the 2210 mm tube in the corner and lower the wall straight down, **open to the outside**.

**2.** With the wall resting on the platform, **turn it around the tube** until it closes the square: in the corner without a tube, its sleeve goes **under** the sleeve of the green Trix Fofossauro.

## PARTS FOR THIS STEP

**1×** Scot Fofossauro wall, purple ref. 1022102

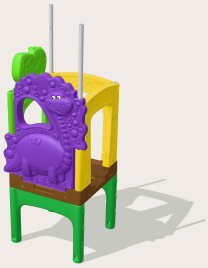

How it looks at the end of step 23

# 24 Last EVA, last tube and caps

**1.** Slide the last **EVA spacer in from the front**, horizontally, in the corner that still has no tube.

**2.** Lower the last **tube, 1550 mm**: it passes through the wall sleeves and locks the set.

**3.** Fit the **caps** on top of the 2 shorter tubes.

## PARTS FOR THIS STEP

- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 1550 ref. 1003202
- **2×** Tube cap ref. 1100137

How it looks at the end of step 24

# Join the walls: 4 M6×90 bolts

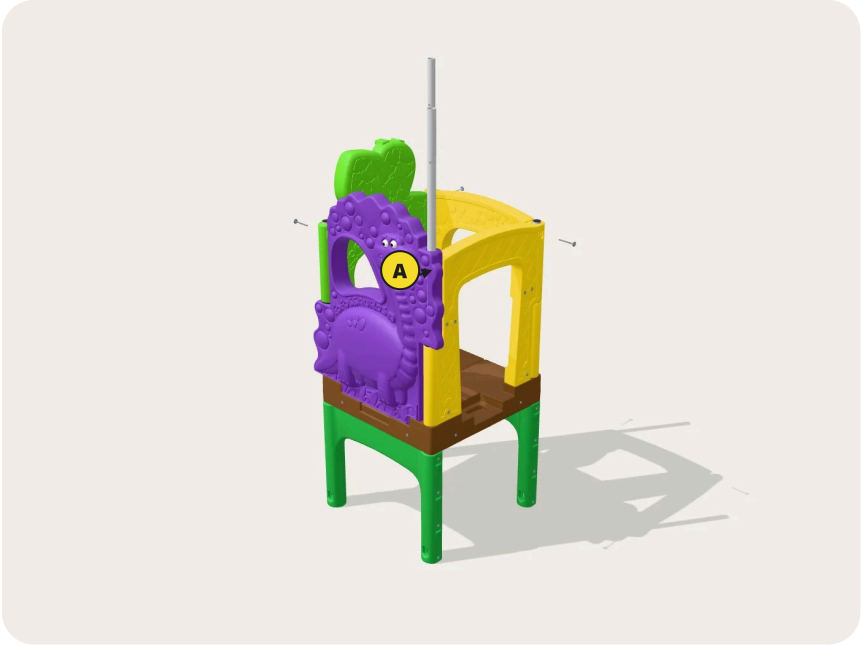


Join the walls with **4 M6×90 bolts with washer**, 1 in each corner, put in **from the outside in**.

## PARTS FOR THIS STEP

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

**4×** Hex bolt M6×90
ref. 2090460

How it looks at the end of step 25

**A** 4 M6×90 bolts + washer, 1 in each corner

## SCREW AND TOOL

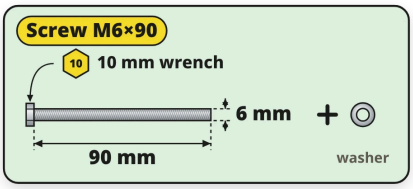


Tool: **10 mm wrench**.

# 26 Tree tops

A Tree tops on the 2 tubes of 2210 mm

## SCREW AND TOOL

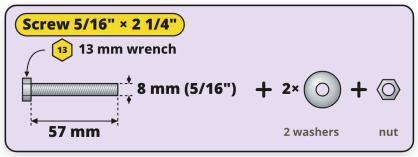


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit a **tree top** on top of each **2210 mm tube**.

Fix each top with **1 bolt 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 lock nut**, through the top and the tube.

## PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **2×** 5/16" lock nut ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **2×** Small black end cap ref. 2090439

How it looks at the end of step 26

# Ramp

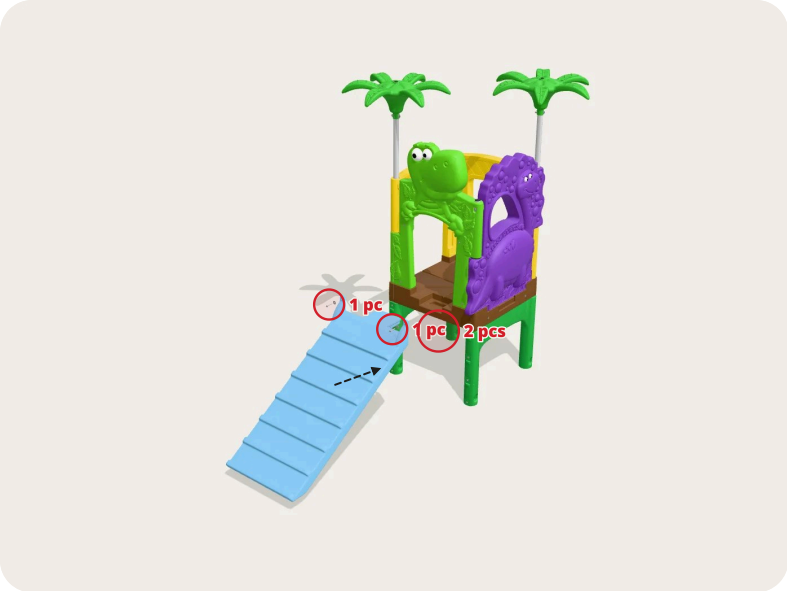


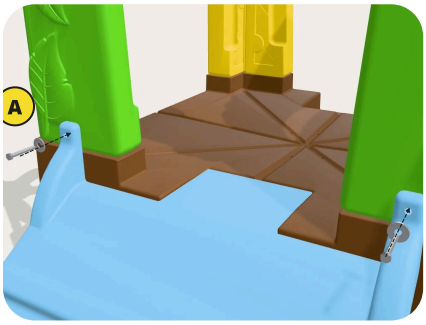


Top: ramp tab on the wall

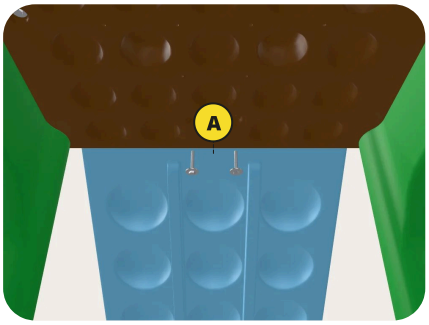


Bottom: under the platform

Fit the **blue ramp** on the side of the **green Trix Fofossauro** and bolt it with **4 M6×45 bolts with washer**:

**2 in the tabs** (1 in each, into the wall rivets) and **2 under the platform**, from the bottom up.

## PARTS FOR THIS STEP

- **1×** Blue ramp ref. 1022114
- **4×** Hex bolt M6×45 ref. 2090194
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

## SCREW AND TOOL

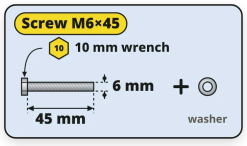


Tool: **10 mm wrench**.

How it looks at the end of step 27

# Tunnel slide bases

With the tunnel on the ground, next to the module, fit one of the **bases** on the **front end** of the tunnel slide and bolt it (**2 M6×45 bolts with washer**).

Place the second base and bolt the **2 crossbars** to join the two bases (**4 M6×45 bolts with washer**).

## PARTS FOR THIS STEP

| | |
|---|---|
| **2×** Small crossbar ref. 953203 | **2×** Tunnel slide base ref. 998714 |
| **6×** Hex bolt M6×45 ref. 2090194 | **6×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide |

## SCREW AND TOOL

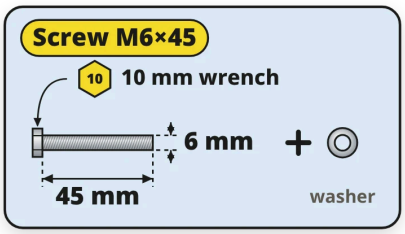


Tool: **10 mm wrench**.

How it looks at the end of step 28

# Tunnel slide on the module

Take the assembled tunnel to the module and fit its mouth on the **yellow tunnel wall with dots**.

Bolt it with **12 M6×45 bolts with washer**: 3 at each of the 4 ends of the tunnel mouth, from the outside in, into the wall rivets.

## PARTS FOR THIS STEP

- **1×** Tunnel slide ref. 998702
- **12×** Hex bolt M6×45 ref. 2090194
- **12×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

## SCREW AND TOOL

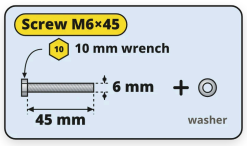


Tool: **10 mm wrench.**

How it looks at the end of step 29

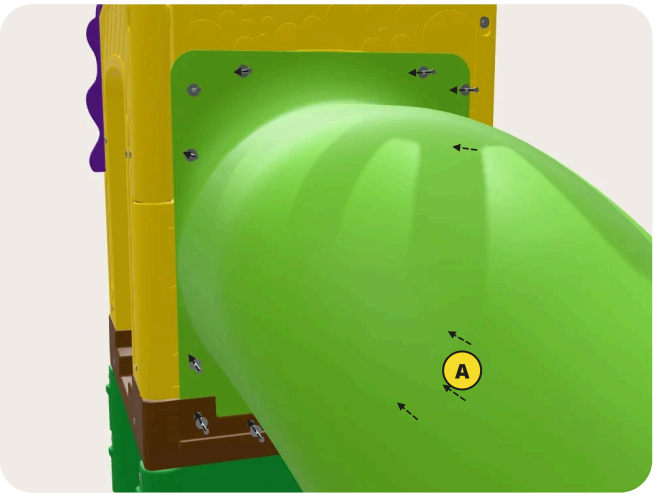


**Tunnel mouth bolts**

A 12 M6×45 bolts + washer: 3 at each end of the tunnel mouth

STEP 30 OF 103 · MODULE 4 – SLIDE AND RAMP

# 30 Module 4: legs and platform

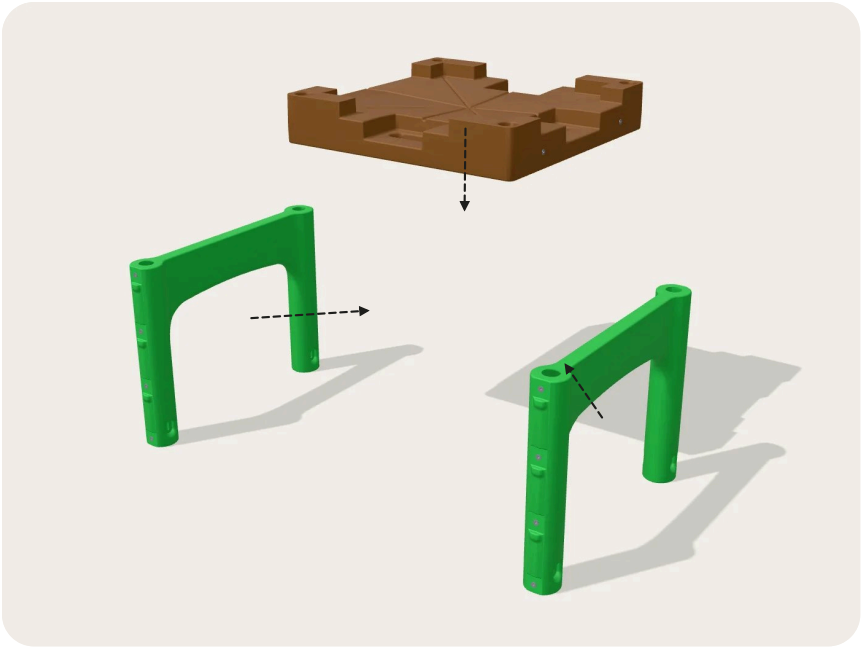

Stand the **2 legs** parallel and rest the **platform** on them, fitting the corners.

PARTS FOR THIS STEP

**2×** Leg
ref. 998708

**1×** Brown platform
ref. 1022110

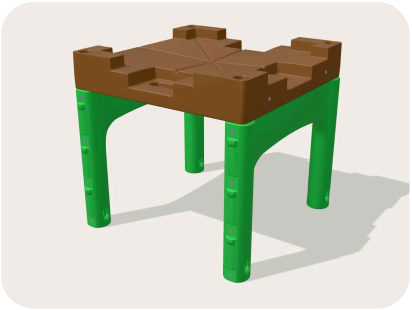

How it looks at the end of step 30

STEP 31 OF 103 · MODULE 4 – SLIDE AND RAMP

# 31 Tubes: 2 tubes of 2210 mm and 1 of 1550 mm

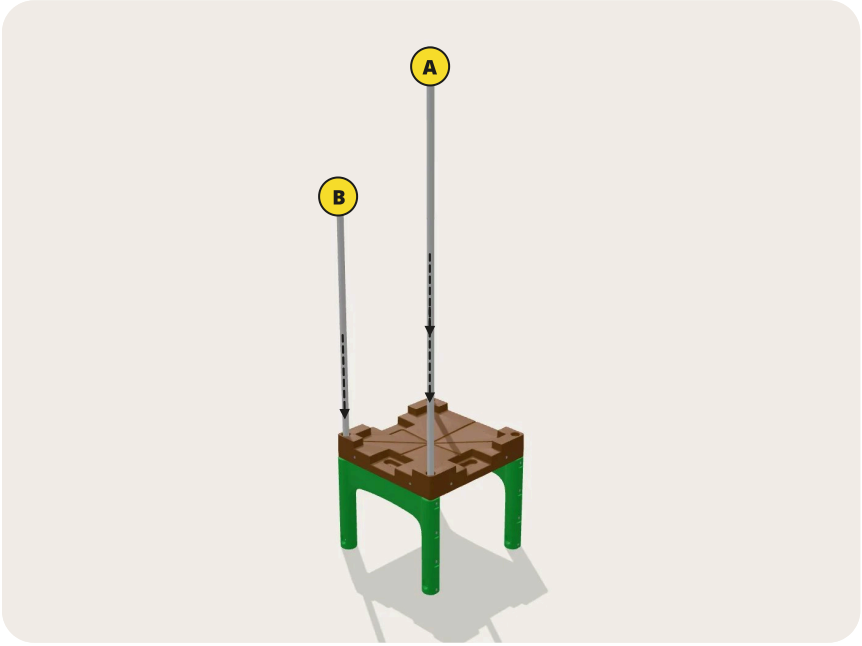


A Tubes 2210 mm (2)

B Tube 1550 mm

Insert **2 tubes of 2210 mm and 1 of 1550 mm** in the corners shown, all the way down.

The last corner stays without a tube for now: the 1550 mm tube goes there, after the walls.

**CAUTION**
Tube holes **always facing up**.

PARTS FOR THIS STEP



**1×** Tube 1550
ref. 1003202



**2×** Tube 2210
ref. 1022130

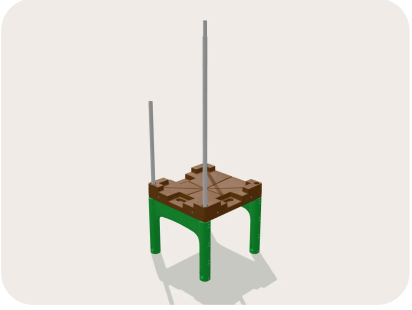

How it looks at the end of step 31

# Green Trix Fofossauro and EVA

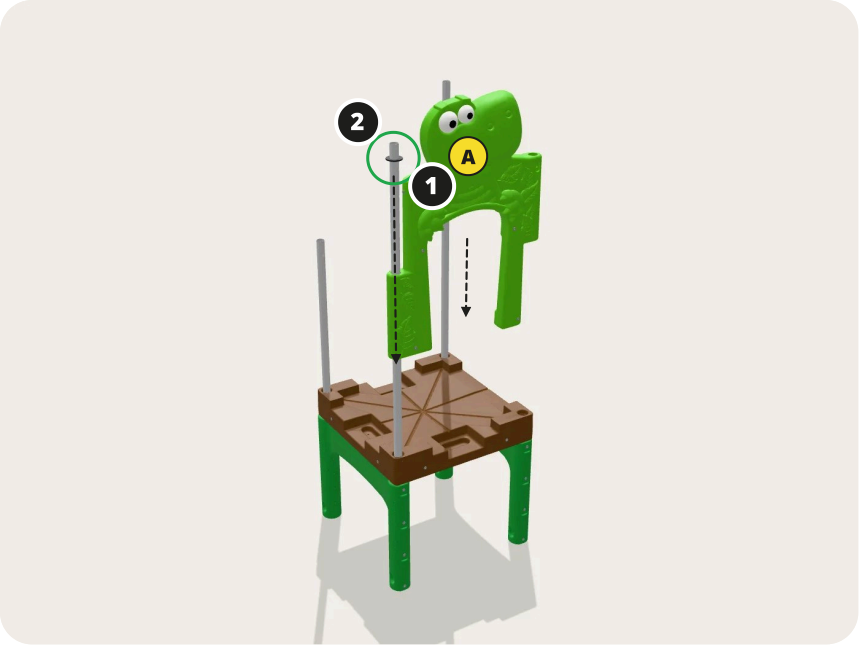


A Green Trix Fofossauro: slide side

**1.** Fit the **green Trix Fofossauro** down the tubes, on the slide side.

**2.** Put an **EVA spacer** on top, in the corner shown.

**CAUTION**
The **order of the walls matters**: in each corner, the sleeve of one wall sits below and the other one on top. Follow the order of the steps; out of order, the sleeves clash and the wall will not go down.

## PARTS FOR THIS STEP

**1×** EVA seal (spacer) ref. 998728

**1×** Trix Fofossauro wall, green ref. 1022101

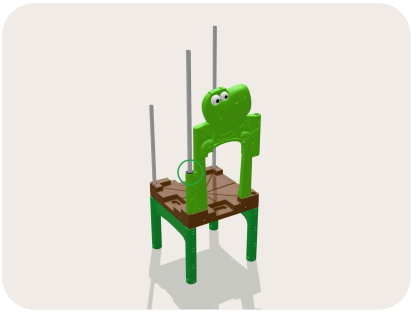

How it looks at the end of step 32

## 33

STEP 33 OF 103 · MODULE 4 – SLIDE AND RAMP

# Yellow wall with dots and EVA

A Yellow wall with dots: ramp side

**1.** Fit the **yellow wall with dots** down the tubes, on the ramp side.

**2.** Put an **EVA spacer** on top, in the corner shown.

### PARTS FOR THIS STEP

**1×** Yellow wall with dots
ref. 998727

**1×** EVA seal (spacer)
ref. 998728

How it looks at the end of step 33

## 34

STEP 34 OF 103 · MODULE 4 – SLIDE AND RAMP

# Orange striped wall and EVA

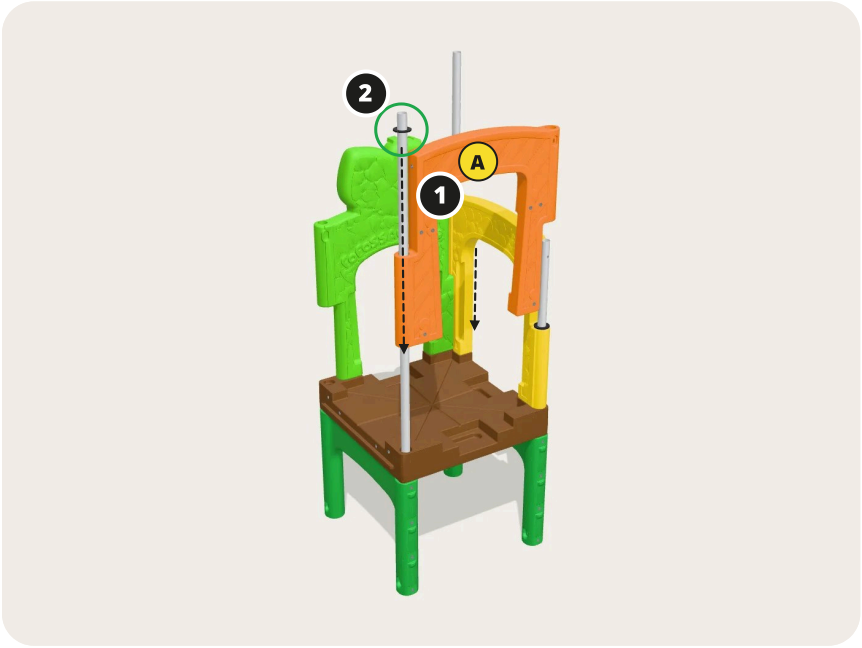


A Orange striped wall: side of the bridge to Module 1

**1.** Fit the **orange striped wall** down the tubes, on the side of the bridge to Module 1.

**2.** Put an **EVA spacer** on top, in the corner shown.

### PARTS FOR THIS STEP

**1×** Orange striped wall
ref. 998726

**1×** EVA seal (spacer)
ref. 998728

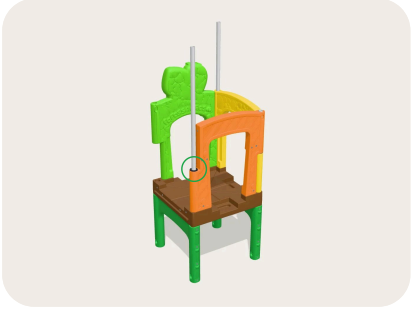

How it looks at the end of step 34

35

STEP 35 OF 103 · MODULE 4 – SLIDE AND RAMP

# Purple Scot Fofossauro: comes down open and turns

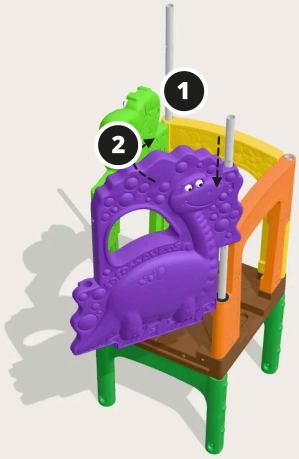


**1.** Fit the end of the **purple Scot Fofossauro** onto the 2210 mm tube in the corner and lower the wall straight down, **open to the outside**.

**2.** With the wall resting on the platform, **turn it around the tube** until it closes the square: in the corner without a tube, its sleeve goes **under** the sleeve of the green Trix Fofossauro.

## PARTS FOR THIS STEP

**1×** Scot Fofossauro wall, purple
ref. 1022102

How it looks at the end of step 35

STEP 36 OF 103 · MODULE 4 – SLIDE AND RAMP

# 36 Last EVA, last tube and caps

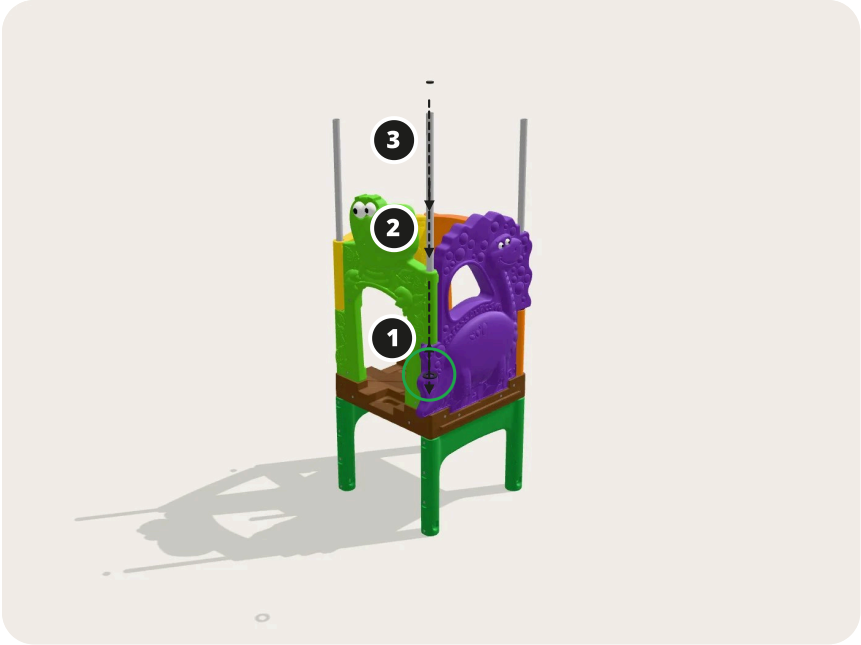


**1.** Slide the last **EVA spacer in from the front**, horizontally, in the corner that still has no tube.

**2.** Lower the last **tube, 1550 mm**: it passes through the wall sleeves and locks the set.

**3.** Fit the **caps** on top of the 2 shorter tubes.

## PARTS FOR THIS STEP

- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 1550 ref. 1003202
- **2×** Tube cap ref. 1100137

How it looks at the end of step 36

STEP 37 OF 103 · MODULE 4 – SLIDE AND RAMP

# 37 Join the walls: 4 M6×90 bolts

A 4 M6×90 bolts + washer, 1 in each corner

## SCREW AND TOOL

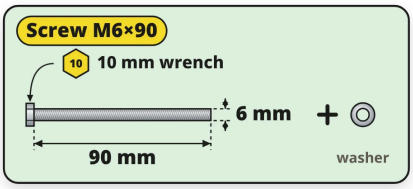


Tool: **10 mm wrench**.

Join the walls with **4 M6×90 bolts with washer**, 1 in each corner, put in **from the outside in**.

## PARTS FOR THIS STEP

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

**4×** Hex bolt M6×90
ref. 2090460

How it looks at the end of step 37

# Tree tops

A Tree tops on the 2 tubes of 2210 mm

## SCREW AND TOOL

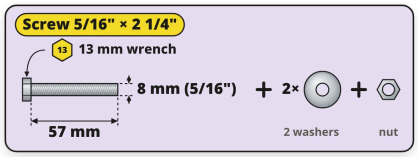


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit a **tree top** on top of each **2210 mm tube**.

Fix each top with **1 bolt 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 lock nut**, through the top and the tube.

## PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **2×** 5/16" lock nut ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **2×** Small black end cap ref. 2090439

How it looks at the end of step 38

# Ramp

Fit the **blue ramp** on the side of the **yellow wall with dots** and bolt it with **4 M6×45 bolts with washer**:

**2 in the tabs** (1 in each, into the wall rivets) and **2 under the platform**, from the bottom up.

## PARTS FOR THIS STEP

- **1×** Blue ramp ref. 1022114
- **4×** Hex bolt M6×45 ref. 2090194
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

## SCREW AND TOOL

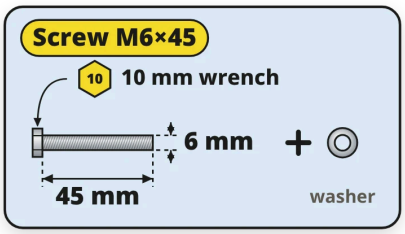


Tool: **10 mm wrench**.

How it looks at the end of step 39

# 40 Slide on the ground: entry and straight section

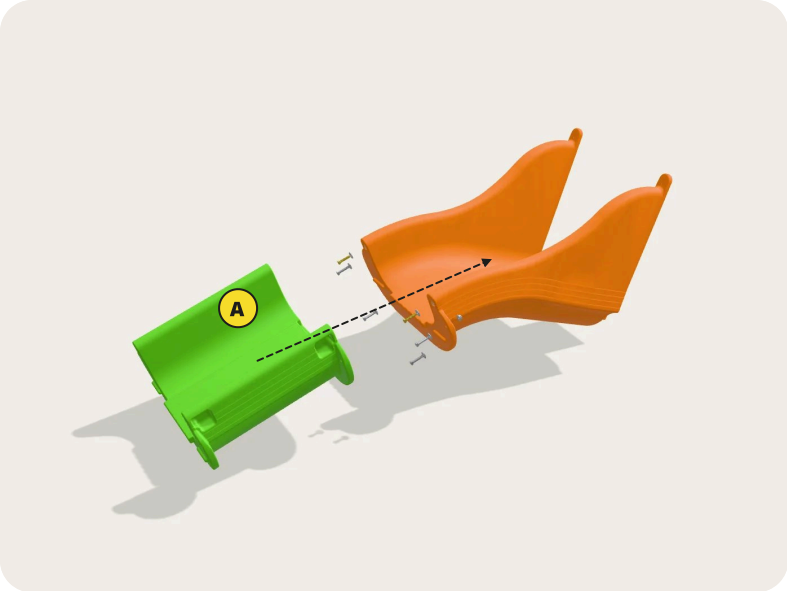


**A** Entry (orange) + straight section (green), put together on the ground

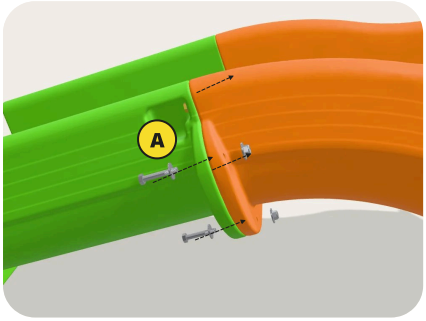


**In the tab: 5/16" × 2" bolt, washer on both sides and nut**

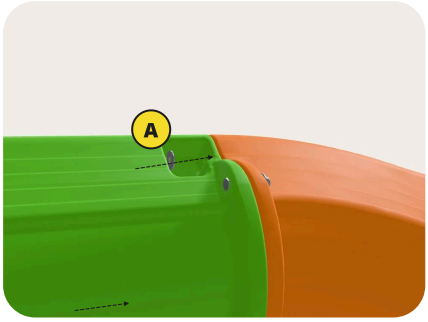


**In the recess: M8×40 bolt with washer, into the M8 rivet**

The slide is put together **on the ground**, next to the module, and only then goes on the tower.

Fit the **straight section (green)** to the **entry (orange)** and join them with **2 kinds of bolt**:

**In the tabs: 4 bolts 5/16" × 2"**, each with **a washer on each side** and a **lock nut**.

**In the recess: 2 M8×40 bolts with washer**, screwed into the **M8 rivet** already in the piece.

**CAUTION**
**Do not swap the bolts:** the 5/16" × 2" (with nut) goes in the tabs and the M8×40 (no nut) goes in the recess, into the M8 rivet.

## PARTS FOR THIS STEP

- **1×** Slide: entry section ref. 1022107
- **1×** Slide: straight section ref. 1022108
- **4×** Hex bolt 5/16" × 2" ref. 1090113
- **2×** Hex bolt M8×40 ref. 2090320
- **10×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **4×** 5/16" lock nut ref. 2090370

## SCREWS AND TOOLS



Tool: **13 mm wrench.**



Tool: **2 × 13 mm wrenches:** one holds the nut while the other turns the screw.

**How it looks at the end of step 40**

# 41 Slide on the ground: exit section

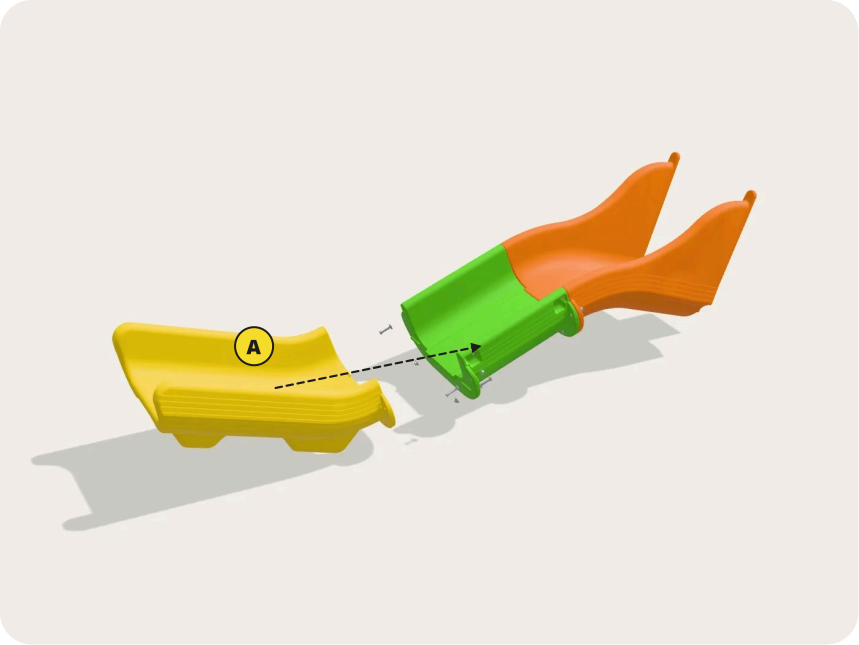


A Exit section (yellow) at the end of the straight section

## SCREWS AND TOOLS

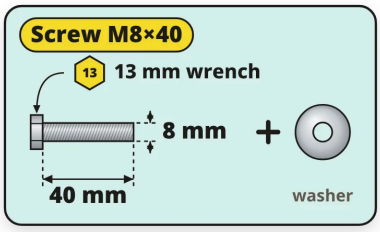


Tool: **13 mm wrench.**

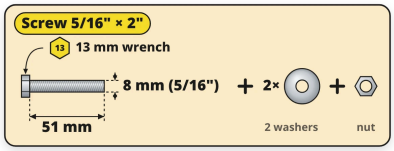


Tool: **2 × 13 mm wrenches:** one holds the nut while the other turns the screw.

Fit the **exit section (yellow)** at the end of the straight section and join it the same way:

**In the tabs: 4 bolts 5/16" × 2"** with **washer on both sides** and **lock nut**.

**In the recess: 2 M8×40 bolts with washer**, into the **M8 rivet**.

**CAUTION**
**Do not swap the bolts:** 5/16" × 2" in the tabs, M8×40 in the recess.

## PARTS FOR THIS STEP

- **1×** Slide: exit section ref. 1022109
- **4×** Hex bolt 5/16" × 2" ref. 1090113
- **2×** Hex bolt M8×40 ref. 2090320
- **10×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **4×** 5/16" lock nut ref. 2090370

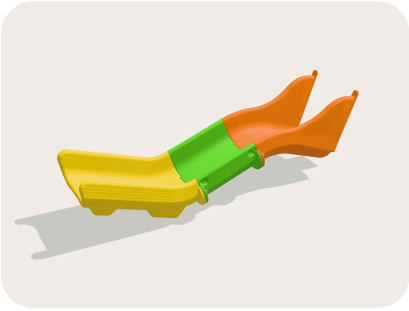

How it looks at the end of step 41

# 42 Slide on the tower

Take the assembled slide to the module and fit the **entry** on the side of the **green Trix Fofossauro**.

**Top: 2 M6×45 bolts with washer**, one in each tab of the entry, into the wall rivets.

**Bottom: 2 M6×45 bolts with washer** under the platform, **from the bottom up**.

## PARTS FOR THIS STEP

| | |
|---|---|
| **4×** Hex bolt M6×45 ref. 2090194 | **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide |

## SCREW AND TOOL

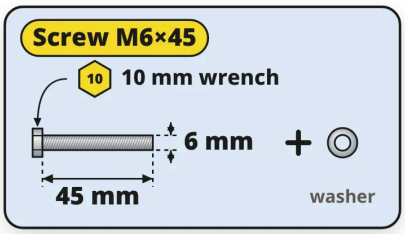


Tool: **10 mm wrench**.

How it looks at the end of step 42

# Bridge between Modules 3 and 1

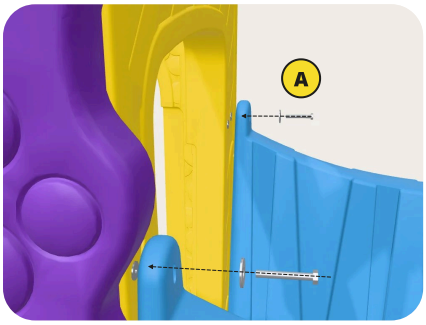


Top: bridge tab on the wall

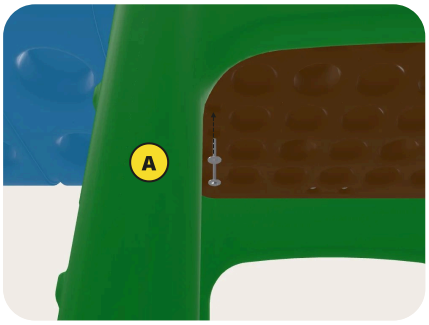


Bottom: under the platform

With Modules 3 and 1 about 80 cm apart, fit the **bridge** between the **yellow striped wall** of Module 3 and the **orange striped wall** of Module 1.

Bolt it with **8 M6×45 bolts with washer**: at each end, **2 in the tabs** (into the wall rivets) and **2 under the platform**, from the bottom up.

## PARTS FOR THIS STEP

**1×** Bridge ref. 1000902

**8×** Hex bolt M6×45 ref. 2090194

**8×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

## SCREW AND TOOL

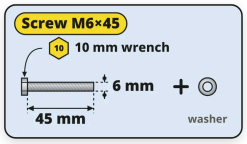


Tool: **10 mm wrench.**

How it looks at the end of step 43

STEP 44 OF 103 · BRIDGES OF MODULES 1, 3 AND 4

# 44 Bridge between Modules 1 and 4

With Modules 1 and 4 about 80 cm apart, fit the **bridge** between the **yellow wall with dots** of Module 1 and the **orange striped wall** of Module 4.

Bolt it with **8 M6×45 bolts with washer**: at each end, **2 in the tabs** (into the wall rivets) and **2 under the platform**, from the bottom up.

## SCREW AND TOOL

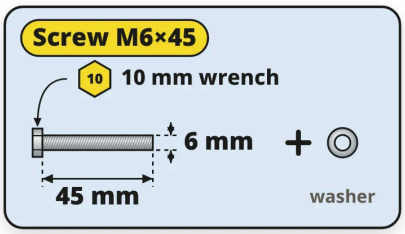


Tool: **10 mm wrench**.

## PARTS FOR THIS STEP

**1×** Bridge
ref. 1000902

**8×** Hex bolt M6×45
ref. 2090194

**8×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

How it looks at the end of step 44

# Module 5: leg, climbing wall and platform

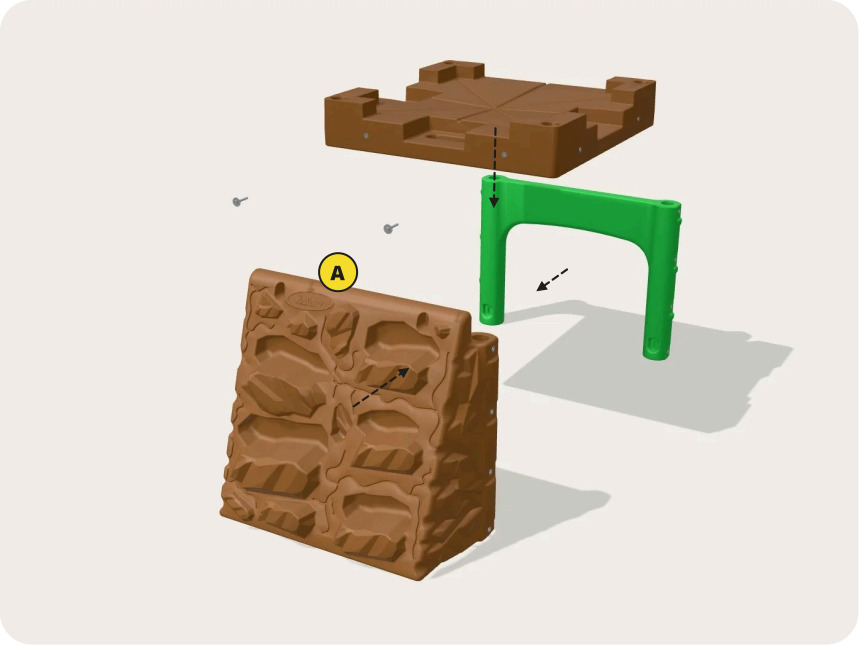


A Climbing wall opposite the leg

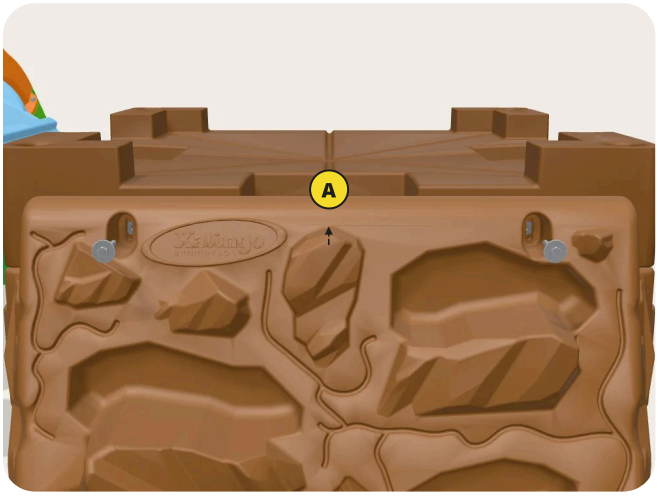


**The climbing wall is fixed to the platform with 2 bolts**

A 2 M6×45 bolts + washer fix the climbing wall to the platform

Stand the **leg** and the **climbing wall** parallel, facing each other, and rest the **platform** on both, fitting the corners.

Fix the climbing wall to the platform with **2 M6×45 bolts with washer**, from the outside of the climbing wall.

## PARTS FOR THIS STEP

- **1×** Leg ref. 998708
- **1×** Climbing wall ref. 1022103
- **1×** Brown platform ref. 1022110
- **2×** Hex bolt M6×45 ref. 2090194
- **2×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

## SCREW AND TOOL

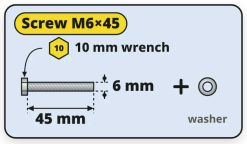


Tool: **10 mm wrench.**

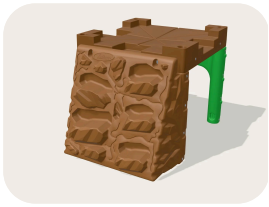

**How it looks at the end of step 45**

# 46 Platform cover

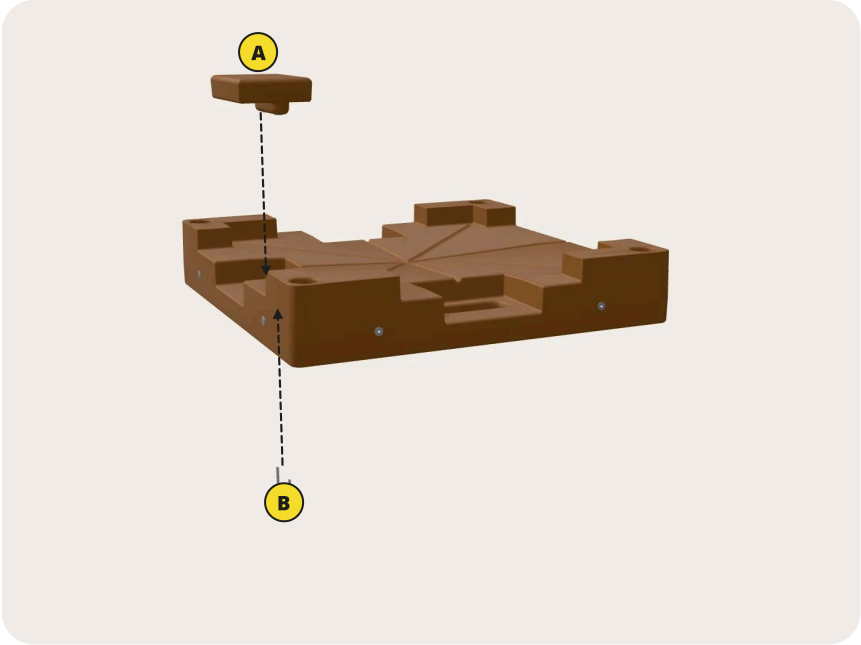


A The cover comes down from above into the opening in the platform

B 2 M6×45 bolts + washer, under the platform, from the bottom up

## SCREW AND TOOL

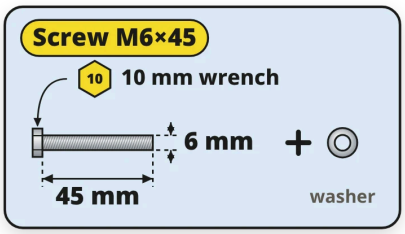


Tool: **10 mm wrench**.

Fit the **platform cover** from above, into the opening in the platform.

Under the platform, fix the cover with **2 M6×45 bolts with washer**, **from the bottom up**.

## PARTS FOR THIS STEP

**1×** Platform cover
ref. 1022105

**2×** Hex bolt M6×45
ref. 2090194

**2×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

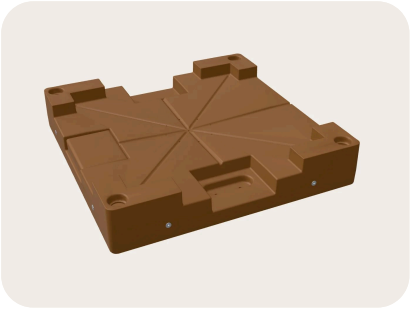

How it looks at the end of step 46

47

STEP 47 OF 103 · MODULE 5 – CONNECTION

# Tubes: 2 tubes of 2210 mm and 1 of 1550 mm

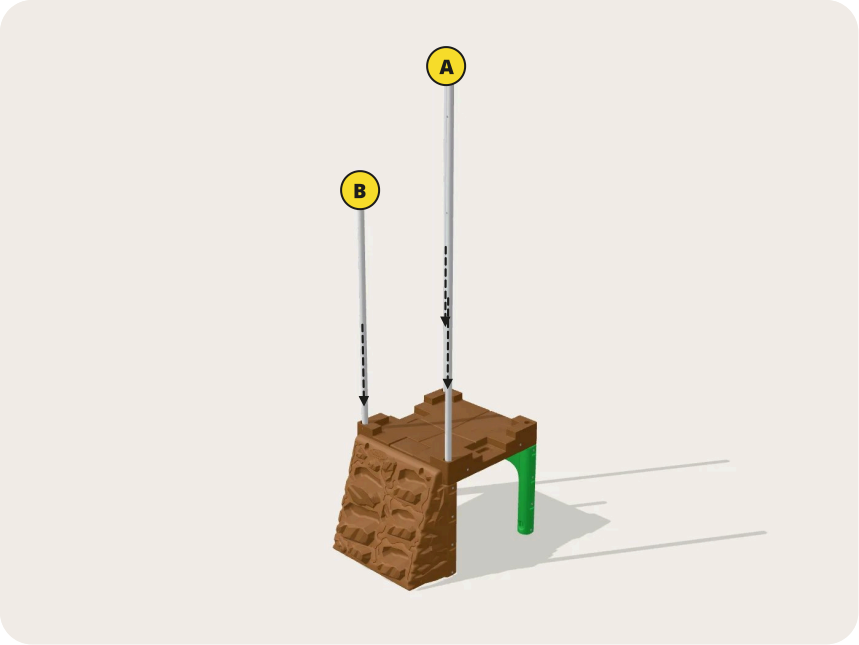


A Tubes 2210 mm (2)

B Tube 1550 mm

Insert **2 tubes of 2210 mm and 1 of 1550 mm** in the corners shown, all the way down.

The last corner stays without a tube for now: the 1550 mm tube goes there, after the walls.

**CAUTION**
Tube holes **always facing up**.

## PARTS FOR THIS STEP

**1×** Tube 1550 ref. 1003202

**2×** Tube 2210 ref. 1022130

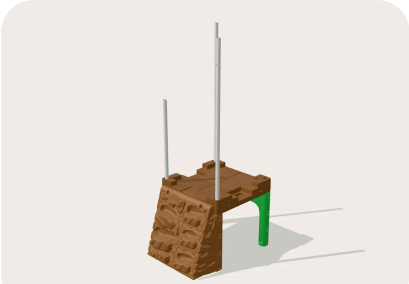

**How it looks at the end of step 47**

# Orange striped wall and EVA

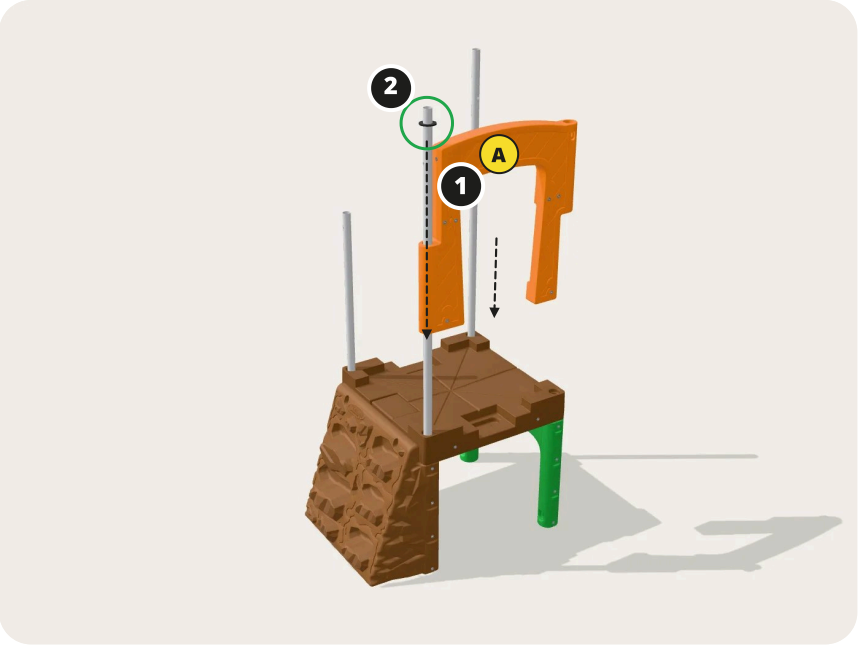


A Orange striped wall: side of the bridge to Module 6

**1.** Fit the **orange striped wall** down the tubes, on the side of the bridge to Module 6.

**2.** Put an **EVA spacer** on top, in the corner shown.

**CAUTION**
The **order of the walls matters**: in each corner, the sleeve of one wall sits below and the other one on top. Follow the order of the steps; out of order, the sleeves clash and the wall will not go down.

## PARTS FOR THIS STEP

**1×** Orange striped wall
ref. 998726

**1×** EVA seal (spacer)
ref. 998728

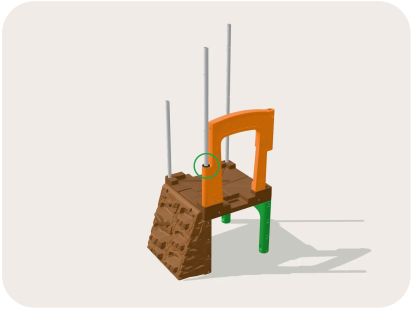

How it looks at the end of step 48

STEP 49 OF 103 · MODULE 5 – CONNECTION

# 49 Yellow wall with dots and EVA

A Yellow wall with dots: climbing-wall side

**1.** Fit the **yellow wall with dots** down the tubes, on the climbing-wall side.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Yellow wall with dots
ref. 998727

**1×** EVA seal (spacer)
ref. 998728

How it looks at the end of step 49

STEP 50 OF 103 · MODULE 5 – CONNECTION

# 50 Orange striped wall and EVA

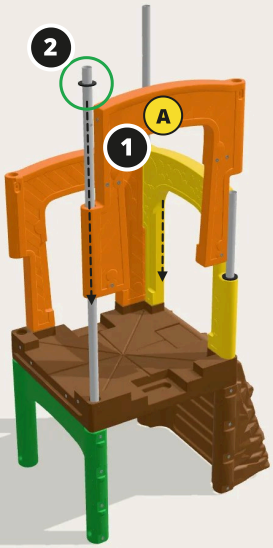


A Orange striped wall: side of the bridge to Module 1

**1.** Fit the **orange striped wall** down the tubes, on the side of the bridge to Module 1.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Orange striped wall
ref. 998726

**1×** EVA seal (spacer)
ref. 998728

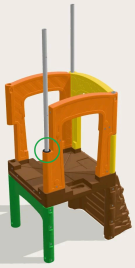

How it looks at the end of step 50

STEP 51 OF 103 · MODULE 5 – CONNECTION

# 51 Wall with window: comes down open and turns

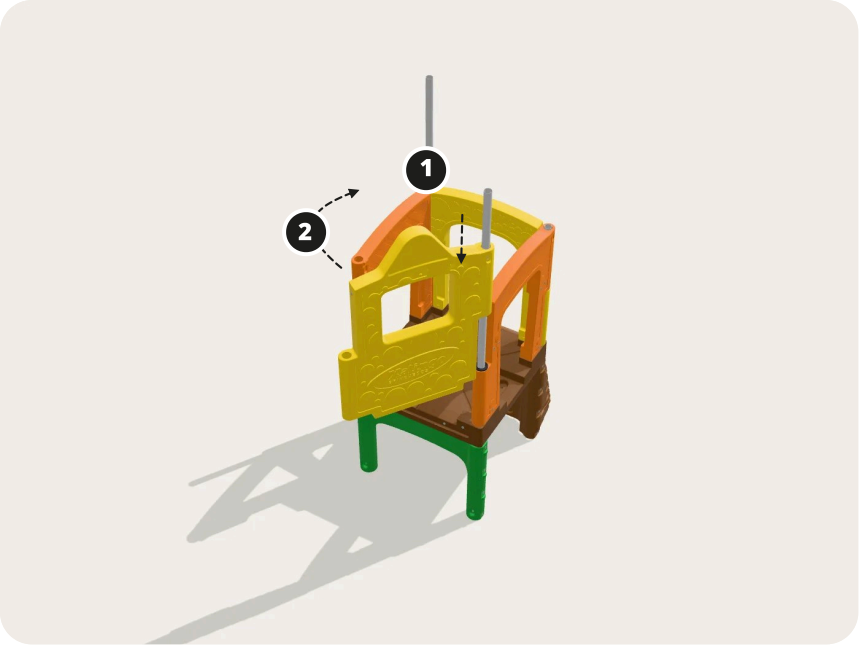


**1.** Fit the end of the **wall with window** onto the 2210 mm tube in the corner and lower the wall straight down, **open to the outside**.

**2.** With the wall resting on the platform, **turn it around the tube** until it closes the square: in the corner without a tube, its sleeve goes **under** the sleeve of the orange striped wall.

## PARTS FOR THIS STEP

**1×** Wall with window
ref. 1000903

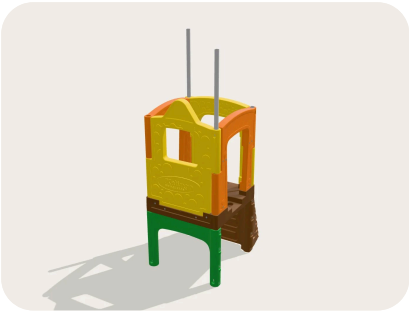

How it looks at the end of step 51

# 52 Last EVA, last tube and caps

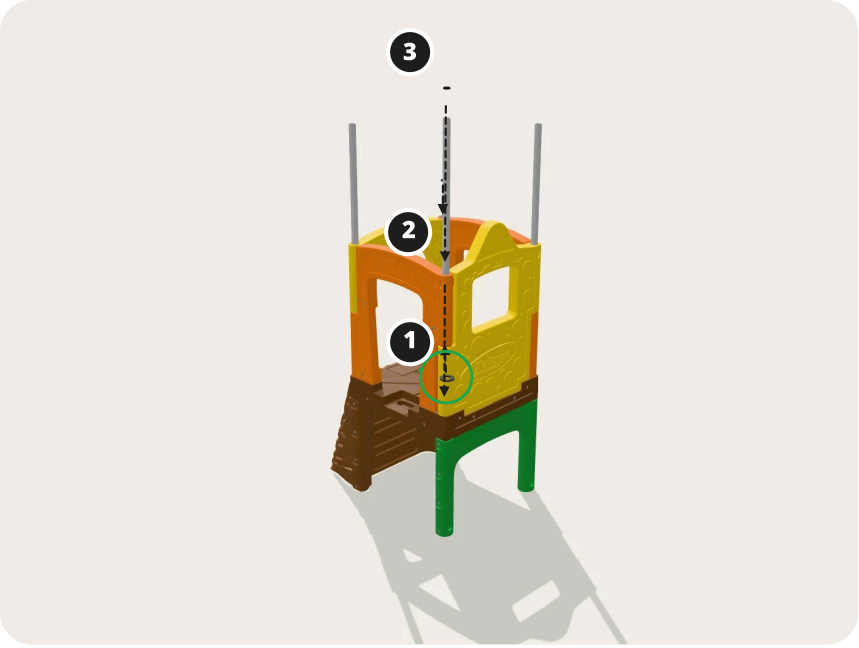


**1.** Slide the last **EVA spacer in from the front**, horizontally, in the corner that still has no tube.

**2.** Lower the last **tube, 1550 mm**: it passes through the wall sleeves and locks the set.

**3.** Fit the **caps** on top of the 2 shorter tubes.

## PARTS FOR THIS STEP

- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 1550 ref. 1003202
- **2×** Tube cap ref. 1100137

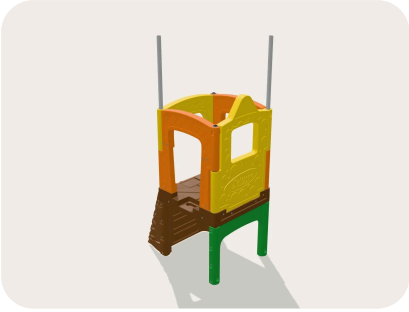

How it looks at the end of step 52

# Join the walls: 4 M6×90 bolts

A 4 M6×90 bolts + washer, 1 in each corner

## SCREW AND TOOL

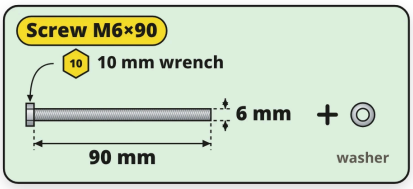


Tool: **10 mm wrench**.

Join the walls with **4 M6×90 bolts with washer**, 1 in each corner, put in **from the outside in**.

## PARTS FOR THIS STEP

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

**4×** Hex bolt M6×90
ref. 2090460

How it looks at the end of step 53

# Tree tops

A Tree tops on the 2 tubes of 2210 mm

## SCREW AND TOOL

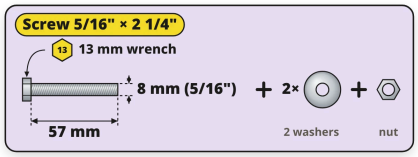


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit a **tree top** on top of each **2210 mm tube**.

Fix each top with **1 bolt 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 lock nut**, through the top and the tube.

## PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **2×** 5/16" lock nut ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **2×** Small black end cap ref. 2090439

How it looks at the end of step 54

# Bridge between Modules 1 and 5

With Modules 1 and 5 about 80 cm apart, fit the **bridge** between the **orange striped wall** of Module 1 and the **orange striped wall** of Module 5.

Bolt it with **8 M6×45 bolts with washer**: at each end, **2 in the tabs** (into the wall rivets) and **2 under the platform**, from the bottom up.

## SCREW AND TOOL

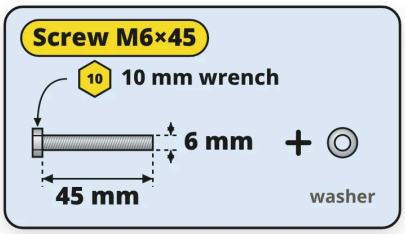


Tool: **10 mm wrench**.

## PARTS FOR THIS STEP

**1×** Bridge
ref. 1000902

**8×** Hex bolt M6×45
ref. 2090194

**8×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

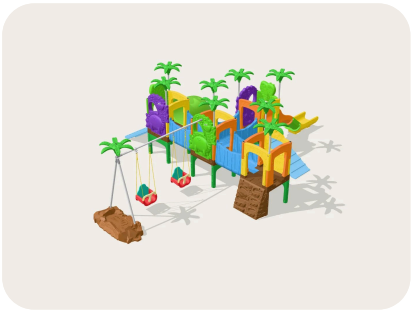

How it looks at the end of step 55

56

STEP 56 OF 103 · MODULE 6 – SLIDE

# Module 6: legs and platform

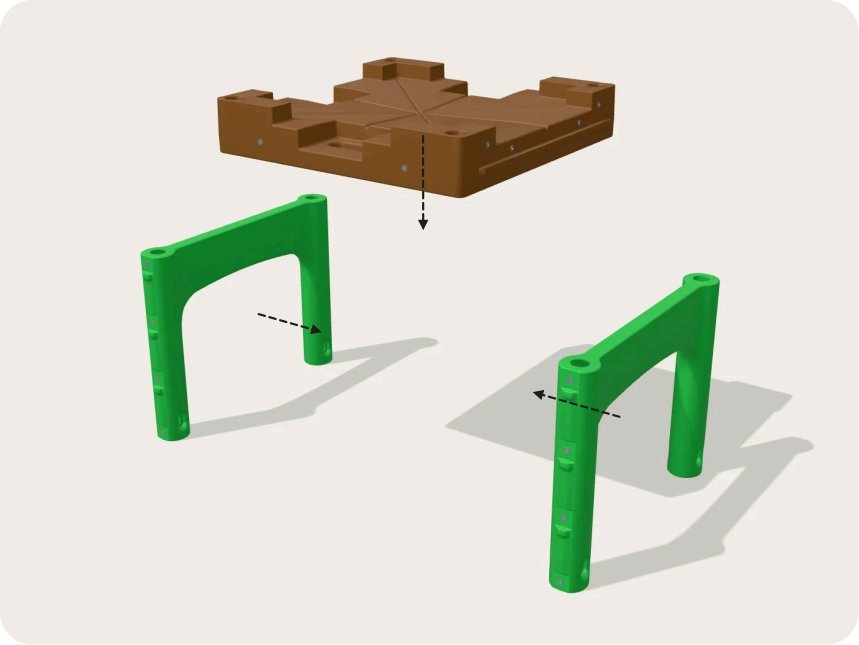

Stand the **2 legs** parallel and rest the **platform** on them, fitting the corners.

## PARTS FOR THIS STEP

**2×** Leg
ref. 998708

**1×** Brown platform
ref. 1022110

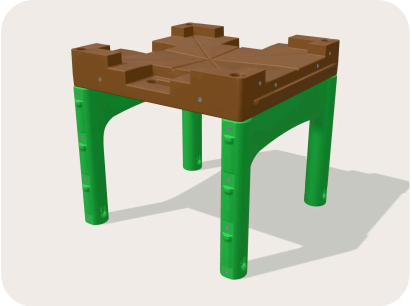

How it looks at the end of step 56

57

STEP 57 OF 103 · MODULE 6 – SLIDE

# Tubes: 1 tube of 2210 mm, 1 of 1600 mm and 1 of 1550 mm

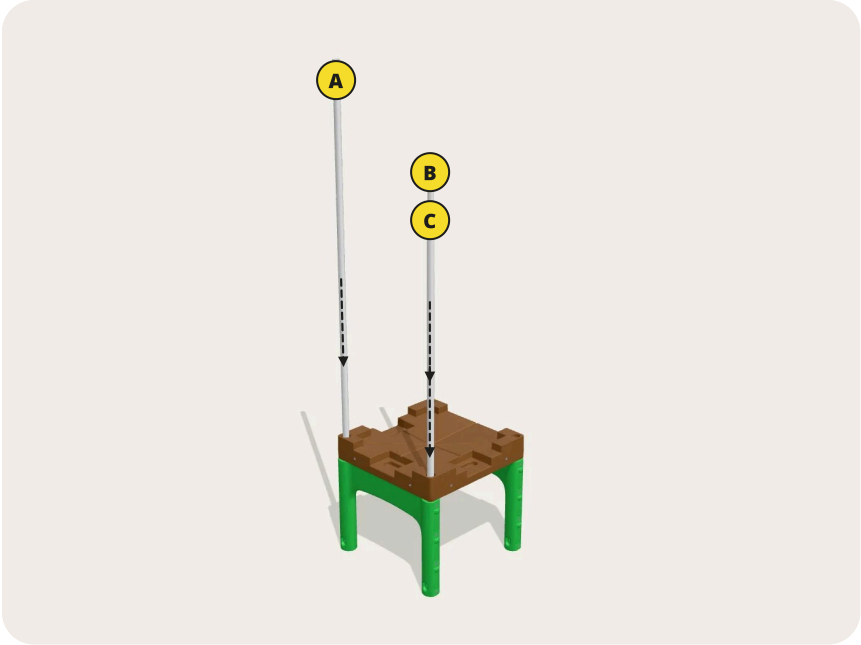


A Tube 2210 mm

B Tube 1600 mm

C Tube 1550 mm

Insert **1 tube of 2210 mm, 1 of 1600 mm and 1 of 1550 mm** in the corners shown, all the way down.

The last corner stays without a tube for now: the 2210 mm tube goes there, after the walls.

**CAUTION**
Tube holes **always facing up**.

## PARTS FOR THIS STEP

**1×** Tube 1550 ref. 1003202

**1×** Tube 2210 ref. 1022130

**1×** Tube 1600 ref. 1022134

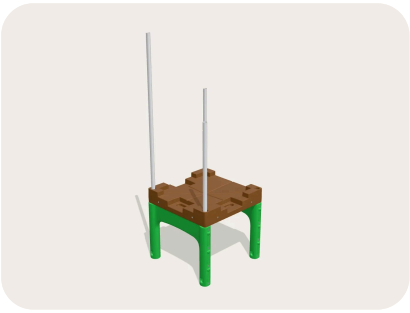

How it looks at the end of step 57

58

STEP 58 OF 103 · MODULE 6 – SLIDE

# Green Trix Fofossauro and EVA

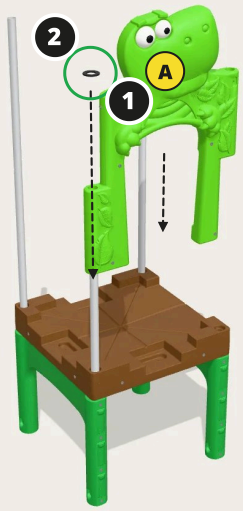


A Green Trix Fofossauro: slide side

**1.** Fit the **green Trix Fofossauro** down the tubes, on the slide side.

**2.** Put an **EVA spacer** on top, in the corner shown.

**CAUTION**

The **order of the walls matters**: in each corner, the sleeve of one wall sits below and the other one on top. Follow the order of the steps; out of order, the sleeves clash and the wall will not go down.

## PARTS FOR THIS STEP

**1×** EVA seal (spacer) ref. 998728

**1×** Trix Fofossauro wall, green ref. 1022101

**How it looks at the end of step 58**

STEP 59 OF 103 · MODULE 6 – SLIDE

# 59 Orange wall with dots and EVA

A Orange wall with dots: side of the bridge to Module 5

**1.** Fit the **orange wall with dots** down the tubes, on the side of the bridge to Module 5.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Orange wall with dots
ref. 998706

**1×** EVA seal (spacer)
ref. 998728

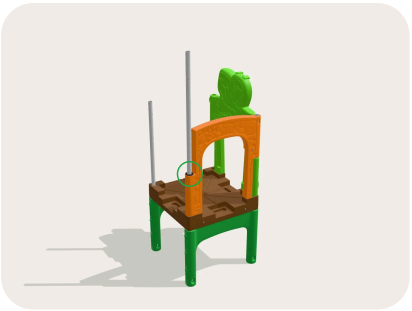

How it looks at the end of step 59

STEP 60 OF 103 · MODULE 6 – SLIDE

# 60 Yellow striped wall and EVA

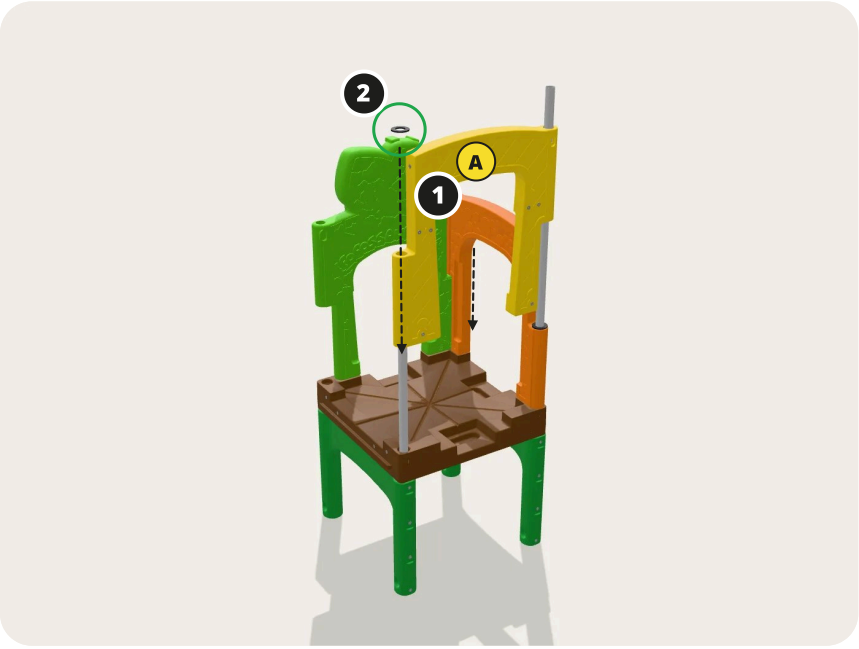


A Yellow striped wall: side of the bridge to Module 7

**1.** Fit the **yellow striped wall** down the tubes, on the side of the bridge to Module 7.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Yellow striped wall
ref. 998707

**1×** EVA seal (spacer)
ref. 998728

How it looks at the end of step 60

61

STEP 61 OF 103 · MODULE 6 – SLIDE

# Purple Scot Fofossauro: comes down open and turns

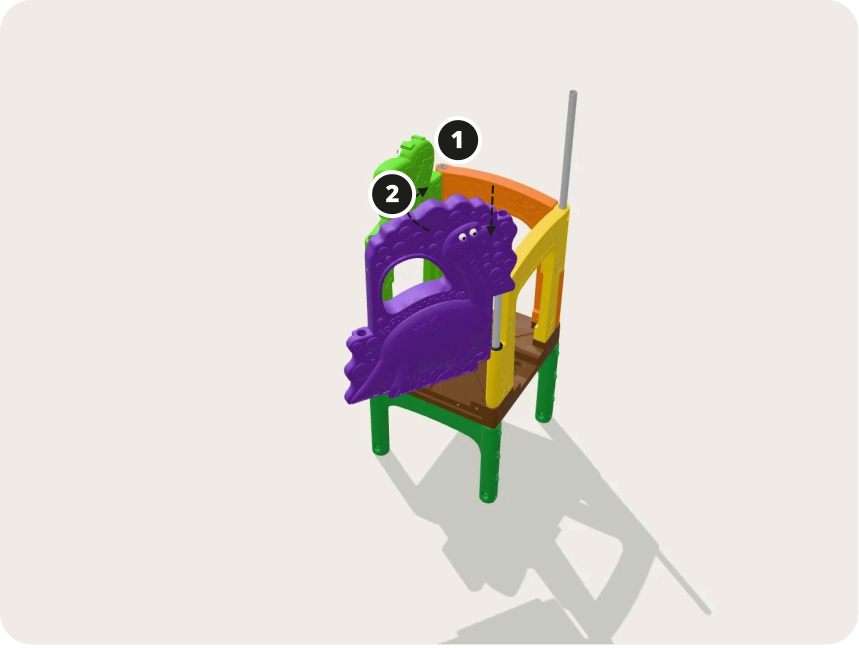


**1.** Fit the end of the **purple Scot Fofossauro** onto the 1600 mm tube in the corner and lower the wall straight down, **open to the outside**.

**2.** With the wall resting on the platform, **turn it around the tube** until it closes the square: in the corner without a tube, its sleeve goes **under** the sleeve of the green Trix Fofossauro.

## PARTS FOR THIS STEP

**1×** Scot Fofossauro wall, purple
ref. 1022102

How it looks at the end of step 61

62

STEP 62 OF 103 · MODULE 6 – SLIDE

# Last EVA, last tube and caps

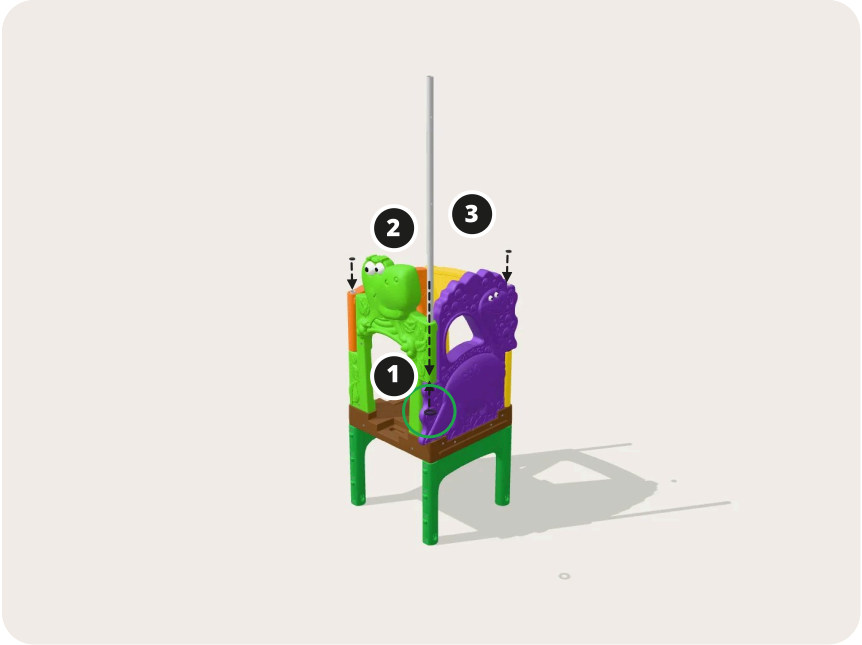


**1.** Slide the last **EVA spacer in from the front**, horizontally, in the corner that still has no tube.

**2.** Lower the last **tube, 2210 mm**: it passes through the wall sleeves and locks the set.

**3.** Fit the **caps** on top of the 2 shorter tubes.

## PARTS FOR THIS STEP

- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 2210 ref. 1022130
- **2×** Tube cap ref. 1100137

How it looks at the end of step 62

STEP 63 OF 103 · MODULE 6 – SLIDE

# 63 Join the walls: 4 M6×90 bolts

A 4 M6×90 bolts + washer, 1 in each corner

## SCREW AND TOOL

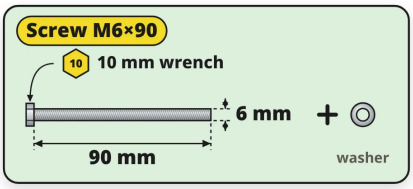


Tool: **10 mm wrench**.

Join the walls with **4 M6×90 bolts with washer**, 1 in each corner, put in **from the outside in**.

## PARTS FOR THIS STEP

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

**4×** Hex bolt M6×90
ref. 2090460

How it looks at the end of step 63

# Tree tops

A Tree tops on the 2 tubes of 2210 mm

## SCREW AND TOOL

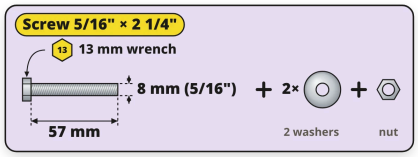


**Tool: 2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit a **tree top** on top of each **2210 mm tube**.

Fix each top with **1 bolt 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 lock nut**, through the top and the tube.

## PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **2×** 5/16" lock nut ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **2×** Small black end cap ref. 2090439

How it looks at the end of step 64

# 65 Slide on the ground: entry and straight section

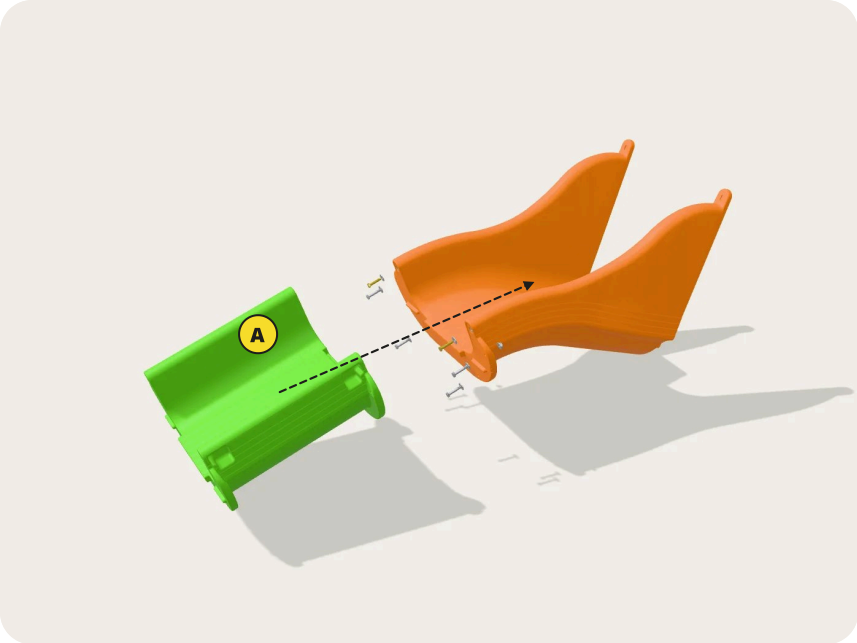


**A** Entry (orange) + straight section (green), put together on the ground

The slide is put together **on the ground**, next to the module, and only then goes on the tower.

Fit the **straight section (green)** to the **entry (orange)** and join them with **2 kinds of bolt**:

**In the tabs: 4 bolts 5/16" × 2"**, each with **a washer on each side** and a **lock nut**.

**In the recess: 2 M8×40 bolts with washer**, screwed into the **M8 rivet** already in the piece.

**CAUTION**
**Do not swap the bolts:** the 5/16" × 2" (with nut) goes in the tabs and the M8×40 (no nut) goes in the recess, into the M8 rivet.

## SCREWS AND TOOLS

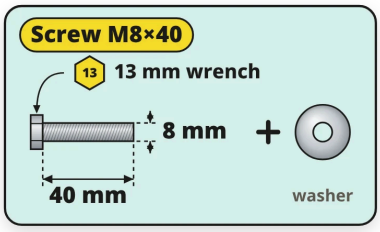


Tool: **13 mm wrench.**

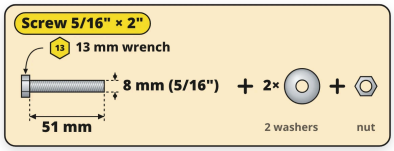


Tool: **2 × 13 mm wrenches:** one holds the nut while the other turns the screw.

## PARTS FOR THIS STEP

| | |
|---|---|
| **1×** Slide: entry section ref. 1022107 | **1×** Slide: straight section ref. 1022108 |
| **4×** Hex bolt 5/16" × 2" ref. 1090113 | **2×** Hex bolt M8×40 ref. 2090320 |
| **10×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide | **4×** 5/16" lock nut ref. 2090370 |

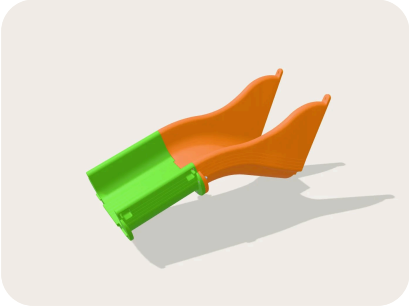

How it looks at the end of step 65

# Slide on the ground: exit section

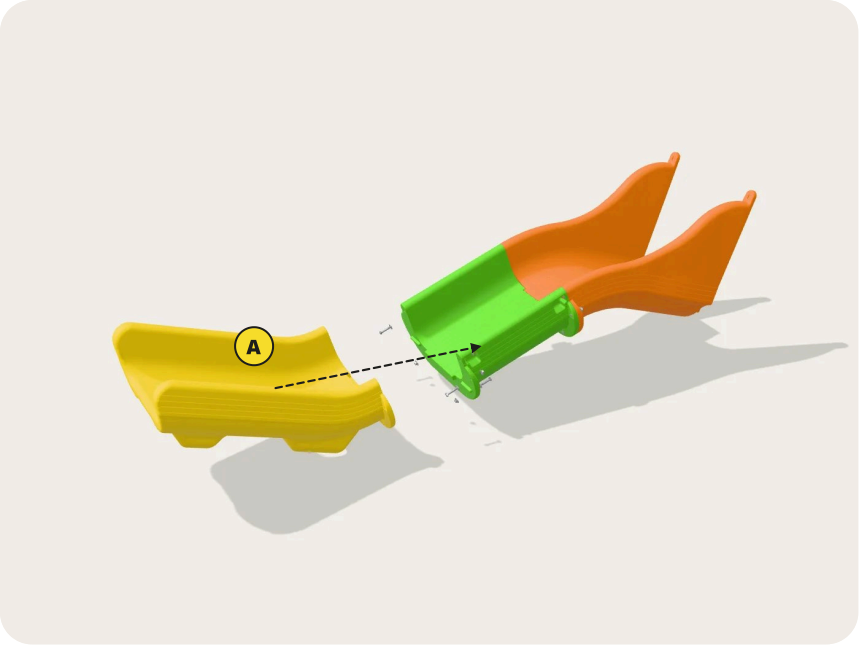


A Exit section (yellow) at the end of the straight section

## SCREWS AND TOOLS

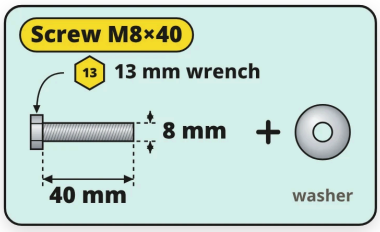


Tool: **13 mm wrench.**

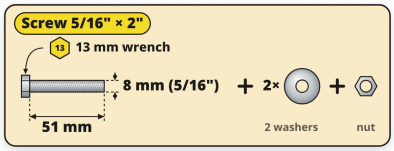


Tool: **2 × 13 mm wrenches:** one holds the nut while the other turns the screw.

Fit the **exit section (yellow)** at the end of the straight section and join it the same way:

**In the tabs: 4 bolts 5/16" × 2"** with **washer on both sides** and **lock nut**.

**In the recess: 2 M8×40 bolts with washer**, into the **M8 rivet**.

**CAUTION**
**Do not swap the bolts:** 5/16" × 2" in the tabs, M8×40 in the recess.

## PARTS FOR THIS STEP

- **1×** Slide: exit section ref. 1022109
- **4×** Hex bolt 5/16" × 2" ref. 1090113
- **2×** Hex bolt M8×40 ref. 2090320
- **10×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **4×** 5/16" lock nut ref. 2090370

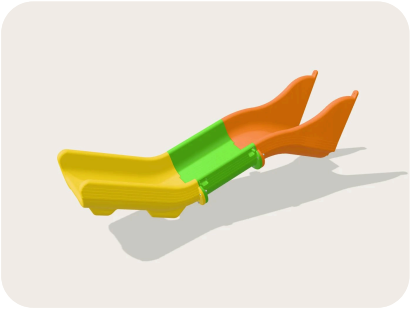

How it looks at the end of step 66

# Slide on the tower

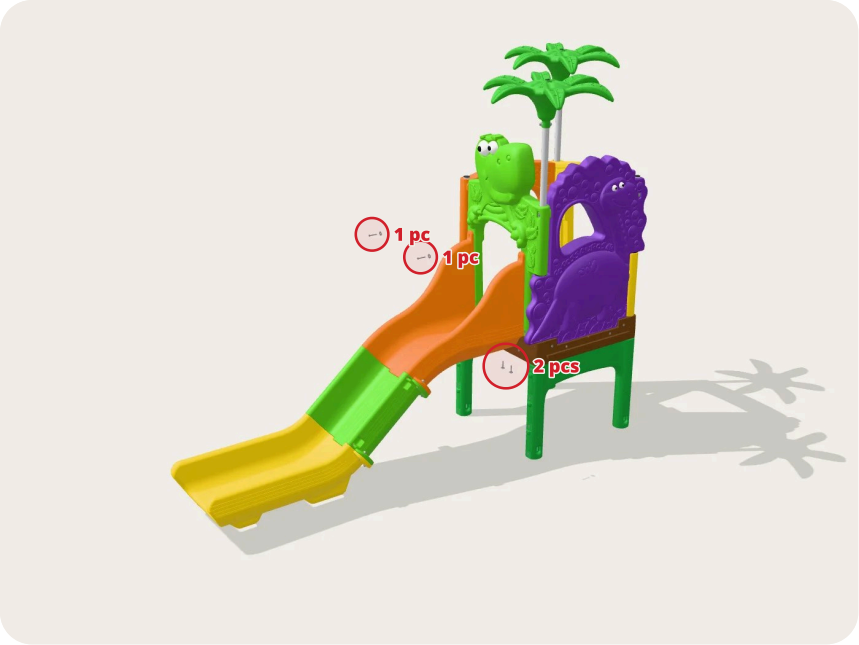


Take the assembled slide to the module and fit the **entry** on the side of the **green Trix Fofossauro**.

**Top: 2 M6×45 bolts with washer**, one in each tab of the entry, into the wall rivets.

**Bottom: 2 M6×45 bolts with washer** under the platform, **from the bottom up**.

## PARTS FOR THIS STEP

**4×** Hex bolt M6×45
ref. 2090194

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

## SCREW AND TOOL

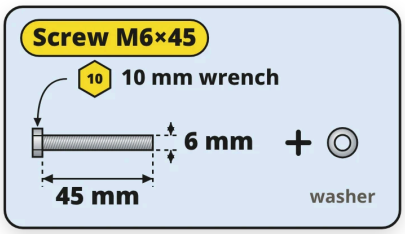


Tool: **10 mm wrench**.

How it looks at the end of step 67

68

STEP 68 OF 103 · MODULE 6 – SLIDE

# Bridge between Modules 5 and 6

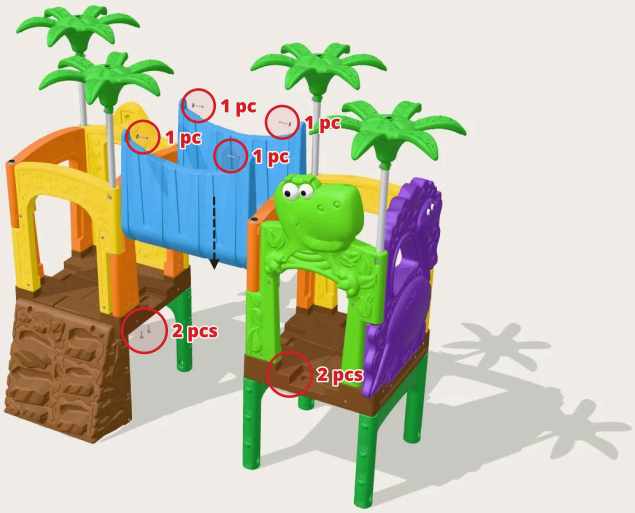


With Modules 5 and 6 about 80 cm apart, fit the **bridge** between the **orange striped wall** of Module 5 and the **orange wall with dots** of Module 6.

Bolt it with **8 M6×45 bolts with washer**: at each end, **2 in the tabs** (into the wall rivets) and **2 under the platform**, from the bottom up.

## SCREW AND TOOL

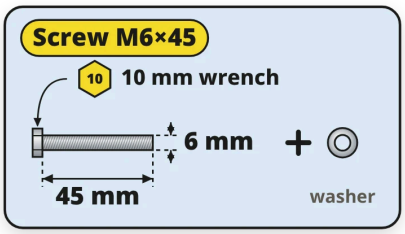


Tool: **10 mm wrench**.

## PARTS FOR THIS STEP

**1×** Bridge
ref. 1000902

**8×** Hex bolt M6×45
ref. 2090194

**8×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

How it looks at the end of step 68

## 69

STEP 69 OF 103 · MODULE 7 – CURVED SLIDE

# Module 7: legs and platform

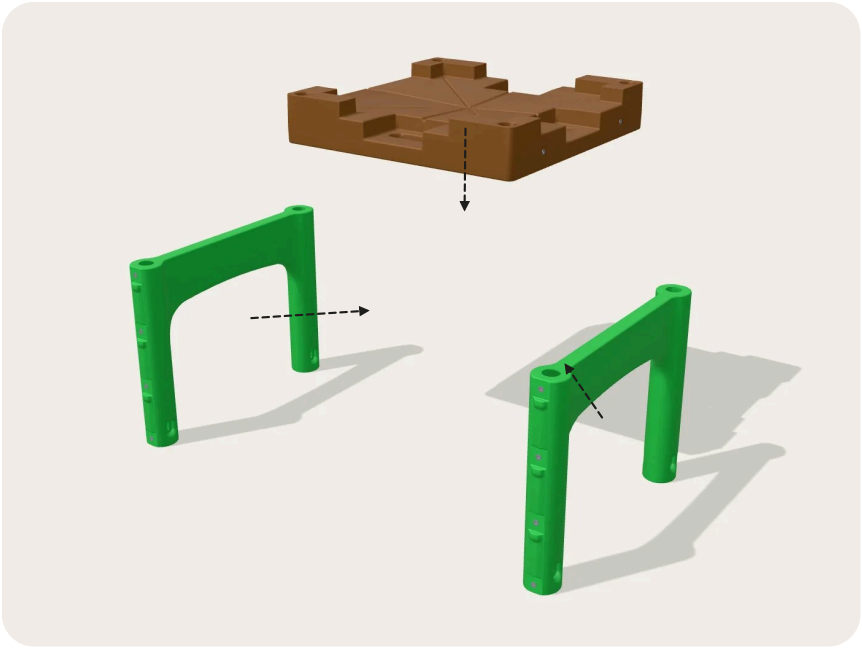

Stand the **2 legs** parallel and rest the **platform** on them, fitting the corners.

### PARTS FOR THIS STEP

**2×** Leg
ref. 998708

**1×** Brown platform
ref. 1022110

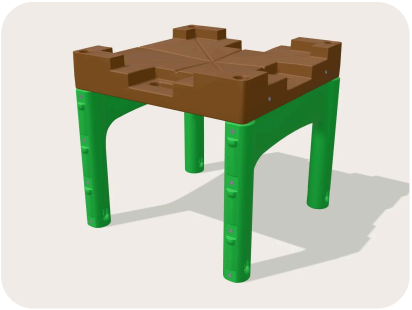

How it looks at the end of step 69

## 70

STEP 70 OF 103 · MODULE 7 – CURVED SLIDE

# Tubes: 2 tubes of 2210 mm and 1 of 1550 mm

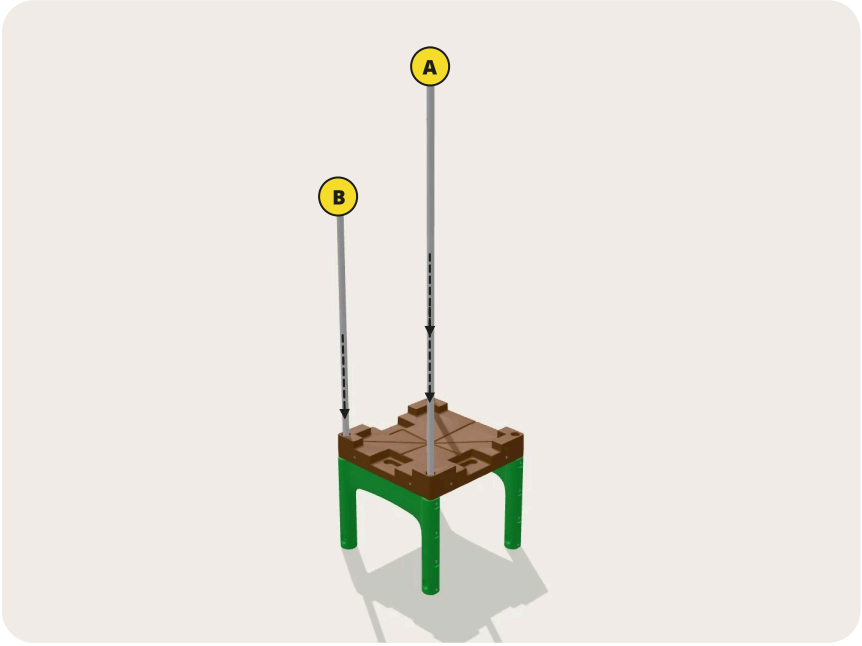


A Tubes 2210 mm (2)

B Tube 1550 mm

Insert **2 tubes of 2210 mm and 1 of 1550 mm** in the corners shown, all the way down.

The last corner stays without a tube for now: the 1550 mm tube goes there, after the walls.

**CAUTION**
Tube holes **always facing up**.

### PARTS FOR THIS STEP



**1×** Tube 1550
ref. 1003202



**2×** Tube 2210
ref. 1022130

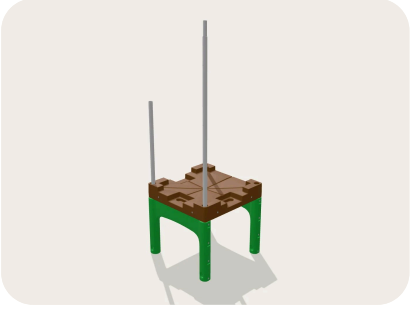

How it looks at the end of step 70

71

STEP 71 OF 103 · MODULE 7 – CURVED SLIDE

# Orange Trix Fofossauro and EVA

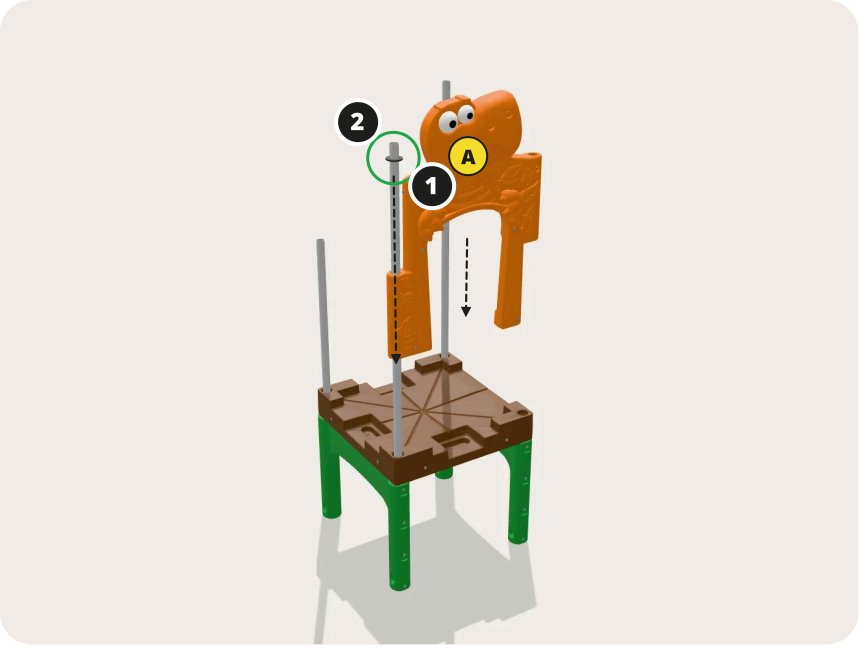


A Orange Trix Fofossauro: curved slide side

**1.** Fit the **orange Trix Fofossauro** down the tubes, on the curved slide side.

**2.** Put an **EVA spacer** on top, in the corner shown.

**CAUTION**

The **order of the walls matters**: in each corner, the sleeve of one wall sits below and the other one on top. Follow the order of the steps; out of order, the sleeves clash and the wall will not go down.

## PARTS FOR THIS STEP

**1×** EVA seal (spacer) ref. 998728

**1×** Trix Fofossauro wall, orange ref. 1022111

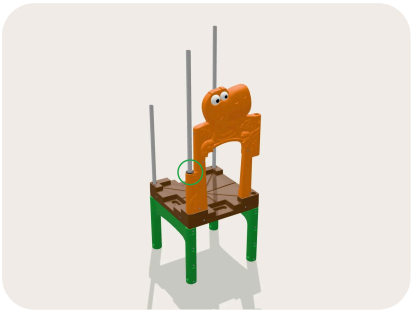

How it looks at the end of step 71

STEP 72 OF 103 · MODULE 7 – CURVED SLIDE

# 72 Yellow wall with dots and EVA

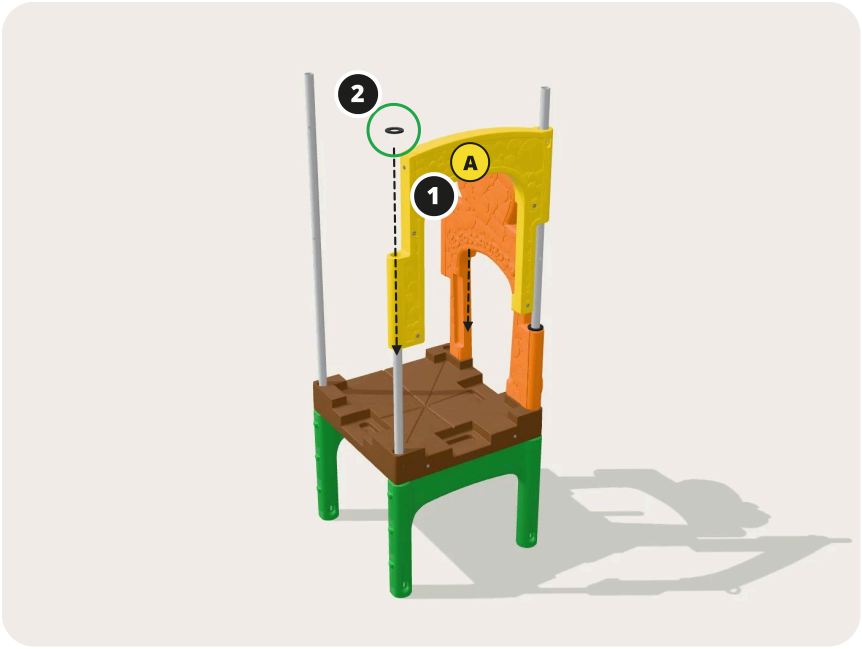


A Yellow wall with dots: side of the bridge to Module 8

**1.** Fit the **yellow wall with dots** down the tubes, on the side of the bridge to Module 8.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Yellow wall with dots
ref. 998727

**1×** EVA seal (spacer)
ref. 998728

How it looks at the end of step 72

STEP 73 OF 103 · MODULE 7 – CURVED SLIDE

# 73 Orange striped wall and EVA

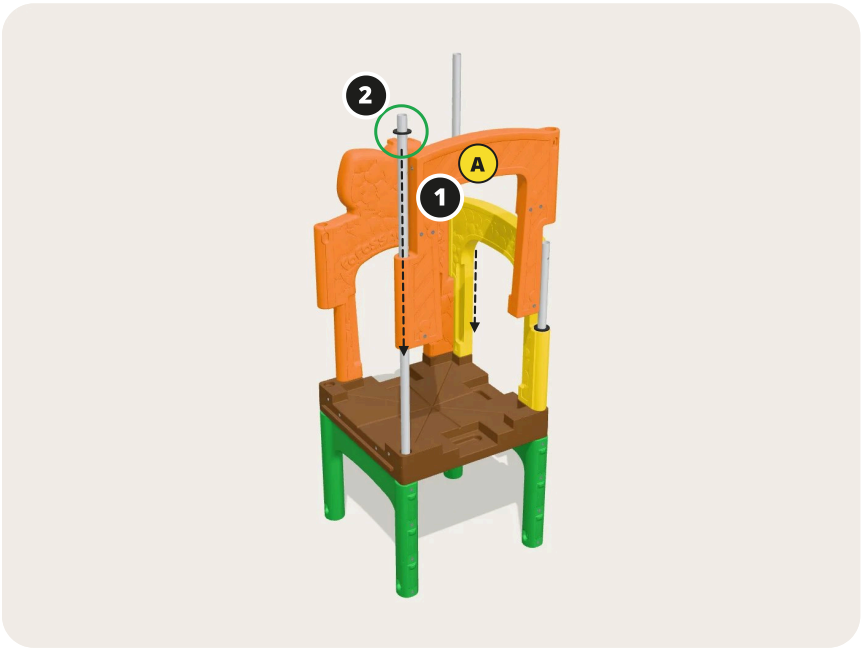


A Orange striped wall: side of the bridge to Module 6

**1.** Fit the **orange striped wall** down the tubes, on the side of the bridge to Module 6.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Orange striped wall
ref. 998726

**1×** EVA seal (spacer)
ref. 998728

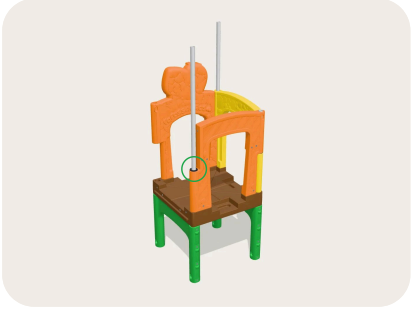

How it looks at the end of step 73

74

STEP 74 OF 103 · MODULE 7 – CURVED SLIDE

## Green Scot Fofossauro: comes down open and turns

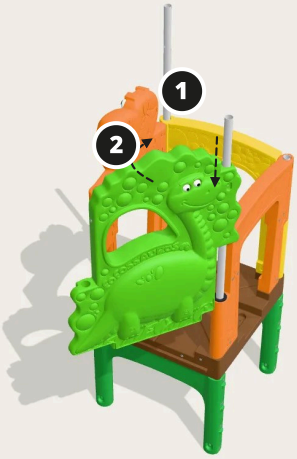


**1.** Fit the end of the **green Scot Fofossauro** onto the 2210 mm tube in the corner and lower the wall straight down, **open to the outside**.

**2.** With the wall resting on the platform, **turn it around the tube** until it closes the square: in the corner without a tube, its sleeve goes **under** the sleeve of the orange Trix Fofossauro.

### PARTS FOR THIS STEP

**1×** Scot Fofossauro wall, green
ref. 1022112

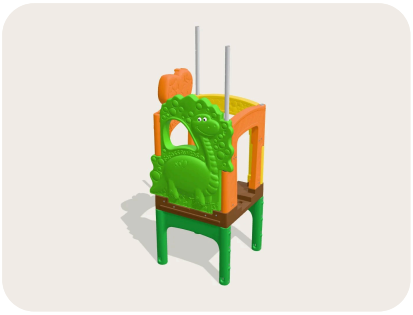

How it looks at the end of step 74

75

STEP 75 OF 103 · MODULE 7 – CURVED SLIDE

## Last tube and caps

**1.** Lower the last **tube, 1550 mm**: it passes through the wall sleeves and locks the set.

**2.** Fit the **caps** on top of the 2 shorter tubes.

### PARTS FOR THIS STEP



**1×** Tube 1550
ref. 1003202

**2×** Tube cap
ref. 1100137

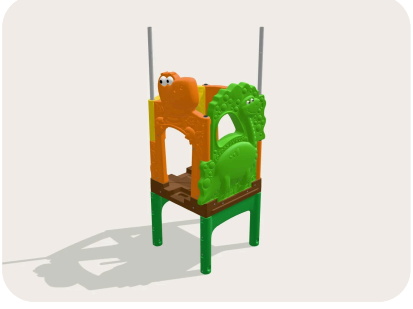

How it looks at the end of step 75

# Join the walls: 4 M6×90 bolts

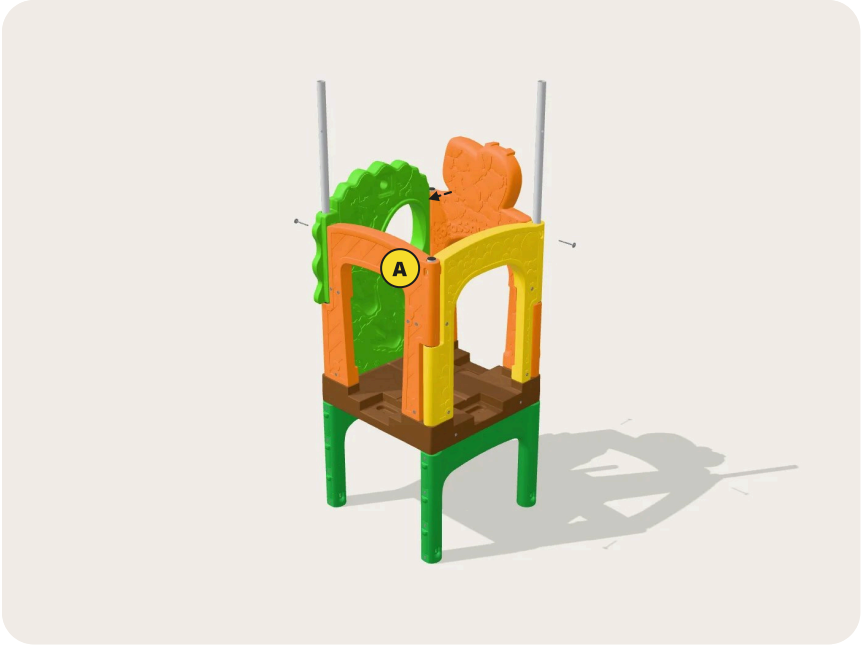


A 4 M6×90 bolts + washer, 1 in each corner

## SCREW AND TOOL

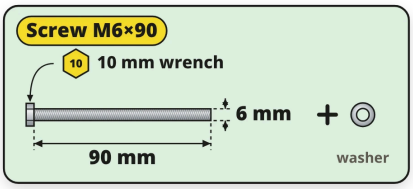


Tool: **10 mm wrench**.

Join the walls with **4 M6×90 bolts with washer**, 1 in each corner, put in **from the outside in**.

## PARTS FOR THIS STEP

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

**4×** Hex bolt M6×90
ref. 2090460

How it looks at the end of step 76

# Tree tops

A Tree tops on the 2 tubes of 2210 mm

## SCREW AND TOOL

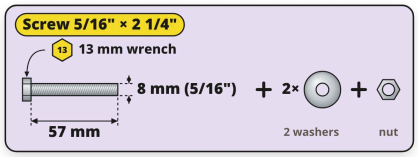


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit a **tree top** on top of each **2210 mm tube**.

Fix each top with **1 bolt 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 lock nut**, through the top and the tube.

## PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **2×** 5/16" lock nut ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **2×** Small black end cap ref. 2090439

How it looks at the end of step 77

# Curved slide

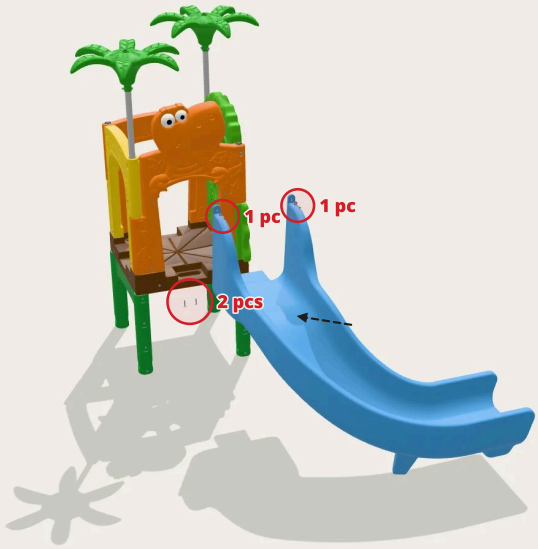


Fit the **curved slide** on the side of the **orange Trix Fofossauro**.

Bolt it with **4 M6×45 bolts with washer**: **2 in the tabs** (into the wall rivets) and **2 under the platform**, from the bottom up.

## PARTS FOR THIS STEP

- **1×** Curved slide ref. 998703
- **4×** Hex bolt M6×45 ref. 2090194
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

## SCREW AND TOOL

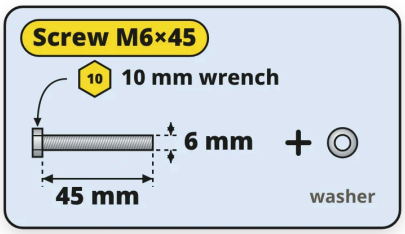


Tool: **10 mm wrench**.

How it looks at the end of step 78

# 79 Bridge between Modules 6 and 7

With Modules 6 and 7 about 80 cm apart, fit the **bridge** between the **yellow striped wall** of Module 6 and the **orange striped wall** of Module 7.

Bolt it with **8 M6×45 bolts with washer**: at each end, **2 in the tabs** (into the wall rivets) and **2 under the platform**, from the bottom up.

## SCREW AND TOOL

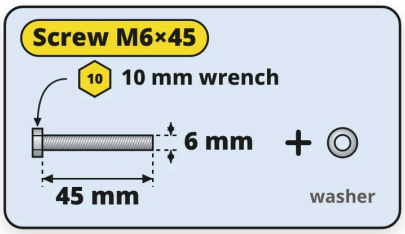


Tool: **10 mm wrench**.

## PARTS FOR THIS STEP

**1×** Bridge
ref. 1000902

**8×** Hex bolt M6×45
ref. 2090194

**8×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

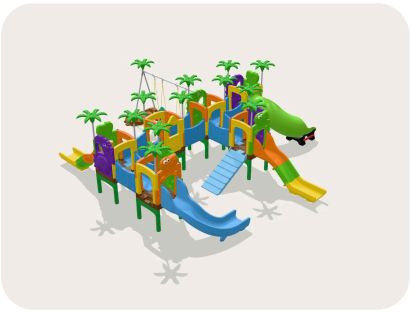

How it looks at the end of step 79

80

STEP 80 OF 103 · MODULE 8 – RAMP

# Module 8: legs and platform

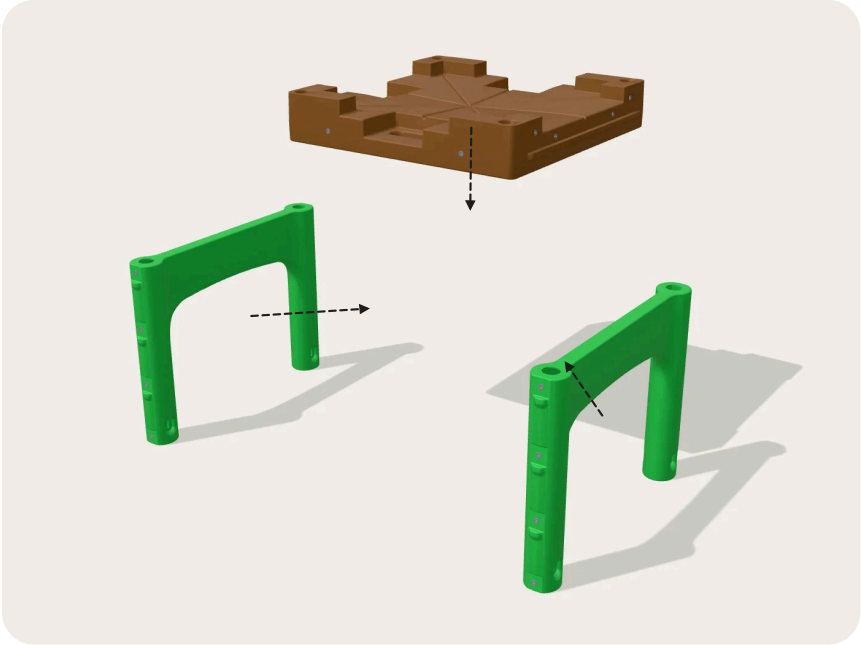

Stand the **2 legs** parallel and rest the **platform** on them, fitting the corners.

## PARTS FOR THIS STEP

**2×** Leg
ref. 998708

**1×** Brown platform
ref. 1022110

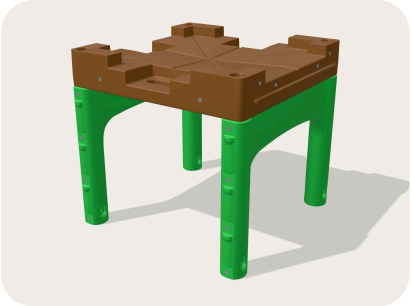

**How it looks at the end of step 80**

STEP 81 OF 103 · MODULE 8 – RAMP

# 81 Tubes: 1 tube of 2210 mm, 1 of 1600 mm and 1 of 1550 mm

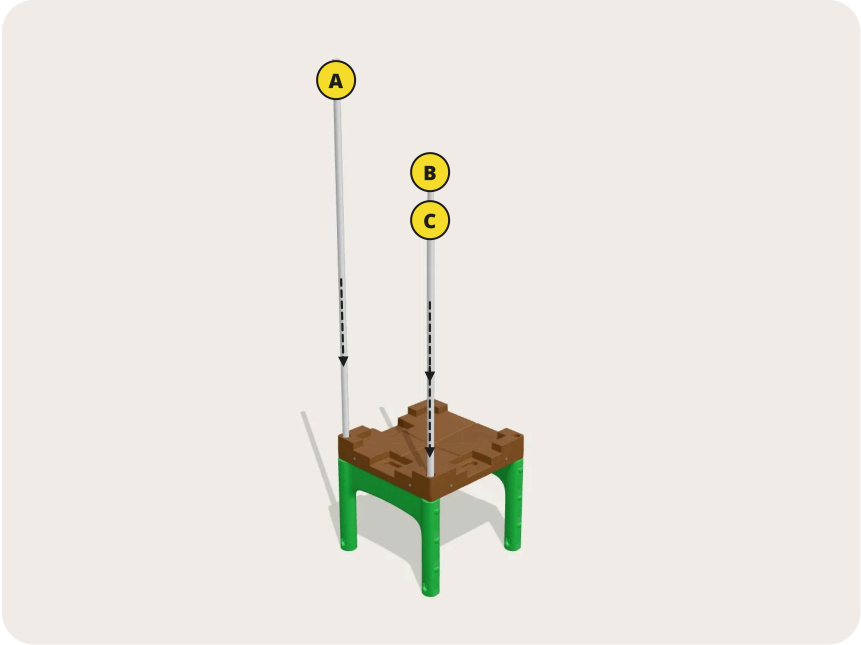


A Tube 2210 mm

B Tube 1600 mm

C Tube 1550 mm

Insert **1 tube of 2210 mm, 1 of 1600 mm and 1 of 1550 mm** in the corners shown, all the way down.

The last corner stays without a tube for now: the 2210 mm tube goes there, after the walls.

**CAUTION**
Tube holes **always facing up**.

## PARTS FOR THIS STEP

**1×** Tube 1550 ref. 1003202

**1×** Tube 2210 ref. 1022130

**1×** Tube 1600 ref. 1022134

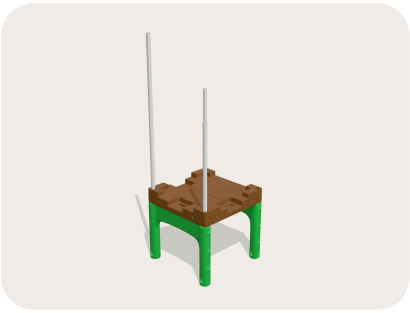

How it looks at the end of step 81

# Yellow striped wall and EVA

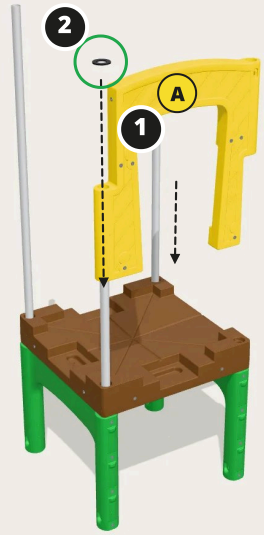


A Yellow striped wall: side of the bridge to Module 9

**1.** Fit the **yellow striped wall** down the tubes, on the side of the bridge to Module 9.

**2.** Put an **EVA spacer** on top, in the corner shown.

**CAUTION**
The **order of the walls matters**: in each corner, the sleeve of one wall sits below and the other one on top. Follow the order of the steps; out of order, the sleeves clash and the wall will not go down.

## PARTS FOR THIS STEP

**1×** Yellow striped wall
ref. 998707

**1×** EVA seal (spacer)
ref. 998728

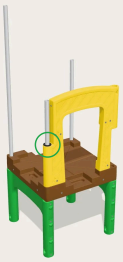

How it looks at the end of step 82

STEP 83 OF 103 · MODULE 8 – RAMP

# 83 Orange wall with dots and EVA

A Orange wall with dots: side of the bridge to Module 7

**1.** Fit the **orange wall with dots** down the tubes, on the side of the bridge to Module 7.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** Orange wall with dots
ref. 998706

**1×** EVA seal (spacer)
ref. 998728

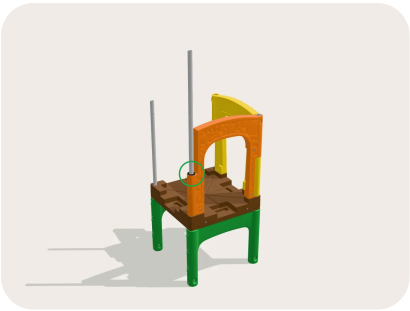

How it looks at the end of step 83

STEP 84 OF 103 · MODULE 8 – RAMP

# 84 Green Trix Fofossauro and EVA

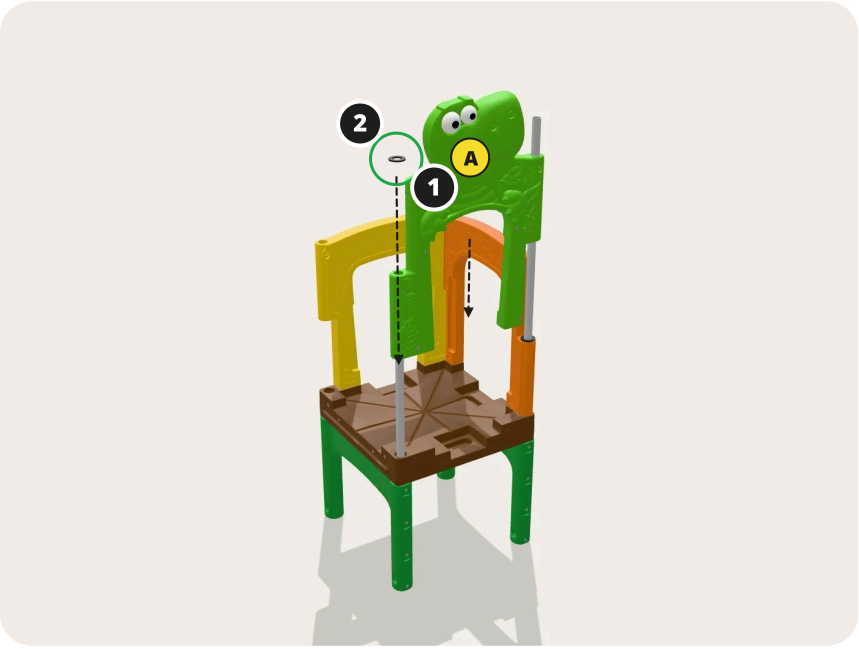


A Green Trix Fofossauro: ramp side

**1.** Fit the **green Trix Fofossauro** down the tubes, on the ramp side.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** EVA seal (spacer)
ref. 998728

**1×** Trix Fofossauro wall, green
ref. 1022101

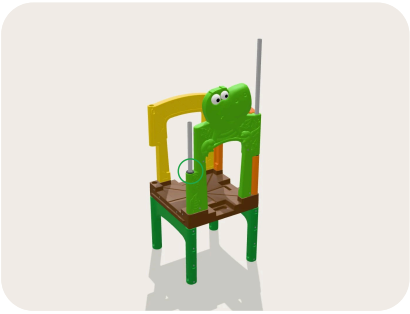

How it looks at the end of step 84

# Purple Scot Fofossauro: comes down open and turns

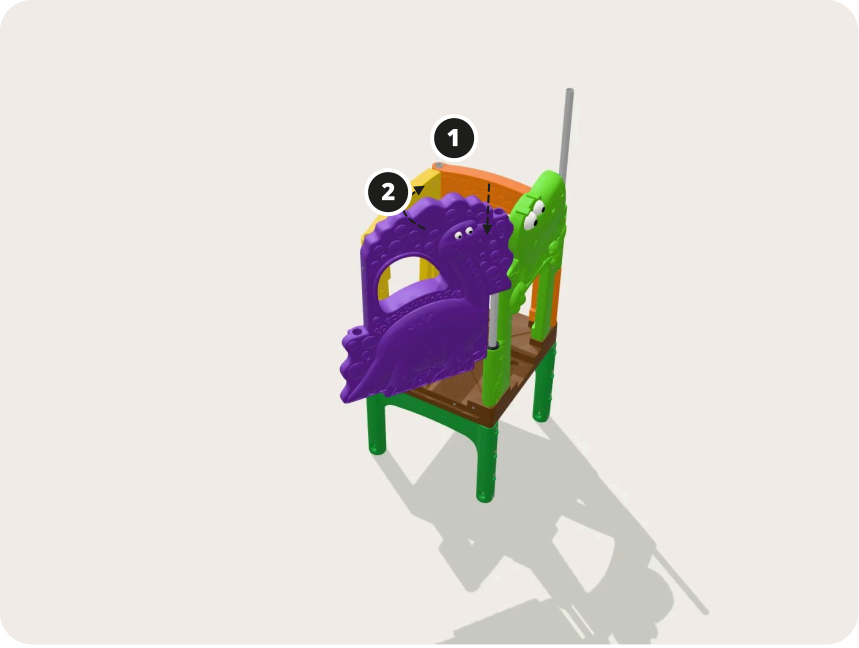


**1.** Fit the end of the **purple Scot Fofossauro** onto the 1600 mm tube in the corner and lower the wall straight down, **open to the outside**.

**2.** With the wall resting on the platform, **turn it around the tube** until it closes the square: in the corner without a tube, its sleeve goes **under** the sleeve of the yellow striped wall.

## PARTS FOR THIS STEP

**1×** Scot Fofossauro wall, purple ref. 1022102

How it looks at the end of step 85

86

STEP 86 OF 103 · MODULE 8 – RAMP

# Last EVA, last tube and caps

**1.** Slide the last **EVA spacer in from the front**, horizontally, in the corner that still has no tube.

**2.** Lower the last **tube, 2210 mm**: it passes through the wall sleeves and locks the set.

**3.** Fit the **caps** on top of the 2 shorter tubes.

## PARTS FOR THIS STEP

- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 2210 ref. 1022130
- **2×** Tube cap ref. 1100137

How it looks at the end of step 86

# Join the walls: 4 M6×90 bolts

A 4 M6×90 bolts + washer, 1 in each corner

## SCREW AND TOOL

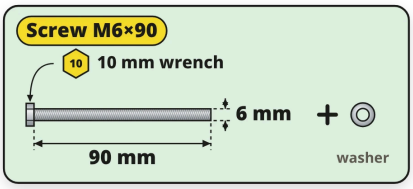


Tool: **10 mm wrench**.

Join the walls with **4 M6×90 bolts with washer**, 1 in each corner, put in **from the outside in**.

## PARTS FOR THIS STEP

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

**4×** Hex bolt M6×90
ref. 2090460

How it looks at the end of step 87

# Tree tops

A Tree tops on the 2 tubes of 2210 mm

## SCREW AND TOOL

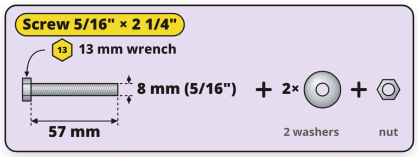


**Tool: 2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit a **tree top** on top of each **2210 mm tube**.

Fix each top with **1 bolt 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 lock nut**, through the top and the tube.

## PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **2×** 5/16" lock nut ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **2×** Small black end cap ref. 2090439

How it looks at the end of step 88

# Ramp

Fit the **blue ramp** on the side of the **green Trix Fofossauro** and bolt it with **4 M6×45 bolts with washer**:

**2 in the tabs** (1 in each, into the wall rivets) and **2 under the platform**, from the bottom up.

## SCREW AND TOOL

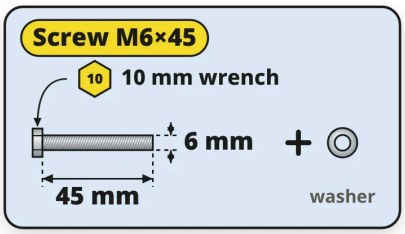


Tool: **10 mm wrench**.

## PARTS FOR THIS STEP

- **1×** Blue ramp ref. 1022114
- **4×** Hex bolt M6×45 ref. 2090194
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

How it looks at the end of step 89

STEP 90 OF 103 · MODULE 8 – RAMP

# 90 Bridge between Modules 7 and 8

With Modules 7 and 8 about 80 cm apart, fit the **bridge** between the **yellow wall with dots** of Module 7 and the **orange wall with dots** of Module 8.

Bolt it with **8 M6×45 bolts with washer**: at each end, **2 in the tabs** (into the wall rivets) and **2 under the platform**, from the bottom up.

## SCREW AND TOOL

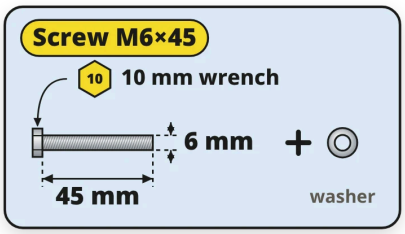


Tool: **10 mm wrench**.

## PARTS FOR THIS STEP

- **1×** Bridge ref. 1000902
- **8×** Hex bolt M6×45 ref. 2090194
- **8×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

How it looks at the end of step 90

# Module 9: leg, climbing wall and platform

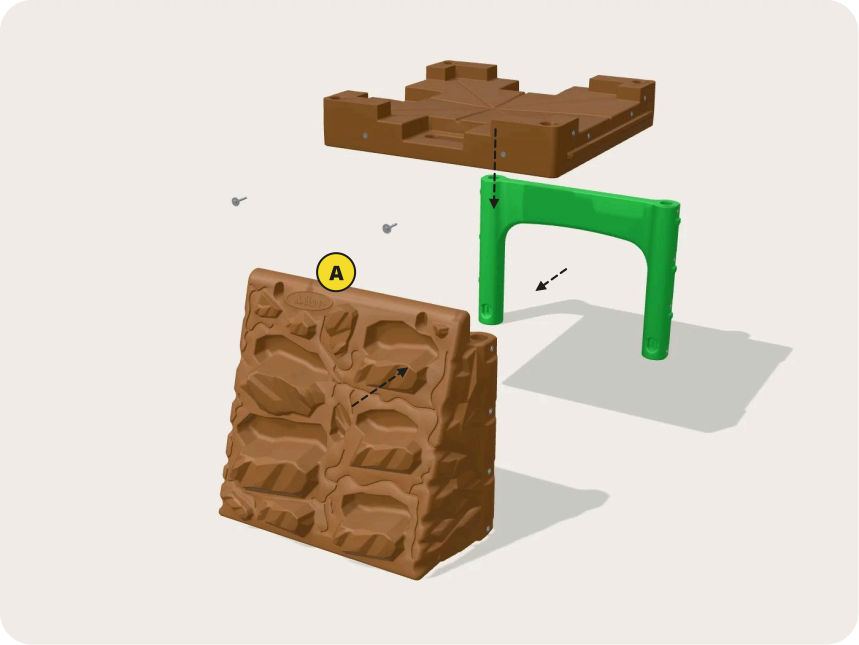


A Climbing wall opposite the leg

## SCREW AND TOOL

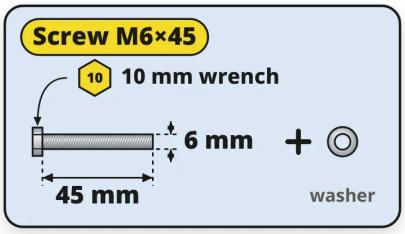


Tool: **10 mm wrench.**

Stand the **leg** and the **climbing wall** parallel, facing each other, and rest the **platform** on both, fitting the corners.

Fix the climbing wall to the platform with **2 M6×45 bolts with washer**, from the outside of the climbing wall.

## PARTS FOR THIS STEP

**1×** Leg
ref. 998708

**1×** Climbing wall
ref. 1022103

**1×** Brown platform
ref. 1022110

**2×** Hex bolt M6×45
ref. 2090194

**2×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

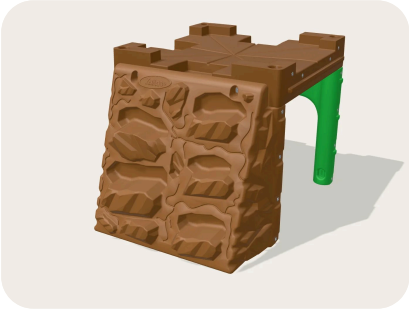

**How it looks at the end of step 91**

# 2 platform covers

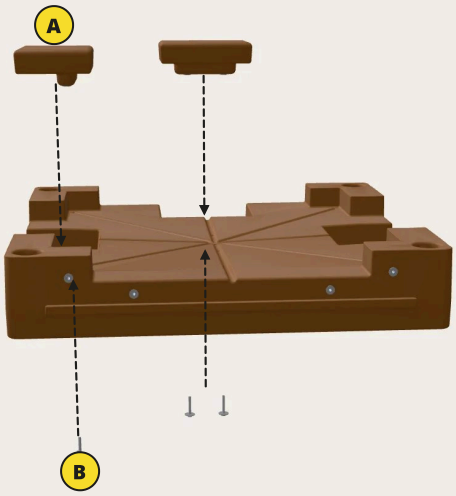


A The cover comes down from above into the opening in the platform

B 2 M6×45 bolts + washer, under the platform, from the bottom up

## SCREW AND TOOL

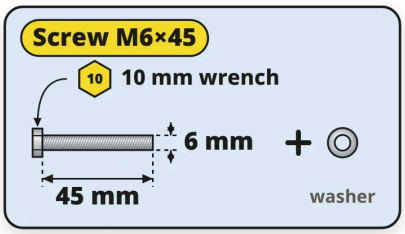


Tool: **10 mm wrench**.

Fit the **2 platform covers** from above, into the openings in the platform.

Under the platform, fix each cover with **2 M6×45 bolts with washer** (4 in all), **from the bottom up**.

## PARTS FOR THIS STEP

**2×** Platform cover
ref. 1022105

**4×** Hex bolt M6×45
ref. 2090194

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

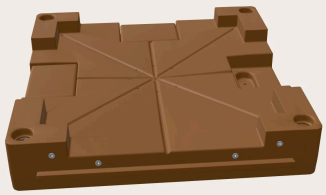

How it looks at the end of step 92

# Tubes: 2 tubes of 2210 mm and 1 of 1550 mm

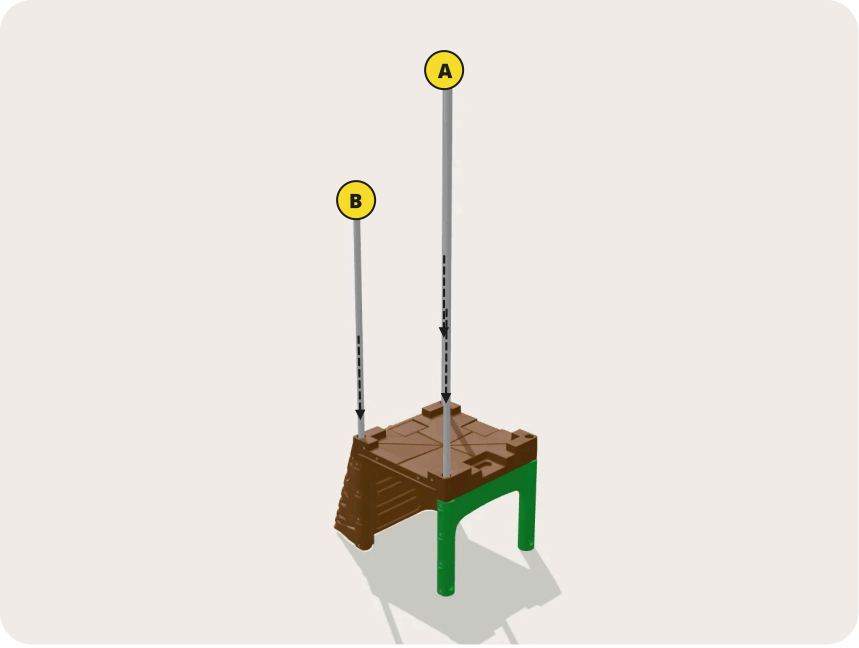


A Tubes 2210 mm (2)

B Tube 1550 mm

Insert **2 tubes of 2210 mm and 1 of 1550 mm** in the corners shown, all the way down.

The last corner stays without a tube for now: the 1550 mm tube goes there, after the walls.

**CAUTION**
Tube holes **always facing up**.

## PARTS FOR THIS STEP

**1×** Tube 1550 ref. 1003202

**2×** Tube 2210 ref. 1022130

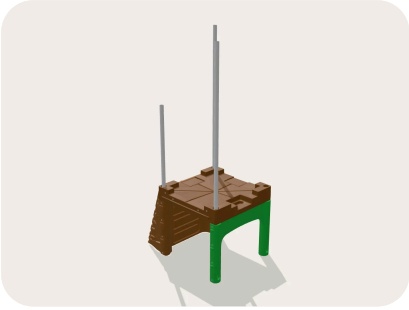

**How it looks at the end of step 93**

# Orange striped wall and EVA

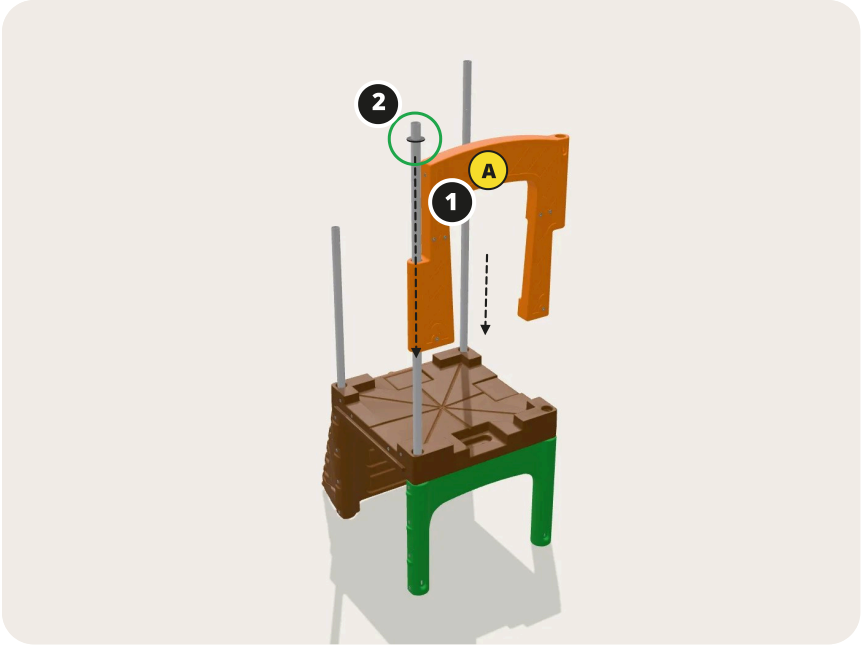


A Orange striped wall: side of the bridge to Module 8

**1.** Fit the **orange striped wall** down the tubes, on the side of the bridge to Module 8.

**2.** Put an **EVA spacer** on top, in the corner shown.

**CAUTION**
The **order of the walls matters**: in each corner, the sleeve of one wall sits below and the other one on top. Follow the order of the steps; out of order, the sleeves clash and the wall will not go down.

## PARTS FOR THIS STEP

**1×** Orange striped wall
ref. 998726

**1×** EVA seal (spacer)
ref. 998728

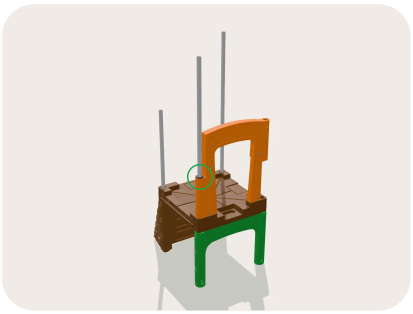

How it looks at the end of step 94

STEP 95 OF 103 · MODULE 9 – TUNNEL AND CLIMBING WALL

# 95 Yellow tunnel wall with dots and EVA

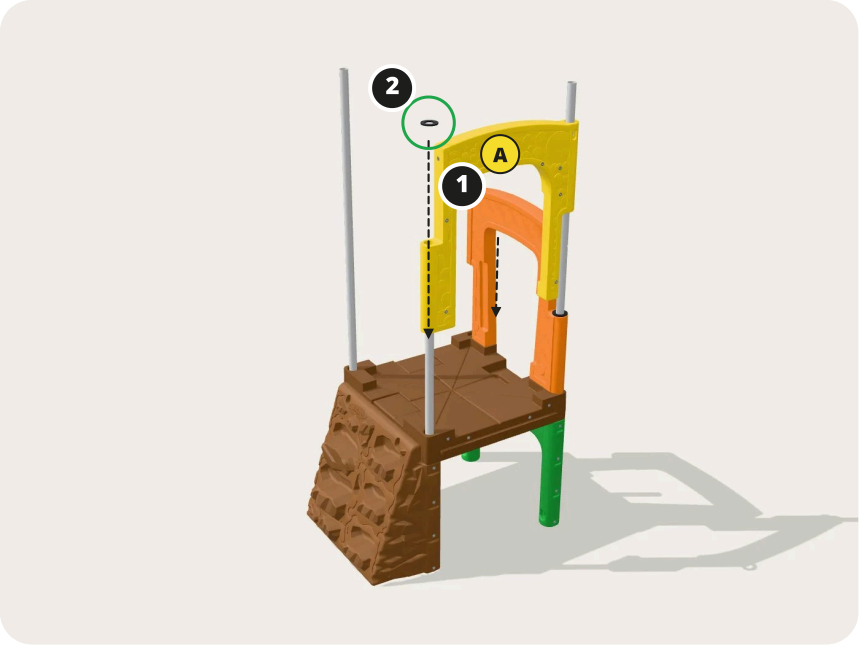


A Yellow tunnel wall with dots: tunnel slide side

**1.** Fit the **yellow tunnel wall with dots** down the tubes, on the tunnel slide side.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

**1×** EVA seal (spacer) ref. 998728

**1×** Yellow tunnel wall with dots ref. 998730

How it looks at the end of step 95

STEP 96 OF 103 · MODULE 9 – TUNNEL AND CLIMBING WALL

# 96 Orange Trix Fofossauro and EVA

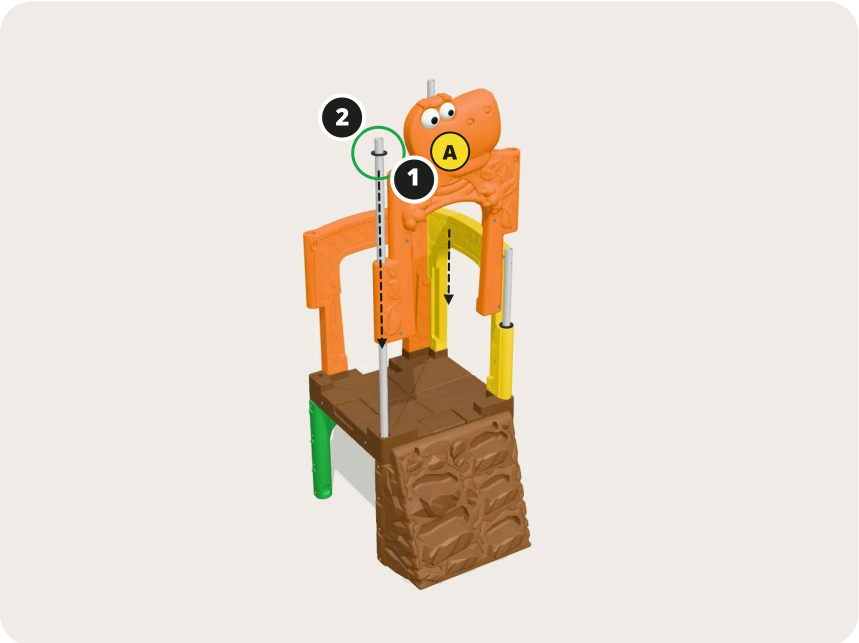


A Orange Trix Fofossauro: climbing-wall side

**1.** Fit the **orange Trix Fofossauro** down the tubes, on the climbing-wall side.

**2.** Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP



**1×** EVA seal (spacer) ref. 998728

**1×** Trix Fofossauro wall, orange ref. 1022111

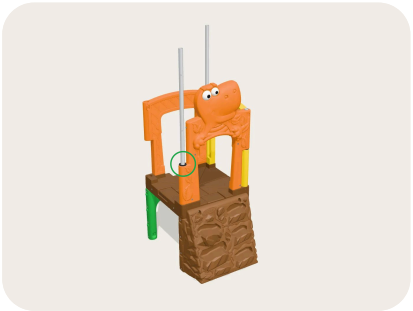

How it looks at the end of step 96

97

STEP 97 OF 103 · MODULE 9 – TUNNEL AND CLIMBING WALL

# Green Scot Fofossauro: comes down open and turns

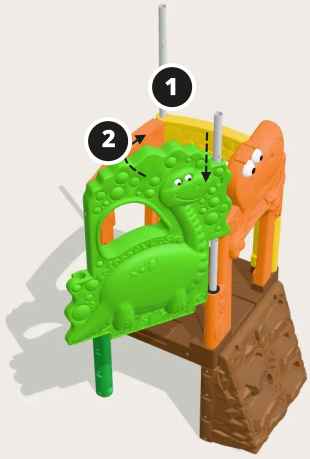


**1.** Fit the end of the **green Scot Fofossauro** onto the 2210 mm tube in the corner and lower the wall straight down, **open to the outside**.

**2.** With the wall resting on the platform, **turn it around the tube** until it closes the square: in the corner without a tube, its sleeve goes **under** the sleeve of the orange striped wall.

## PARTS FOR THIS STEP

**1×** Scot Fofossauro wall, green
ref. 1022112

How it looks at the end of step 97

98

STEP 98 OF 103 · MODULE 9 – TUNNEL AND CLIMBING WALL

# Last tube and caps

**1.** Lower the last **tube, 1550 mm**: it passes through the wall sleeves and locks the set.

**2.** Fit the **caps** on top of the 2 shorter tubes.

## PARTS FOR THIS STEP



**1×** Tube 1550
ref. 1003202

**2×** Tube cap
ref. 1100137

How it looks at the end of step 98

# Join the walls: 4 M6×90 bolts

A 4 M6×90 bolts + washer, 1 in each corner

## SCREW AND TOOL

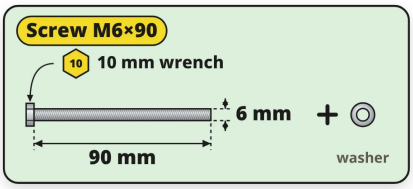


Tool: **10 mm wrench**.

Join the walls with **4 M6×90 bolts with washer**, 1 in each corner, put in **from the outside in**.

## PARTS FOR THIS STEP

**4×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

**4×** Hex bolt M6×90
ref. 2090460

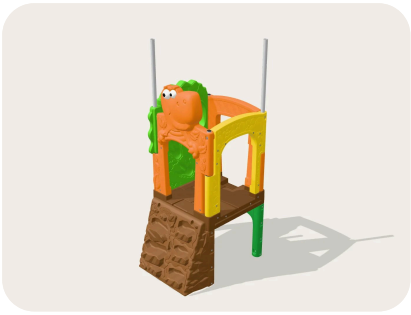

How it looks at the end of step 99

# 100 Tree tops

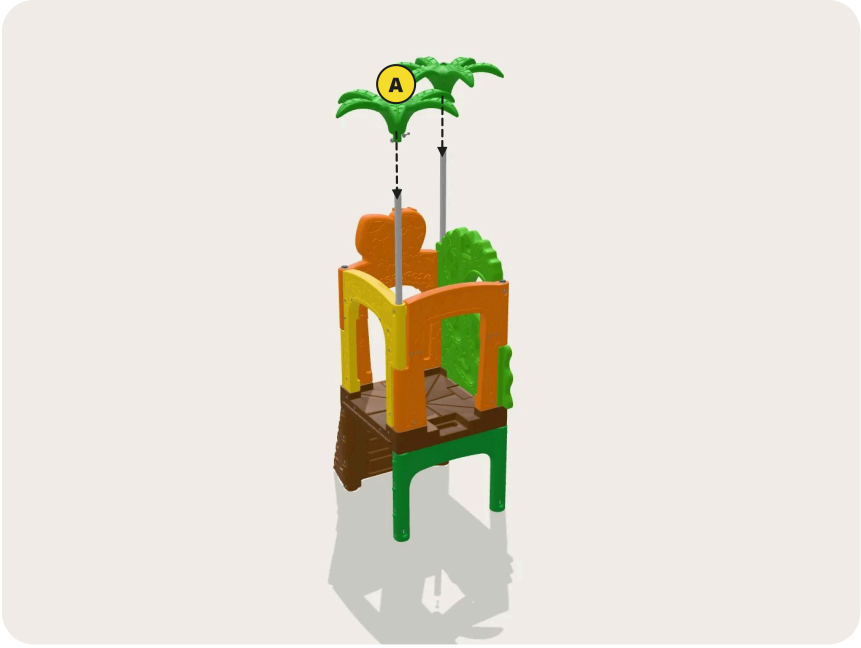


A Tree tops on the 2 tubes of 2210 mm

## SCREW AND TOOL

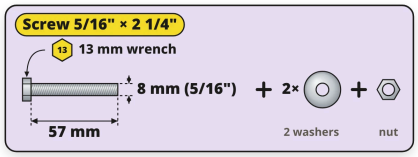


Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit a **tree top** on top of each **2210 mm tube**.

Fix each top with **1 bolt 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 lock nut**, through the top and the tube.

## PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide
- **2×** 5/16" lock nut ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392
- **2×** Small black end cap ref. 2090439

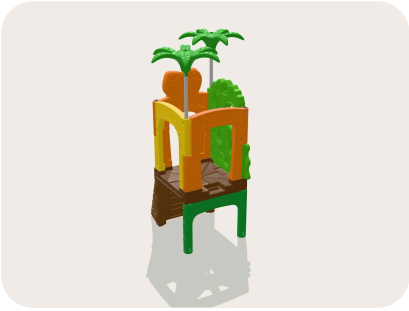

How it looks at the end of step 100

# Tunnel slide bases

With the tunnel on the ground, next to the module, fit one of the **bases** on the **front end** of the tunnel slide and bolt it (**2 M6×45 bolts with washer**).

Place the second base and bolt the **2 crossbars** to join the two bases (**4 M6×45 bolts with washer**).

## PARTS FOR THIS STEP

| | |
|---|---|
| **2×** Small crossbar ref. 953203 | **2×** Tunnel slide base ref. 998714 |
| **6×** Hex bolt M6×45 ref. 2090194 | **6×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide |

## SCREW AND TOOL

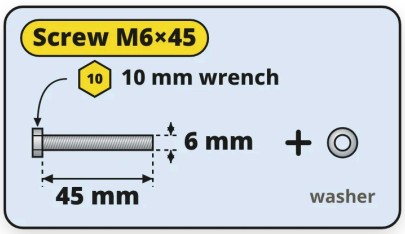


Tool: **10 mm wrench**.

How it looks at the end of step 101

# 102 Tunnel slide on the module

Take the assembled tunnel to the module and fit its mouth on the **yellow tunnel wall with dots**.

Bolt it with **12 M6×45 bolts with washer**: 3 at each of the 4 ends of the tunnel mouth, from the outside in, into the wall rivets.

## PARTS FOR THIS STEP

- **1×** Tunnel slide ref. 998702
- **12×** Hex bolt M6×45 ref. 2090194
- **12×** M8 wide washer (24 mm) one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

## SCREW AND TOOL

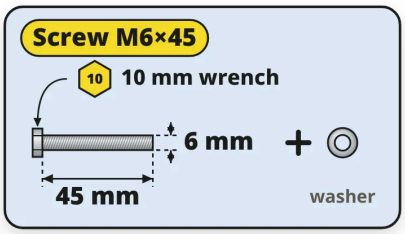


Tool: **10 mm wrench**.

How it looks at the end of step 102

# Bridge between Modules 8 and 9

With Modules 8 and 9 about 80 cm apart, fit the **bridge** between the **yellow striped wall** of Module 8 and the **orange striped wall** of Module 9.

Bolt it with **8 M6×45 bolts with washer**: at each end, **2 in the tabs** (into the wall rivets) and **2 under the platform**, from the bottom up.

> After the last bridge, check that every bolt is tight and every part is well fitted. Only then let children use it.

## SCREW AND TOOL

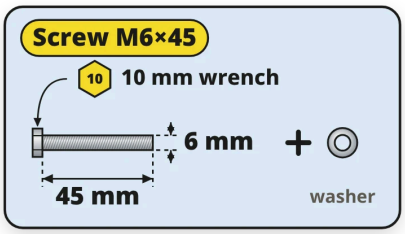


Tool: **10 mm wrench**.

## PARTS FOR THIS STEP

**1×** Bridge
ref. 1000902

**8×** Hex bolt M6×45
ref. 2090194

**8×** M8 wide washer (24 mm)
one on each M6 and M8×40 bolt; two on each 5/16" bolt of the tree tops and the slide

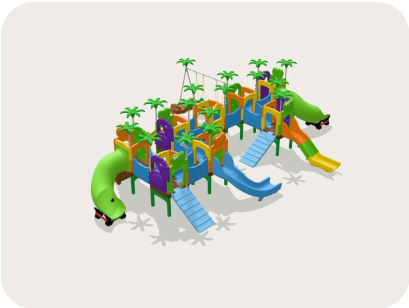

How it looks at the end of step 103

FASTENING DETAILS

# How each part is bolted

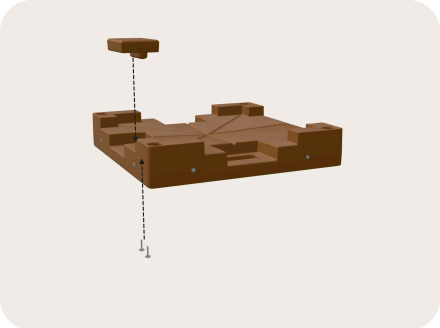

### Platform cover

2 M6×45 bolts + washer, under the platform, from the bottom up.

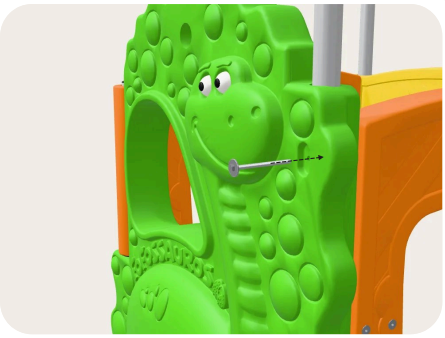

### Wall

M6×90 bolt + washer, from the outside in, through both walls and the tube. 1 in each corner.

### Tree top

5/16" × 2 1/4" bolt with washer on both sides and lock nut, through the top and the tube.

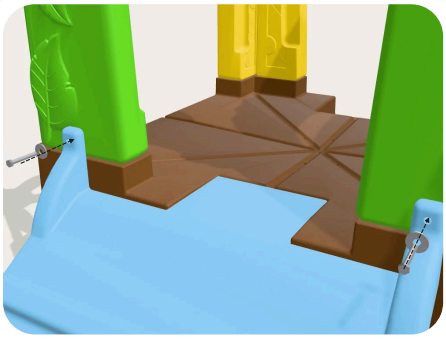

### Ramp, bridge, slide and curved slide

M6×45 bolt + washer through the tab, into the wall rivet; and 2 under the platform, from the bottom up.

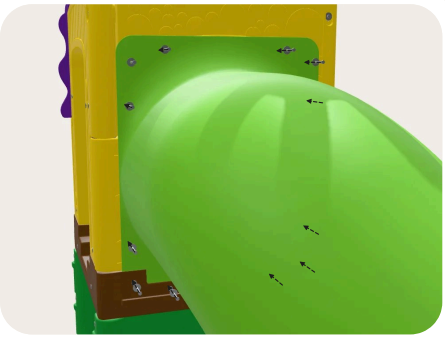

### Tunnel slide

M6×45 bolt + washer, 3 at each end of the tunnel mouth, into the rivets of the yellow tunnel wall with dots.

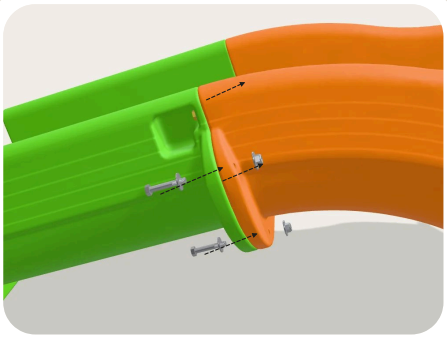

### Slide sections joint (tab)

5/16" × 2" bolt with washer on both sides and lock nut. 4 in each joint.

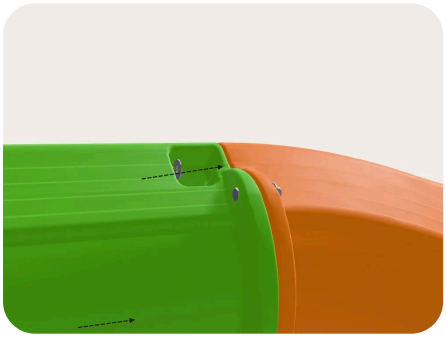

### Slide sections joint (recess)

M8×40 bolt + washer, screwed into the M8 rivet. 2 in each joint.

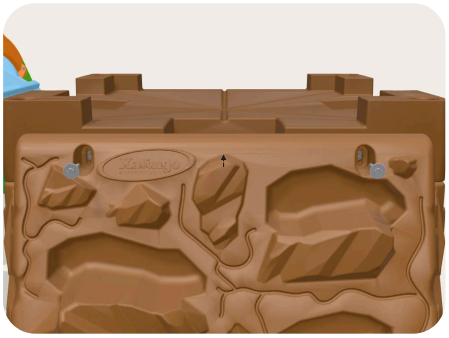

### Climbing wall

2 M6×45 bolts + washer, from the outside of the climbing wall, into the platform rivets.

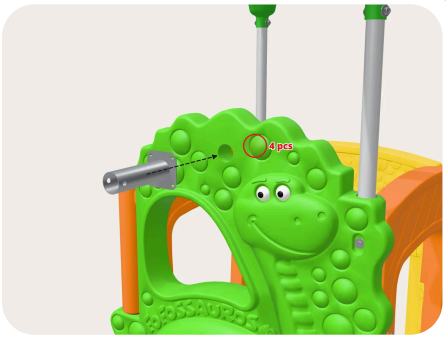


### Multi-swing clamp

4 M6×45 bolts with flat washer, in the top opening of the green Scot Fofossauro of Module 1.

# Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Before letting children use it, check that every bolt is tight and every part is well fitted.

INSTALLATION DETAILS

# Location and safety area

To keep users safe, minimum spaces and free distances must be respected.

**Circulation area:** at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

**Fall space:** neighboring static equipment with overlapping fall spaces must be at least 1.50 m apart for a fall height of up to 600 mm, and 2.50 m for higher falls. Maximum fall height of this product: **700 mm**.

**Slide landing area:** at least 1000 mm from the sides of the run-out section and 2000 mm (type 01 run-out) or 1000 mm (type 02 run-out) from the end of the run-out section.

**Ground:** an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

**Location:** first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

**Area reserved for installing this playground and for impact:** about **13.21 × 10.65 m** (figure below): 1 m clear all around the playground, 1.5 m in front of the ramps, the climbing walls and the swing base, and 2 m past the exit of the slides and the tunnels.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

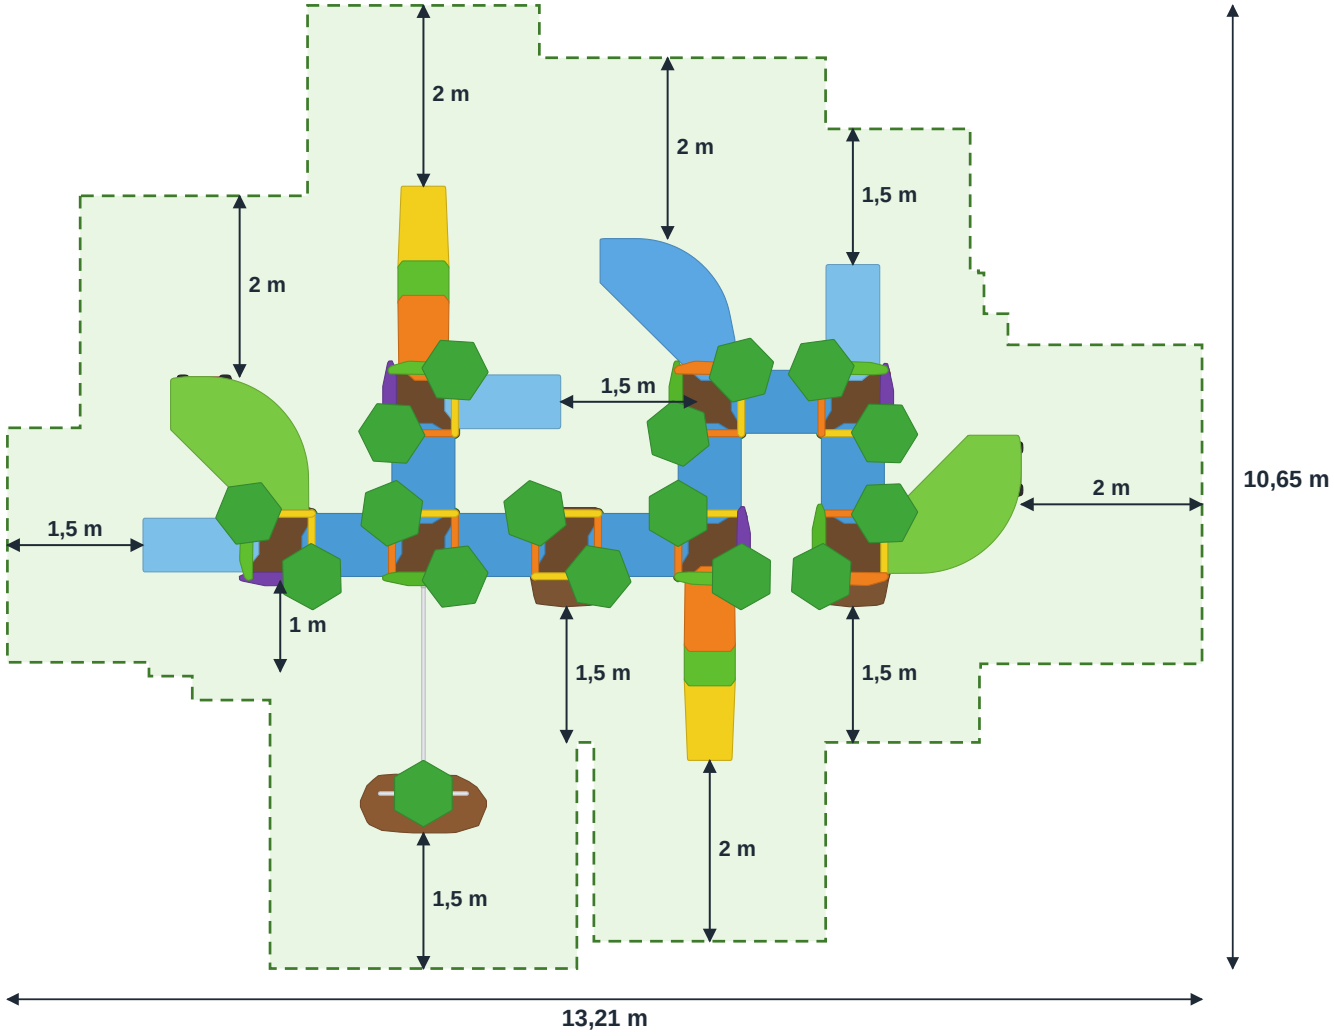


Area reserved for installation and impact (top view). Keep the dashed area free of obstacles.

INSPECTION AND MAINTENANCE

# Keep the playground safe

## Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

## Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

## Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Slides: section joints (5/16" and M8 bolts) and fixing to the tower
- Swing: hooks, ropes, knots, safety belt and the metal clamps

## Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

---

**XALINGO S/A INDÚSTRIA E COMÉRCIO**
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

**SAC**
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Universo dos Fofossauros · ref. 2060.9
Keep this manual for future reference.