Parque dos Fofossauros

ref. 1020.9



ASSEMBLY INSTRUCTIONS

Assembly video on YouTube:
youtu.be/C8vnCeZUTi0

Product size: **5,49 × 2,67 × 2,22 m**
Two modules joined by a bridge, with climbing wall, 3-section slide, ramp, tunnel slide and 4 tree tops
Age range: 3 to 8 years. Maximum load of 80 kg per platform.
Assembly by adults. To carry the slide and the tunnel to the module, ask a second person to help.
28 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Mind the tube orientation: the **holes always face up**.
- Every screw must go in with a **washer**, for a more even and secure tightening.
- Walls always with the **rivet nuts facing out**, and always an **EVA spacer** between two walls.
- Slides, ramp and bridge are screwed to the platform **from the bottom up**.
- Where the slide sections join, **do not swap the screws**: 5/16" × 2" with nut on the flanges and M8×40 in the recess.

Tools




- **10 mm open-end or combination wrench**: M6×45 screws (40 pcs, steps 1, 2, 13, 16 and 25–28) and M6×90 screws (8 pcs, steps 10 and 23)
- **13 mm open-end or combination wrench**: M8×40 screws (4 pcs, steps 11 and 12)
- **2 × 13 mm wrenches** (or a wrench + a 13 mm socket): 5/16" × 2" screws with nut (8 sets, steps 11 and 12) and 5/16" × 2 1/4" screws with nut (4 sets, steps 14 and 24). One holds the nut while the other turns the screw.
- Pliers


There are no specific tightening torques for the fasteners. The rivet nuts come already fitted in the parts.

Screws in this playground


Each type has its own color. The same card appears in each step and in the assembly video.

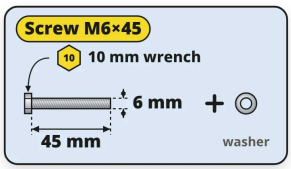


40× Screw M6×45 · steps 1, 2, 13, 16 and 25–28

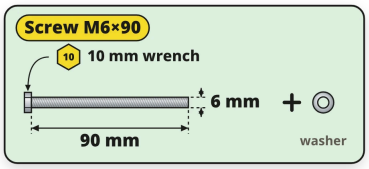


8× Screw M6×90 · steps 10 and 23

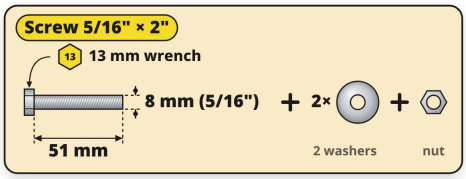

8× Screw 5/16" × 2" · steps 11 and 12

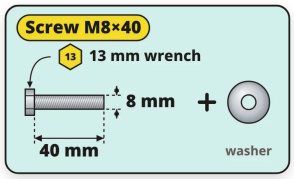

4× Screw M8×40 · steps 11 and 12

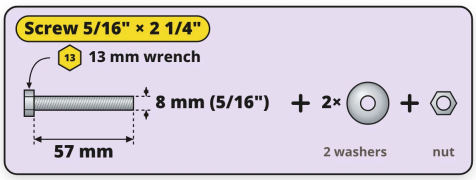

4× Screw 5/16" × 2 1/4" · steps 14 and 24

PARTS LIST

Parque dos Fofossauros parts



BROWN PLATFORM — 2×
No. 1 · ref. 1022110



RIVET NUT 8SJN-M6 — 108×
No. 2 · ref. 2090183 · already fitted



HEX SCREW M6×45 mm — 40×
No. 3 · ref. 2090194



LEG — 3×
No. 4 · ref. 998708



SCOT FOFOSSAURO WALL, PURPLE — 2×
No. 5 · ref. 1022102



HEX SCREW M6×90 mm — 8×
No. 6 · ref. 2090460



EVA SEAL — 8×
No. 7 · ref. 998728



FOFOSSAUROS CLIMBING WALL — 1×
No. 8 · ref. 1022103



TRIX FOFOSSAURO WALL, GREEN — 2×
No. 9 · ref. 1022101



FOFOSSAUROS PLATFORM COVER — 2×
No. 10 · ref. 1022105

TUBE 2210 — 4×
No. 11 · ref. 1022130



FOFOSSAUROS TREE TOP — 4×
No. 12 · ref. 1022104



HEX SCREW UNC 5/16" × 2 1/4" — 4×
No. 13 · ref. 2090392



5/16" NYLON SELF-LOCKING NUT — 12×
No. 14 · ref. 2090370


SHORT TUBE 1550 — 4×
No. 15 · ref. 1003202



TUBE CAP — 4×
No. 16 · ref. 1100137



SLIDE – ENTRY SECTION — 1×
No. 17 · ref. 1022107



SLIDE – STRAIGHT SECTION — 1×
No. 18 · ref. 1022108



SLIDE – EXIT SECTION — 1×
No. 19 · ref. 1022109



ORANGE WALL WITH DOTS — 1×
No. 20 · ref. 998706



BRIDGE — 1×
No. 21 · ref. 1000902



M8 WASHER – Ø24 mm — 76×
No. 22 · ref. 2090347



BLUE RAMP — 1×
No. 23 · ref. 1022114



YELLOW WALL WITH DOTS – FOR THE TUNNEL — 1×
No. 24 · ref. 998730



TUNNEL SLIDE — 1×
No. 25 · ref. 998702



TUNNEL SLIDE BASE — 2×
No. 26 · ref. 998714



SMALL CROSSBAR — 2×
No. 27 · ref. 953203



YELLOW STRIPED WALL — 2×
No. 28 · ref. 998707



SCOT EYE — 4×
No. 29 · ref. 951002



TRIX RIGHT EYE — 2×
No. 30 · ref. 935405



TRIX LEFT EYE **2×**
No. 31 · ref. 935404



SMALL BLACK END CAP **4×**
No. 32 · ref. 2090439



HEX SCREW UNC 5/16" × 2" **8×**
No. 33 · ref. 1090113



M8 RIVET NUT **4×**
No. 34 · ref. 2090448



HEX SCREW M8×40 **4×**
No. 35 · ref. 2090320

PRODUCT ASSEMBLY


Step by step

In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.


---

1 STEP 1 OF 28

Climbing-wall module: leg, climbing wall and platform

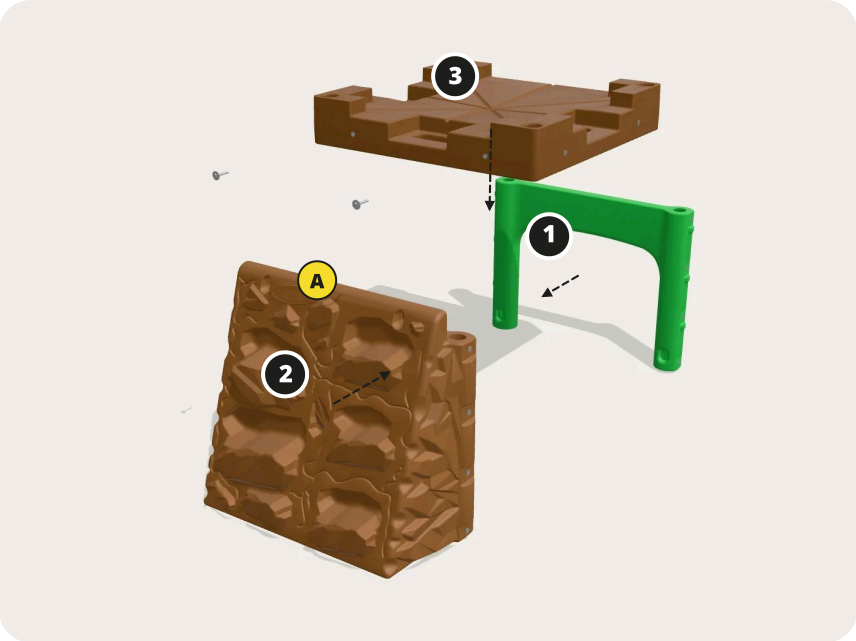

A Climbing wall opposite the leg

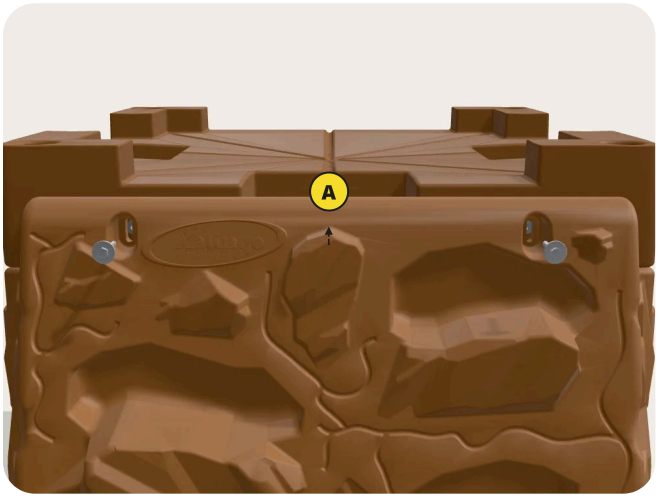

The climbing wall is fixed to the platform with 2 screws

A 2 M6×45 screws + washer hold the climbing wall to the platform

Start with the **climbing wall and slide module**. Set the **leg** and the **climbing wall** parallel, facing each other.


Rest the **platform** on both, fitting the corners.

Fix the climbing wall to the platform with **2 M6×45 screws with washer**, from the outside of the climbing wall.


PARTS FOR THIS STEP

- **1×** Leg ref. 998708
- **1×** Climbing wall ref. 1022103
- **1×** Brown platform ref. 1022110
- **2×** M6×45 hex screw ref. 2090194
- **2×** M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw

SCREW AND TOOL

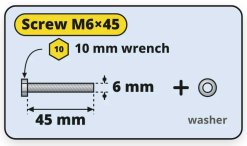


Tool: **10 mm wrench.**

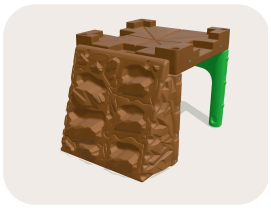

How it looks at the end of step 1

STEP 2 OF 28


2 Platform cover

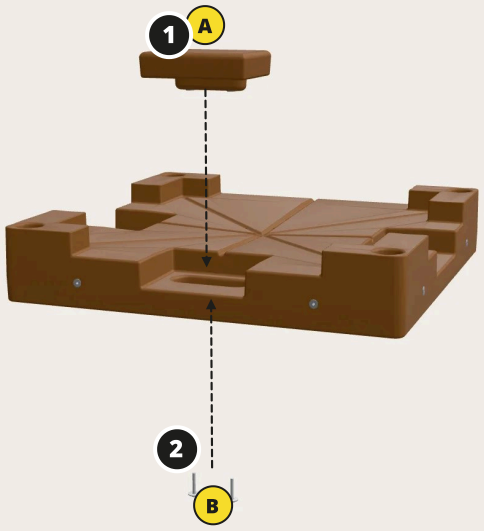

A The cover comes down from above and fits into the platform opening, on the climbing-wall side

B 2 M6×45 screws + washer, under the platform, from the bottom up

SCREW AND TOOL

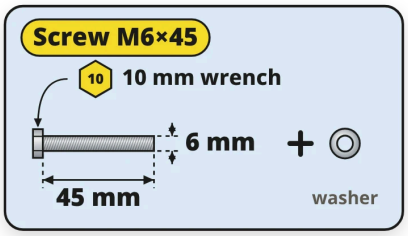

Tool: **10 mm wrench.**

Fit the **platform cover** from above, into the platform opening on the climbing-wall side.

Under the platform, fix the cover with **2 M6×45 screws with washer**, **from the bottom up**.

PARTS FOR THIS STEP




1× Platform cover
ref. 1022105



2× M6×45 hex screw
ref. 2090194




2× M8 wide flat washer (24 mm)
one on each M6 and M8×40 screw; two on each 5/16" screw

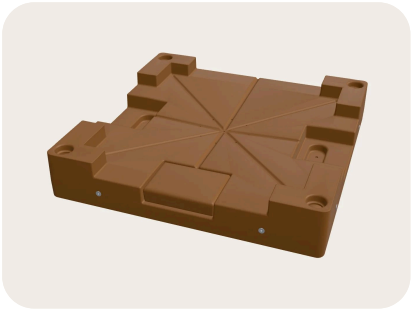

How it looks at the end of step 2

STEP 3 OF 28

3 Tubes: 2 × 2210 mm and 1 × 1550 mm

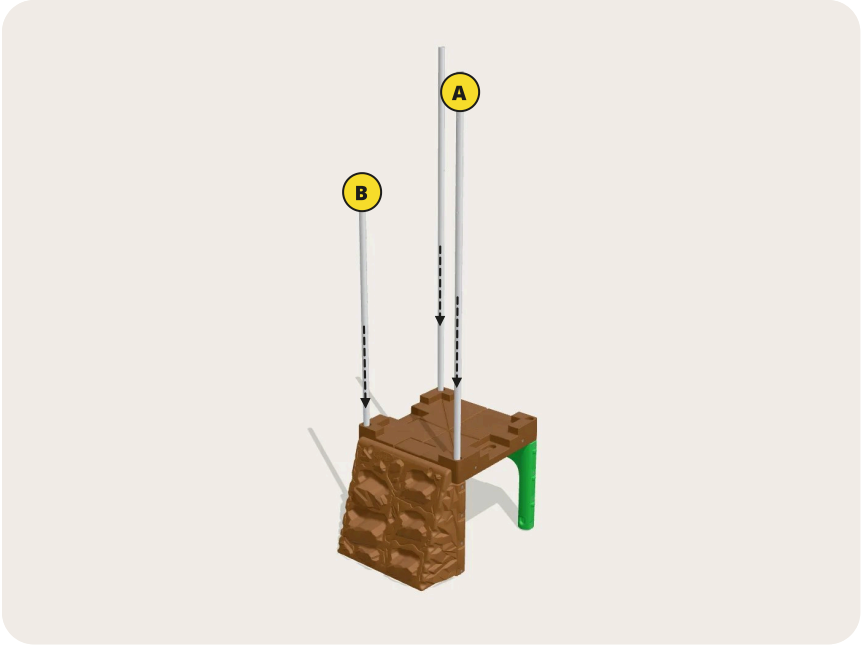

A 2210 mm tubes (2)

B 1550 mm tube

Insert the **2 tubes of 2210 mm** in the corners shown and **1 tube of 1550 mm** in the corner on the climbing-wall and bridge side, all the way down.

The last corner stays without a tube for now: it gets the other 1550 mm tube in step 9.


CAUTION
Mind the tube orientation: the **holes always face up**.

The 2210 mm tubes are the ones that take the tree tops at the end.

PARTS FOR THIS STEP

1× Tube 1550 ref. 1003202


2× Tube 2210 ref. 1022130

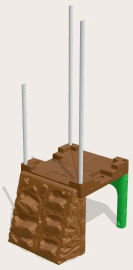

How it looks at the end of step 3

STEP 4 OF 28

4 Identify the walls

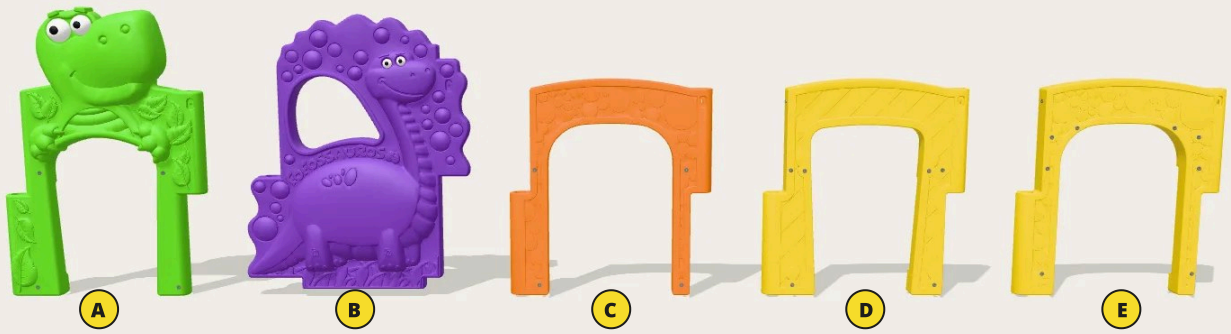

- **A** Green Trix Fofossauro (2 pcs): one in each module
- **B** Purple Scot Fofossauro (2 pcs): one in each module
- **C** Orange wall with dots (1 pc): climbing-wall module
- **D** Yellow striped wall (2 pcs): bridge side, one in each module
- **E** Yellow wall with dots (1 pc): tunnel module, tunnel side

The Parque dos Fofossauros has **8 walls**, 4 in each module. Each module takes a **green Trix Fofossauro**, a **purple Scot Fofossauro** and a **yellow striped wall** (on the bridge side).

The fourth wall is different: **orange with dots** in the climbing-wall module (climbing-wall side) and **yellow with dots** in the tunnel module (tunnel side).

CAUTION
When fitting the walls, always keep the **rivet nuts facing out**: they are used to fix the ramp, the slides and the bridge.

STEP 5 OF 28

5 Green Trix Fofossauro and EVA



A EVA spacer on top, in the corner

1. Slide the **green Trix Fofossauro** down the tubes, on the slide side.

2. Place an **EVA spacer** on top, in the corner shown.

CAUTION
The EVA spacer goes **on top, before** the wall that closes that corner: there is always an EVA spacer between two walls.

PARTS FOR THIS STEP

1× EVA seal (spacer)
ref. 998728


1× Trix Fofossauro wall, green
ref. 1022101



How it looks at the end of step 5

STEP 6 OF 28

6 Orange wall with dots and EVA

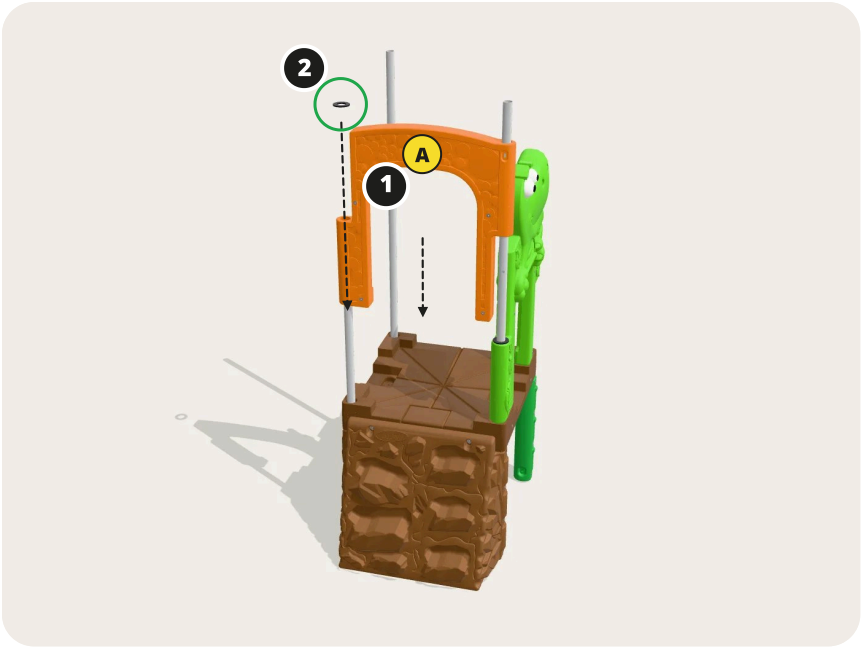

A Orange wall with dots: climbing-wall side

1. Fit the **orange wall with dots** on the climbing-wall side.

2. Place an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

1× Orange wall with dots
ref. 998706


1× EVA seal (spacer)
ref. 998728



How it looks at the end of step 6

STEP 7 OF 28

7 Yellow striped wall and EVA

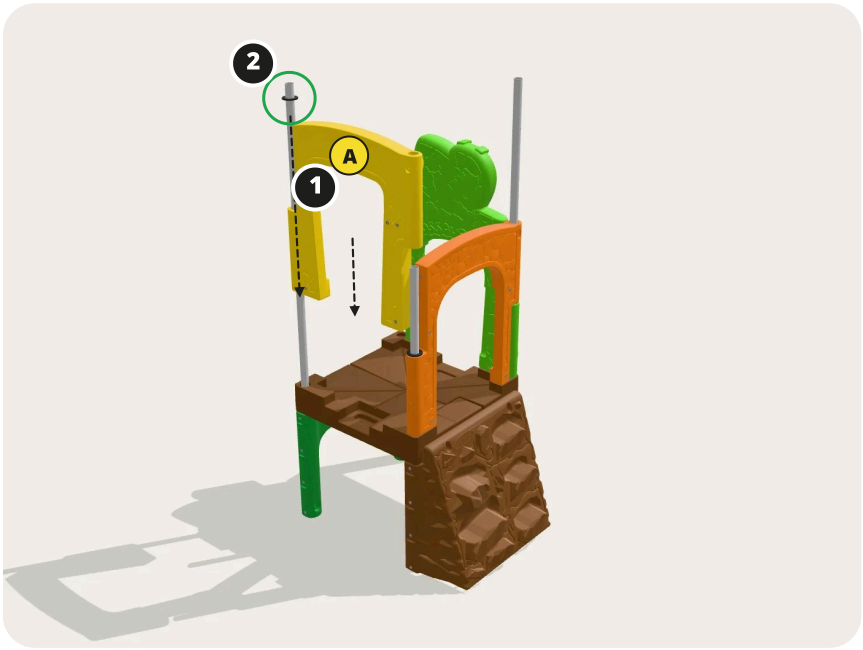

A Yellow striped wall: bridge side

1. Fit the **yellow striped wall** on the bridge side.

2. Place an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

1× Yellow striped wall
ref. 998707


1× EVA seal (spacer)
ref. 998728



How it looks at the end of step 7

STEP 8 OF 28

8 Scot Fofossauro: goes down open and swings shut

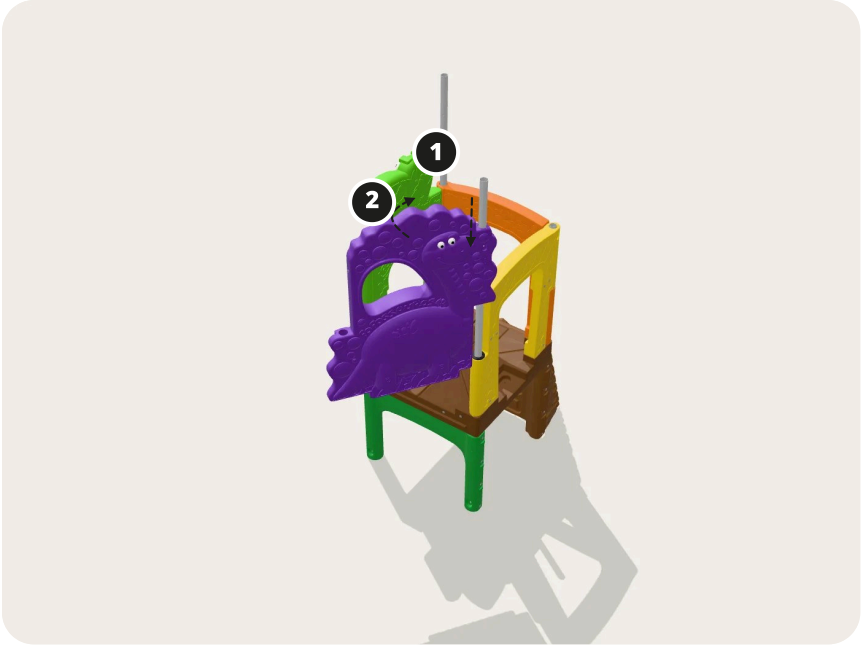


1. Fit the end of the **Scot Fofossauro** onto the 2210 mm corner tube and lower the wall straight down, **swung open to the outside**.

2. With the wall resting on the platform, **swing it around the tube** to close the square, against the Trix Fofossauro.

PARTS FOR THIS STEP




1× Scot Fofossauro wall, purple
ref. 1022102

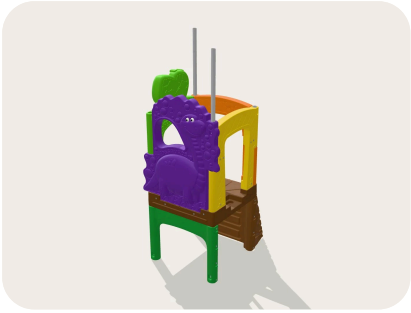

How it looks at the end of step 8

STEP 9 OF 28

9 Last EVA, last tube and caps

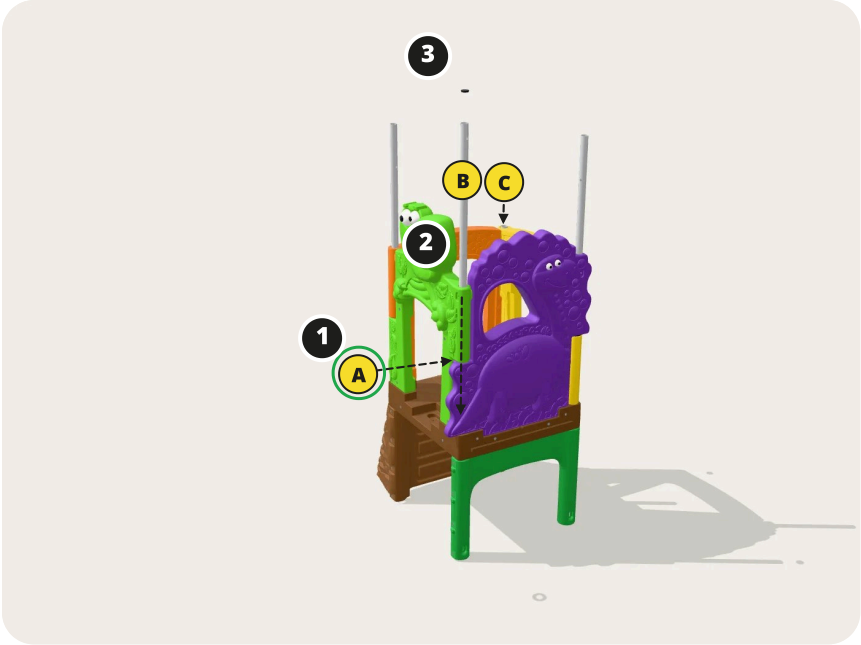

A Last EVA spacer: goes in from the front, flat

B Lower the last tube (1550 mm): it locks the walls

C Caps on top of the 2 tubes of 1550 mm

1. Fit the last **EVA spacer from the front**, flat, in the corner that still has no tube.

2. Lower the other **1550 mm tube**: it goes through the walls and the EVA and locks the set.

3. Fit the **caps** on top of the 2 tubes of 1550 mm.

PARTS FOR THIS STEP

1× EVA seal (spacer)
ref. 998728

1× Tube 1550
ref. 1003202

2× Tube cap
ref. 1100137




How it looks at the end of step 9

STEP 10 OF 28

10 Join the walls: 4 M6×90 screws



A 4 M6×90 screws + washer, 1 in each corner

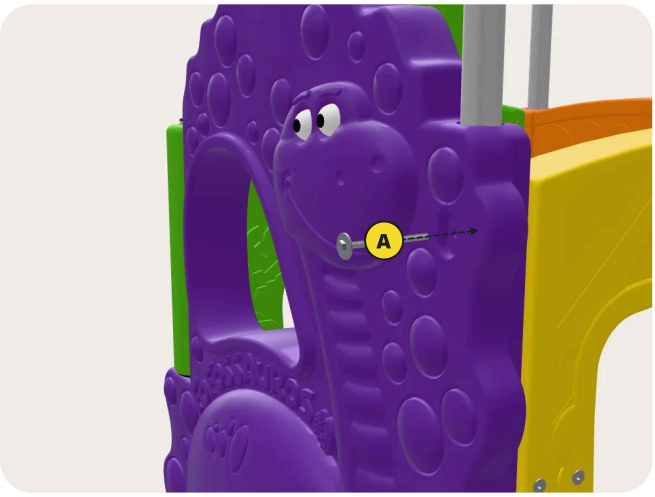

M6×90 screw through the walls and the tube

A M6×90 screw + washer, from outside in, through the walls and the tube

Join the walls with **4 M6×90 screws with washer**, 1 in each corner, put in **from outside in**.


The tubes have through holes for the screws.

PARTS FOR THIS STEP


4× M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw

4× M6×90 hex screw ref. 2090460

SCREW AND TOOL

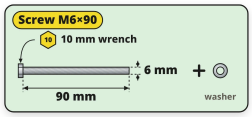


Tool: **10 mm wrench.**

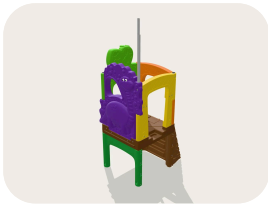


How it looks at the end of step 10

STEP 11 OF 28


11 Slide on the ground: entry and straight section

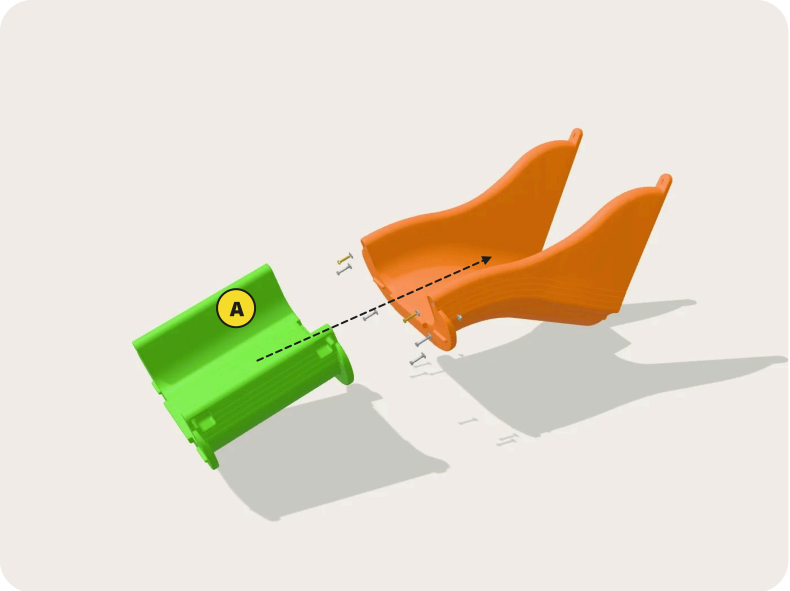

A Entry (orange) + straight section (green), assembled on the ground

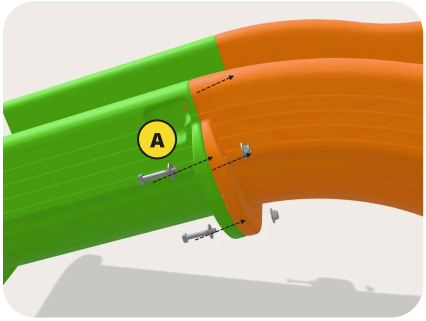

On the flange: 5/16" × 2" screw, washer on both sides and nut

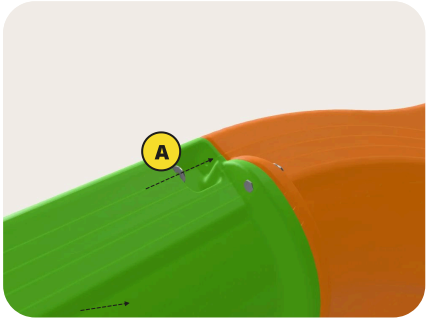

In the recess: M8×40 screw with washer, into the M8 rivet nut

The slide is assembled **on the ground**, next to the module, and only then goes onto the tower.

Fit the **straight section (green)** onto the **entry (orange)** and join them with **2 kinds of screw**:

On the flanges: 4 screws 5/16" × 2", each with **a washer on each side** and a **self-locking nut**.

In the recess: 2 M8×40 screws with washer, screwed into the **M8 rivet nut** already in the part.

CAUTION

Do not swap the screws: the 5/16" × 2" (with nut) goes on the flanges and the M8×40 (no nut) goes in the recess, into the M8 rivet nut.

PARTS FOR THIS STEP



1× Slide: entry section ref. 1022107



1× Slide: straight section ref. 1022108



4× 5/16" × 2" hex screw ref. 1090113



2× M8×40 hex screw ref. 2090320



10× M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw




4× 5/16" self-locking nut ref. 2090370


SCREWS AND TOOLS



Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

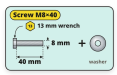


Tool: **13 mm wrench**.

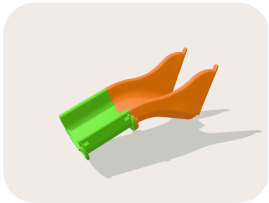


How it looks at the end of step 11

STEP 12 OF 28


12 Slide on the ground: exit section

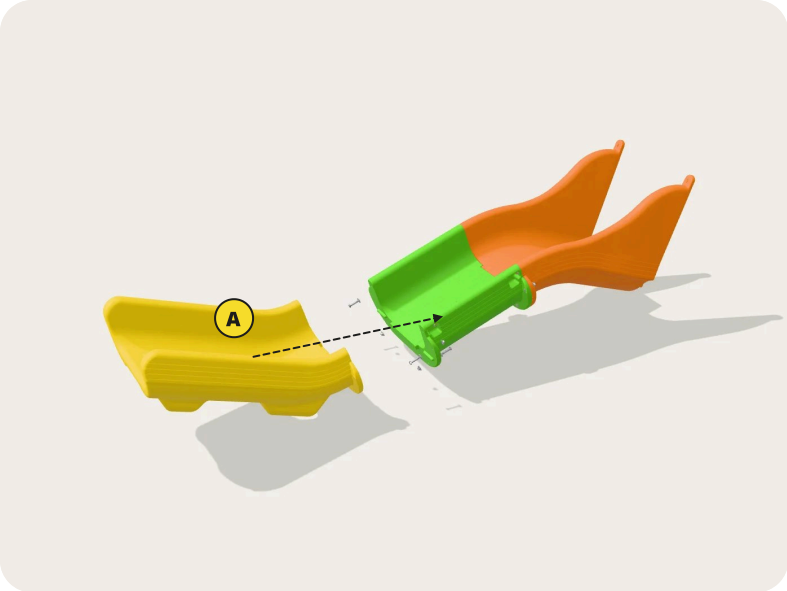

A Exit section (yellow) at the end of the straight section

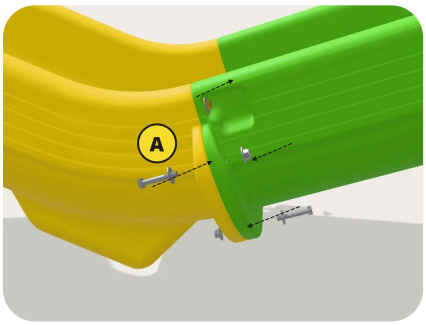

On the flange: 5/16" × 2" screw, washer on both sides and nut

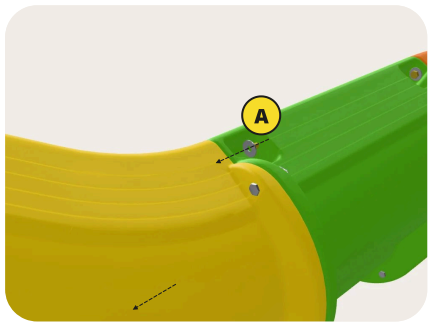

In the recess: M8×40 screw with washer, into the M8 rivet nut

Fit the **exit section (yellow)** onto the end of the straight section and join it the same way:

On the flanges: 4 screws 5/16" × 2" with a **washer on both sides** and a **self-locking nut**.

In the recess: 2 M8×40 screws with washer, into the **M8 rivet nut**.

CAUTION
Do not swap the screws: 5/16" × 2" on the flanges, M8×40 in the recess.


PARTS FOR THIS STEP

- **1×** Slide: exit section ref. 1022109
- **4×** 5/16" × 2" hex screw ref. 1090113
- **2×** M8×40 hex screw ref. 2090320
- **10×** M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw
- **4×** 5/16" self-locking nut ref. 2090370


SCREWS AND TOOLS



Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

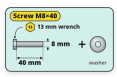


Tool: **13 mm wrench**.

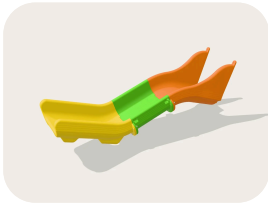

How it looks at the end of step 12

STEP 13 OF 28

13 Slide onto the tower

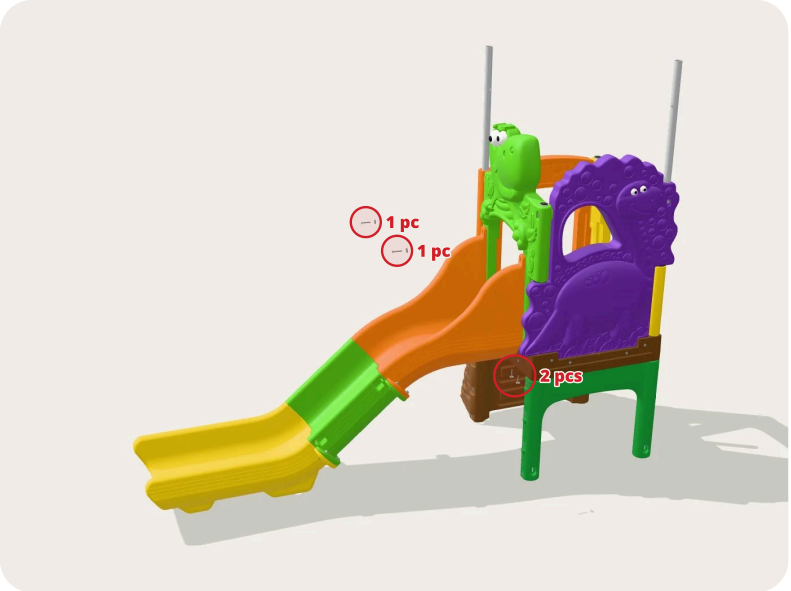


Carry the assembled slide to the module and fit the **entry** on the **green Trix Fofossauro** side.


Top: 2 M6×45 screws with washer, one on each entry flange, into the Trix Fofossauro's rivet nuts.

Bottom: 2 M6×45 screws with washer under the platform, **from the bottom up**.

CAUTION
Parts fixed to the platform (slides, ramp and bridge) must be screwed **from the bottom up**, in addition to the fixings on the walls.

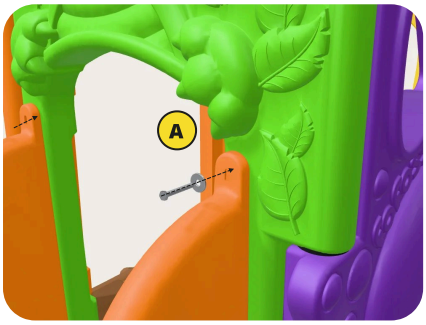

Top: entry flange on the Trix Fofossauro

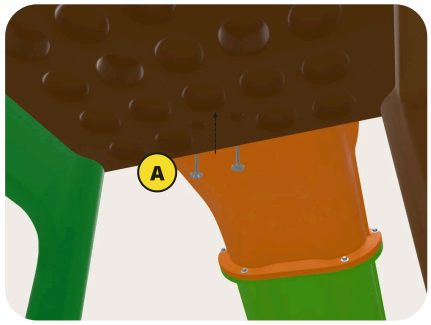

Bottom: under the platform

PARTS FOR THIS STEP




4× M6×45 hex screw ref. 2090194




4× M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw

SCREW AND TOOL

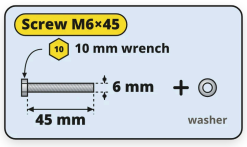

Tool: **10 mm wrench**.

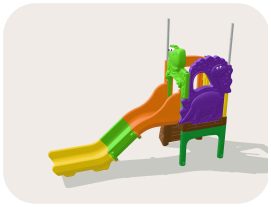


How it looks at the end of step 13

STEP 14 OF 28

14 Tree tops of the climbing-wall module



A Tree tops fitted on the 2 tubes of 2210 mm

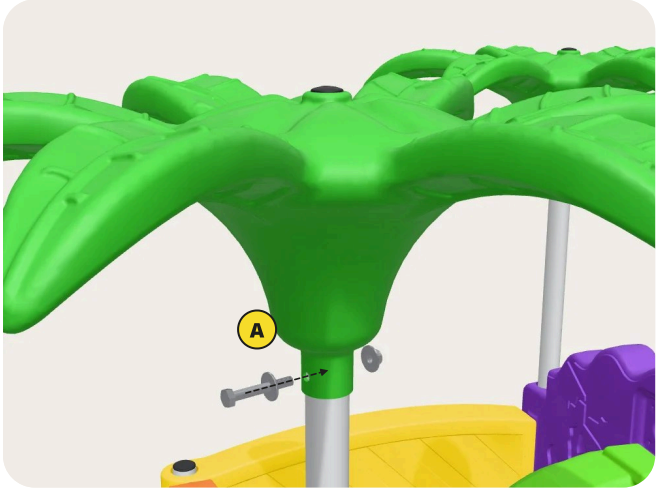

Fixing the tree top to the tube

A 5/16" × 2 1/4" screw + washer on both sides + self-locking nut


Fit a **tree top** on top of each **2210 mm tube**.

Fix each tree top with **1 screw 5/16" × 2 1/4"**, **2 washers** (one on each side) and **1 self-locking nut**, through the tree top and the tube.

PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw
- **2×** 5/16" self-locking nut ref. 2090370
- **2×** 5/16" × 2 1/4" hex screw ref. 2090392
- **2×** Small black end cap ref. 2090439

SCREW AND TOOL

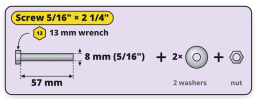


Tool: 2 × 13 mm wrenches: one holds the nut while the other turns the screw.



How it looks at the end of step 14

STEP 15 OF 28

15 Tunnel module: legs and platform

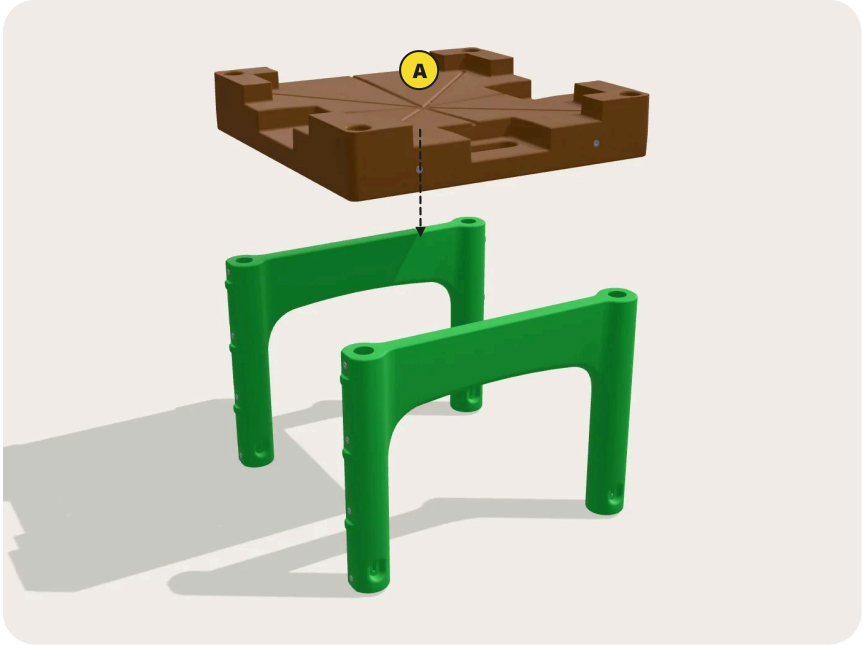

A 2 legs and the platform

Now build the **tunnel and ramp module**. Set the **2 legs** parallel and rest the **platform** on them, fitting the corners.

PARTS FOR THIS STEP



2× Leg
ref. 998708




1× Brown platform
ref. 1022110



How it looks at the end of step 15

STEP 16 OF 28

16 Platform cover

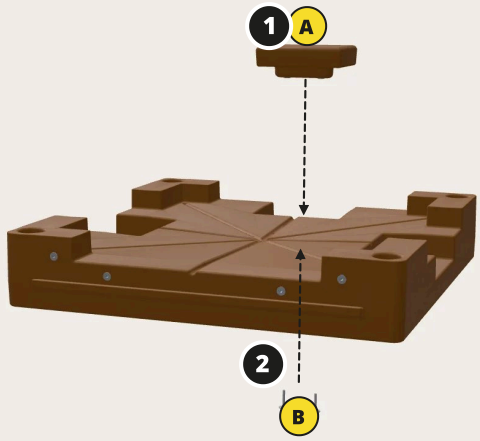

Fit the **platform cover** from above, into the platform opening, and fix it from below with **2 M6×45 screws with washer**, **from the bottom up**.


PARTS FOR THIS STEP

- **1×** Platform cover ref. 1022105
- **2×** M6×45 hex screw ref. 2090194
- **2×** M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw


A The cover comes down from above and fits into the platform opening

B 2 M6×45 screws + washer, under the platform, from the bottom up

SCREW AND TOOL

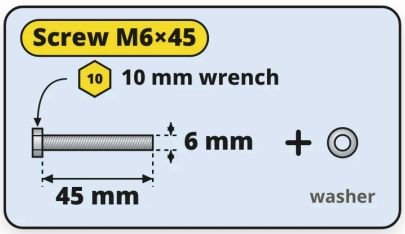


Tool: **10 mm wrench**.

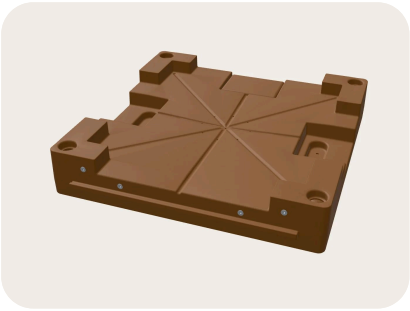

How it looks at the end of step 16

17 STEP 17 OF 28
Tubes: 2 × 2210 mm and 1 × 1550 mm

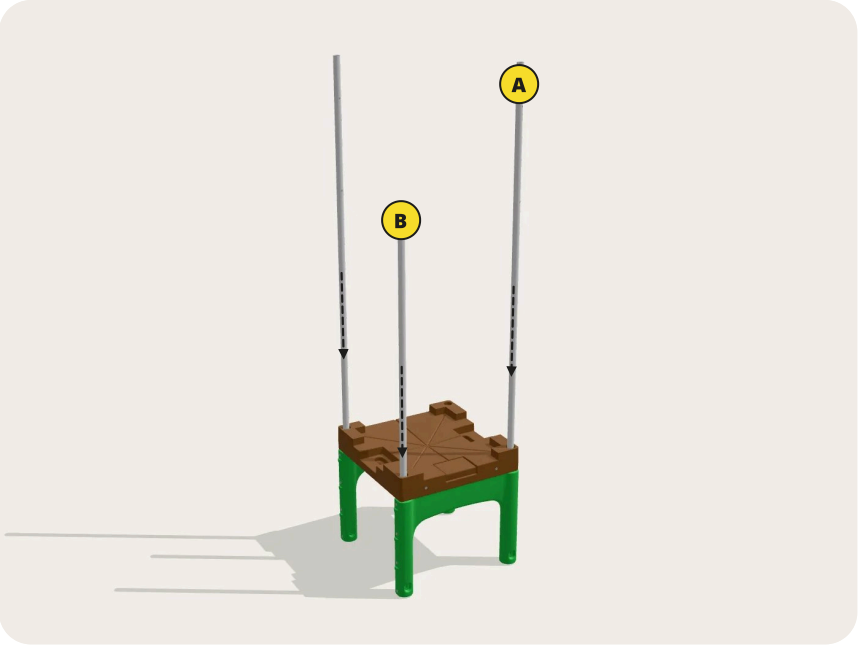

A 2210 mm tubes (2)

B 1550 mm tube


Insert the **2 tubes of 2210 mm** and **1 tube of 1550 mm** in the corners shown, all the way down. The corner on the bridge and tunnel side stays without a tube for now.

CAUTION
The **tube holes always face up**.

PARTS FOR THIS STEP


1× Tube 1550 ref. 1003202

2× Tube 2210 ref. 1022130

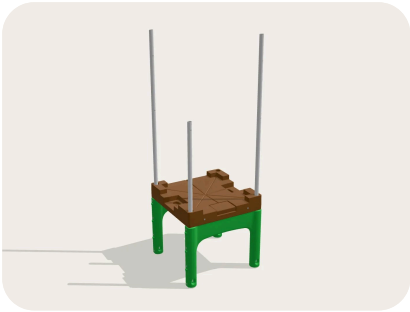

How it looks at the end of step 17

18 STEP 18 OF 28
Yellow striped wall and EVA

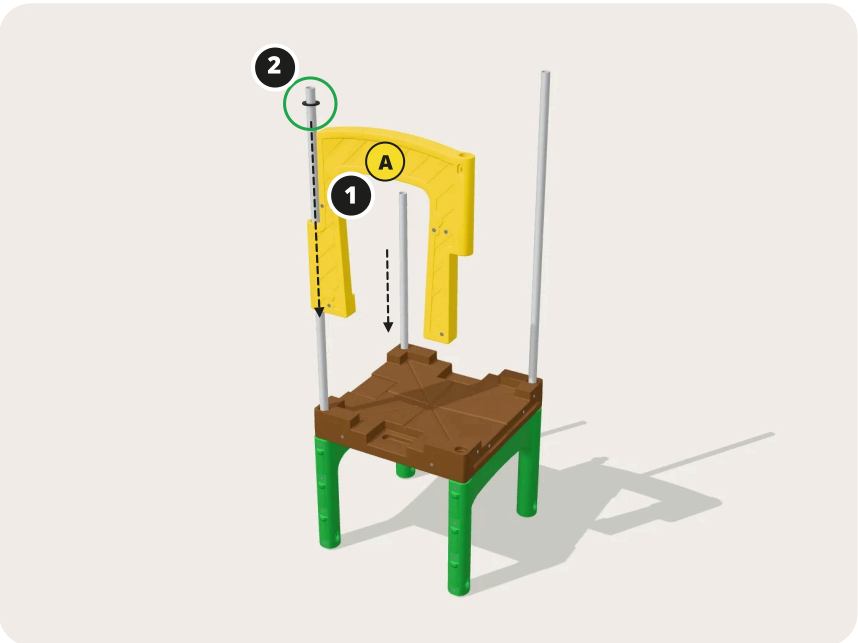

A Yellow striped wall: bridge side


1. Fit the **yellow striped wall** on the bridge side.

2. Place an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

1× Yellow striped wall ref. 998707

1× EVA seal (spacer) ref. 998728

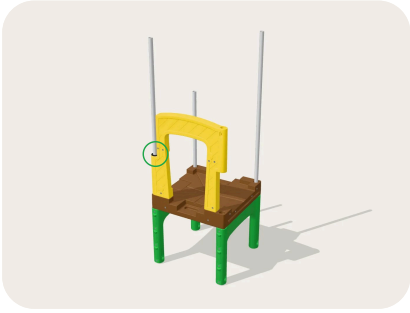

How it looks at the end of step 18

STEP 19 OF 28

19 Scot Fofossauro and EVA



A Scot Fofossauro next to the striped wall

1. Fit the **purple Scot Fofossauro** next to the yellow striped wall.

2. Place an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

1× EVA seal (spacer) ref. 998728

1× Scot Fofossauro wall, purple ref. 1022102



How it looks at the end of step 19

STEP 20 OF 28

20 Green Trix Fofossauro and EVA



A Green Trix Fofossauro: ramp side

1. Fit the **green Trix Fofossauro** on the ramp side.

2. Place an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP

1× EVA seal (spacer) ref. 998728


1× Trix Fofossauro wall, green ref. 1022101



How it looks at the end of step 20

STEP 21 OF 28

21 Yellow wall with dots: goes down open and swings shut

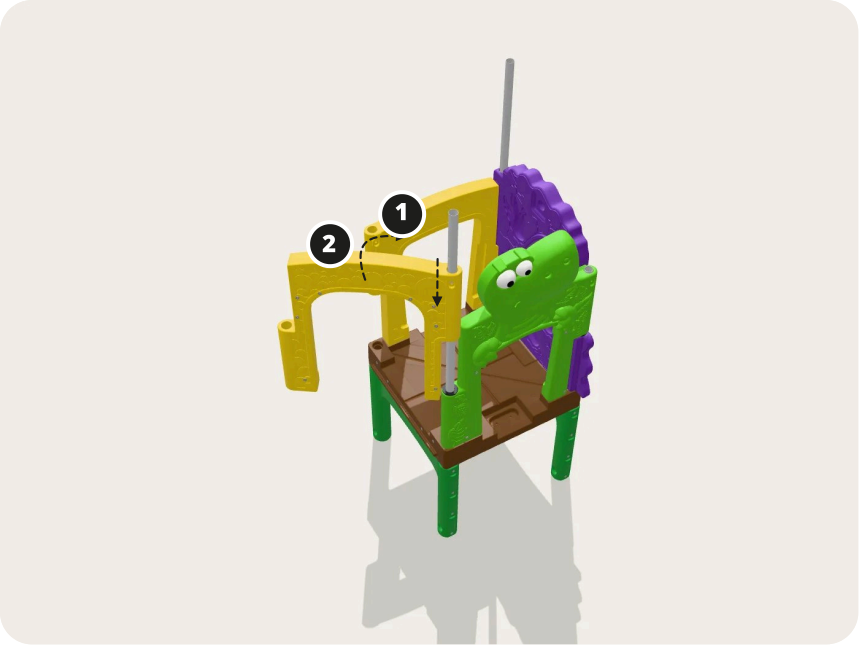

1. Fit the end of the **yellow wall with dots** onto the 2210 mm corner tube and lower the wall straight down, **swung open to the outside**.

2. With the wall resting on the platform, **swing it around the tube** to close the square. It sits on the tunnel side.

PARTS FOR THIS STEP




1× Yellow wall with dots (tunnel)
ref. 998730



How it looks at the end of step 21

STEP 22 OF 28

22 Last EVA, last tube and caps

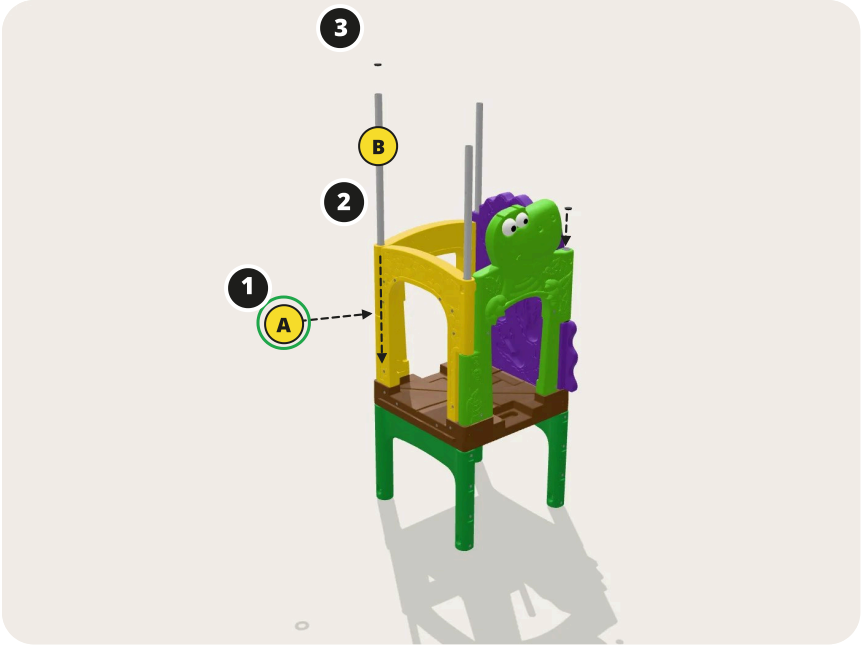

A Last EVA spacer: goes in from the front, flat

B Lower the last tube (1550 mm): it locks the walls


1. Fit the last **EVA spacer from the front**, flat, between the 2 yellow walls.

2. Lower the other **1550 mm tube**, which locks the walls.

3. Fit the **caps** on top of the 2 tubes of 1550 mm.

PARTS FOR THIS STEP

- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 1550 ref. 1003202
- **2×** Tube cap ref. 1100137

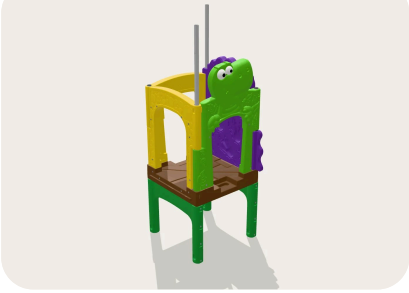

How it looks at the end of step 22


STEP 23 OF 28

23 Join the walls: 4 M6×90 screws



A 4 M6×90 screws + washer, 1 in each corner

SCREW AND TOOL

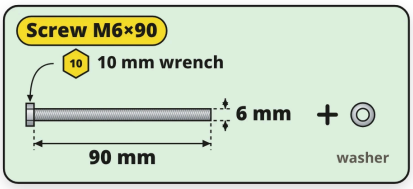

Tool: **10 mm wrench**.

Join the walls with **4 M6×90 screws with washer**, 1 in each corner, from outside in.

PARTS FOR THIS STEP

4× M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw

4× M6×90 hex screw ref. 2090460



How it looks at the end of step 23


STEP 24 OF 28

24 Tree tops of the tunnel module



A Tree tops on the 2 tubes of 2210 mm, as in the climbing-wall module

SCREW AND TOOL

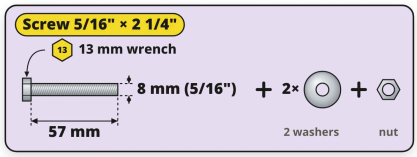

Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

Fit a **tree top** on each **2210 mm tube** and fix it with a **5/16" × 2 1/4" screw**, **2 washers** and a **self-locking nut**, as in step 14.

PARTS FOR THIS STEP


- **2×** Tree top ref. 1022104
- **4×** M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw
- **2×** 5/16" self-locking nut ref. 2090370
- **2×** 5/16" × 2 1/4" hex screw ref. 2090392
- **2×** Small black end cap ref. 2090439




How it looks at the end of step 24


STEP 25 OF 28

25 Climbing ramp

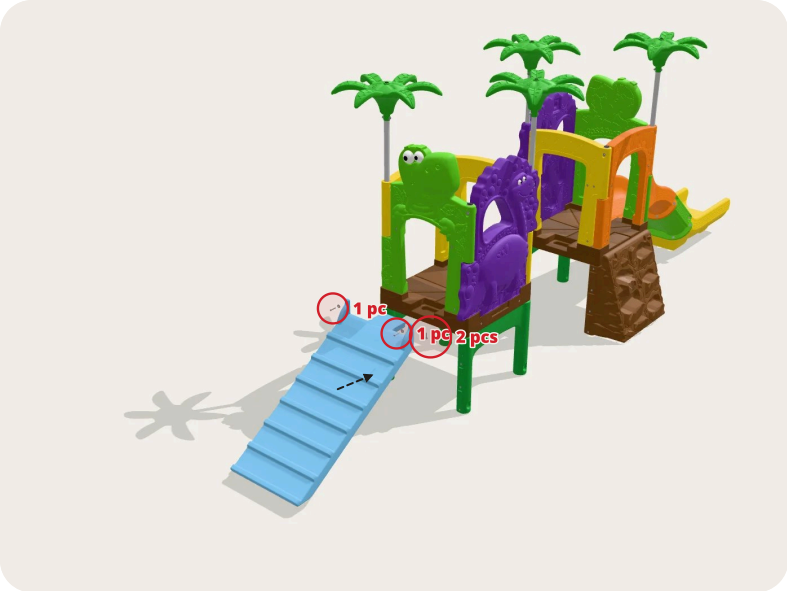

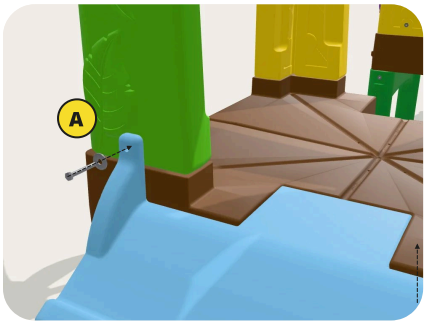

Top: ramp flange on the Trix Fofossauro

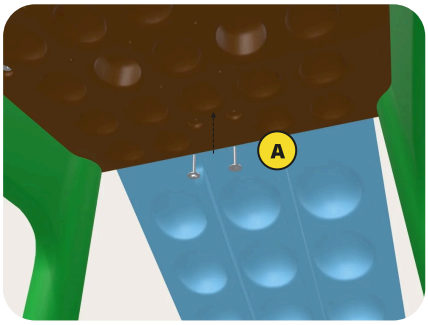

Bottom: under the platform

Fit the **blue ramp** on the **green Trix Fofossauro** side of the tunnel module and screw it with **4 M6×45 screws with washer**:

2 on the flanges (1 on each, into the wall's rivet nuts) and **2 under the platform**, from the bottom up.

PARTS FOR THIS STEP



1× Blue ramp ref. 1022114




4× M6×45 hex screw ref. 2090194



4× M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw

SCREW AND TOOL

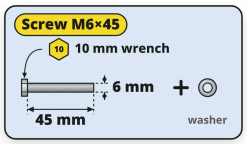


Tool: **10 mm wrench**.



How it looks at the end of step 25

STEP 26 OF 28


26 Tunnel slide bases

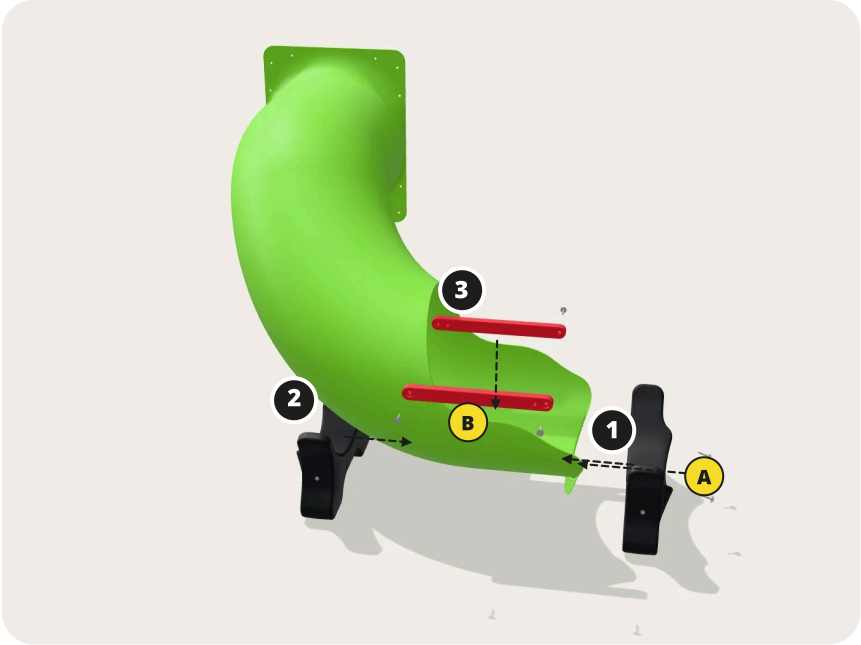

A Base at the front of the tunnel: 2 M6×45 screws + washer

B 2 small crossbars join the two bases: 4 screws

SCREW AND TOOL

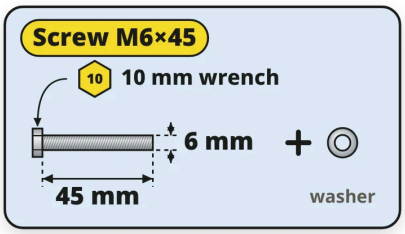

Tool: **10 mm wrench**.

With the tunnel on the ground, next to the playground, fit one of the **bases** on the **front part** of the tunnel slide and screw it (**2 M6×45 screws with washer**).

Place the second base and screw on the **2 small crossbars** to join the two bases (**4 M6×45 screws with washer**).

PARTS FOR THIS STEP

- **2×** Small crossbar ref. 953203
- **1×** Tunnel slide ref. 998702
- **2×** Tunnel slide base ref. 998714
- **6×** M6×45 hex screw ref. 2090194
- **6×** M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw




How it looks at the end of step 26

STEP 27 OF 28

27 Tunnel slide onto the module



A 12 M6×45 screws + washer around the tunnel mouth

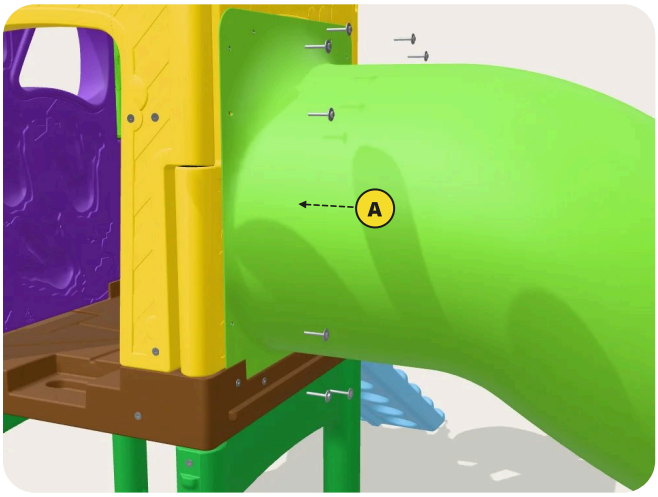

Tunnel mouth screws

A M6×45 screw + washer, 3 at each end of the tunnel mouth


Fit the tunnel slide on the **yellow wall with dots** and screw it with **12 M6×45 screws with washer**: 3 at each of the 4 ends of the tunnel mouth, from outside in, into the wall's rivet nuts.

PARTS FOR THIS STEP

12× M6×45 hex screw ref. 2090194

12× M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw

SCREW AND TOOL

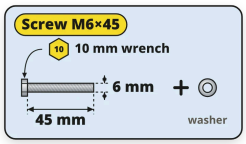

Tool: **10 mm wrench.**




How it looks at the end of step 27

STEP 28 OF 28


28 Bridge between the two modules



A Leave the modules about 80 cm apart; the bridge sets the distance

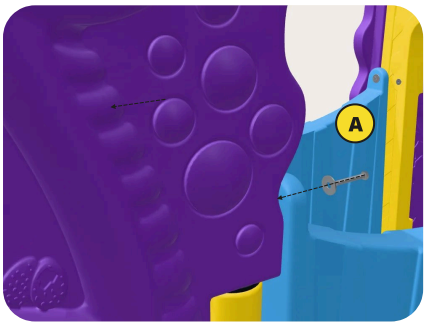

Top: bridge flange on the wall

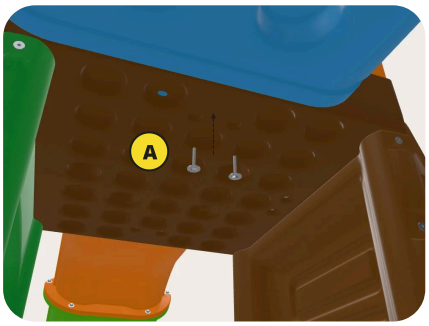

Bottom: under the platform

Place the two modules with the **yellow striped walls** facing each other, about 80 cm apart.


Fit the **bridge** and screw it with **8 M6×45 screws with washer**: at each end, **2 on the flanges** (into the striped wall's rivet nuts) and **2 under the platform**, from the bottom up.

> After the bridge, check that every screw is tight and every part is properly fitted. Only then allow use.


PARTS FOR THIS STEP

- **1×** Bridge ref. 1000902
- **8×** M6×45 hex screw ref. 2090194
- **8×** M8 wide flat washer (24 mm) one on each M6 and M8×40 screw; two on each 5/16" screw

SCREW AND TOOL

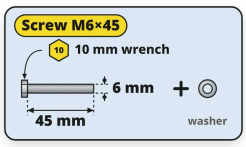


Tool: **10 mm wrench**.

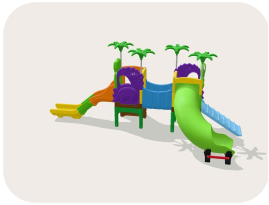

How it looks at the end of step 28


FASTENING DETAILS

How each part is screwed

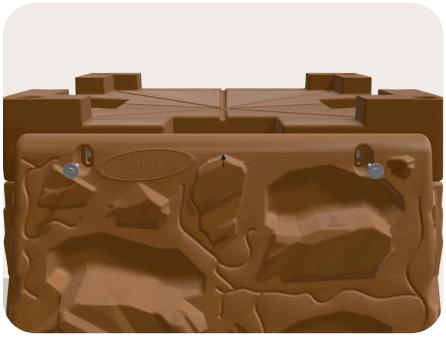

Climbing wall

2 M6×45 screws + washer, from the outside of the climbing wall, into the platform's rivet nuts.

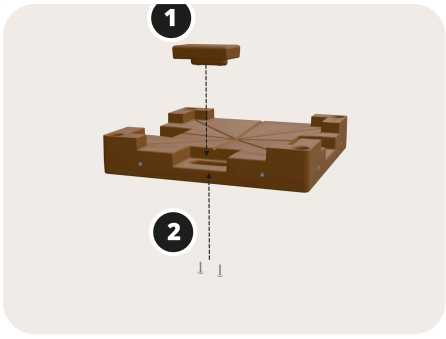


Platform cover

2 M6×45 screws + washer, under the platform, from the bottom up.




Wall

M6×90 screw + washer, from outside in, through both walls and the tube. 1 in each corner.

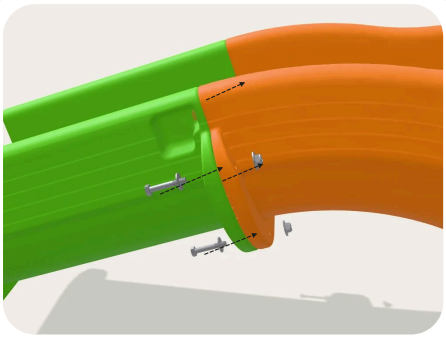


Slide section joint (flange)

5/16" × 2" screw with a washer on both sides and a self-locking nut. 4 per joint.

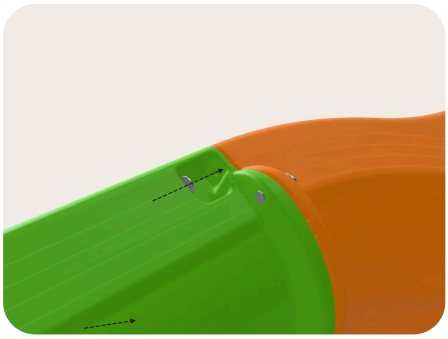


Slide section joint (recess)

M8×40 screw + washer, screwed into the M8 rivet nut. 2 per joint.

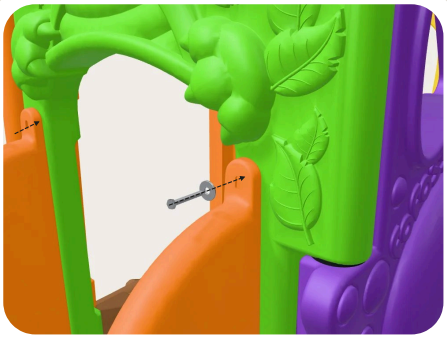


Slide, ramp and bridge

M6×45 screw + washer through the flange, into the wall's rivet nut; and 2 under the platform, from the bottom up.

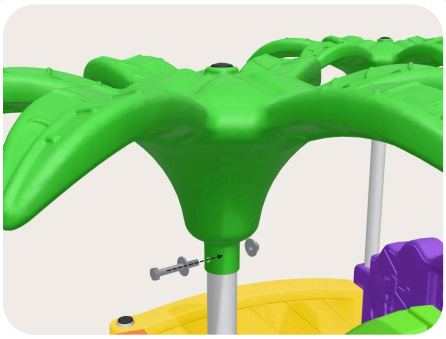

Tree top

5/16" × 2 1/4" screw with a washer on both sides and a self-locking nut, through the tree top and the tube.

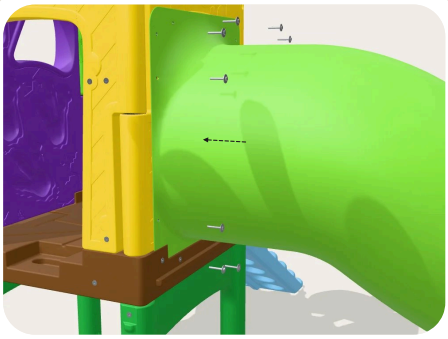

Tunnel slide

M6×45 screw + washer, 3 at each end of the tunnel mouth, into the rivet nuts of the yellow wall with dots.



Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Before allowing use, check that every screw is tight and every part is properly fitted.

INSTALLATION DETAILS

Location and safety area

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Fall space: neighboring static equipment with overlapping fall spaces must be at least 1.50 m apart for a fall height of up to 600 mm, and 2.50 m for higher falls. Maximum fall height of this product: **700 mm**.


Slide landing area: at least 1000 mm from the sides of the run-out section and 2000 mm (type 01 run-out) or 1000 mm (type 02 run-out) from the end of the run-out section.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Area reserved for installation and impact of this playground: about **8.99 × 6.13 m** (figure below): 1 m clear all around the playground, 1.5 m in front of the ramp and the climbing wall, and 2 m beyond the slide exit and the tunnel exit.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

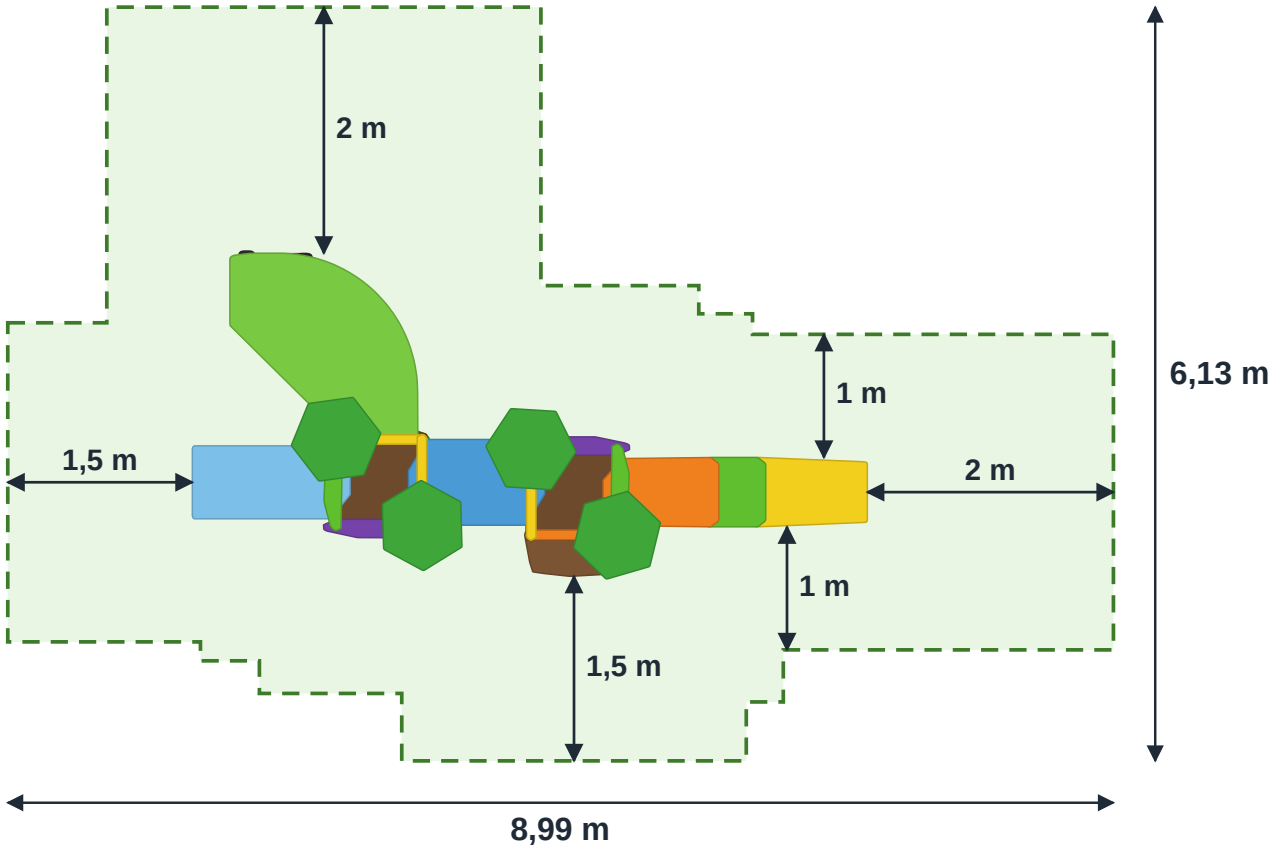

Area reserved for installation and impact (top view). Keep the dashed area free of obstacles.

INSPECTION AND MAINTENANCE

Keep the playground safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Slides: section joints (5/16" and M8 screws) and fixing to the tower

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO – EM RECUPERAÇÃO JUDICIAL
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Parque dos Fofossauros · ref. 1020.9
Keep this manual for future reference.