Mundo dos Fofossauros

ref. 1022.1

ASSEMBLY INSTRUCTIONS



Product size: **5,77 × 4,67 × 2,23 m**
4 modules joined by 3 bridges, with a tunnel slide, a curved slide, a modular slide, a ramp, 2 climbing walls, 8 tree tops and a ball pit
Installation area: 7.68 × 9.77 m
Age: 3 to 8 years · maximum weight 80 kg per platform
Assembly by adults; a second person makes it easier to carry the tunnel and the slides.
48 steps · keep this manual for future reference.

BEFORE YOU START

Read carefully

Caution

Give this toy to the child only after it has been **assembled by an adult**, and always use it under **adult supervision**.

Assembly rules

- Build one module at a time, in this order: **module 1** (tunnel), **module 2** (ramp), **module 3** (curved slide) and **module 4** (modular slide). The bridges and the ball pit join the modules.
- The tubes always go with the **holes up**.
- Walls always with the **rivet nuts facing out**, and always an **EVA spacer** between two walls.
- Every screw must go in with a **washer**, for a more even and secure tightening.
- Bridges, ramp, slides and floor covers are screwed to the floor **from below**.


Tools

- **10 mm open-end or combination wrench**: M6×45 screws (64 pcs, steps 1, 2, 12, 13, 22, 23, 32–35, 45 and 47) and M6×90 screws (16 pcs, steps 10, 20, 30 and 42)
- **13 mm open-end or combination wrench**: M8×40 screws (4 pcs, steps 43 and 44)
- **2 × 13 mm wrenches** (or a wrench + a 13 mm socket): 5/16" × 2 1/4" screws with nut (8 sets, steps 11, 21, 31 and 46) and 5/16" × 2" screws with nut (8 sets, steps 43 and 44). One holds the nut while the other turns the screw.
- Pliers


There are no specific tightening torques for the fasteners. The rivet nuts come already fitted in the parts.

Screws in this playground


Each type has its own color. The same card appears in each step and in the assembly video.

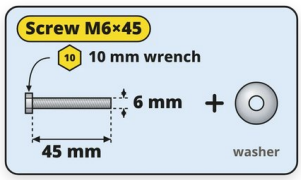


64× Screw M6×45 · steps 1, 2, 12, 13, 22, 23, 32–35, 45 and 47

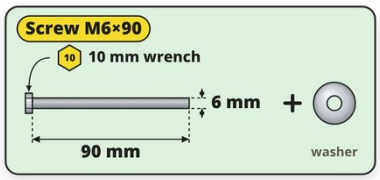


16× Screw M6×90 · steps 10, 20, 30 and 42

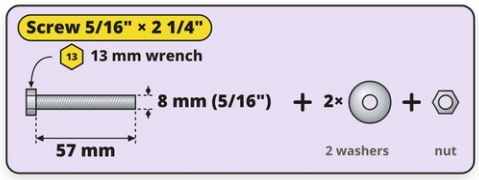

8× Screw 5/16" × 2 1/4" · steps 11, 21, 31 and 46

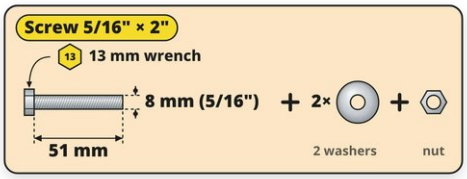

8× Screw 5/16" × 2" · steps 43 and 44

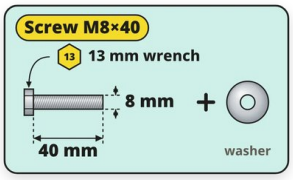

4× Screw M8×40 · steps 43 and 44

PARTS LIST

Mundo dos Fofossauros parts



BROWN FLOOR 4×
No. 1 · ref. 1022110



LEG 6×
No. 2 · ref. 998708



CLIMBING WALL 2×
No. 3 · ref. 1022103



FLOOR COVER 3×
No. 4 · ref. 1022105

TUBE 2210 8×
No. 5 · ref. 1022130

TUBE 1550 6×
No. 6 · ref. 1003202

TUBE 1600 2×
No. 7 · ref. 1022134




TUBE CAP 8×
No. 8 · ref. 1100137




FOFOSSAURO TRIX WALL, ORANGE 2×
No. 9 · ref. 1022111



FOFOSSAURO TRIX WALL, GREEN 2×
No. 10 · ref. 1022101



FOFOSSAURO SCOT WALL, GREEN 2×
No. 11 · ref. 1022112



FOFOSSAURO SCOT WALL, PURPLE 2×
No. 12 · ref. 1022102



ORANGE STRIPED WALL 2×
No. 13 · ref. 998726



YELLOW STRIPED WALL 2×
No. 14 · ref. 998707



ORANGE WALL WITH DOTS 2×
No. 15 · ref. 998706



YELLOW DOTTED WALL 1×
No. 16 · ref. 998727



YELLOW DOTTED WALL – FOR THE TUNNEL 1×
No. 17 · ref. 998730



EVA SEAL 16×
No. 18 · ref. 998728



TREE TOP 8×
No. 19 · ref. 1022104



BRIDGE 3×
No. 20 · ref. 1000902



TUNNEL SLIDE 1×
No. 21 · ref. 998702



TUNNEL SLIDE BASE 2×
No. 22 · ref. 998714



SMALL CROSSBAR 2×
No. 23 · ref. 953203



BLUE RAMP 1×
No. 24 · ref. 1022114



CURVED SLIDE 1×
No. 25 · ref. 998703



SLIDE – TOP MODULE 1×
No. 26 · ref. 1022107



SLIDE – STRAIGHT MODULE 1×
No. 27 · ref. 1022108



SLIDE – EXIT MODULE 1×
No. 28 · ref. 1022109

BALL PIT NET 1×
No. 29 · ref. 2070382



PLASTIC BALLS Ø 76 MM 1000×
No. 30 · ref. 2090300



HEX SCREW M6×45 64×
No. 31 · ref. 2090194



HEX SCREW M6×90 16×
No. 32 · ref. 2090460



HEX BOLT 5/16" × 2 1/4" 8×
No. 33 · ref. 2090392



HEX BOLT 5/16" × 2" **8×**
No. 34 ·
ref. 1090113



HEX SCREW M8×40 **4×**
No. 35 ·
ref. 2090320



LOCK NUT 5/16" **16×**
No. 36 ·
ref. 2090370



M8 WIDE WASHER 24 mm **116×**
No. 37 ·
ref. 2090347



RIVET NUT 8SJN-M6 **204×**
No. 38 ·
ref. 2090183 ·
already fitted



M8 RIVET NUT (ON THE SLIDE) **4×**
No. 39 ·
ref. 2090448

PRODUCT ASSEMBLY


Step by step

In each step, the arrows show where the part goes, the **black numbers** give the order and the **yellow letters** point to the details explained under the picture.

1

STEP 1 OF 48

Module 1: legs, climbing wall and floor

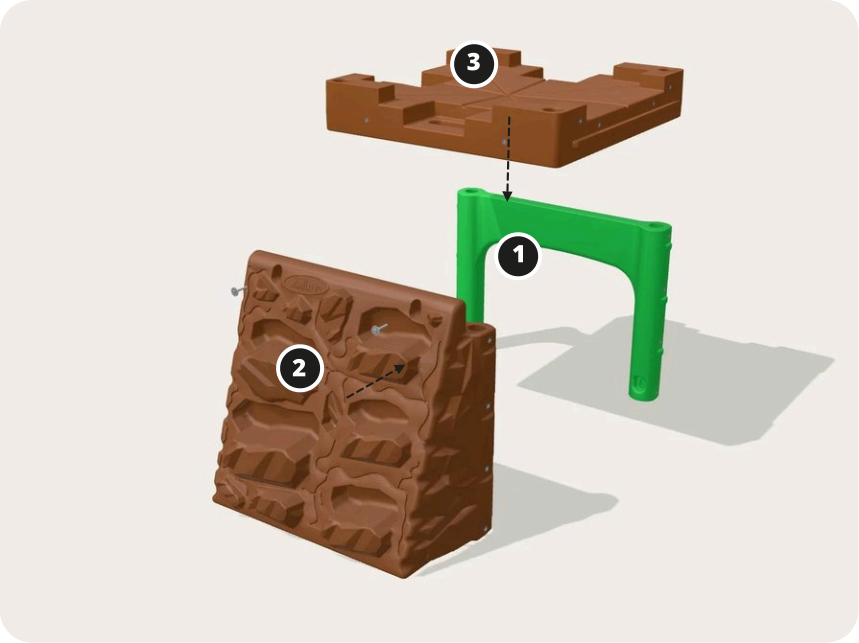


Start with **module 1**, the tunnel slide tower.

Stand the **leg** (1) and the **climbing wall** (2) parallel and put the **brown floor** (3) on them.

Fasten the climbing wall to the floor with **2 M6×45 screws with washers**.


PARTS FOR THIS STEP

- **1×** Leg ref. 998708
- **1×** Climbing wall ref. 1022103
- **1×** Brown floor ref. 1022110
- **2×** M6×45 hex screw ref. 2090194
- **2×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

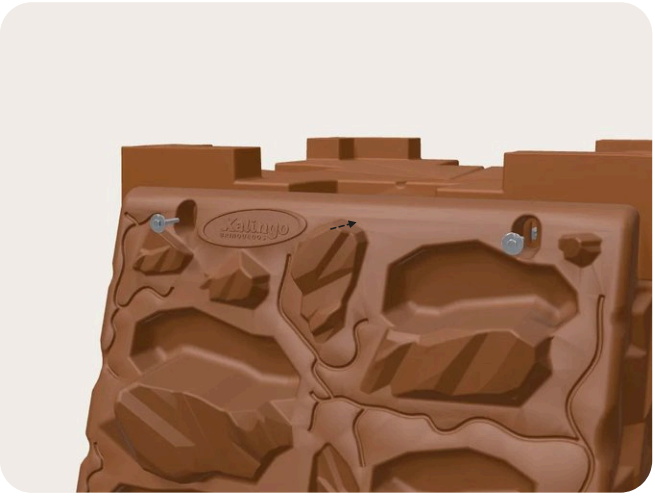

Climbing wall fastened to the floor: 2 M6×45 screws with washers

SCREW AND TOOL

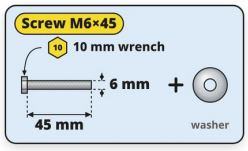


Tool: **10 mm wrench.**



How it looks at the end of step 1

STEP 2 OF 48

2 Module 1: floor covers

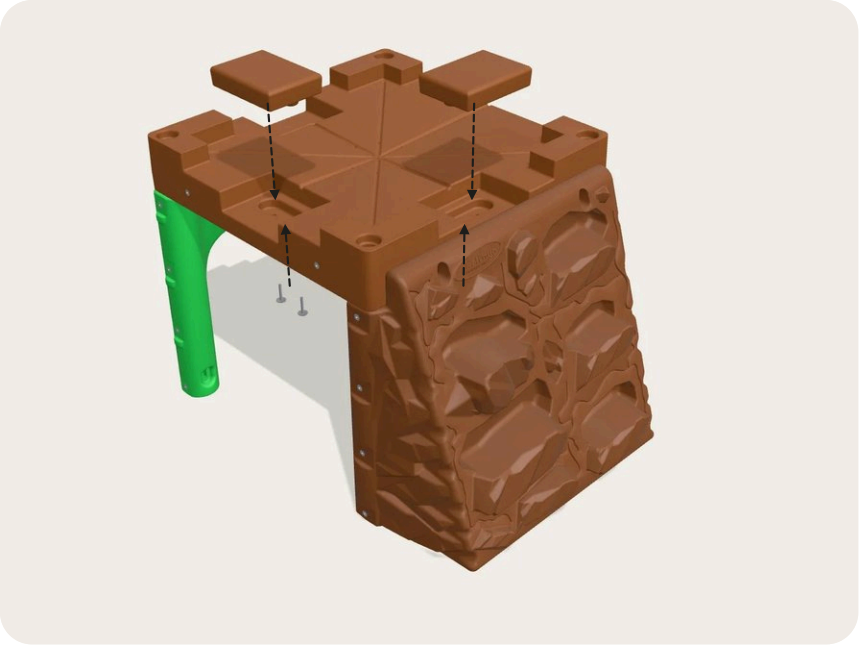

Fit the **2 floor covers** from above, into the floor openings.

Fasten each cover with **2 M6×45 screws with washers**, put in **under** the floor, from below.

PARTS FOR THIS STEP



2× Floor cover
ref. 1022105




4× M6×45 hex screw
ref. 2090194



4× M8 wide washer (24 mm)
one on each M6 and M8 screw; two on each 5/16" bolt


SCREW AND TOOL

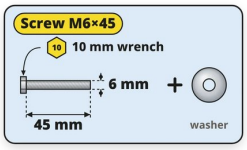

Tool: **10 mm wrench.**




How it looks at the end of step 2

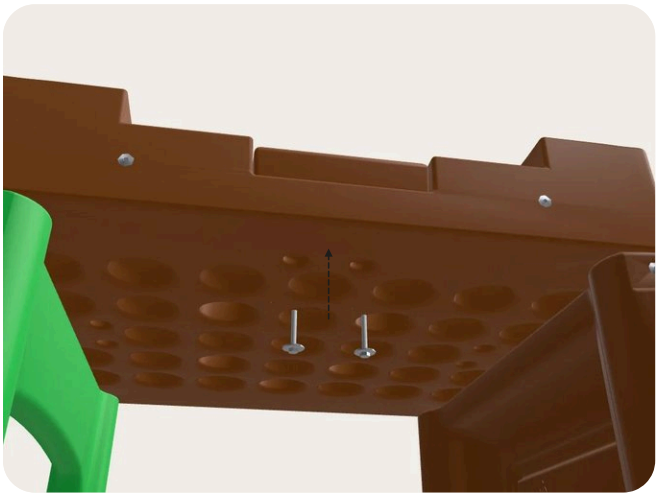

Under the floor: screws from below

STEP 3 OF 48

3 Module 1: tubes

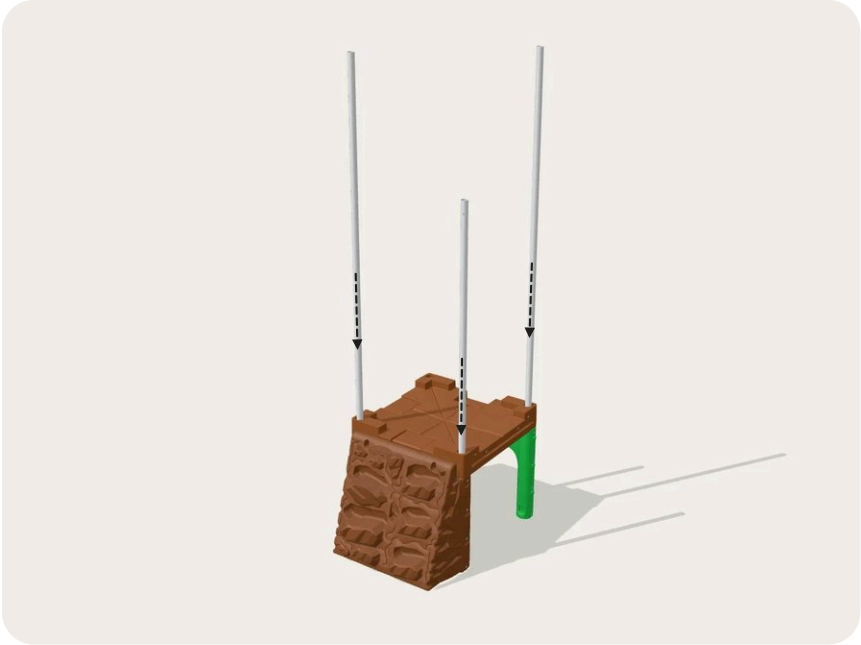

Insert **2 tubes of 2210 mm** and **1 tube of 1550 mm** in the corners shown, always with the **holes up**.


The fourth corner stays without a tube for now.

> The 2210 mm tubes go in opposite corners: the tree tops go on them.

PARTS FOR THIS STEP

1× Tube 1550 ref. 1003202


2× Tube 2210 ref. 1022130

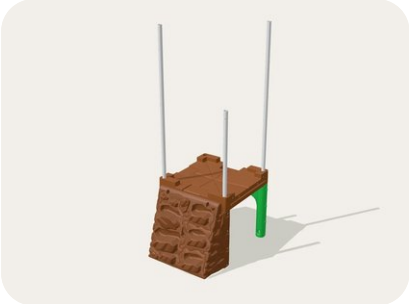

How it looks at the end of step 3

STEP 4 OF 48

4 Identify the walls

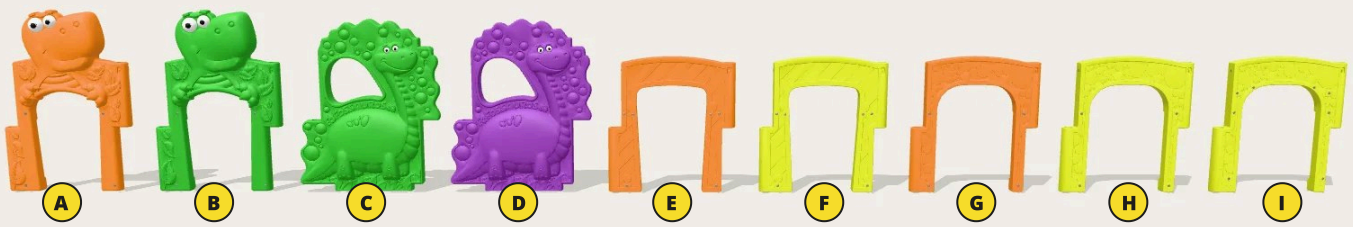


- **A** Orange Fofossauro Trix wall (2 pcs): modules 1 and 3
- **B** Green Fofossauro Trix wall (2 pcs): modules 2 and 4
- **C** Green Fofossauro Scot wall (2 pcs): modules 1 and 3
- **D** Purple Fofossauro Scot wall (2 pcs): modules 2 and 4
- **E** Orange striped wall (2 pcs): modules 1 and 3
- **F** Yellow striped wall (2 pcs): modules 2 and 4
- **G** Orange dotted wall (2 pcs): modules 2 and 4
- **H** Yellow dotted wall (1 pc): module 3
- **I** Yellow dotted wall for the tunnel (1 pc): module 1

The Mundo dos Fofossauros has **16 walls** of 9 kinds, 4 in each module. Sort the walls of each module before you start.

CAUTION
When fitting the walls, always keep the **rivets on the outside**: they are used to fasten the bridges, the ramp and the slides.

STEP 5 OF 48

5 Module 1: orange striped wall

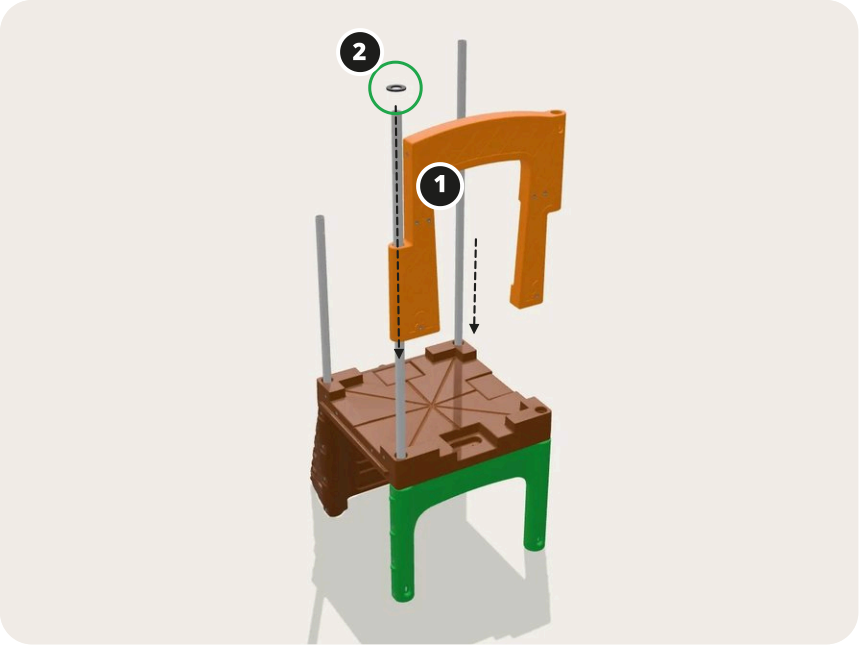

Fit the **orange striped** wall down the tubes, on the side of the bridge to module 2.

Put an **EVA spacer** on top, in the corner shown.

CAUTION
The order of the walls matters: at each corner one wall fits **underneath** and the other **on top**, with an EVA spacer between them. Follow the order of the steps.


PARTS FOR THIS STEP



1× Orange striped wall
ref. 998726




1× EVA seal (spacer)
ref. 998728

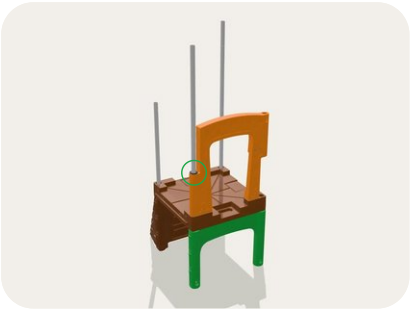

How it looks at the end of step 5

STEP 6 OF 48

6 Module 1: yellow dotted wall for the tunnel

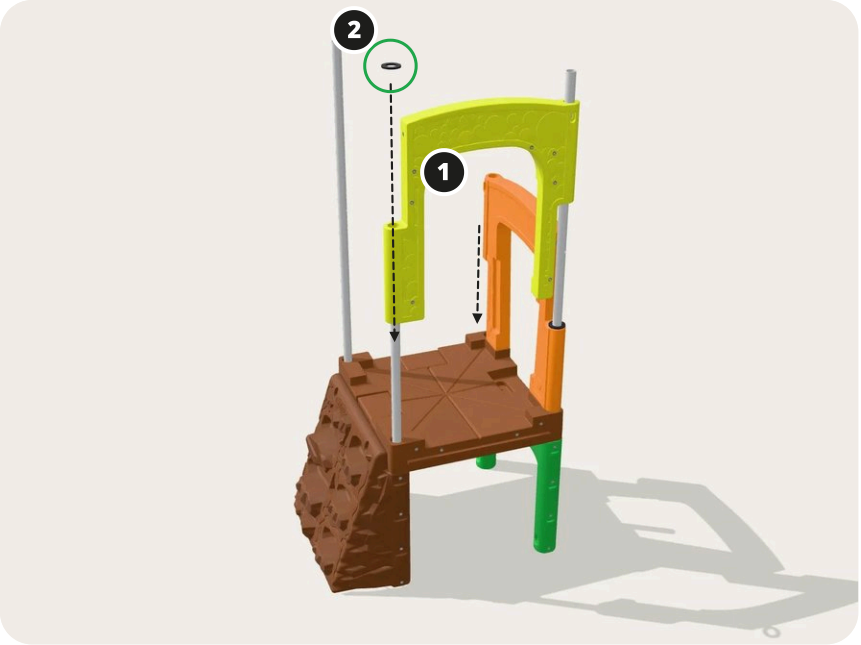

Fit the **yellow dotted wall for the tunnel** next to the orange striped wall: the tunnel will be fastened to it.

Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP



1× EVA seal (spacer)
ref. 998728




1× Yellow dotted wall for the tunnel
ref. 998730



How it looks at the end of step 6

STEP 7 OF 48

7 Module 1: orange Trix wall

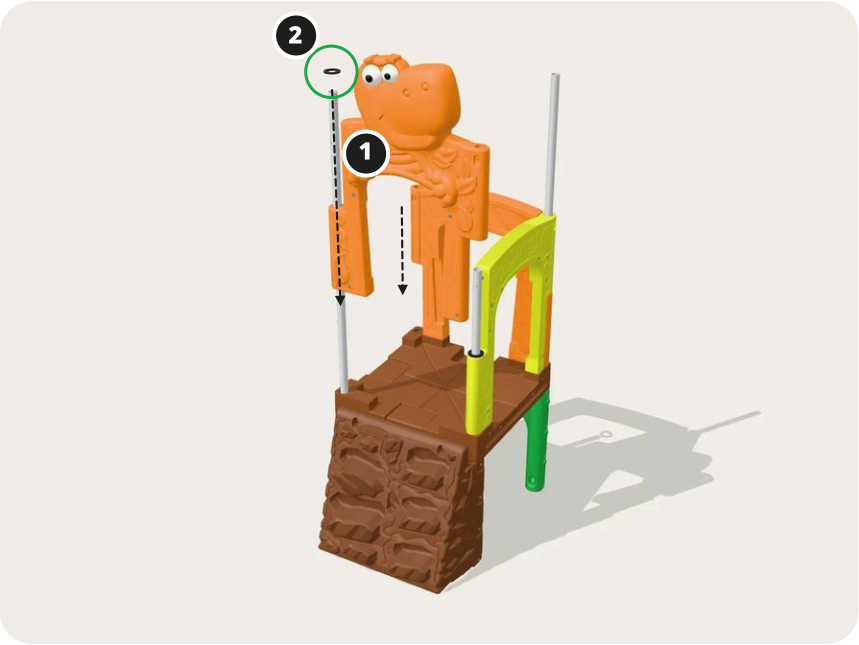

Fit the **orange Fofossauro Trix** wall on the climbing wall side.

Put an **EVA spacer** on top, in the corner shown.


PARTS FOR THIS STEP



1× EVA seal (spacer)
ref. 998728



1× Fofossauro Trix wall, orange
ref. 1022111

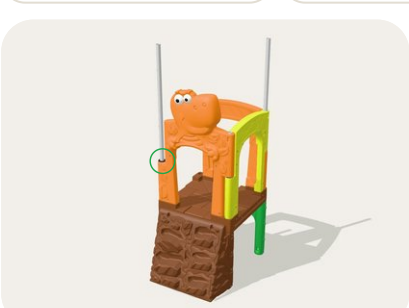

How it looks at the end of step 7

STEP 8 OF 48

8 Module 1: green Scot wall



1. Fit the end of the **green Fofossauro Scot** wall onto the 2210 mm tube and lower the wall **swung open outwards**.

2. With the wall resting on the floor, **turn it around the tube** until the square is closed.

> The other corner of this wall still has no tube: it goes in at the next step and locks the walls.

PARTS FOR THIS STEP




1× Fofossauro Scot wall, green
ref. 1022112



How it looks at the end of step 8

STEP 9 OF 48

9 Module 1: spacer, last tube and caps

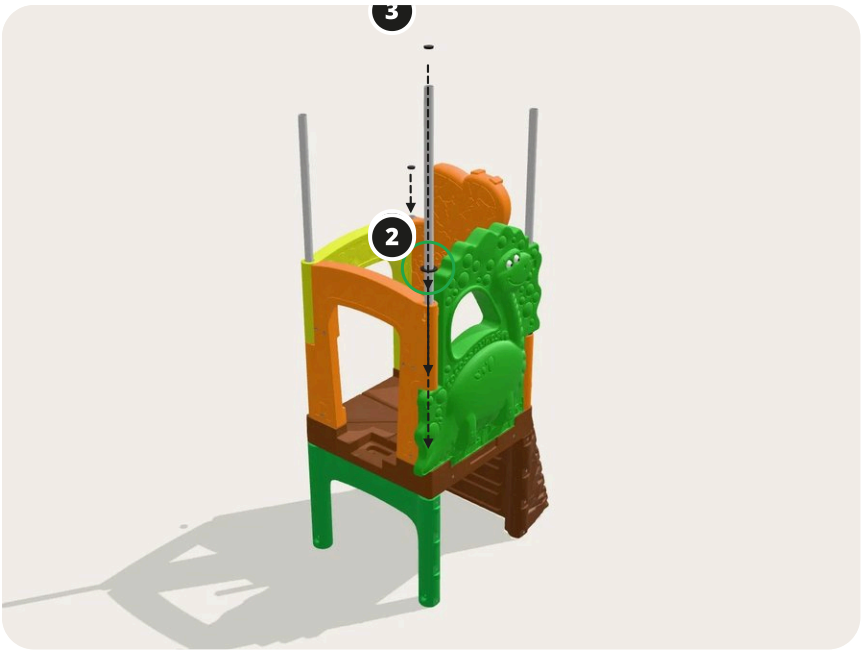


1. Put the **EVA spacer** in the free corner, between the two walls.

2. Lower the **last 1550 mm tube** (holes up) into that corner: it goes through the walls and the spacer and locks them together.

3. Fit the **caps** on top of the shorter tubes.

PARTS FOR THIS STEP


- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 1550 ref. 1003202
- **2×** Tube cap ref. 1100137

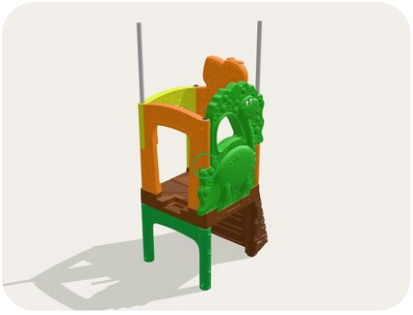

How it looks at the end of step 9

STEP 10 OF 48

10 Module 1: wall screws

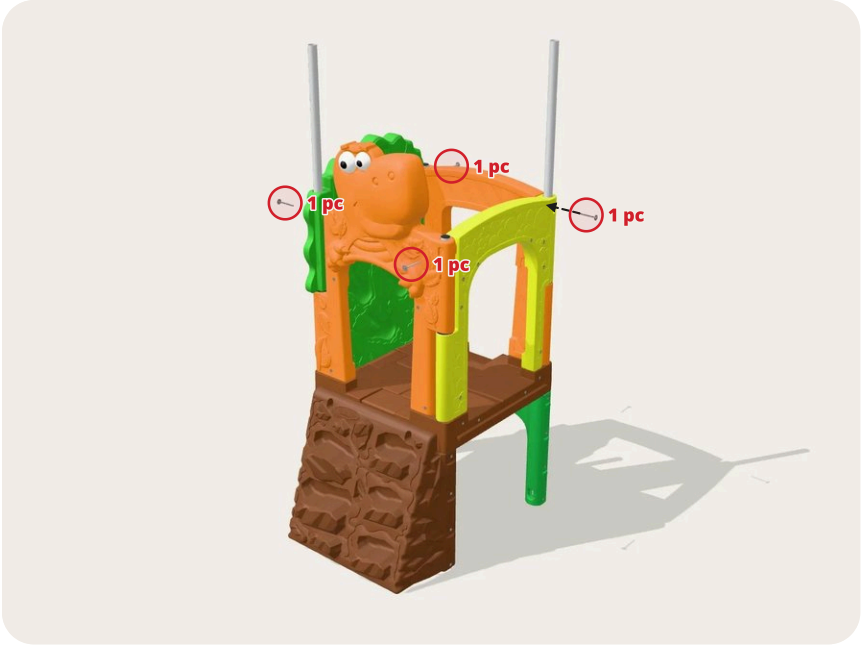

Join the walls with **4 M6×90 screws with washers**, 1 in each corner, put in from the outside, through the tube.

PARTS FOR THIS STEP




4× M8 wide washer (24 mm)
one on each M6 and M8 screw; two on each 5/16" bolt



4× M6×90 hex screw ref. 2090460


SCREW AND TOOL

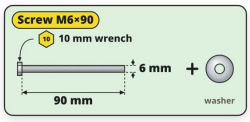

Tool: **10 mm wrench.**



How it looks at the end of step 10

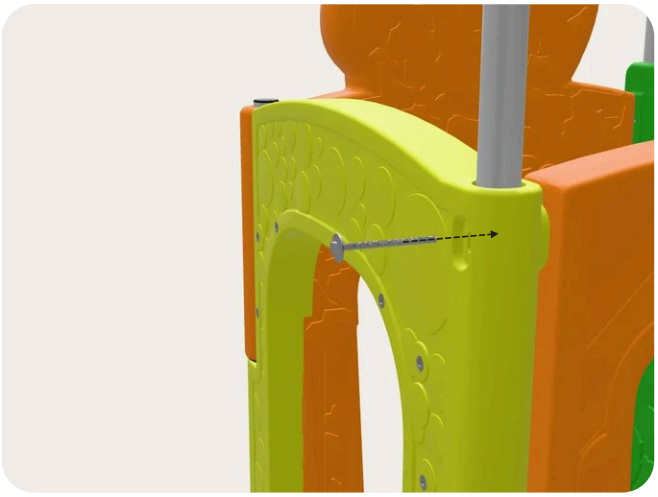

M6×90 screw + washer through the tube

STEP 11 OF 48

11 Module 1: tree tops




Fit the **2 tree tops** on top of the 2210 mm tubes and fasten each one with **1 bolt 5/16" × 2 1/4"**, a **washer on each side** and the **lock nut**.

> Tighten with two 13 mm wrenches: one holds the bolt head and the other turns the nut.

PARTS FOR THIS STEP

- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt
- **2×** Lock nut 5/16" ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392

SCREW AND TOOL



Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.




How it looks at the end of step 11



Bolt 5/16" × 2 1/4", a washer on each side and the lock nut

STEP 12 OF 48

12 Tunnel slide: tunnel on its bases

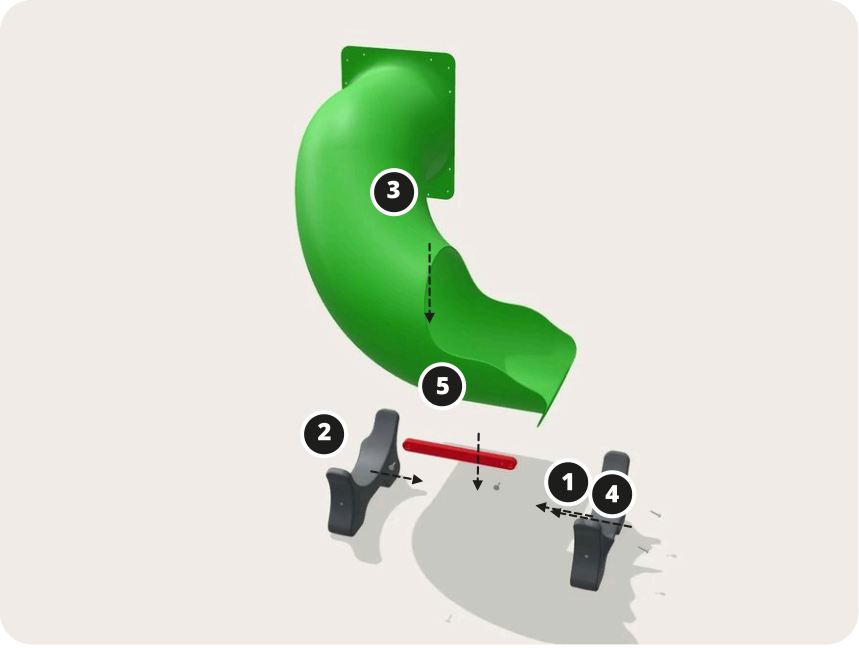

On the ground, place the **2 bases** and rest the **tunnel** on them.


Fasten the front base to the tunnel with **2 M6×45 screws with washer**.

Join the two bases with the **2 red cross bars**: 4 M6×45 screws with washer.

PARTS FOR THIS STEP

- **2×** Small crossbar ref. 953203
- **1×** Tunnel slide ref. 998702
- **2×** Tunnel slide base ref. 998714
- **6×** M6×45 hex screw ref. 2090194
- **6×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

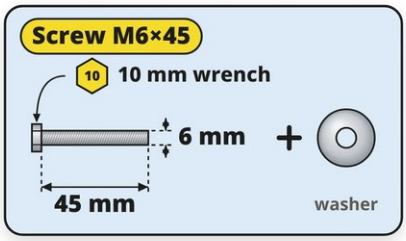

Tool: **10 mm wrench.**




How it looks at the end of step 12

STEP 13 OF 48

13 Tunnel slide on the tower



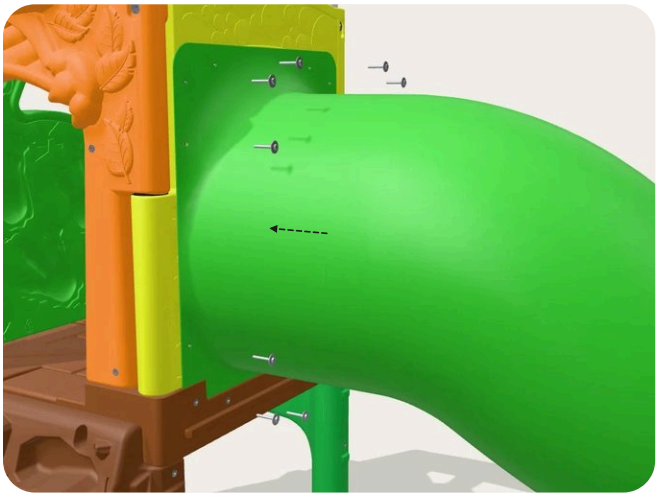

M6×45 screw + washer, 3 at each end of the tunnel mouth

Take the tunnel to module 1 and fit its mouth on the **yellow dotted wall for the tunnel**.

Fasten with **12 M6×45 screws with washers**: 3 at each of the 4 ends of the tunnel mouth, from the outside, into the wall rivets.

> Two people make it easier: one holds the tunnel while the other puts in the screws.

PARTS FOR THIS STEP




12× M6×45 hex screw ref. 2090194




12× M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

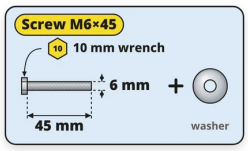


Tool: **10 mm wrench**.

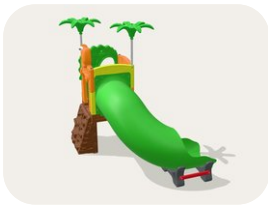

How it looks at the end of step 13

STEP 14 OF 48

14 Module 2: legs, floor and tubes

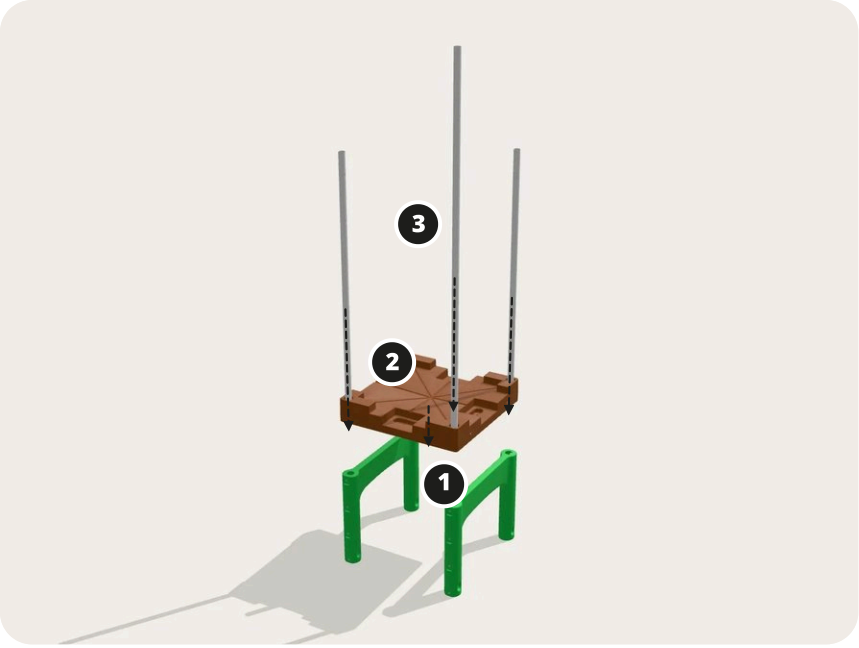


Build **module 2** (the ramp tower) next to module 1, on the orange striped wall side.

Put the floor on the **2 legs**. Insert **1 tube of 2210 mm**, **1 tube of 1550 mm** and **1 tube of 1600 mm** in the corners shown, always with the **holes up**.

> The second 2210 mm tube goes in after the walls, in the corner left free.

PARTS FOR THIS STEP

- **2×** Leg ref. 998708
- **1×** Tube 1550 ref. 1003202
- **1×** Brown floor ref. 1022110
- **1×** Tube 2210 ref. 1022130
- **1×** Tube 1600 ref. 1022134

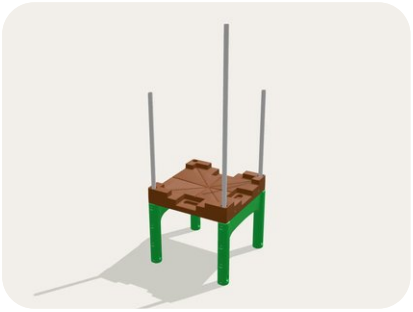

How it looks at the end of step 14

STEP 15 OF 48

15 Module 2: yellow striped wall



Fit the **yellow striped** wall on the side facing module 1 (the bridge side).

Put an **EVA spacer** on top, in the corner shown.

CAUTION
The order of the walls matters: at each corner one wall fits **underneath** and the other **on top**, with an EVA spacer between them. Follow the order of the steps.


PARTS FOR THIS STEP



1× Yellow striped wall
ref. 998707




1× EVA seal (spacer)
ref. 998728

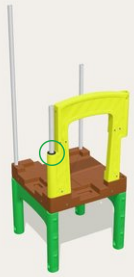

How it looks at the end of step 15

STEP 16 OF 48

16 Module 2: orange dotted wall

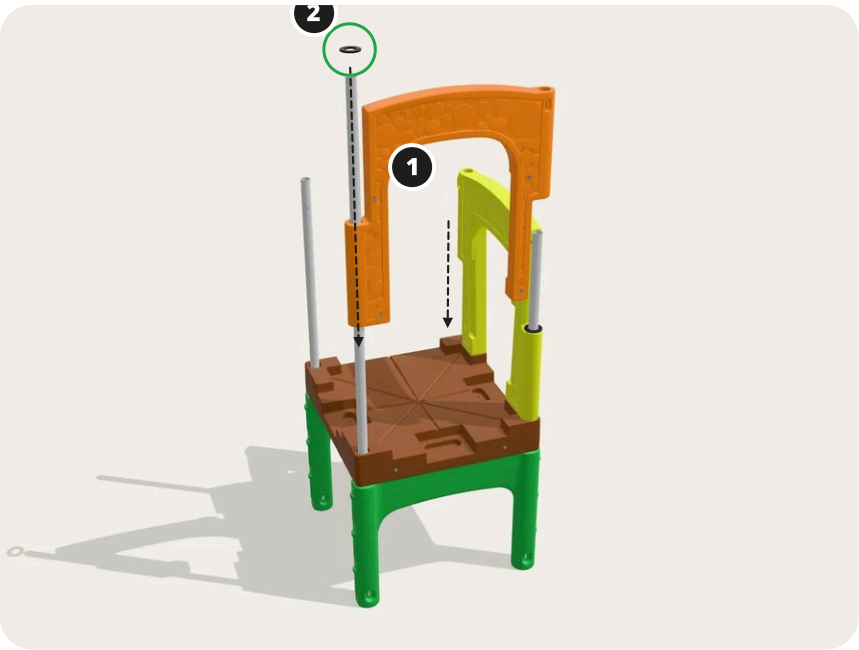

Fit the **orange dotted** wall on the side of the bridge to module 3.

Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP



1× Orange wall with dots
ref. 998706




1× EVA seal (spacer)
ref. 998728



How it looks at the end of step 16

STEP 17 OF 48

17 Module 2: green Trix wall

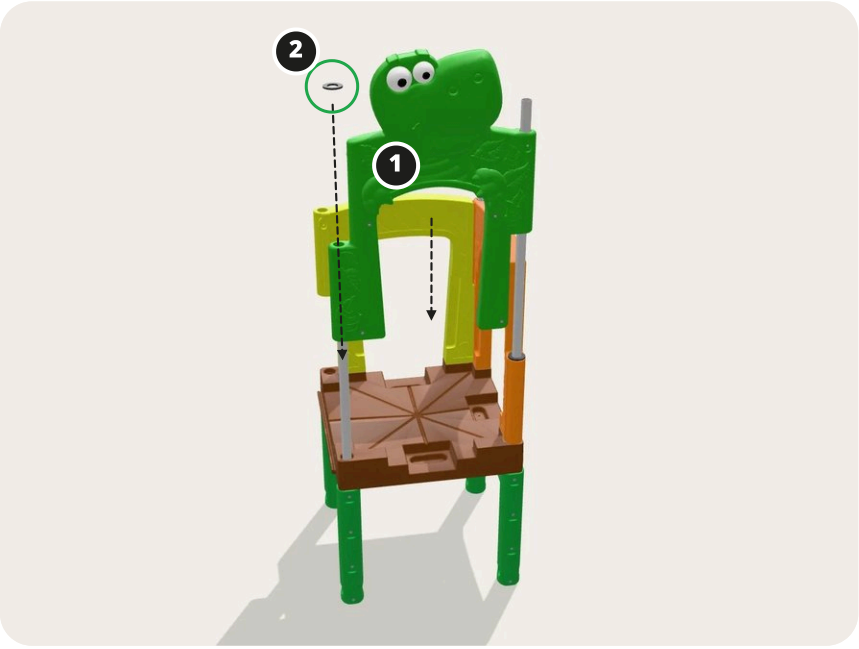

Fit the **green Fofossauro Trix** wall on the ramp side.

Put an **EVA spacer** on top, in the corner shown.


PARTS FOR THIS STEP



1× EVA seal (spacer)
ref. 998728




1× Fofossauro Trix wall, green
ref. 1022101

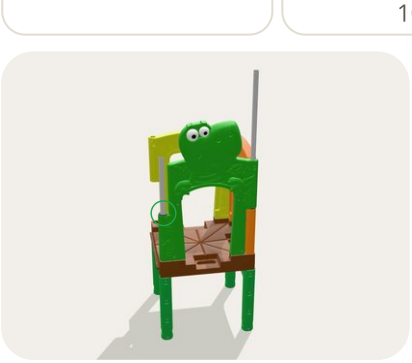

How it looks at the end of step 17

STEP 18 OF 48

18 Module 2: purple Scot wall

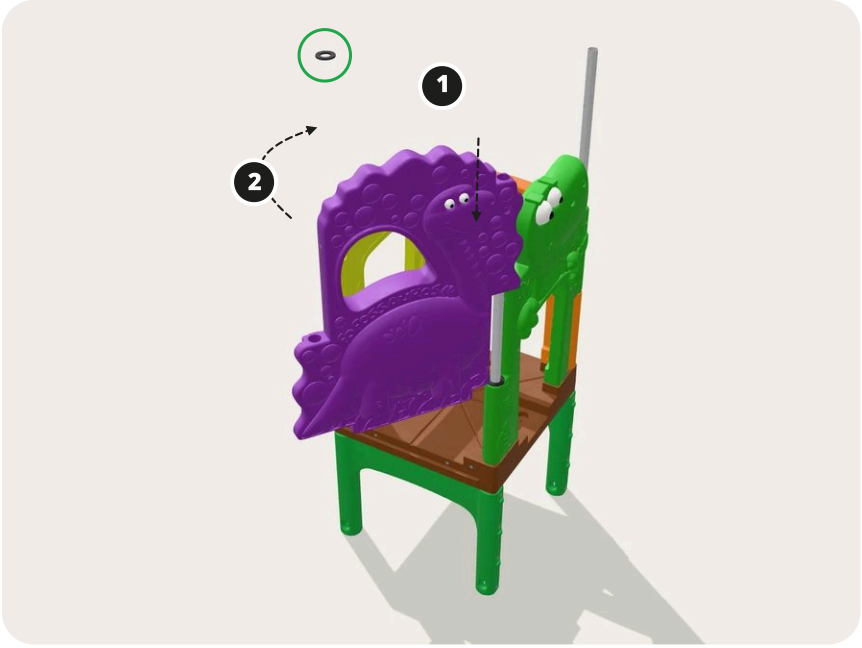

1. Fit the end of the **purple Fofossauro Scot** wall onto the 1600 mm tube and lower the wall **swung open outwards**.

2. With the wall resting on the floor, **turn it around the tube** until its end fits **underneath** the yellow striped wall.

3. Put an **EVA spacer** in the joint between the two walls, in the corner that still has no tube.

> The other corner of this wall still has no tube: it goes in at the next step and locks the walls.

PARTS FOR THIS STEP



1× EVA seal (spacer)
ref. 998728




1× Fofossauro Scot wall, purple
ref. 1022102



How it looks at the end of step 18

STEP 19 OF 48

19 Module 2: last tube and caps

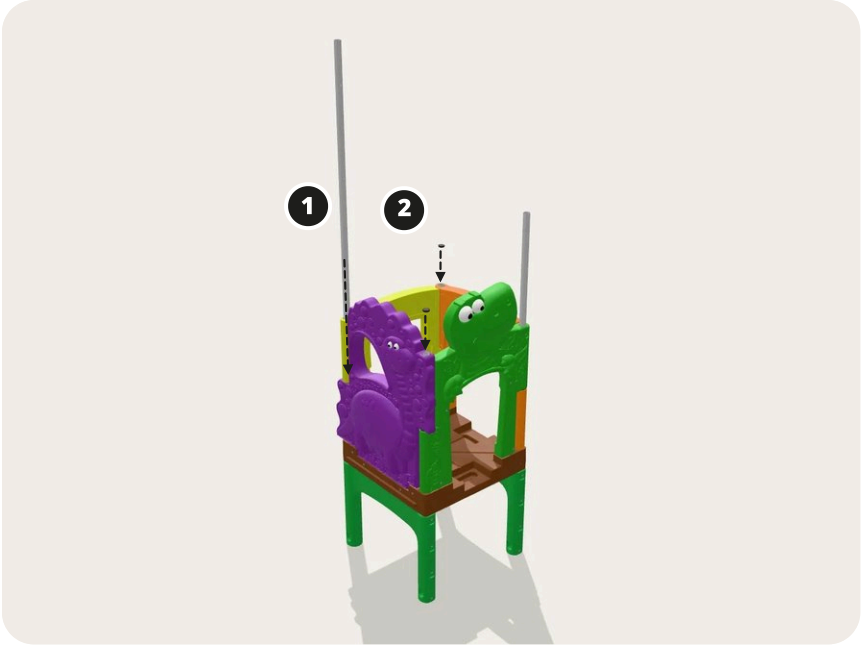


1. Lower the **last 2210 mm tube** (holes up) into the free corner: it goes through the walls and locks them together.

2. Fit the **caps** on top of the shorter tubes.

PARTS FOR THIS STEP


1× Tube 2210 ref. 1022130	**2×** Tube cap ref. 1100137

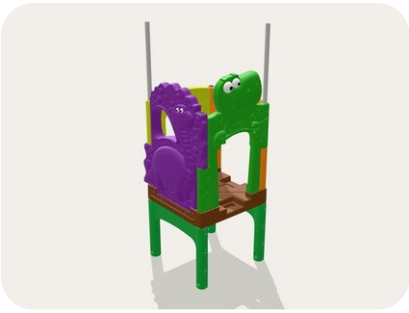

How it looks at the end of step 19

STEP 20 OF 48


20 Module 2: wall screws

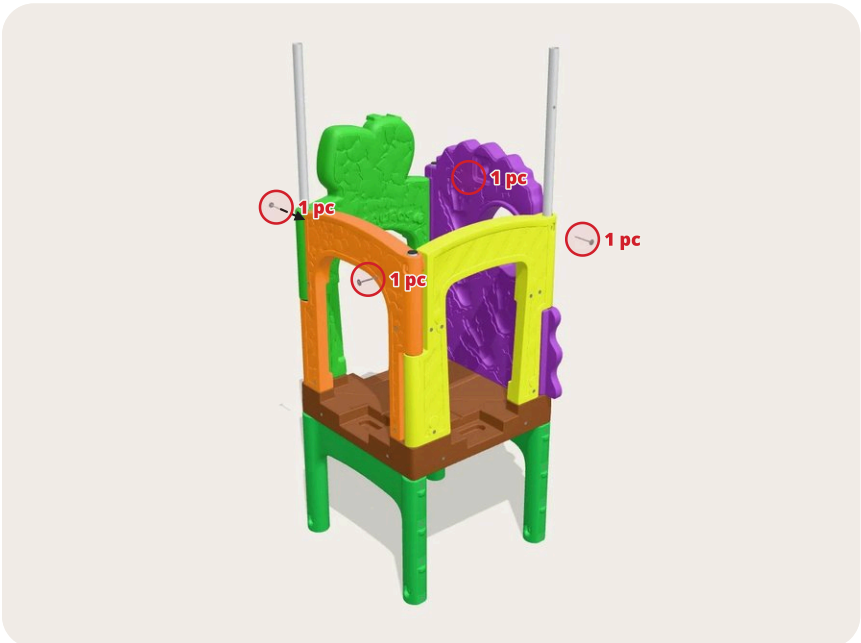

Join the walls with **4 M6×90 screws with washers**, 1 in each corner, put in from the outside, through the tube.


PARTS FOR THIS STEP

4× M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt	**4×** M6×90 hex screw ref. 2090460

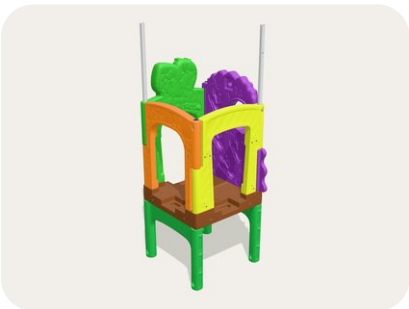

How it looks at the end of step 20

SCREW AND TOOL

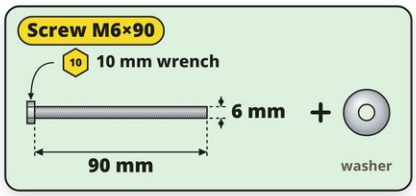

Tool: **10 mm wrench**.

STEP 21 OF 48


21 Module 2: tree tops



Fit the **2 tree tops** on top of the 2210 mm tubes and fasten each one with **1 bolt 5/16" × 2 1/4"**, a **washer on each side** and the **lock nut**.

> Tighten with two 13 mm wrenches: one holds the bolt head and the other turns the nut.

SCREW AND TOOL

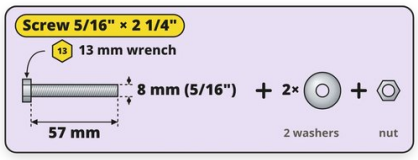

Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

PARTS FOR THIS STEP


- **2×** Tree top ref. 1022104
- **4×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt
- **2×** Lock nut 5/16" ref. 2090370
- **2×** Hex bolt 5/16" × 2 1/4" ref. 2090392




How it looks at the end of step 21

STEP 22 OF 48

22 Ramp

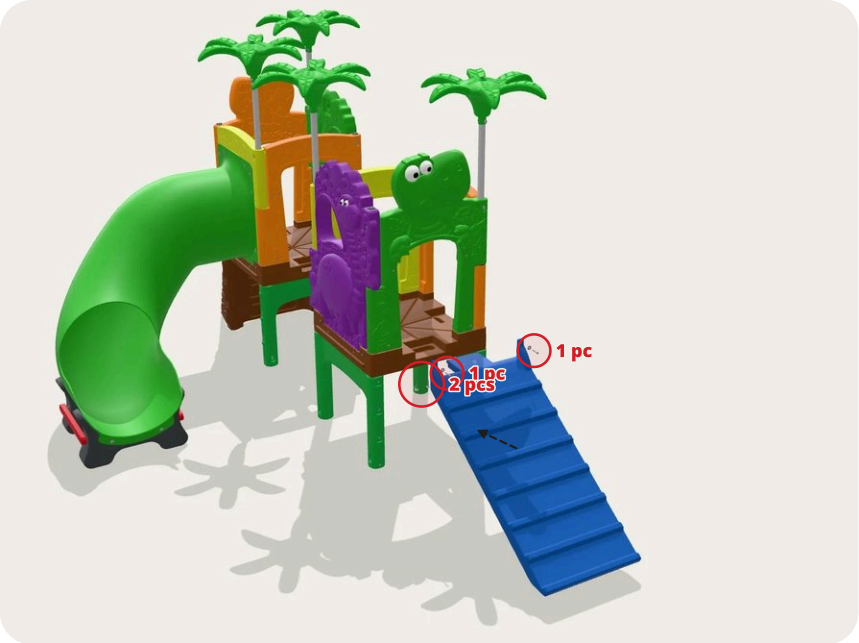

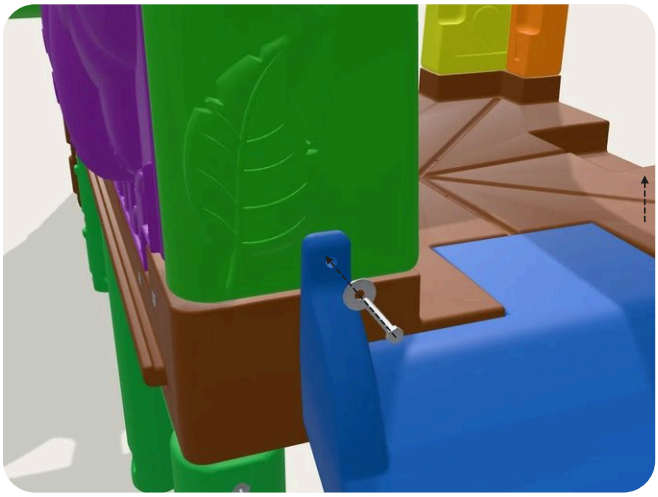

M6×45 screw + washer through the ramp tab, into the wall rivet


Fit the **blue ramp** on the green Trix wall of module 2.

Fasten with **4 M6×45 screws with washers**: 1 in each tab, into the wall rivet, and 2 under the floor, from below.

PARTS FOR THIS STEP

- **1×** Blue ramp ref. 1022114
- **4×** M6×45 hex screw ref. 2090194
- **4×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

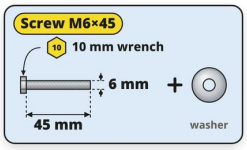

Tool: **10 mm wrench.**




How it looks at the end of step 22


STEP 23 OF 48

23 Bridge between modules 1 and 2



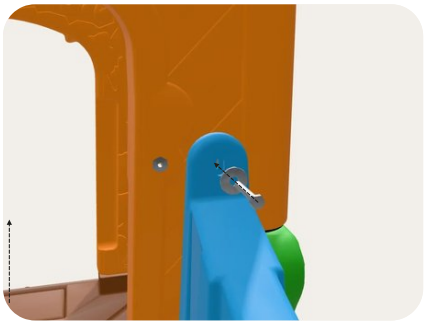

On the tab: M6×45 screw + washer into the wall rivet

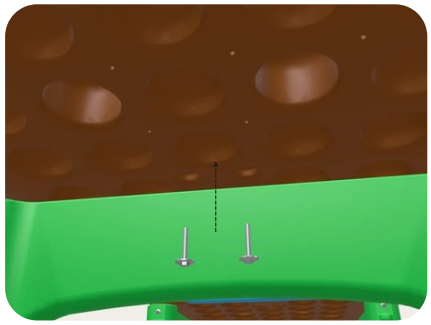

Under the floor: 2 screws from below

Fit the **bridge** between the orange striped wall of module 1 and the yellow striped wall of module 2.


Fasten with **8 M6×45 screws with washers**: 1 in each of the 4 tabs, into the wall rivet, and 2 under each floor, from below.

> If the bridge does not fit, move the module slightly closer or further: the wall rivets must line up with the holes in the tabs.

PARTS FOR THIS STEP

- **1×** Bridge ref. 1000902
- **8×** M6×45 hex screw ref. 2090194
- **8×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

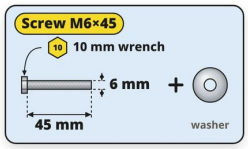

Tool: **10 mm wrench.**



How it looks at the end of step 23

STEP 24 OF 48

24 Module 3: legs, floor and tubes




Build **module 3** (the curved slide tower) next to module 2, on the orange dotted wall side.

Put the floor on the **2 legs**. Insert **2 tubes of 2210 mm** and **1 tube of 1550 mm** in the corners shown, always with the **holes up**.

PARTS FOR THIS STEP


- **2×** Leg ref. 998708
- **1×** Tube 1550 ref. 1003202
- **1×** Brown floor ref. 1022110
- **2×** Tube 2210 ref. 1022130

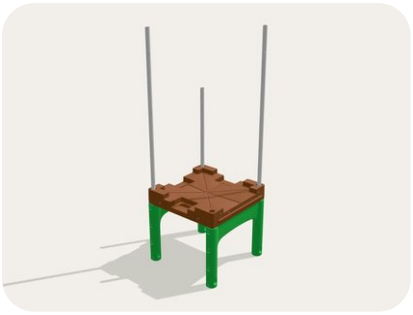

How it looks at the end of step 24

STEP 25 OF 48

25 Module 3: orange Trix wall

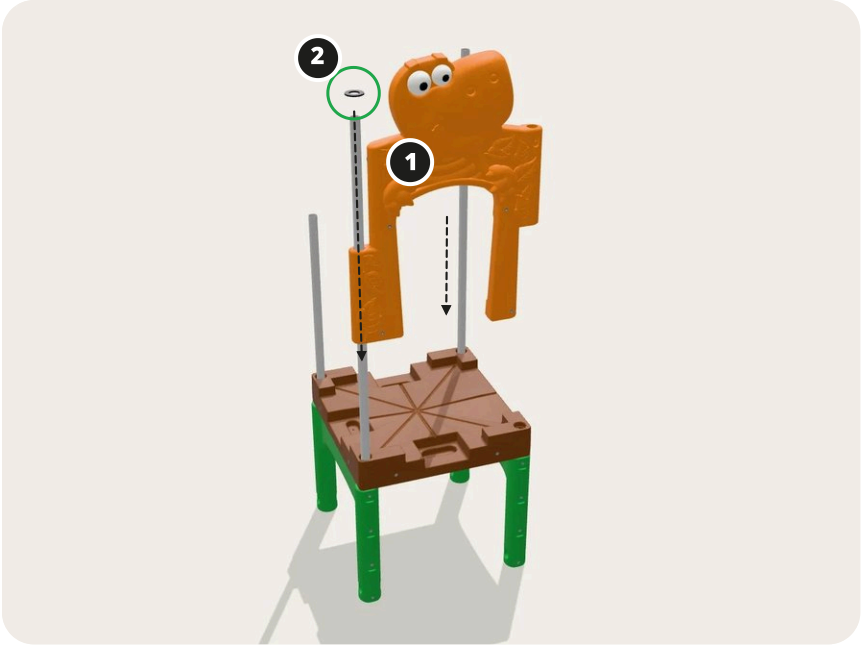

Fit the **orange Fofossauro Trix** wall on the slide side.


Put an **EVA spacer** on top, in the corner shown.

CAUTION
The order of the walls matters: at each corner one wall fits **underneath** and the other **on top**, with an EVA spacer between them. Follow the order of the steps.

PARTS FOR THIS STEP

1× EVA seal (spacer)
ref. 998728


1× Fofossauro Trix wall, orange
ref. 1022111

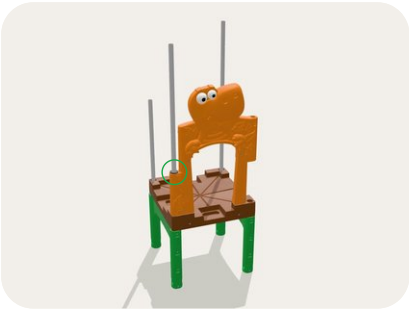

How it looks at the end of step 25

STEP 26 OF 48

26 Module 3: yellow dotted wall

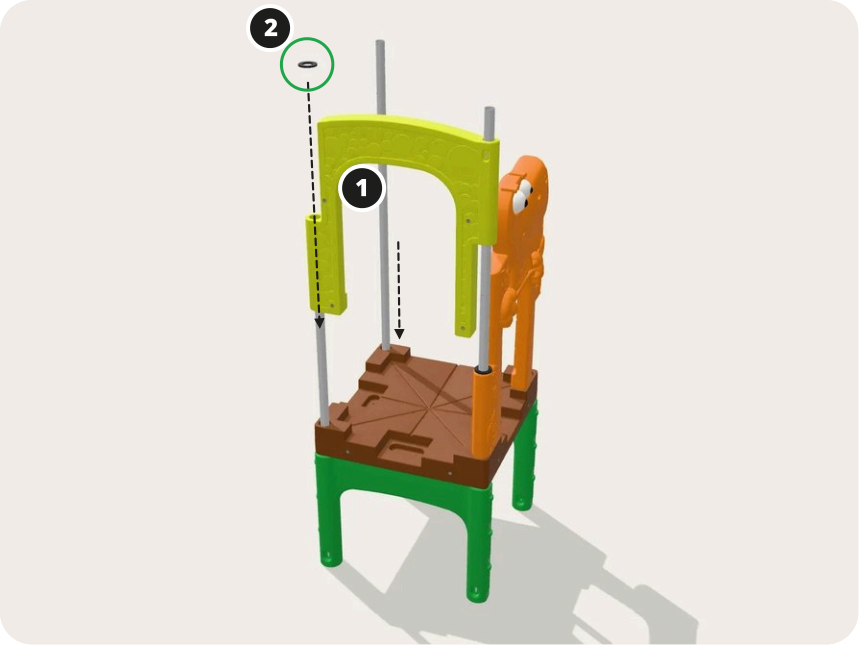

Fit the **yellow dotted** wall on the side of the bridge to module 2.

Put an **EVA spacer** on top, in the corner shown.


PARTS FOR THIS STEP



1× Yellow dotted wall
ref. 998727




1× EVA seal (spacer)
ref. 998728

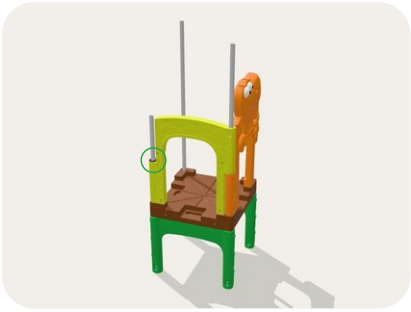

How it looks at the end of step 26

STEP 27 OF 48

27 Module 3: orange striped wall

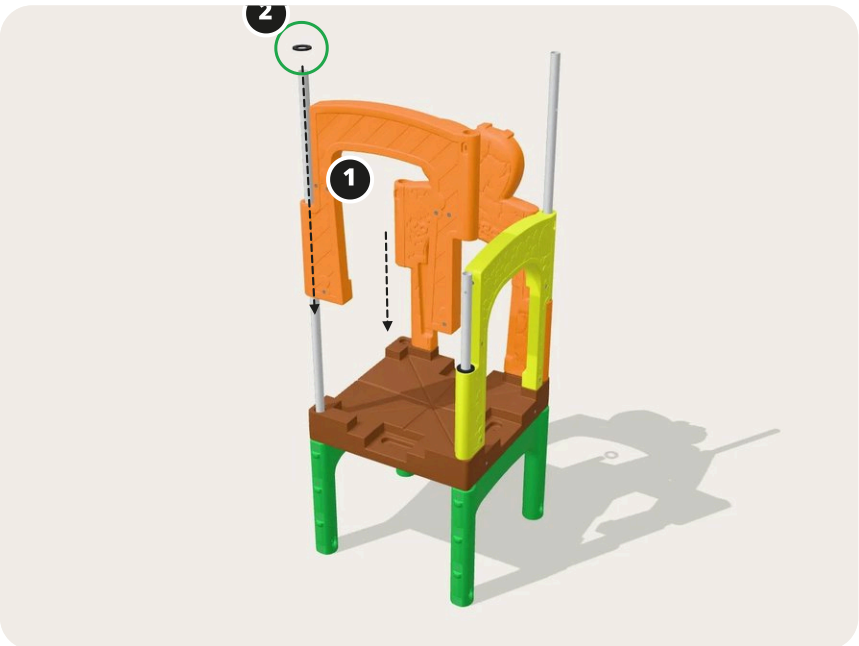

Fit the **orange striped** wall on the side of the bridge to module 4.

Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP



1× Orange striped wall
ref. 998726




1× EVA seal (spacer)
ref. 998728



How it looks at the end of step 27

STEP 28 OF 48

28 Module 3: green Scot wall

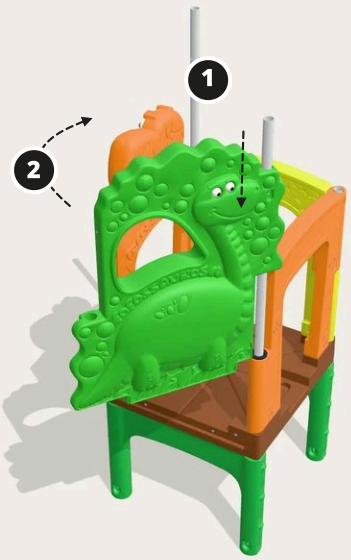

1. Fit the end of the **green Fofossauro Scot** wall onto the 2210 mm tube and lower the wall **swung open outwards**.

2. With the wall resting on the floor, **turn it around the tube** until the square is closed.

> The other corner of this wall still has no tube: it goes in at the next step and locks the walls.

PARTS FOR THIS STEP




1× Fofossauro Scot wall, green
ref. 1022112



How it looks at the end of step 28

STEP 29 OF 48

29 Module 3: spacer, last tube and caps

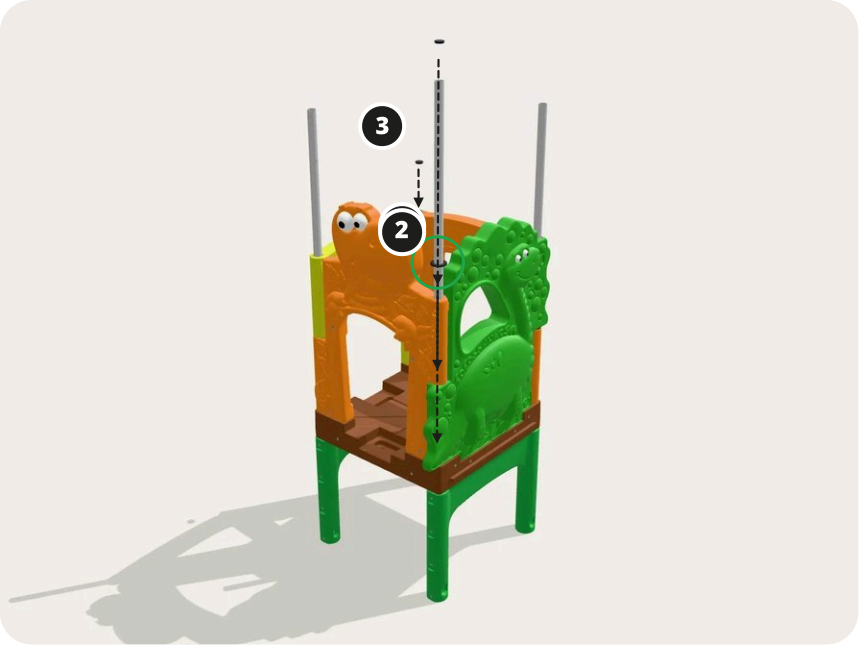


1. Put the **EVA spacer** in the free corner, between the two walls.

2. Lower the **last 1550 mm tube** (holes up) into that corner: it goes through the walls and the spacer and locks them together.

3. Fit the **caps** on top of the shorter tubes.

PARTS FOR THIS STEP


- **1×** EVA seal (spacer) ref. 998728
- **1×** Tube 1550 ref. 1003202
- **2×** Tube cap ref. 1100137

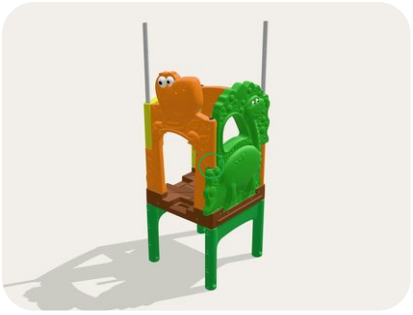

How it looks at the end of step 29

STEP 30 OF 48

30 Module 3: wall screws

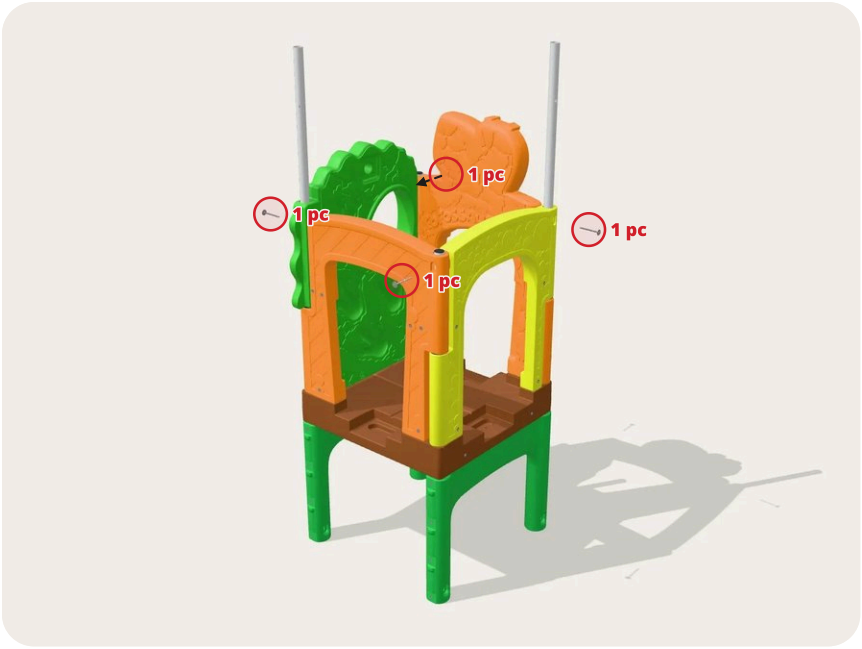

Join the walls with **4 M6×90 screws with washers**, 1 in each corner, put in from the outside, through the tube.

PARTS FOR THIS STEP




4× M8 wide washer (24 mm)
one on each M6 and M8 screw; two on each 5/16" bolt



4× M6×90 hex screw
ref. 2090460

SCREW AND TOOL

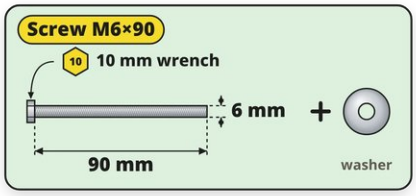

Tool: **10 mm wrench.**



How it looks at the end of step 30

STEP 31 OF 48


31 Module 3: tree tops



Fit the **2 tree tops** on top of the 2210 mm tubes and fasten each one with **1 bolt 5/16" × 2 1/4"**, a **washer on each side** and the **lock nut**.

> Tighten with two 13 mm wrenches: one holds the bolt head and the other turns the nut.

SCREW AND TOOL

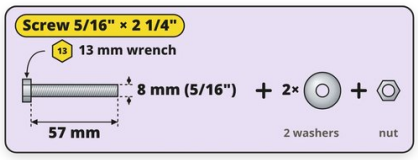

Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

PARTS FOR THIS STEP



2× Tree top
ref. 1022104




4× M8 wide washer (24 mm)
one on each M6 and M8 screw; two on each 5/16" bolt



2× Lock nut 5/16"
ref. 2090370



2× Hex bolt 5/16" × 2 1/4"
ref. 2090392

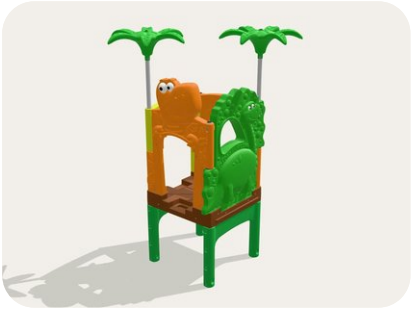

How it looks at the end of step 31

STEP 32 OF 48

32 Curved slide



Fit the **curved slide** on the orange Trix wall of module 3.

Fasten with **4 M6×45 screws with washers**: 1 in each tab, into the wall rivet, and 2 under the floor, from below.


PARTS FOR THIS STEP

1× Curved slide
ref. 998703

4× M6×45 hex screw
ref. 2090194

4× M8 wide washer (24 mm)
one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

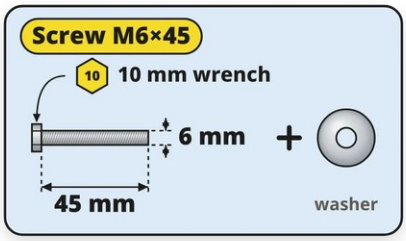

Tool: **10 mm wrench.**



How it looks at the end of step 32

STEP 33 OF 48

33 Bridge between modules 2 and 3




Fit the **bridge** between the orange dotted wall of module 2 and the yellow dotted wall of module 3.

Fasten with **8 M6×45 screws with washers**: 1 in each of the 4 tabs, into the wall rivet, and 2 under each floor, from below.

PARTS FOR THIS STEP

- **1×** Bridge ref. 1000902
- **8×** M6×45 hex screw ref. 2090194
- **8×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

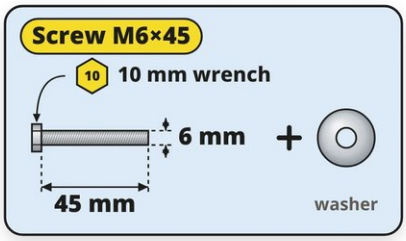


Tool: **10 mm wrench**.



How it looks at the end of step 33

STEP 34 OF 48

34 Module 4: legs, climbing wall and floor

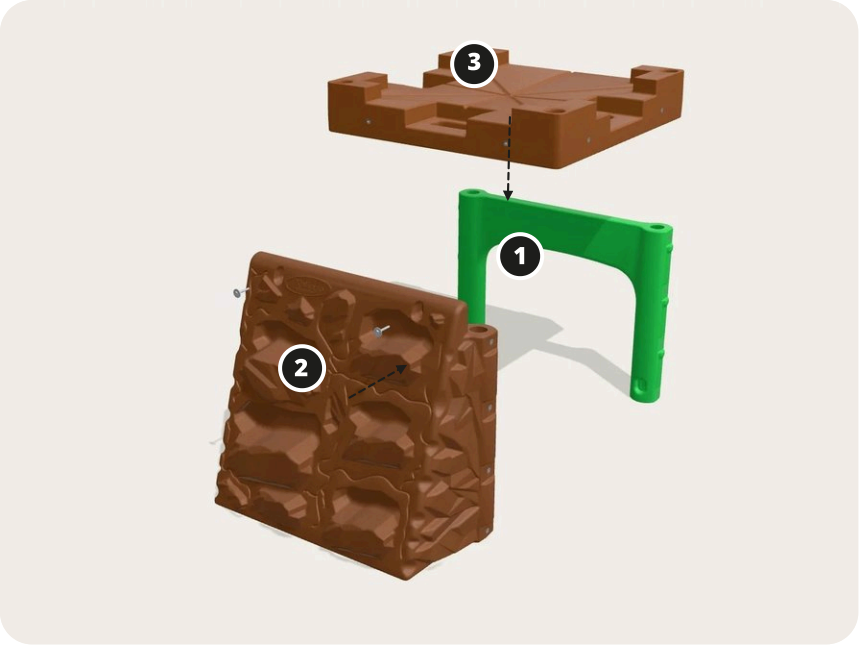


Build **module 4** (the modular slide tower) next to modules 1 and 3.

Stand the **leg** and the **climbing wall** parallel, put the **floor** on them and fasten the climbing wall to the floor with **2 M6×45 screws with washers**.

PARTS FOR THIS STEP

- **1×** Leg ref. 998708
- **1×** Climbing wall ref. 1022103
- **1×** Brown floor ref. 1022110
- **2×** M6×45 hex screw ref. 2090194
- **2×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

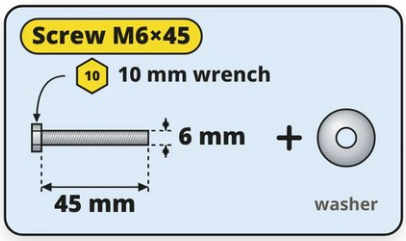


Tool: **10 mm wrench**.



How it looks at the end of step 34

STEP 35 OF 48

35 Module 4: floor cover

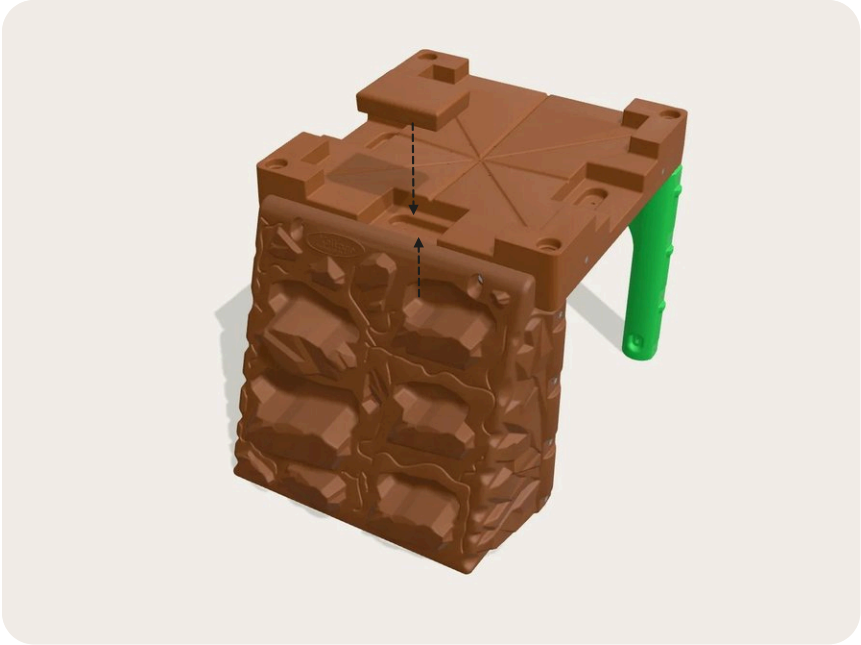

Fit the **floor cover** from above, into the floor opening, and fasten it with **2 M6×45 screws with washers** under the floor, from below.

PARTS FOR THIS STEP



1× Floor cover
ref. 1022105




2× M6×45 hex screw
ref. 2090194



2× M8 wide washer (24 mm)
one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

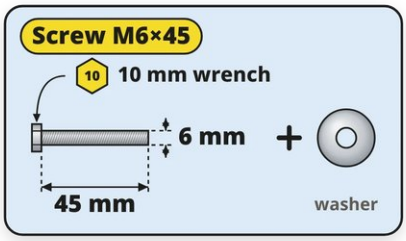


Tool: **10 mm wrench.**



How it looks at the end of step 35

STEP 36 OF 48

36 Module 4: tubes

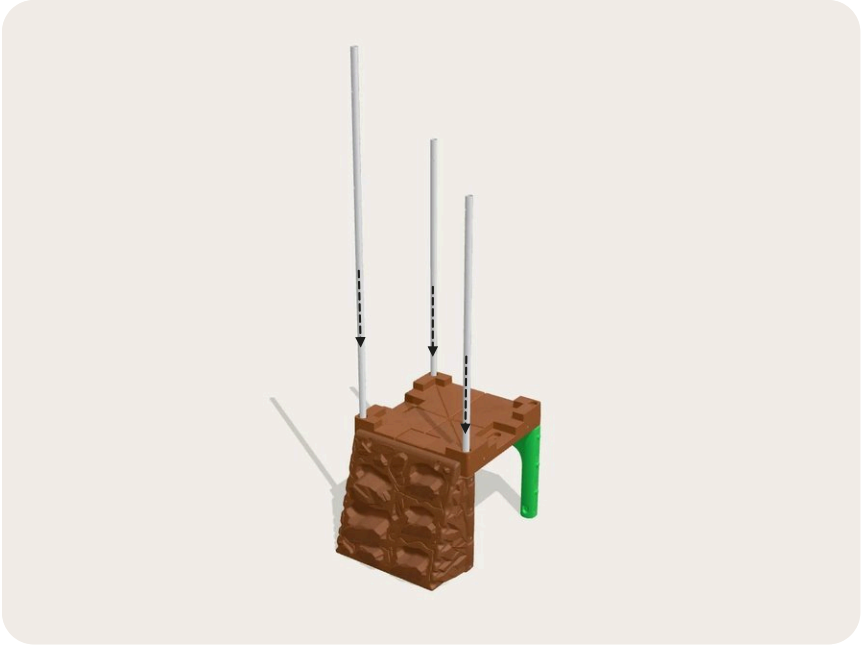


Insert **1 tube of 2210 mm**, **1 tube of 1550 mm** and **1 tube of 1600 mm** in the corners shown, always with the **holes up**.

> The second 2210 mm tube goes in after the walls, in the corner left free.

PARTS FOR THIS STEP


- **1×** Tube 1550 ref. 1003202
- **1×** Tube 2210 ref. 1022130
- **1×** Tube 1600 ref. 1022134

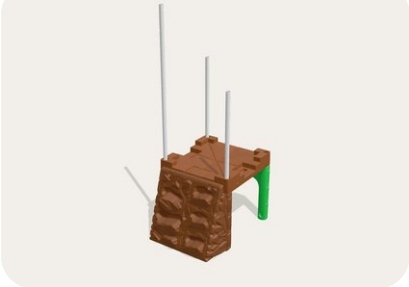

How it looks at the end of step 36

STEP 37 OF 48

37 Module 4: green Trix wall

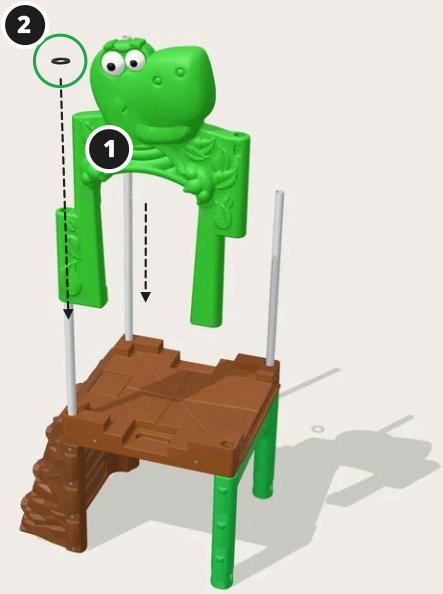

Fit the **green Fofossauro Trix** wall on the slide side.

Put an **EVA spacer** on top, in the corner shown.

CAUTION
The order of the walls matters: at each corner one wall fits **underneath** and the other **on top**, with an EVA spacer between them. Follow the order of the steps.

PARTS FOR THIS STEP



1× EVA seal (spacer)
ref. 998728



1× Fofossauro Trix wall, green
ref. 1022101



How it looks at the end of step 37

38

STEP 38 OF 48

Module 4: orange dotted wall



Fit the **orange dotted** wall on the climbing wall side.

Put an **EVA spacer** on top, in the corner shown.


PARTS FOR THIS STEP



1× Orange wall with dots
ref. 998706



1× EVA seal (spacer)
ref. 998728

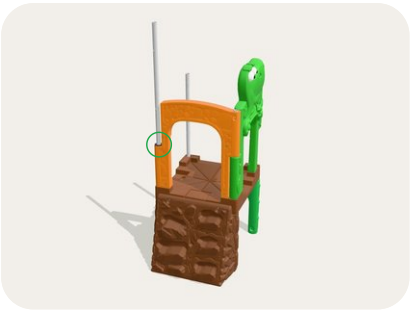


How it looks at the end of step 38

39

STEP 39 OF 48

Module 4: yellow striped wall

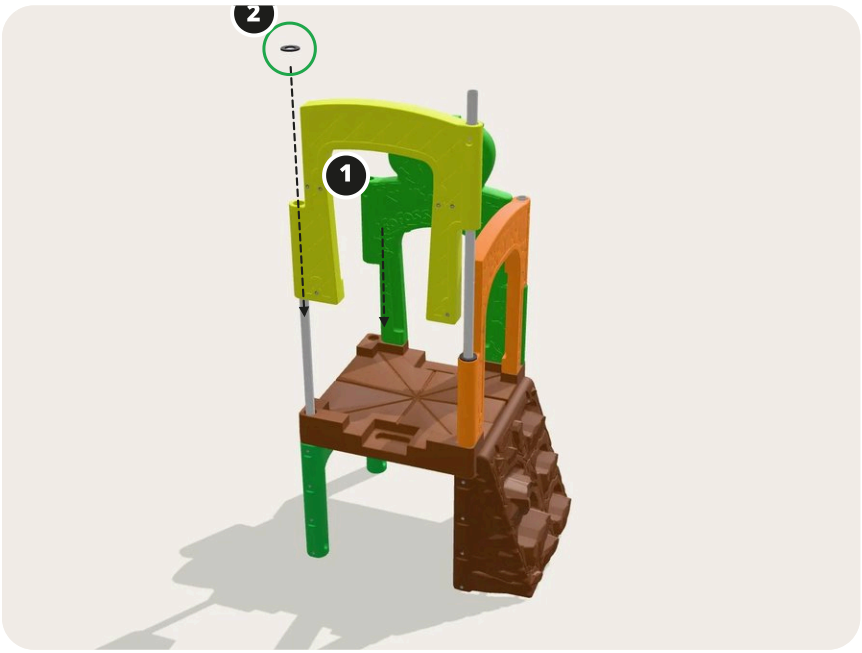

Fit the **yellow striped** wall on the side of the bridge to module 3.

Put an **EVA spacer** on top, in the corner shown.

PARTS FOR THIS STEP



1× Yellow striped wall
ref. 998707




1× EVA seal (spacer)
ref. 998728



How it looks at the end of step 39

STEP 40 OF 48

40 Module 4: purple Scot wall

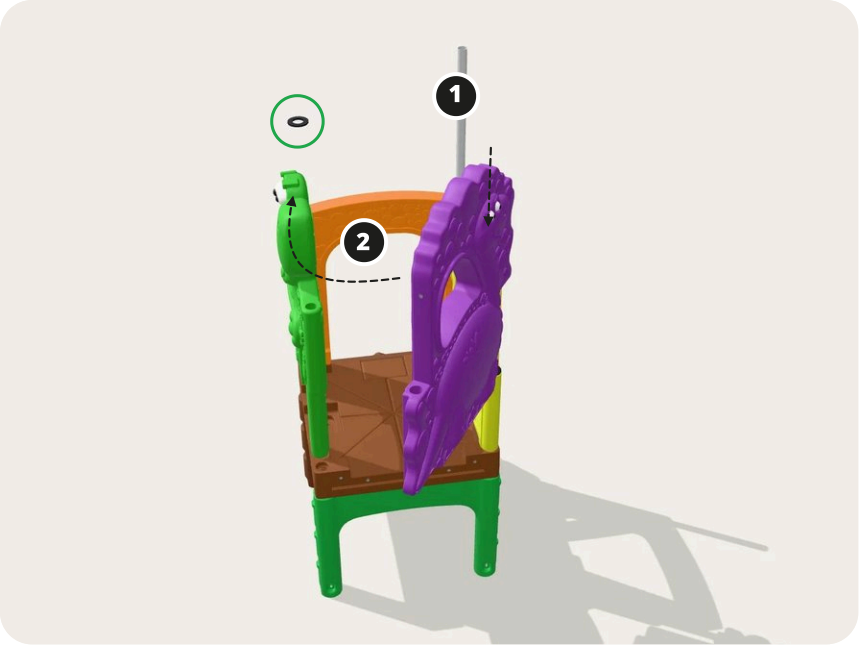

1. Fit the end of the **purple Fofossauro Scot** wall onto the 1600 mm tube and lower the wall **swung open outwards**.

2. With the wall resting on the floor, **turn it around the tube** until its end fits **underneath** the green Fofossauro Trix wall.

3. Put an **EVA spacer** in the joint between the two walls, in the corner that still has no tube.

> The other corner of this wall still has no tube: it goes in at the next step and locks the walls.

PARTS FOR THIS STEP



1× EVA seal (spacer)
ref. 998728




1× Fofossauro Scot wall, purple
ref. 1022102



How it looks at the end of step 40

STEP 41 OF 48

41 Module 4: last tube and caps

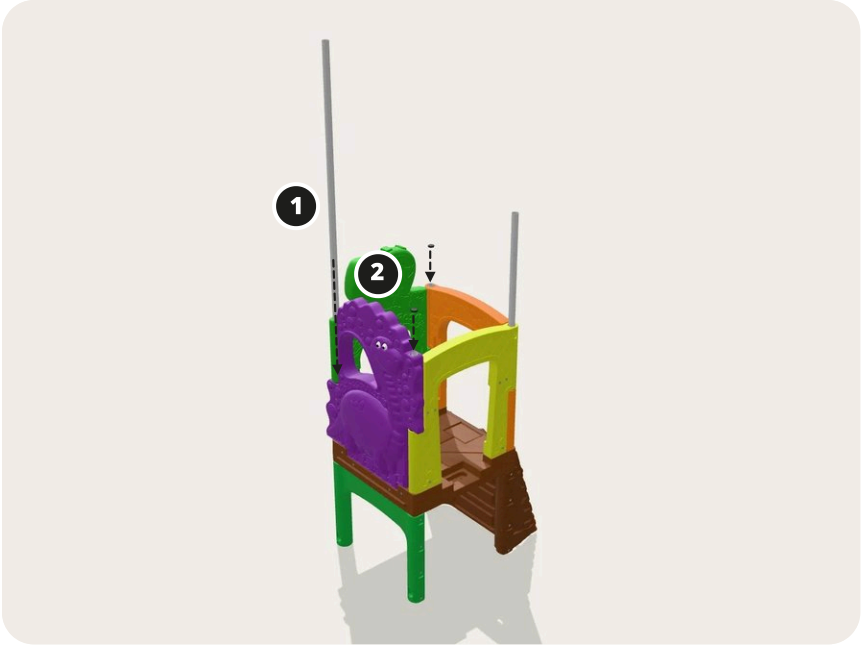

1. Lower the **last 2210 mm tube** (holes up) into the free corner: it goes through the walls and locks them together.

2. Fit the **caps** on top of the shorter tubes.

PARTS FOR THIS STEP

1× Tube 2210 ref. 1022130



2× Tube cap ref. 1100137



How it looks at the end of step 41

STEP 42 OF 48

42 Module 4: wall screws



Join the walls with **4 M6×90 screws with washers**, 1 in each corner, put in from the outside, through the tube.

PARTS FOR THIS STEP



4× M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt




4× M6×90 hex screw ref. 2090460



How it looks at the end of step 42


SCREW AND TOOL

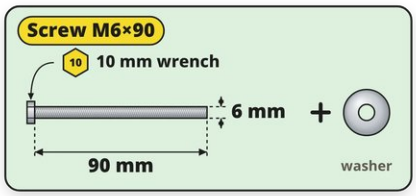

Tool: **10 mm wrench**.

STEP 43 OF 48

43 Slide on the ground: top and straight modules

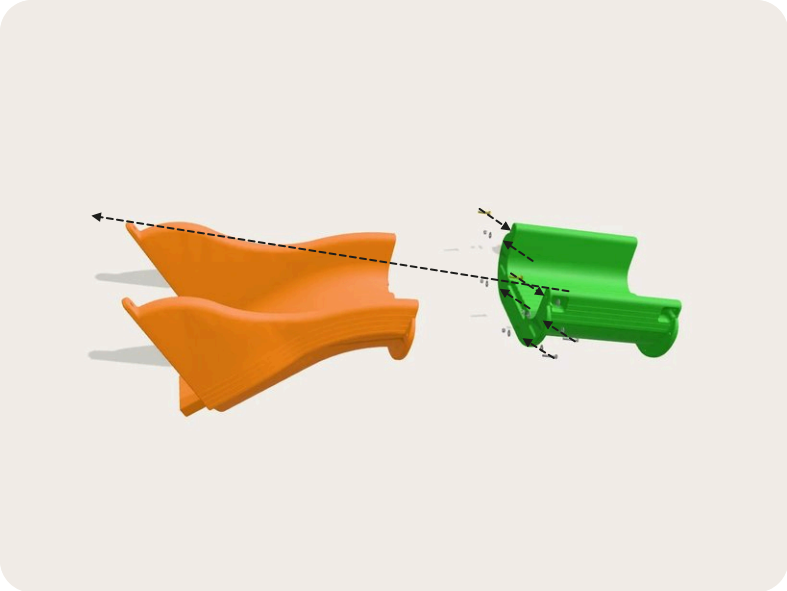


Put the slide together **on the ground**, in front of module 4.

Fit the **straight module** (green) to the **top module** (orange) and fasten the joint with 2 kinds of screw:


On the tabs: 4 bolts **5/16" × 2"**, with a washer on each side and a lock nut.

In the recess: 2 screws **M8×40** with washers, screwed into the M8 rivet nut of the top module.

CAUTION
Do not swap the screws: the 5/16" × 2" goes on the tabs, with a nut; the M8×40 goes in the recess, screwed into the M8 rivet nut.

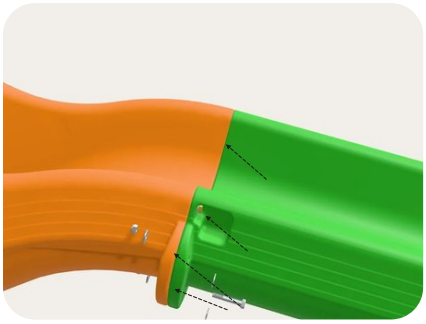

On the tabs: 5/16" × 2" + 2 washers + nut

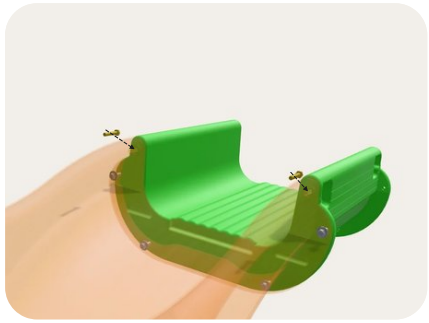


In the recess: M8×40 + washer in the M8 rivet nut


PARTS FOR THIS STEP

- **1×** Slide – top module ref. 1022107
- **1×** Slide – straight module ref. 1022108
- **4×** Hex bolt 5/16" × 2" ref. 1090113
- **2×** Hex screw M8×40 ref. 2090320
- **10×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt
- **4×** Lock nut 5/16" ref. 2090370

SCREWS AND TOOLS



Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.




Tool: **13 mm wrench**.



How it looks at the end of step 43

STEP 44 OF 48

44 Slide on the ground: exit module

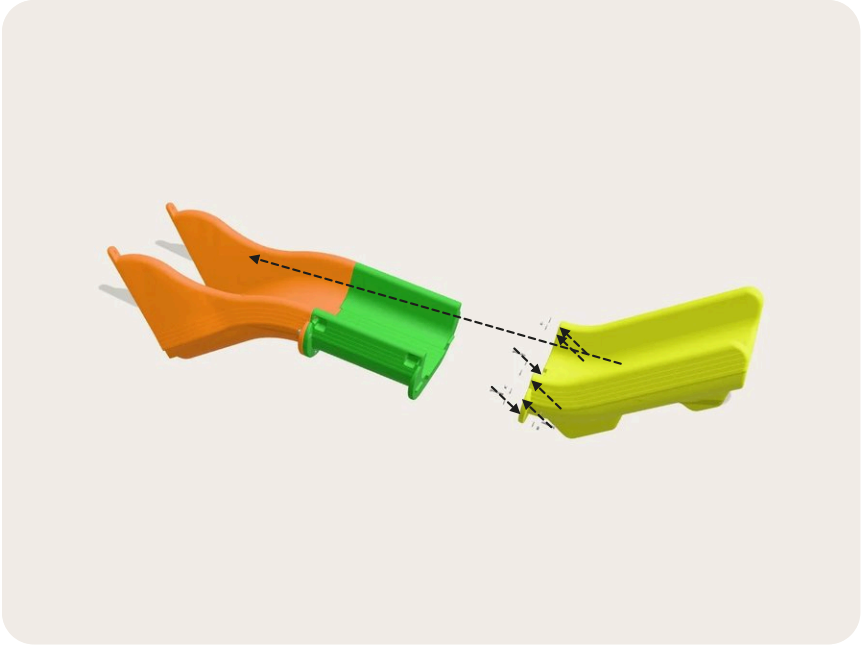


Fit the **exit module** (yellow) to the straight module and fasten it the same way: 4 bolts 5/16" × 2" with washers and nuts on the tabs and 2 M8×40 screws with washers in the recess, screwed into the M8 rivet nut of the exit module.


PARTS FOR THIS STEP

- **1×** Slide – exit module ref. 1022109
- **4×** Hex bolt 5/16" × 2" ref. 1090113
- **2×** Hex screw M8×40 ref. 2090320
- **10×** M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt
- **4×** Lock nut 5/16" ref. 2090370

SCREWS AND TOOLS

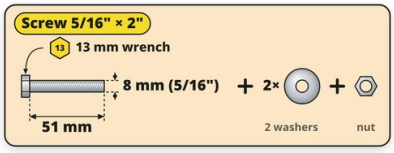

Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.

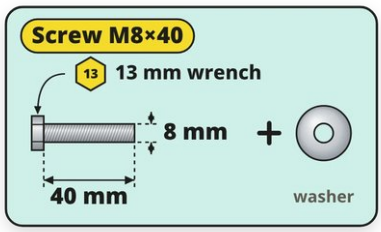


Tool: **13 mm wrench**.




How it looks at the end of step 44

STEP 45 OF 48

45 Slide on the tower

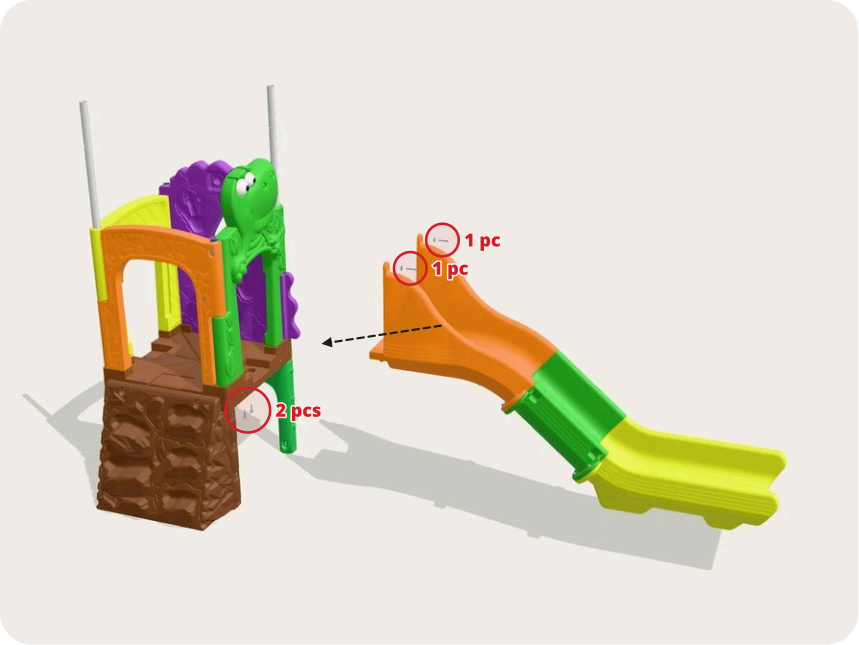

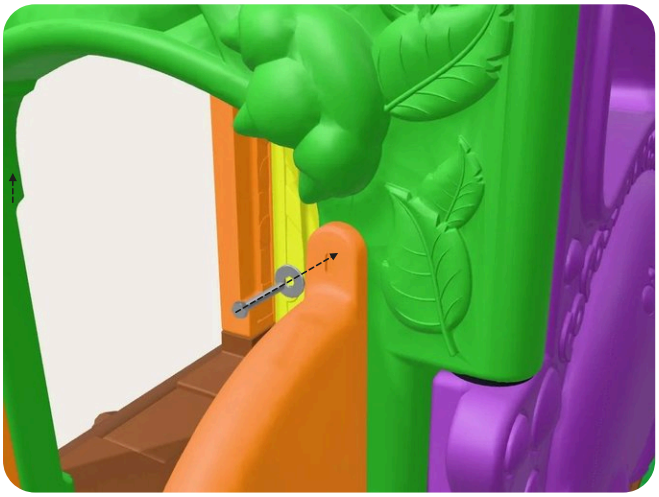

M6×45 screw + washer through the slide tab, into the wall rivet

Take the assembled slide to module 4 and fit its top on the green Trix wall.

Fasten with **4 M6×45 screws with washers**: 1 in each tab, into the wall rivet, and 2 under the floor, from below.

> The assembled slide is long: carry it with the help of a second person.

PARTS FOR THIS STEP




4× M6×45 hex screw ref. 2090194



4× M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

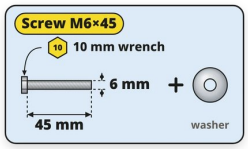


Tool: **10 mm wrench**.



How it looks at the end of step 45

STEP 46 OF 48


46 Module 4: tree tops

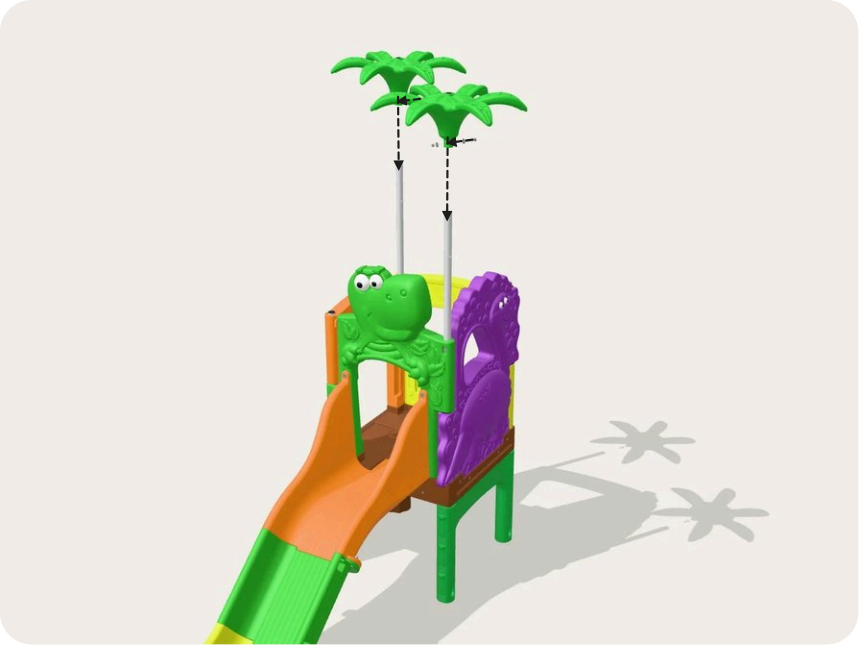

Fit the **2 tree tops** on top of the 2210 mm tubes and fasten each one with **1 bolt 5/16" × 2 1/4"**, a **washer on each side** and the **lock nut**.

> Tighten with two 13 mm wrenches: one holds the bolt head and the other turns the nut.

SCREW AND TOOL

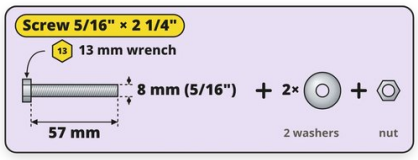

Tool: **2 × 13 mm wrenches**: one holds the nut while the other turns the screw.


PARTS FOR THIS STEP

2× Tree top ref. 1022104

4× M8 wide washer (24 mm) one on each M6 and M8 screw; two on each 5/16" bolt

2× Lock nut 5/16" ref. 2090370

2× Hex bolt 5/16" × 2 1/4" ref. 2090392

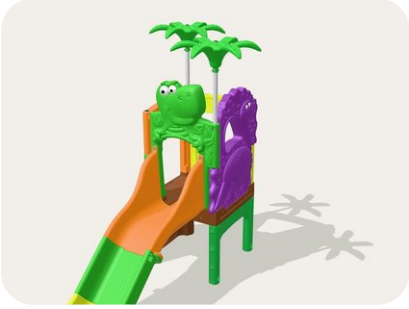

How it looks at the end of step 46

STEP 47 OF 48

47 Bridge between modules 3 and 4



Fit the **bridge** between the orange striped wall of module 3 and the yellow striped wall of module 4.

Fasten with **8 M6×45 screws with washers**: 1 in each of the 4 tabs, into the wall rivet, and 2 under each floor, from below.


PARTS FOR THIS STEP

1× Bridge
ref. 1000902

8× M6×45 hex screw
ref. 2090194

8× M8 wide washer (24 mm)
one on each M6 and M8 screw; two on each 5/16" bolt

SCREW AND TOOL

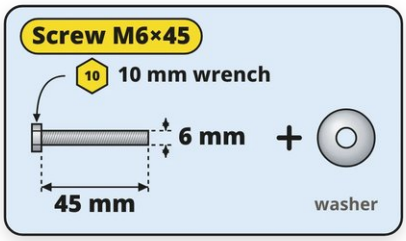

Tool: **10 mm wrench**.



How it looks at the end of step 47

STEP 48 OF 48

48 Ball pit



Spread the **net** on the ground, in the space between the modules, and find the corners marked with tape.

Make a loop with the **elastic** of each marked corner and hook it on the tube shown. If needed, lift the tube a little to pass the elastic, then put it back in place.

Once the **6 points** of the edge are fastened, fill the net with the **1000 plastic balls** (Ø 76 mm).

CAUTION
The net must be fastened at the 6 points before you put in the balls.

PARTS FOR THIS STEP

1× Ball pit net
ref. 2070382


1000× Plastic ball, Ø 76 mm
ref. 2090300



How it looks at the end of step 48

FASTENING DETAILS

How each part is fastened

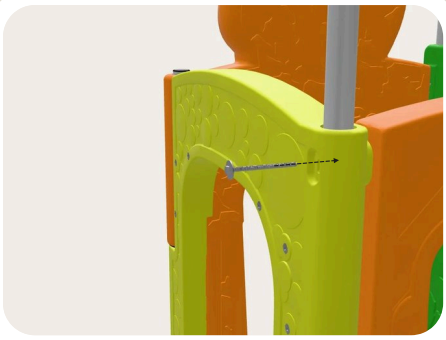


Walls

M6×90 screw + washer, from the outside, through both walls and the tube. 1 in each corner of each module.




Tree tops

Bolt 5/16" × 2 1/4" with a washer on each side and a lock nut, on top of the 2210 mm tube.

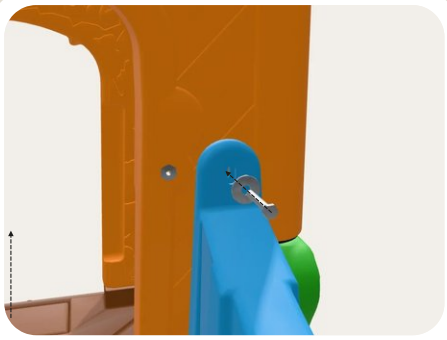


Bridges, ramp and slides

M6×45 screw + washer through the tab, into the wall rivet.

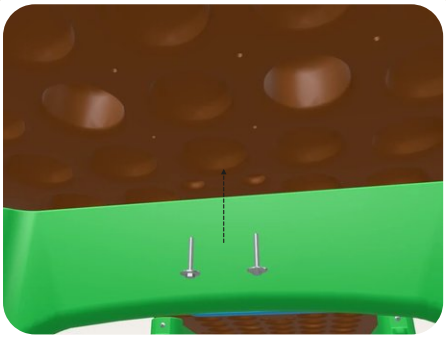


Fastening underneath

Bridges, ramp, slides and floor covers: 2 M6×45 screws + washers under the floor, always from below.

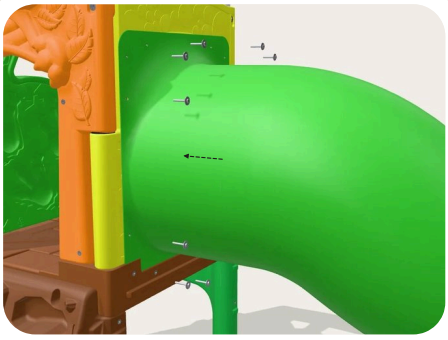


Tunnel slide

M6×45 screw + washer, 3 at each end of the tunnel mouth, into the wall rivets.

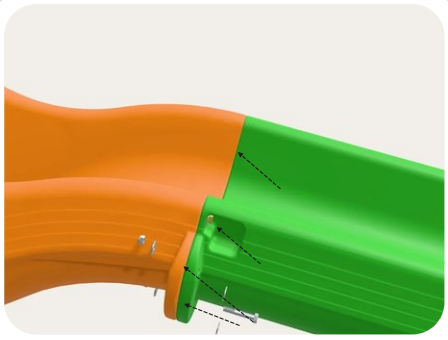

Slide module joint (tabs)

Bolt 5/16" × 2" with a washer on each side and a lock nut, 4 at each joint.

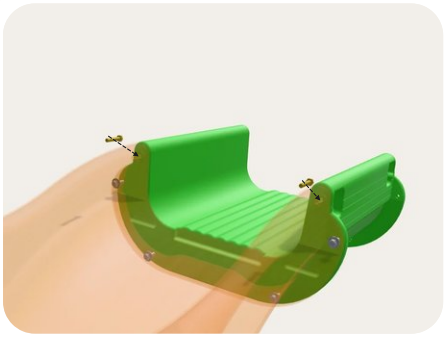

Slide module joint (recess)

M8×40 screw + washer, screwed into the module M8 rivet nut, 2 at each joint.




Assembly complete

Check the product visually, making sure every part is fitted and firmly fastened. **Only then let children use it.**

Maximum weight 80 kg per platform. Check that all the walls are screwed, the tree tops are firm and the ball pit net is fastened at the 6 points.

INSTALLATION DETAILS

Location and safety area

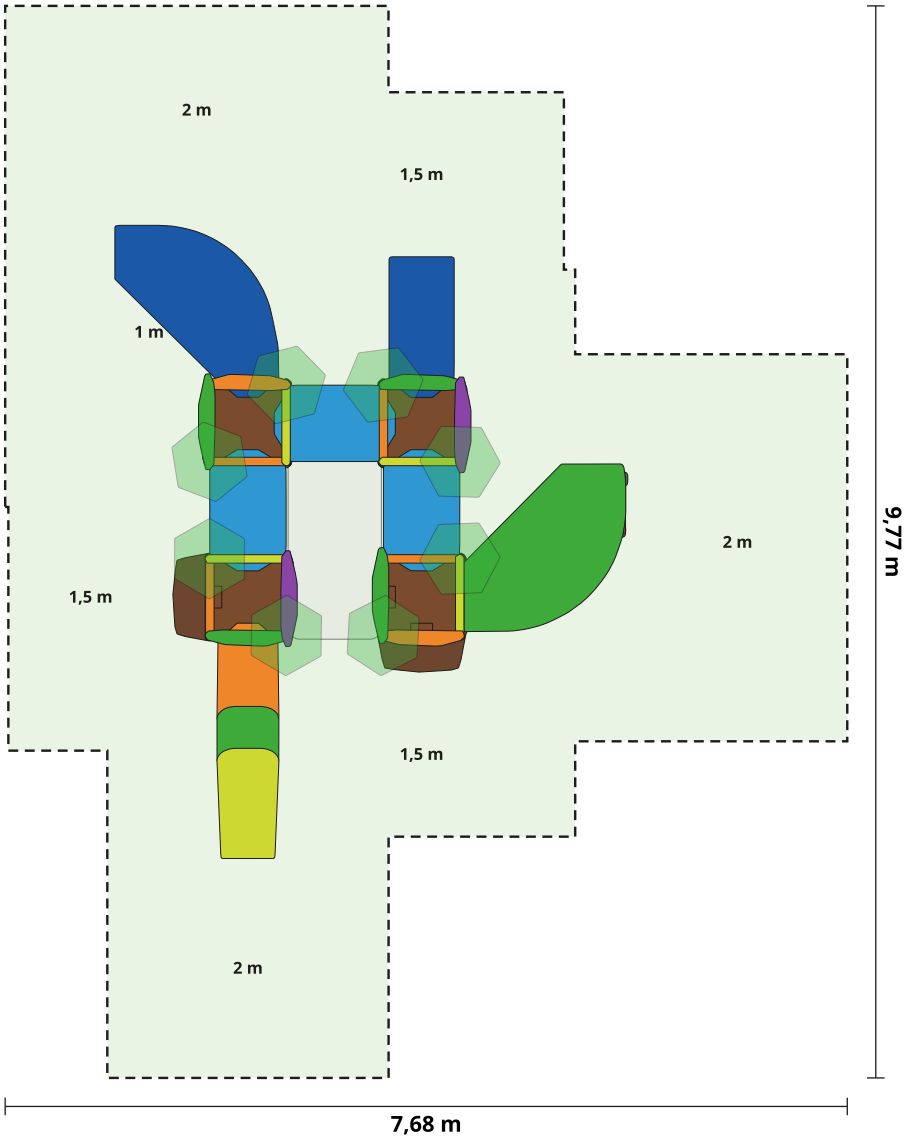

Area reserved for installation and slide landing (top view): 7.68 × 9.77 m. Product size: 5.77 × 4.67 × 2.23 m.

To keep users safe, minimum spaces and free distances must be respected.

Circulation area: at least 1.20 m wide around the equipment, so users can run freely; at least 1.50 m where the path changes direction, so strollers and wheelchairs can get in and turn.

Fall space: neighboring static equipment with overlapping fall spaces must be at least 1.50 m apart for a fall height of up to 600 mm, and 2.50 m for higher falls. Maximum fall height of this product: **700 mm**.

Slide landing area: at least 1000 mm from the sides of the run-out section and 2000 mm (type 01 run-out) or 1000 mm (type 02 run-out) from the end of the run-out section.

Ground: an even, continuous, stable surface that is non-slip in any weather, with no obstacles and a cross slope of no more than 2%. Use on grass, sand, carpet or another soft, level surface.

Location: first check for chemicals and loose material (rubble, sharp objects). Choose an airy place with morning sun, sheltered from drafts; do not install it in basements or garages. Never use it near stairs, roads, swimming pools, water or slippery places. If the area is fenced, the gates must open outwards and be at least 1 m wide.

Area reserved for installation and impact: 1 m around the product, 1.5 m in front of the ramp and the climbing walls and 2 m at the exit of each slide; about **7.68 × 9.77 m** in total.

To avoid accidents, the child should wear shoes. This product is not intended for commercial use.

INSPECTION AND MAINTENANCE

Keep the playground safe

Visual inspection — daily

- Cleanliness
- Free distances between the ground and the equipment
- Ground surface finish and exposed foundations
- Sharp edges and missing components
- Excessive wear and structural integrity

Operational inspection — every 1 to 3 months

Pay special attention to the structural integrity of the product, besides the items of the visual inspection.

Main inspection — yearly

- Structure: bending, deformation and cracks
- Finish: cracks, chips, broken or open joints
- Missing, bent, broken, loose or worn parts
- Edges, pinch points, access points and protective surfaces
- Tree tops firm on top of the tubes and the ball pit net fastened at the 6 points, with no tears

Maintenance

- Tighten the joining parts and clean (do not use paints, solvents or other chemicals)
- Keep the free spaces and drain holes clean
- Replace fasteners and faulty or worn parts

As per NBR 16071-7:2012. Any change that affects safety only after consulting the manufacturer.

XALINGO S/A INDÚSTRIA E COMÉRCIO
BR 471, km 147 – Santa Cruz do Sul – RS – Brasil – CEP 96835-642
CNPJ 95.425.534/0001-76

SAC
(51) 3719-9800 · sac@xalingo.com.br
www.xalingo.com.br

Mundo dos Fofossauros · ref. 1022.1
Keep this manual for future reference.